

# TM-403 User's Guide

V-TEK, Inc.  
751 Summit Avenue  
Mankato, MN 56001  
(P) 507-387-2039  
[www.vtekusa.com](http://www.vtekusa.com)

*User's Guide # D292106G*

## Vendor Provided Material

Significant portions of this documentation were provided by:

### **KEYENCE CORPORATION OF AMERICA**

1100 North Arlington Heights Road, Suite 210, Itasca, IL 60143

1-888-KEYENCE (1-888-539-3623)

[www.keyence.com](http://www.keyence.com)



## EC Declaration of Conformity

**Manufacturers Name:** V-TEK Inc.  
**Manufacturers' Address:** 751 Summit Avenue,  
Mankato, Minnesota 56002, USA.

Declare that the machinery described below complies with applicable health and safety requirements of Part 1 of Annex 1 of the Machinery Directive 2006/42/EC and EMC Directive 2004/108/EC. Confidential technical documentation has been compiled in accordance with Part A of Annex VII of Machinery Directive 2006/42/EC and is available to European national authorities on written request only. If a request is received documentation will be delivered on a CD or by post.

**Description:** Taping Machine  
**Model Number:** TM-400, OEM, 401, 402, 403  
**Specification:** Component Handling Machine  
**Serial Number\:** 201XXXXXXX

The following standards have either been referred to or been complied with in part or in full as relevant:

ENISO 12100: 2006	Machinery Safety	- Safety of machinery - General principles for design – Risk assessment and risk reduction
EN13849: 2008	Machinery Safety	- Safety Related Parts of Control Systems –
Part 1 General Principals for Design and Part 2 Validation.		
EN ISO 13732: 2008	Machinery Safety	- Ergonomics of the thermal environment
EN 614-2:2000+A1:2008	Machinery Safety	- Ergonomic design principals
EN 13850: 2008	Machinery Safety	- Emergency-stop equipment, functional aspects
Principals for Design		
EN60204-1: 2010	Machinery Safety	- Electrical Equipment of Machines
ENISO 11202/A1 1997	Acoustics	- Noise emitted by machinery and equipment - Determination of emission sound pressure levels at a work station and at other specified positions.
EN61000-6-3:2007	EMC	- Generic standards - Emission standard for residential, commercial and light-industrial environments
EN61000-6-1: 2007	EMC	- Generic standards - Immunity for residential, commercial and light-industrial environments

**Full Name of responsible person and place of signing**

Christina Hogan

**Place** V-TEK Inc.

**Position** Vice President

**Signature**

**Date** 02/24/2014



QNET BV  
Hommerterweg 286  
6436 AM Amstenrade  
The Netherlands



# Introduction


---

---

Contents	
Introduction . . . . .	ii
Theory of Operation . . . . .	iii
Machine Details . . . . .	iv
Intended Use . . . . .	v
Operator Requirements . . . . .	vii
Safety Features . . . . .	viii
Safety Warning Labels . . . . .	xi
Contact Information . . . . .	xii

# Introduction

---

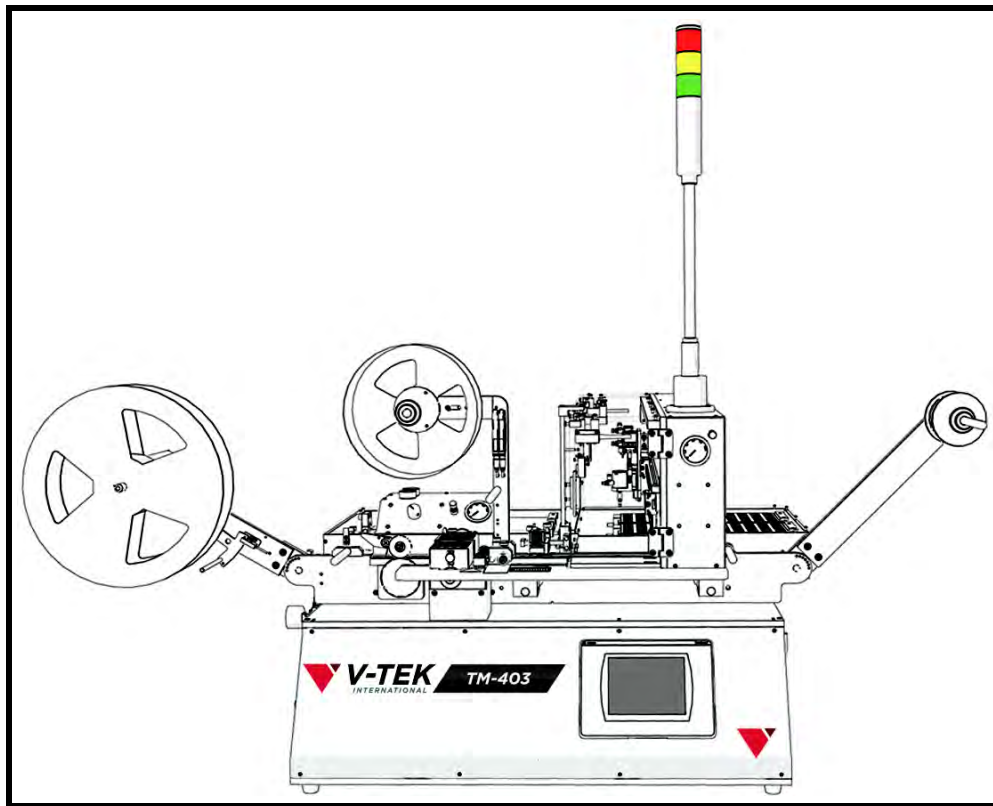

Thank you for purchasing the **TM-403 Component Handling Machine**. The TM-403 is a tabletop pick and place tape and reel machine with vision, designed for use in production environments for electronic devices. This machine accepts devices loaded in trays. It features a 2D over tape vision system for component verification. A touch screen interface simplifies the setup process, and minimizes set up time and operator intervention for fast, easy functioning.

## Standard Features:


- Touch screen operator interface for easy setup and operation
- Tray input, Tray or Tape output
- Ability to rotate components  $\pm 90^\circ$  or  $180^\circ$
- Innovative universal adjustable heat and PSA sealer
- Software controlled advance movement of carrier tape (2mm to 144mm pitch)
- Adjustable track assembly for tape widths 8mm to 72 mm
- 2D Vision over tape inspection for Mark, Orientation and Empty Pocket Detection.
- User-friendly safety enclosure with multiple access points provides easy access with minimal downtime
- Automatic *Jam in Track* and *Low Cover Tape Detection Sensors*

# Theory of Operation

---

Operation of the TM-403 is simple. The operator loads the Tray Feeder and then configures the job for the selected part using the TM-403's intuitive, touch screen *Human Machine Interface (HMI)*. Job configuration includes selecting and programming inspection criteria.

When the TM-403 is set in motion, the pick head picks an individual part from the *Tray Feeder* and places the part directly into a carrier tape pocket. The *2D Vision System* detects empty pockets and inspects placed parts for mark and orientation prior to cover tape application. Parts that fail Inspection stop operation and trigger an error message, allowing the user to correct the error before continuing operation.

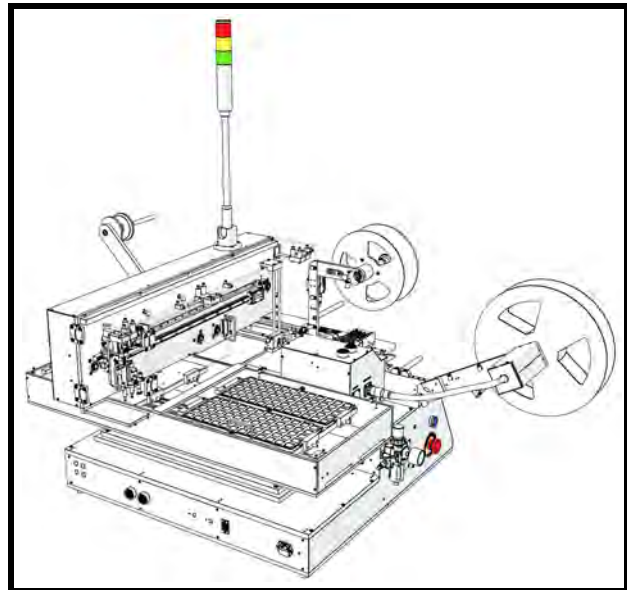

As the tape advances, it passes sensors which detect jams in tape. Once the carrier tape reaches the TM-403 sealer assembly, cover tape is applied. The part is then sealed in the pocket with either a *Heat Seal* or *Pressure Sensitive Adhesive (PSA)* cover tape. When the sealing process is complete, the finished tape is routed onto a take-up reel.

During operation, the operator keeps the selected Tray Feeder supplied with parts and observes the inspection process, adjusting operation and inspection settings as needed. In the event of 2D inspection fails, the operator may re-orient or swap out parts from the output area as needed. When tape reels are complete, the operator removes the full reel and replaces it with a new reel.

The TM-403 can also perform in Tray-to-Tray mode, combining partial trays for tray completion.

# Machine Details

---

## Controls:

Touch screen Operator Interface includes:

- User-friendly Job Wizard and Pitch Setting Wizard for easy set-up
- Customizable job configuration
- Sealer Dwell Adjustment
- Manual/Automatic leader/trailer
- Password protection

## Speed:

Placement speed of up to 2,400 PPH

## Dimensions:

- Height: 39.5" (100 cm) (*includes Tower Light*)
- Width: 50.5" (128.5 cm)
- Depth: 35.5" (90 cm)
- Working area: 11' x 9' (3.5 m x 2.75 m)

## Weight:

- 247 lb. (112 Kg)

## Power Requirements:

- Air consumption: 5 SCFM at 85 PSI
- Electrical: 120/240 VAC, 50/60Hz AC

**Note:** The TM-403 is designed and tested to meet the CE Directives: 2006/42/EC, 2004/108/EC. These tests were conducted with the power requirements of 230V 50Hz. However, the TM-403 can also handle other voltage levels seen in other parts of the world including voltages from 208V-240V @ 50/60 Hz.

Reference below when wiring the electrical plug:

- Attach the BROWN wire to L1
- Attach the BLUE wire to N/L2
- Attach the GREEN/YELLOW wire to Ground

## Intended Use

---

The intended use of the TM-403 Taping Machine is to produce taped reels of individually sealed and consistently orientated components. It can also be used to move parts from one tray to another, combining partial trays. Use of this equipment in any other way is not recommended.

The TM-403 is designed to accommodate a full range of electronic devices. The Tray Feeder accommodates standard Jedec Tray sizes.

Suitable carrier and sealing tapes include any conductive or non-conductive tapes with feed-holes that are pitched at 4 mm. Tapes must operate in a temperature range from 120-160° Celsius with a pressure range from 40-60 psi and dwell time between 250-400 milliseconds. The TM-403 can accommodate tape widths from 8mm to 72mm.

Tape advance, Pick Head and Tray speeds are set on the machine's controller and can be set at speeds of 1-10. Feed rates are up to 2,400 units per hour dependent on component size.



### **Caution:**

V-TEK® Incorporated takes no responsibility for the safety of the TM-403 if it is used for any purpose other than the intended purpose as specified in this User's Guide.

## Operating Environment

The TM-403 is designed to be operated in a temperature and humidity controlled, light, industrial setting. It requires an ISO Class 9 clean room environment.

The machine should be installed on a flat, dry, stable surface in a well lit area (ambient lighting of 200 to 300 Lux (Lumens/m<sup>2</sup>).


The recommended climate is between 5 - 75% non-condensing humidity with a room temperature between 0 - 50 degrees Celsius.

**Note:** Although all of the components used on the machine will withstand the temperature range of 0 to 50 degrees Celsius, such temperatures may decrease the life of some of the components.

The intended electrical environment is Pollution Degree 2 and Over Voltage Category II.

## Misuse

The TM-403 weighs approximately 247 lbs. (112 kg.) and requires four people to safely carry it. Operators are cautioned to follow the instructions and illustrations for safely transporting the TM-403. Failure to do so could result in injury or damage to the machine.

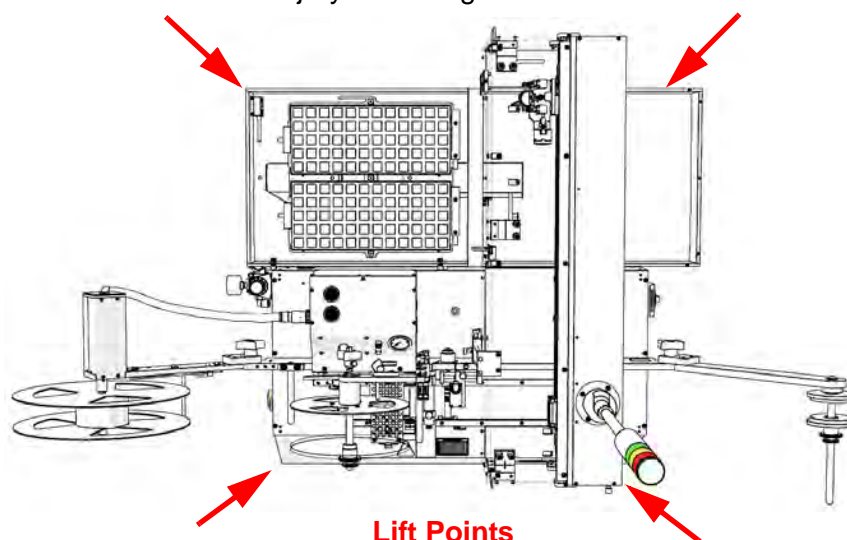

Installation instructions clearly state that the TM-403 should only be installed or operated on a level surface to prevent toppling.

The user is protected from moving parts and exposure to objects being ejected under pressure by 16 standard wire gauge sheet metal and 3/8 inch clear, polycarbonate enclosures. Door sensors ensure operation automatically stops if the enclosure doors are opened. No attempt should be made to remove these enclosures or to block, disable or override the door sensors.

The enclosure doors may be left open during basic set-up procedures such as positioning the pick head at place or pick locations. If the enclosure doors are left open during setup the TM-403 automatically reduces the speed of the pick head to a fraction of its normal operating speed to prevent operator injury due to collision, etc.

The user is protected from the TM-403's heat sealer by a metal guard. Operators are cautioned not to touch the heat seal guard or to try to reach underneath the guard while the heat sealer is in operation.

The TM-403 air supply should be adjusted to operate at a maximum working pressure not exceeding 7.6 bar (110 psi). The maximum permissible source pressure should not exceed 9 bar (130 psi). Failure to set the air pressure within these limits could result in a failure in the pneumatic system which could lead to injury.

# Operator Requirements

The guidelines provided in the following pages are intended to educate the user about how to operate the TM-403 safely. They contain important information on avoiding potential hazards to the operator and to the equipment. Only personnel who have thoroughly reviewed and understand the *TM-403 User's Guide* and are aware of the possible hazards should operate or perform maintenance on the TM-403.


Operators and maintenance personnel are advised not to wear loose fitting clothing or jewelry when operating or maintaining the TM-403. Protective eye wear should be worn when loading, operating or maintaining the TM-403.



**Caution:** Users should always wear protective eye wear when loading, operating or maintaining the TM-403.

Safe operation of the TM-403 does not require gloves of any type, however some component manufacturers may recommend gloves be worn when placing parts in tape. Consult the component manufacturer for specific placement instructions. Ear protection is not necessary during normal operation.

When running the TM-403, the operator should stand or sit in front of the touch screen to assure easy access to all controls and the *Power/Emergency Stop Button*. This position allows the operator to view all parts of the TM-403 while it is in operation. When loading the TM-403 Tray Feeder or changing Taper reels, the operator may also need to access the side and back of the machine

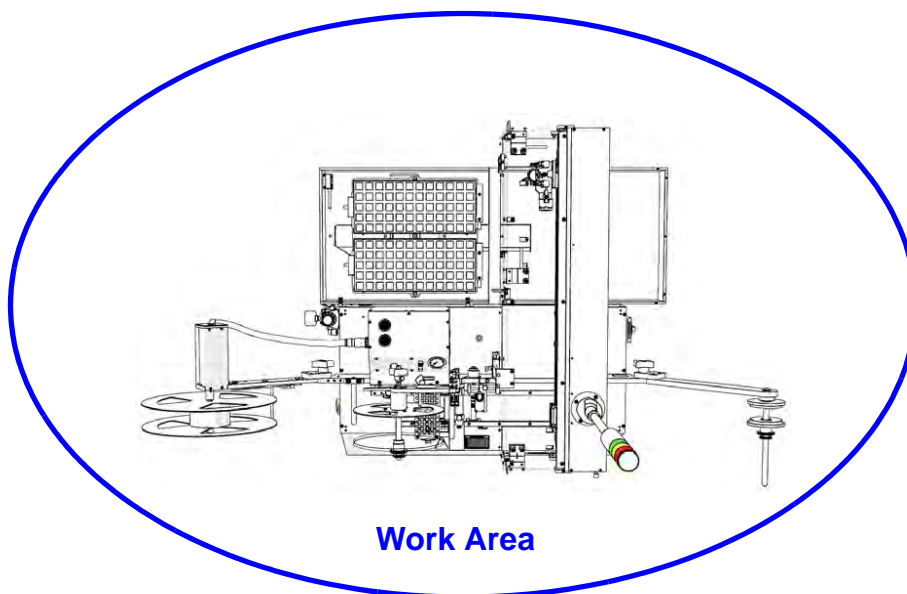

## Caution!

The TM-403 should never be operated while under the influence of alcohol or drugs. V-TEK® Incorporated takes no responsibility for the safety of TM-403 if it is used for any purpose other than the intended purpose as specified in this User's Guide.

# Safety Features

---

## Main Power Switch

The *Main Power Switch* is located on the right side of the machine. Turning the switch to the right turns power **ON**. Turning the switch back to the left turns the power **OFF**.

When the *Main Switch* is in the **OFF** position, it exposes a lockout-tagout hole. The switch can be locked by inserting a lock through the hole. The switch on the right is pictured in the **OFF** position.



## Emergency Stop Switch

There is one *Emergency Stop Switch* on the TM-403. It is located on the left side of the machine below the *Take-up Arm*. When an emergency stop switch is triggered, all motion will be halted and the machine will require a reset before operation can continue.

The emergency stop control circuit removes electrical power to all motors, moving parts, heat sources, pneumatics, and energy storing devices. This includes the stepper motor drive, stepper motors, the servo motor drive, servo motors, drive circuits, the main control board, the heat sealer and all pneumatics. The only devices that remain powered are the inspection module cameras, the enclosure lights, the sensors, and the HMI.

## Reset Button

The TM-403's blue *Reset* button is located on the left side of the machine above the *Emergency Stop Switch*. When the machine is powered up, it is automatically placed into an emergency stop state to prevent the motors from moving until the operator is ready to begin operating the machine. The error state is cleared by pressing the **Reset** button on the front of the machine.

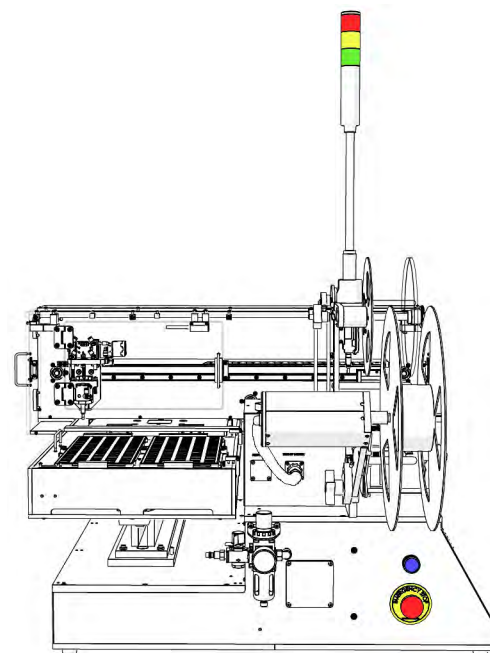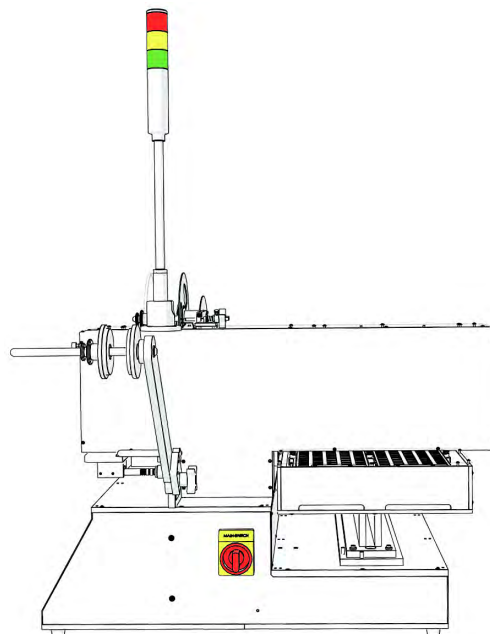

## Open Doors Stop Operation

All automated motion stops and the machine is unable to enter *Run Mode* when an enclosure door is opened. An error message will display at the bottom of the HMI Run screen and a chirping sound will alert the user that the TM-403 door(s) are open.

The enclosure doors may be left open during basic set-up procedures such as positioning the pick head at place or pick locations. If the enclosure doors are left open during setup the TM-403 automatically reduces the speed of the pick head to a fraction of its normal operating speed to prevent operator injury due to collision, etc.

## Lockout/Tagout

The *Main Switch* can be turned **ON** and **OFF** by turning the red knob back and forth. When the red knob is placed in the **OFF** position, the lockout/tagout hole is exposed. The *Main Switch* can then be locked out by placing a lock through the hole.

The *Air Regulator* can be turned **ON** and **OFF** by turning the top red cap back and forth. When the red cap is placed in the **OFF** position, the lockout/tagout hole will be exposed. The *Air Regulator* can then be locked out by placing a lock through the hole.

Be sure to follow your company guidelines regarding lockout/tagout procedures.



lockout/tagout hole



## Tower Light

The tower light feature allows taping machine operators and production supervisors in determining the operational state of the taping machine at a glance.

### Color Codes

#### Green

A solid green light indicates the machine is running a job.

#### Red

A flashing red light indicates that the machine is on but not running.

#### Green + Amber

The combination of a solid green light and a solid amber light indicate the machine is at the end of a job and is in the process of creating a leader.

#### Red + Amber

The combination of a blinking red light and a blinking amber light indicates the machine is at the end of a job and attempting to create a leader, however something has interfered with the process, stopping the machine.

A blinking red light and a solid amber light indicates the machine is at the end of a job, the leader creation sequence is complete and the TM-403 is ready for the next process.



# Safety Warning Labels

---

The following warning labels have been placed in various places on the machine to bring safety issues to the attention of operators and technicians working with or near the machine.



## Attention

Indicates an adjustment or danger zone requiring attention.



## Electrical Hazards

Indicates that hazardous voltage levels are present. Always disconnect power to the machine before removing panels or enclosures with this warning label.



## Temperature Hazards

Indicates a hot surface. Use care when working near these surfaces and allow them to cool before performing maintenance.



## Pinch Hazard

Indicates areas where moving parts or doors can pinch fingers if safety precautions are not observed.



## Consult Manual

Consult User's Guide for proper procedure.

Disconnect power and air supplies and refer to *Chapter 8: Maintenance* of this manual before performing maintenance on the TM-403.

**Note:** Do not remove or obstruct any of the warning or instruction labels on the TM-403.

## Contact Information

---

### **V-TEK, Inc.**

751 Summit Ave  
Mankato, MN 56001  
TEL: (507) 389-2039  
FAX: (507) 387-2257  
email: [service@vtekusa.com](mailto:service@vtekusa.com)  
website: <http://www.vtekusa.com>

For customer service, please refer to the *Customer Service Contact Sheet* at the back of this manual.

### **European Representative:**

#### **QNET BV**

Hommerterweg 286  
6436 AM Amstenrade  
The Netherlands  
KvK Zuid-Limburg 14091511  
email: [qnet@ce-authorizedrepresentative.eu](mailto:qnet@ce-authorizedrepresentative.eu).  
website: [www.ce-authorizedrepresentative.eu](http://www.ce-authorizedrepresentative.eu)

# Table of Contents

---

## EC Declaration of Conformity

## Introduction

Introduction . . . . .	.i-ii
Theory of Operation . . . . .	.i-iii
Machine Details . . . . .	.i-iv
Intended Use . . . . .	.i-v
Operator Requirements . . . . .	.i-vii
Safety Features . . . . .	.i-viii
Safety Warning Labels . . . . .	.i-xi
Contact Information . . . . .	.i-xii

## Table of Contents

<b>Chapter 1: Assembly &amp; Installation . . . . .</b>	<b>1-1</b>
Preparing the Work Area . . . . .	1-2
Space Requirements . . . . .	1-2
Table Requirements . . . . .	1-3
Power Requirements . . . . .	1-4
Unpacking the TM-401 . . . . .	1-5
Assembling the TM-401 . . . . .	1-6
Equipment Required . . . . .	1-6
<b>Chapter 2: Machine Overview. . . . .</b>	<b>2-1</b>
Front View . . . . .	2-2
Right Side View . . . . .	2-3
Left Side View . . . . .	2-4
Back View . . . . .	2-5
Controls, Connections & Labeling . . . . .	2-6
The Taper. . . . .	2-8
Pick & Place Assembly . . . . .	2-10
Tube Feeder. . . . .	2-11
2D Vision System. . . . .	2-12

# Table of Contents (continued)

<b>Chapter 3: The Human Machine Interface</b>	<b>3-1</b>
Introduction	3-2
Touch Screen	3-2
HMI Tabs	3-3
Job Tab	3-4
Job Wizard	3-8
Taper Tab	3-22
Camera Settings	3-23
Sealer Settings	3-24
Head Tab	3-26
Tray Tab	3-30
Run Tab	3-38
<b>Chapter 4: Setup</b>	<b>4-1</b>
Quick Start: Setup	4-2
Power Up the System	4-3
Home Motors	4-4
Load the Tray Feeder	4-5
Nozzle Installation	4-7
Selecting the Correct Nozzle & Nozzle Tip	4-7
Installing Nozzle & Nozzle Tip	4-8
Taper Setup	4-9
Load Carrier Tape	4-9
Load Cover Tape	4-11
Load Take-up Reel	4-12
Configure HMI Settings	4-13
Test Seal	4-28
Tray-to-Tray Output Option	4-30
<b>Chapter 5: Vision Setup</b>	<b>5-1</b>
Quick Start: Vision Setup	5-2
Connect Vision	5-3
Setup HMI	5-3
Connect Computer	5-5
Connect Keyence Monitor	5-9
Configure Inspection	5-10
Configure Computer	5-10
Configure Keyence Monitor	5-28

# Table of Contents (continued)

<b>Chapter 6: Operation</b>	<b>6-1</b>
Quick Start: Running a Job	6-2
Preparing to Run a Pre-programmed Job	6-4
Power up the System	6-4
Home Motors	6-4
Setup the Tray Feeder	6-6
Setup the Taper	6-8
Select Job	6-9
Setup the Pick Head	6-10
Setup Vision	6-11
Run the Job	6-12
 <b>Chapter 7: Troubleshooting</b>	 <b>7-1</b>
Emergency Stop	7-2
Activating an Emergency Stop	7-2
Clearing an Emergency Stop	7-2
System Alarm Messages	7-5
Error Message Table	7-18
Adjusting Nozzle Vacuum Sensors	7-20
Tips on Part Placement	7-21
Sensor Adjustments	7-24
Adjusting the Low Cover Sensor	7-24
Adjusting the Tape Jam Sensor	7-24
Adjusting Heat Seal Quality	7-25
Heat Seal Shoe Temperature	7-25
Seal Pressure	7-26
Sealer Dwell Time	7-26
Adjusting PSA Seal Quality	7-27
Materials Used	7-27
Seal Roller Pressure	7-27

# Table of Contents (continued)

<b>Chapter 8: Maintenance</b> .....	<b>8-1</b>
Safe Maintenance Steps .....	8-2
Maintenance .....	8-3
Routine Maintenance Schedule .....	8-3
General Maintenance Instructions .....	8-4
Lubrication .....	8-4
Air Pressure Regulator .....	8-4
Pick Head Maintenance .....	8-5
Nozzle Tip .....	8-5
Vacuum Levels .....	8-5
Replace the Vacuum Filter .....	8-5
Check Actuator Belt Tension .....	8-7
Taper Maintenance .....	8-8
Heat Sealer .....	8-8
Loading Track .....	8-10
PSA Sealer .....	8-10
Cover Tape Guide .....	8-11
<b>Appendix A: Sensors</b> .....	<b>A-1</b>
Keyence FS-V21/FS-V22 Sensor Amplifiers .....	A-2
SMC ZSE30 Vacuum Sensor .....	A-4

**Exploded Views**

**Spare Parts List**

**Customer Service Contact Sheet**

**Document List**

**Warranty**

# Chapter I: Assembly & Installation

---

---

## Contents

<b>Preparing the Work Area</b> .....	<b>1-2</b>
Space Requirements .....	1-2
Table Requirements .....	1-3
Power Requirements .....	1-4
<b>Unpacking the TM-403</b> .....	<b>1-5</b>
<b>Assembling the TM-403</b> .....	<b>1-6</b>
Equipment Required .....	1-6


---

## Preparing the Work Area

### Space Requirements

The TM-403 is a table-top machine which needs to be placed on a flat, stable surface in a well lit work area that is a minimum of 7' high x 11' wide x 9'deep (2.2 m x 3.5 m x 2.7 m) to provide sufficient space for the assembled machine when it is fully loaded with a variety of tape reel sizes.

The TM-403 is pictured mounted on the optional 80/20 Frame in the minimum required work area below.

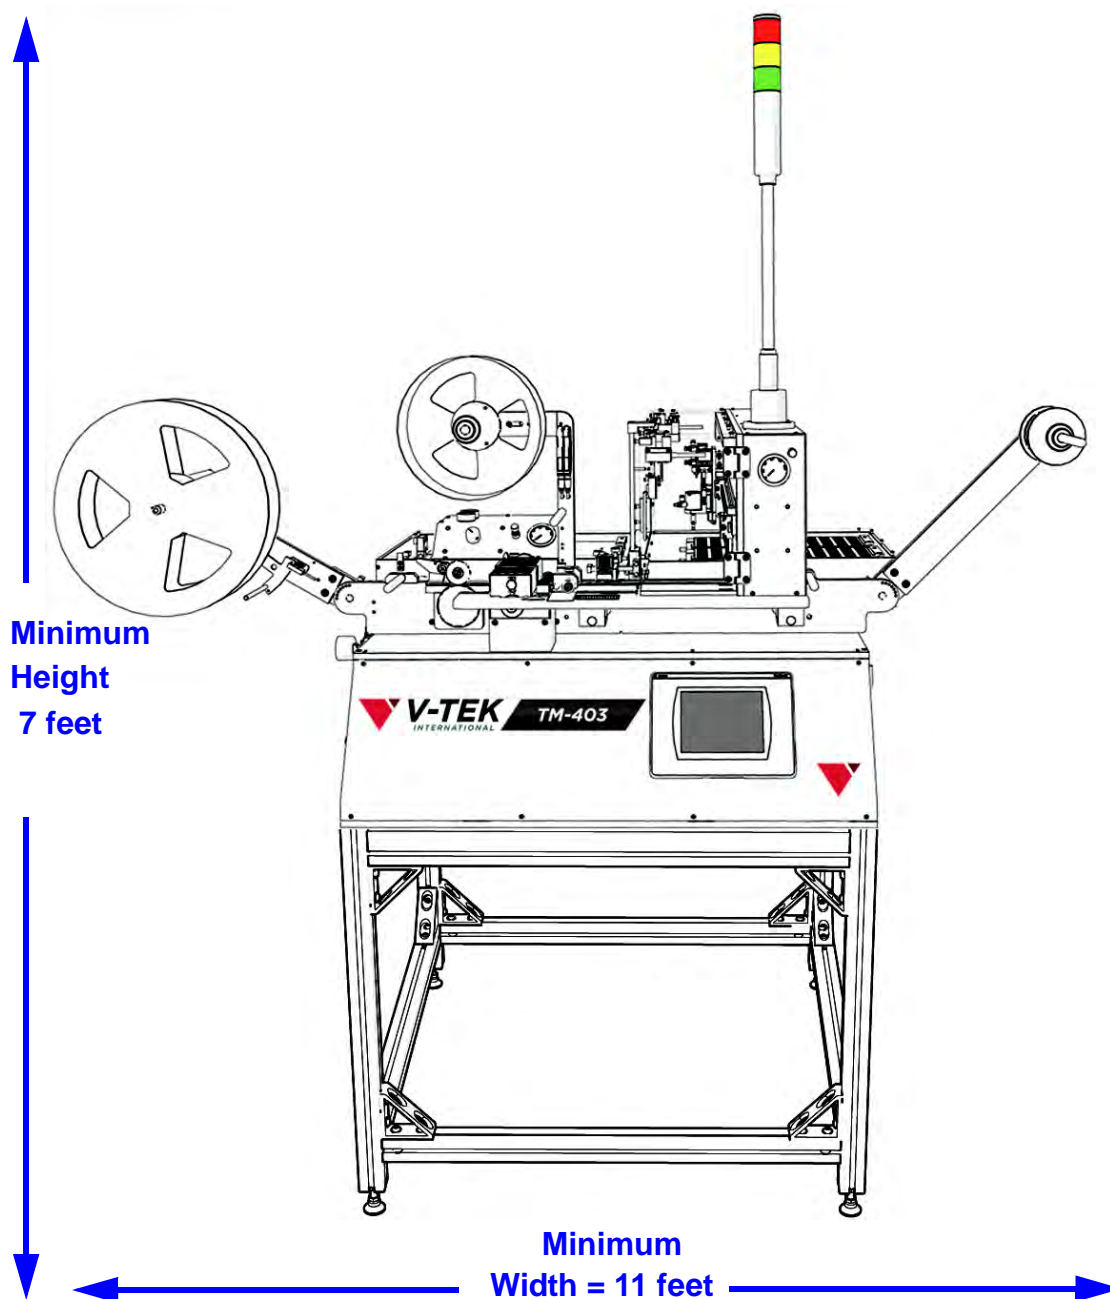

## Table Requirements

The TM-403 should be placed on a user-supplied table or bench that is capable of supporting a minimum of 260 lb. (118 kg). An optional 80/20 frame (pictured above) is also available for mounting the TM-403.


Choose a table that is at least 52" wide by 36" deep to provide sufficient space for the assembled machine when it is fully loaded with a variety of tape reel sizes.

Ideally the table height should be adjustable so the machine height can be easily adjusted to suit operators of varying heights. The objective is to position the TM-403 controls so they are easily accessible for operation and maintenance. The suggested level is 36" (900 mm) above the floor, but this may vary from one operator to another.

The table's working surface should have a slope of no more than 5 degrees. Ensure that the TM-403 feet is positioned on a table or the optional 80/20 frame so the machine is fully supported, immobilized and level during operation.

## Clearance

Allow at least three feet of clearance on all sides of the machine for easy access and operation. A birds-eye view of the TM-403 with minimum clearance on all sides is shown below.

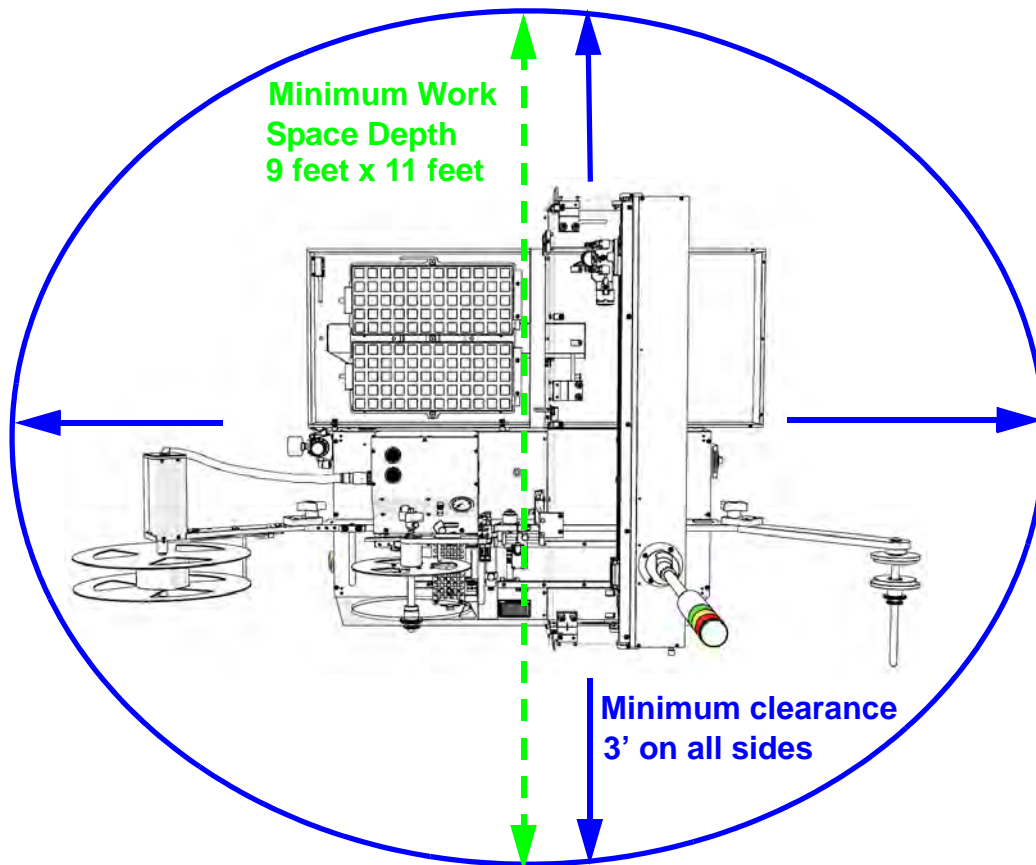

When positioning the TM-403, choose an area that is not located below overhead gantries, walkways or power lines to ensure objects or liquids cannot be dropped on the machine from overhead.


### **Power Requirements**

The TM-403 will also require access to a 85-110 PSI air pressure system and a 120/240 VAC, 50/60 Hz power supply. Locate the machine so electrical power cables can be routed away from areas where personnel are expected to move.

**Note:** It is recommended that cables be routed overhead or underground. If cables must be routed over the floor, cover them with rubber ramps.

## Unpacking the TM-403

Prior to shipment, the TM-403 is partially disassembled, then shrink wrapped, placed in a crate, and strapped to the crate floor. The disassembled TM-403 parts, which include the *Carrier Tape Arm*, the *Take-up Assembly*, the *Tower Light* and the *Spare Parts Kit*, are individually bubble-wrapped and packed around the base machine. The TM-403 crate should contain the base machine along with the following items:

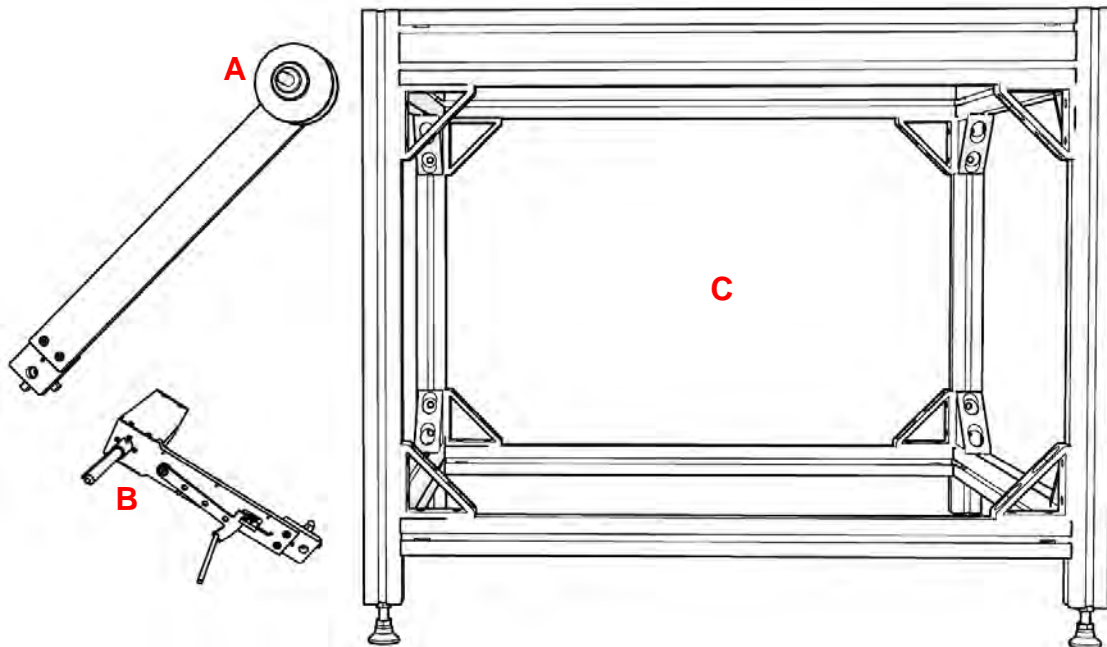

- A. Carrier Tape Arm
- B. Take-up Arm
- C. 80/20 Frame (optional, shipped disassembled)
- D. Laptop Computer (optional, not pictured)

A *User's Guide*, *Standard and Metric Hex Wrench Sets*, and a *Spare Parts Kit* are also included but not pictured above.

## Assembling the TM-403

---

### Equipment Required

- Adjustable wrench (needs to fit 1 1/16" to 1 3/32" nut)
- Standard and Metric Hex Wrench Sets (provided with machine)
- 85-110 PSI air pressure system

**Note:** Read the *TM-403 User's Guide* before assembling the TM-403.


### Unpack the TM-403 Crate

1. **Move the Crate to the Work Area.** Use a fork lift to move the TM-403 crate to the prepared work area. Ensure the fork is centered under the crate before lifting.

**Note:** Use a forklift with a minimum load capacity of 300 pounds (136 kg) and a fork length that is a minimum of 40 inches (102 cm) so the fork fully extends beyond the crate on the other side. The forklift should only be operated by a licensed/certified operator.

2. **Unpack the Crate.**

- a. Remove the top and sides from the TM-403 crate. Set aside.

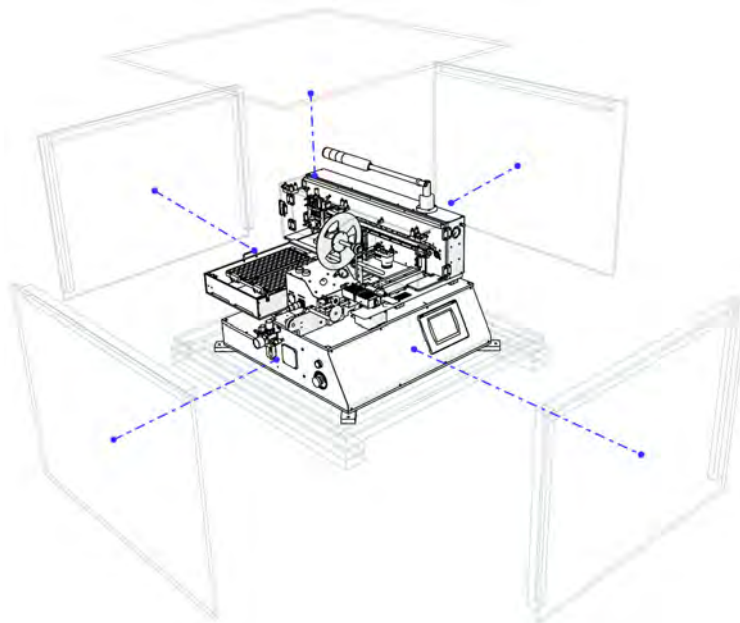

- b. The TM-403 is shipped partially disassembled, with the Tower Light, Take-up Arm and Carrier Tape/Feed Arm detached and wrapped in bubble wrap. Remove the smaller items one at a time from the crate and place on a flat, stable surface for assembly.


- c. Remove and discard the protective wrapping from each part.

### 3. Remove the TM-403 from the Crate.

a. The TM-403 is bolted to the bottom of the crate for shipping. Reach below the crate to unfasten the bolts.

**Note:** If the optional 80/20 Frame was purchased, follow the assembly instructions in the *80/20 Frame Exploded Views* document which can be found in the *Exploded Views* section at the end of this manual before proceeding.

b. **Moving the TM-403 Base Machine.** The machine may be manually lifted from the crate. The base machine weighs 247 lb. (112 Kg) so the task will require four people.

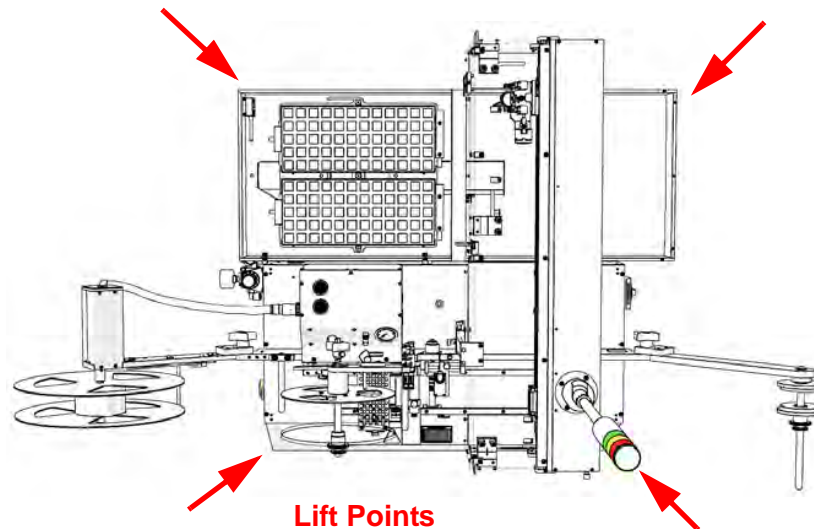


Position one person at each corner of the machine using the lift points illustrated above to safely distribute the machine's weight. Lift the machine from the crate and place it onto the prepared work table/bench.

4. Position the TM-403 in the work area so there is at least 3 feet of clearance on all sides. (See the *Preparing the Work Area* section earlier in this chapter for details.)
5. The TM-403 is shipped with zip ties securing the pick head, the 2D Camera, the Tray Feeder and any mobile portions of the machine. Cut and remove all zip ties.

## Re-assemble the TM-403


### 1. Position the Tower Light

Lift Tower Light, snapping it in place in an upright position perpendicular to the TM-403.

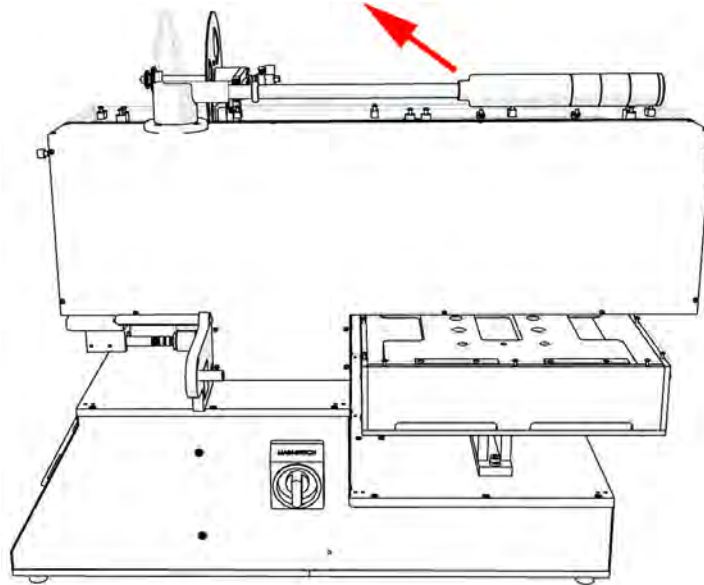


### 2. Connect the *Carrier Tape Arm*

a. Remove the black knob from the right side of the *Track Support Bracket*.

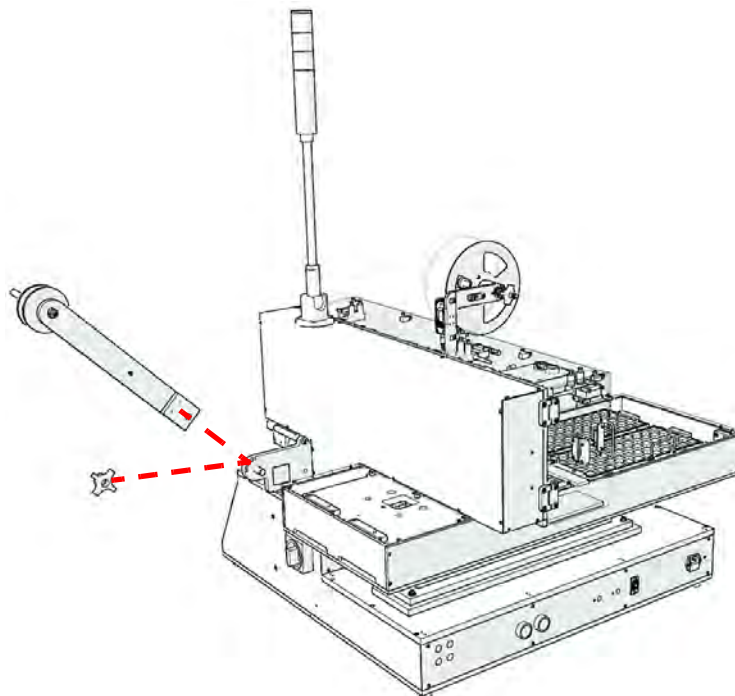


- b. The *Carrier Tape Arm* has a dowel pin which locks into position holes on the *Track Support Bracket*. Slide the *Carrier Tape Arm* onto the threaded rod, engage the dowel pin into the desired position, and secure it into place with the black knob.

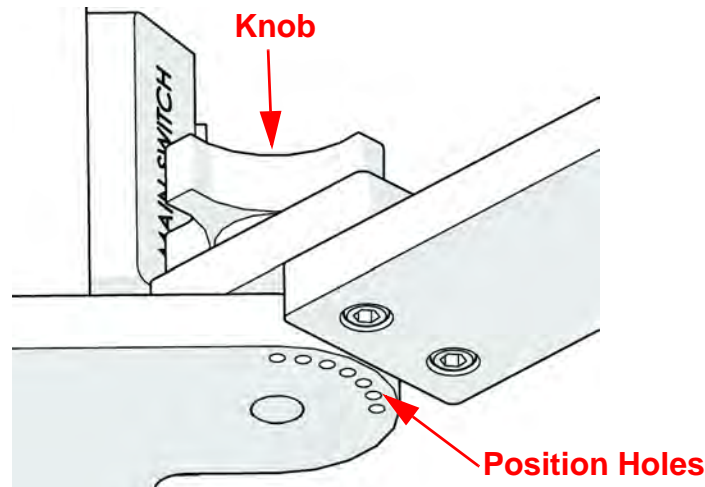


#### 4. Connecting the Take-up Arm

- a. The *Take-up Arm* has a dowel pin which locks into position holes on the *Track Support Bracket*. Slide the *Take-up Arm* onto the threaded rod and position it at about a 45 degree angle from the baseplate assembly. Engage the dowel pin into the desired position and secure it into place with the black knob.

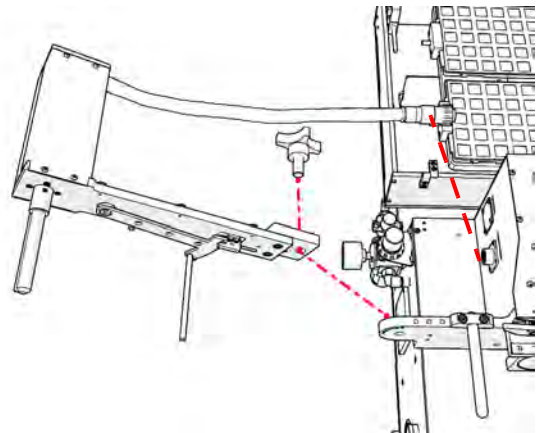


- b. Plug the electrical connector into the take-up motor receptacle.

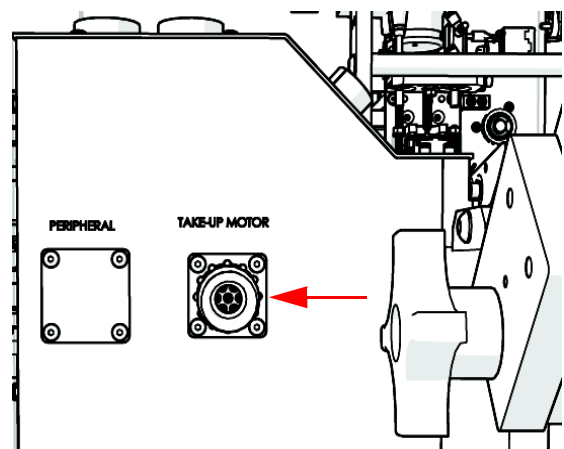

**5. Connect the Air Supply..**

- a. Attach the air supply line to the air regulator, then connect it to the air supply.
- b. Set the regulator to **85 psi**, if necessary. It can be adjusted by lifting the adjustment knob and turning it. Once it reads 85 psi, push the knob back in to lock it into place.

**NOTE:** It is recommended that the air hose be routed overhead or underground. If it must be routed over the floor, cover the hose with rubber ramps.

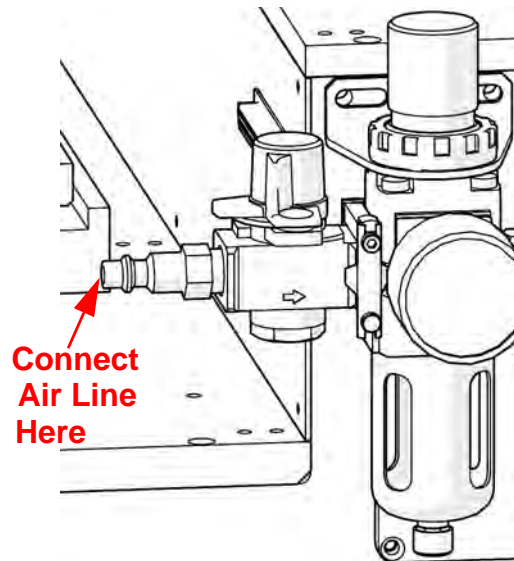**6. Inspect the TM-403.**

- a. Inspect the fully assembled TM-403, verifying that all twist ties have been removed and all cables are secure.
- b. Connect the power cord to the power receptacle on the back of the TM-401, then connect the other end to a 120/240 Volt single phase power supply

**Note:** It is recommended that the power cord be routed overhead or underground. If it must be routed over the floor, cover the cords with rubber ramps.



Protective earth grounding of the TM-403 is included in the manufacture of the TM-403 at V-TEK. The TM-403 is fully tested before shipping. No further grounding or testing is required during re-assembly and installation.

The TM-403 is ready to power up. Follow the instructions in *Chapter 3: Machine Setup* to setup the machine for operation.

# Chapter 2: Machine Overview

---


---

## Contents

Front View . . . . .	2-2
Right Side View . . . . .	2-3
Left Side View . . . . .	2-4
Back View . . . . .	2-5
Controls, Connections & Labeling . . . . .	2-6
The Taper . . . . .	2-8
Pick & Place Assembly . . . . .	2-10
Tray Feeder. . . . .	2-11
2D Vision System. . . . .	2-12

---


## Front View

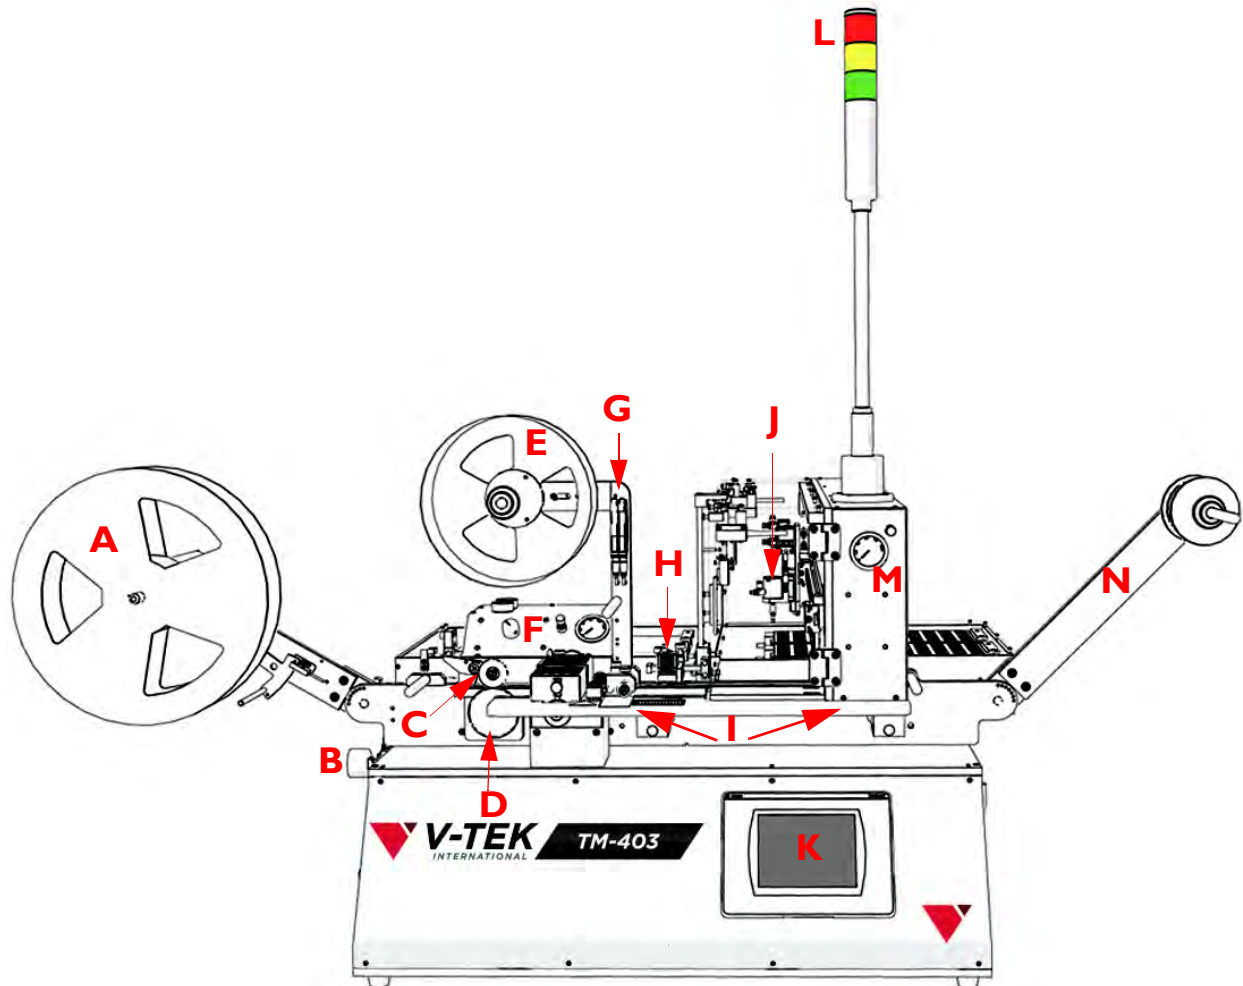

- A. Take-up Arm
- B. Air Regulator
- C. Idler Wheel
- D. Drive Sprocket
- E. Cover Tape Arm
- F. Heat/PSA Sealer
- G. Sensor Amplifiers

- H. Vision System
- I. Taper Track
- J. Pick & Place Head Assembly & Bridge
- K. Touch Screen HMI
- L. Tower Light
- M. Blow-off Air Pressure Gauge & Control
- N. Carrier Tape Arm


## Right Side View

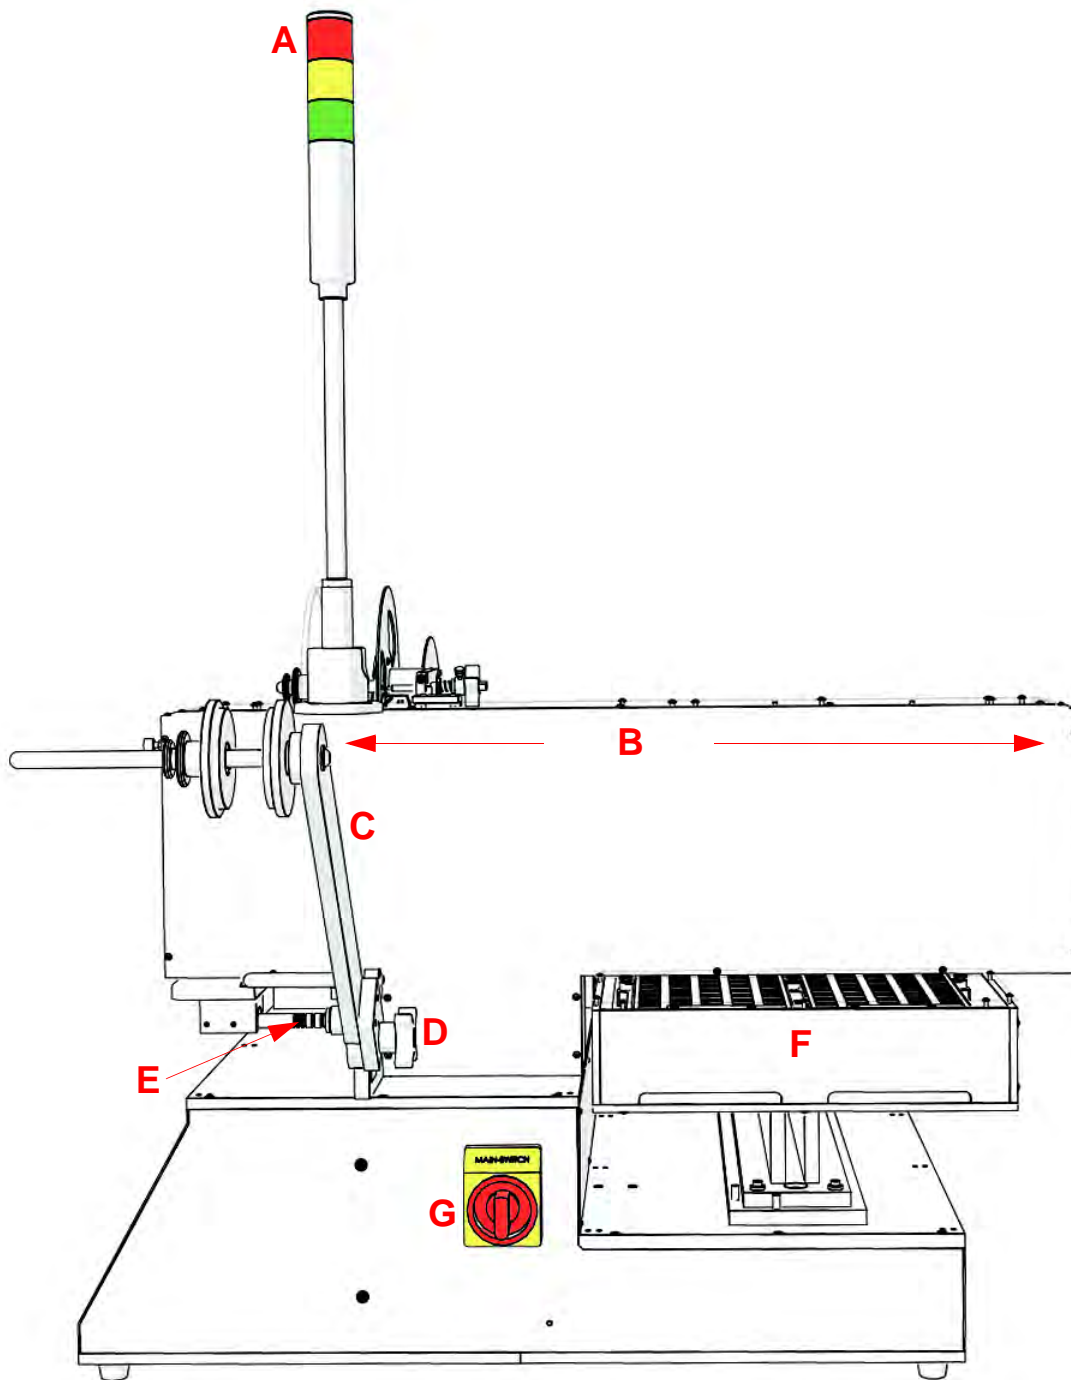

- A. Tower Light
- B. Pick & Place Head Enclosure
- C. Carrier Tape Arm
- D. Carrier Tape Arm Adjustment Knob

- E. Taper Input
- F. Tray Feeder
- G. Main Power Switch


## Left Side View

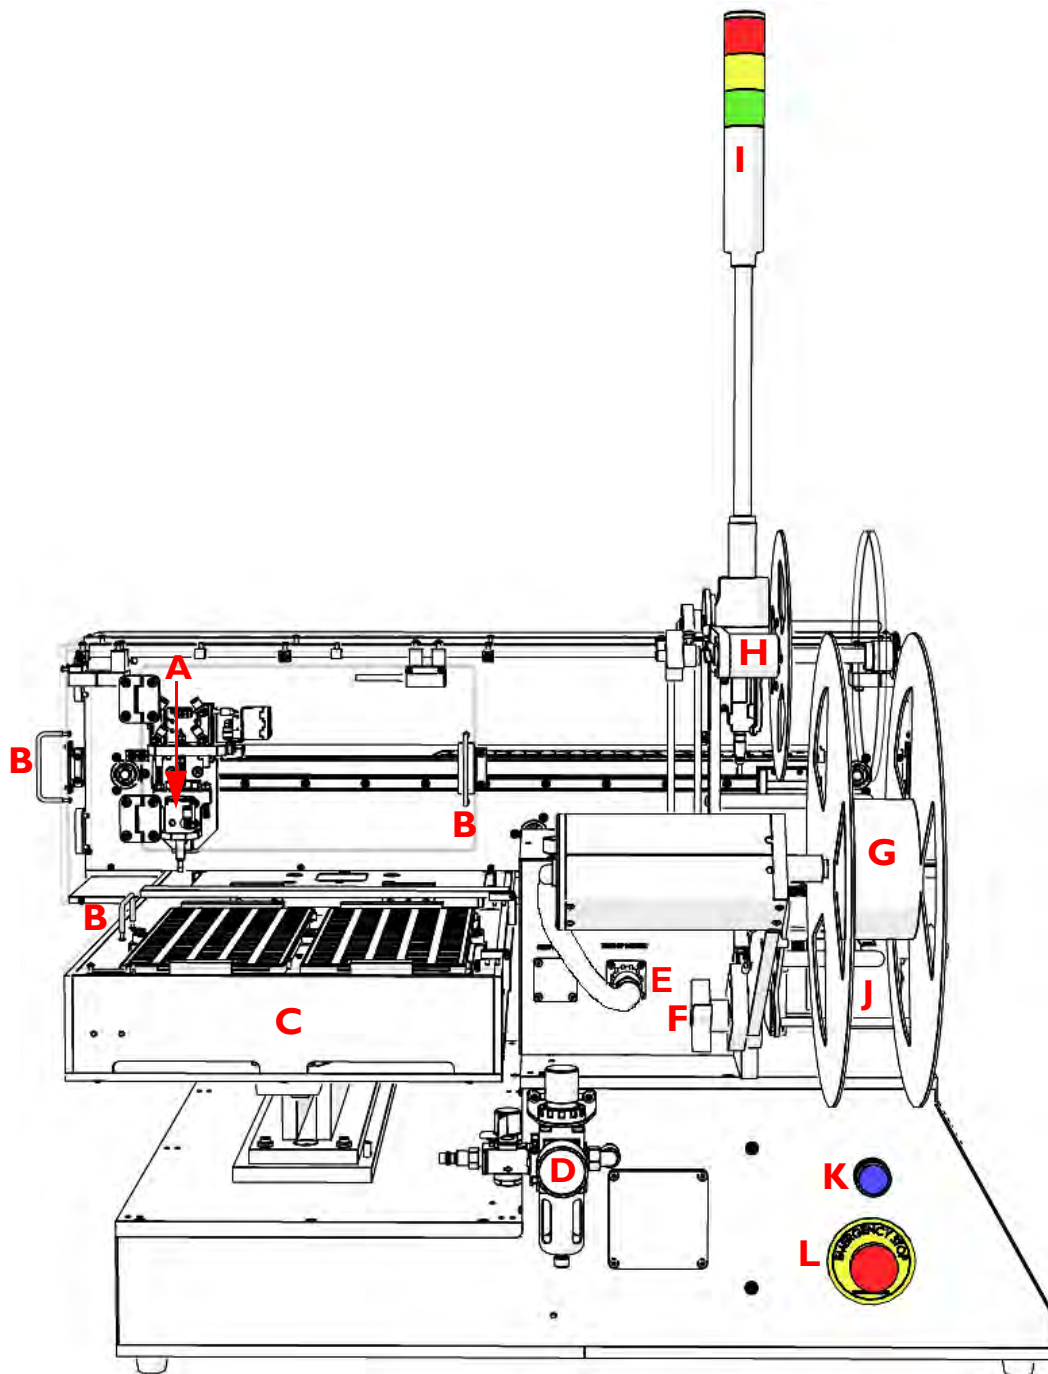

- A. Pick & Place Head Assembly
- B. Enclosure Doors (3)
- C. Tray Feeder
- D. Air Regulator
- E. Take-up Motor Connection
- F. Take-up Arm Adjustment Knob

- G. Take-up Arm
- H. Cover Tape Arm
- I. Tower Light
- J. Heat/PSA Sealer
- K. Reset Button
- L. Emergency Stop Switch

## Back View

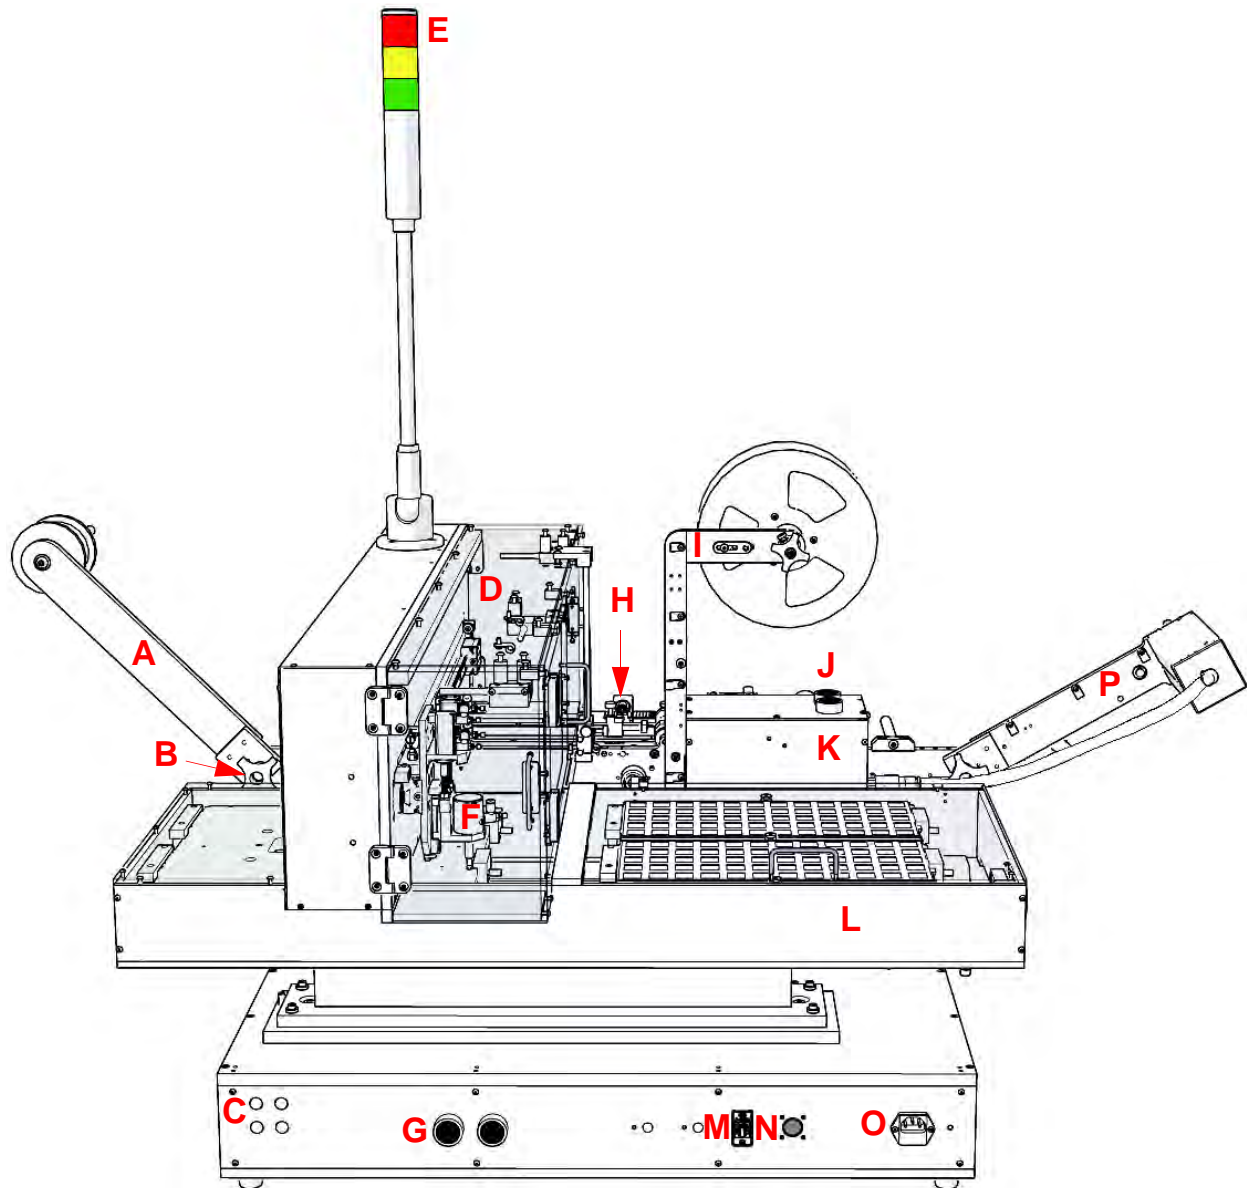


- |  |   |
|--|---|
| <b>A.</b> Carrier Tape Arm                     | <b>J.</b> Pick Head Jog Buttons           |
| <b>B.</b> Carrier Arm Adjustment Knob          | <b>K.</b> Heat/PSA Sealer                 |
| <b>C.</b> Fuse Holders (Bowl application only) | <b>L.</b> Tray Feeder                     |
| <b>D.</b> Pick Head Enclosure                  | <b>M.</b> Ethernet Connection             |
| <b>E.</b> Tower Light                          | <b>N.</b> Vision Monitor Power Receptacle |
| <b>F.</b> Pick & Place Head Assembly           | <b>O.</b> TM-403 Power Receptacle         |
| <b>G.</b> Tray Jog Buttons                     | <b>P.</b> Take-up Arm                     |
| <b>H.</b> 2D Vision System                     |   |
| <b>I.</b> Cover Tape Arm                       |   |

## Controls, Connections & Labeling

### Reset Button

The TM-403's blue *Reset Button* is located on the left side of the machine below the *Take-up Arm*. (pictured below)

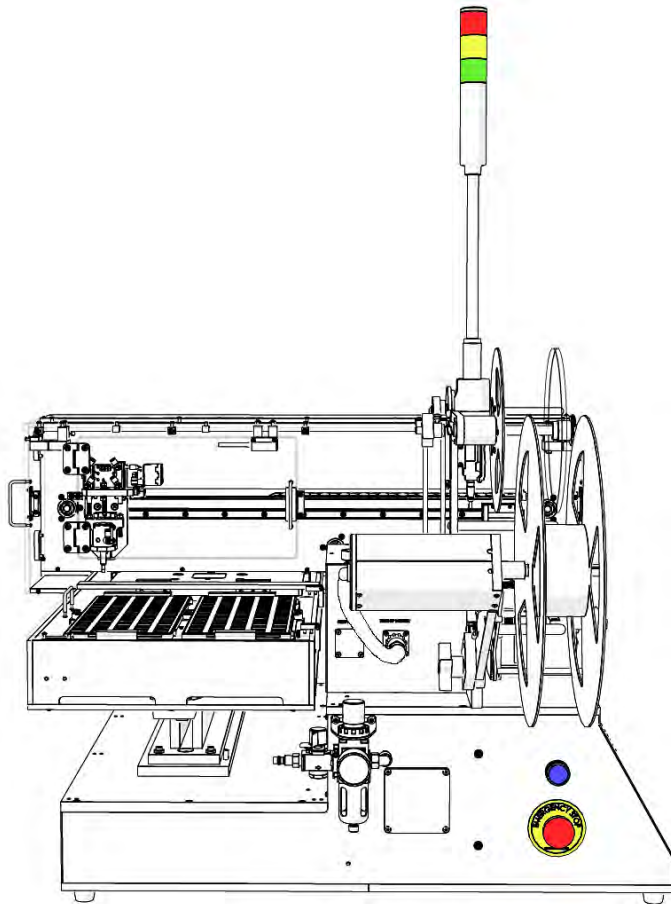


### Emergency Stop Switch

The *Emergency Stop Switch* is located on the left side of the machine below the blue *Reset Button*. (pictured above)




## Main Power Switch

The *Main Power Switch* is located on the right side of the machine behind the *Carrier Tape Arm* on the lower sheet metal enclosure.

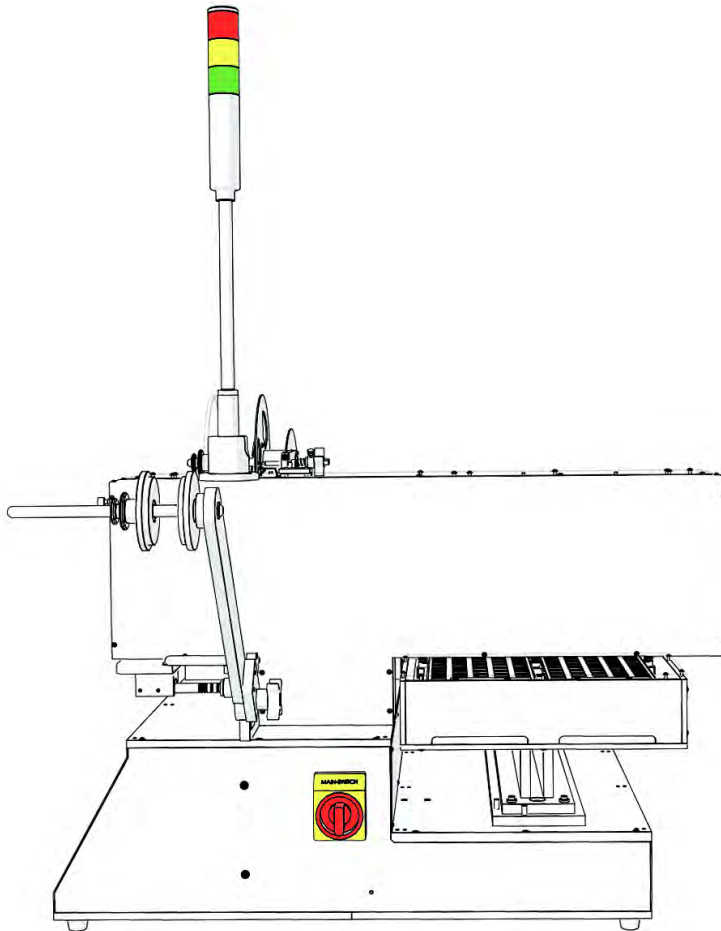


## Serial Plate

This is an example of the *Serial Plate* which is permanently affixed to the back of the TM-403. It includes basic machine information such as machine weight, *power usage* and *short circuit rating*. The *Serial Plate* also documents machine specific information such as the machine's model name, date of manufacture and unique serial number

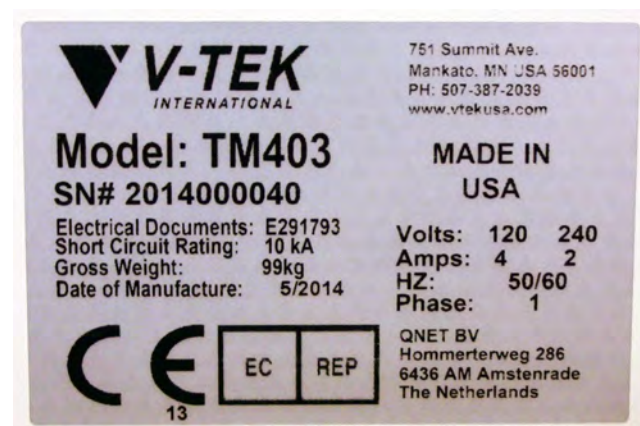


## The Taper

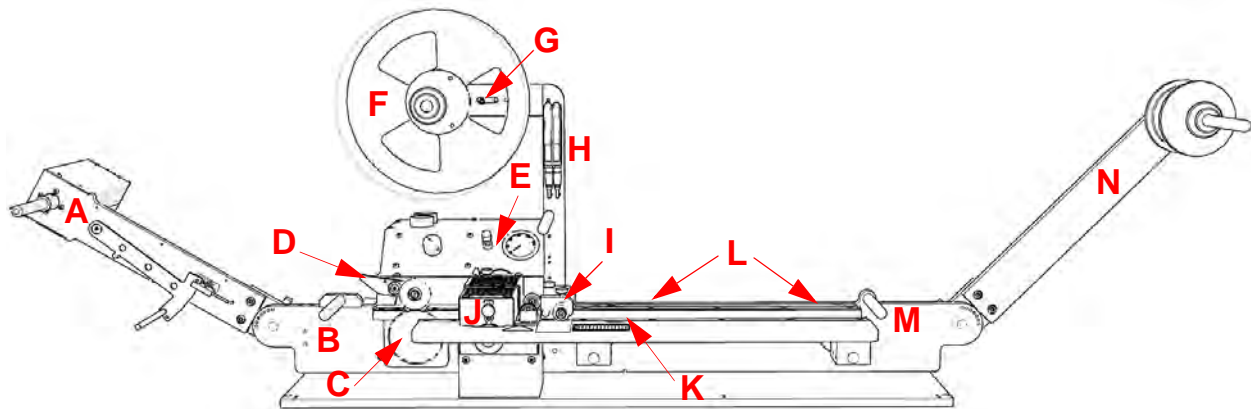


- |                                     |                           |
|-------------------------------------|---------------------------|
| A. Take-up Arm                      | H. Sensor Amplifiers      |
| B. Take-up Guide                    | I. Cover Tape Guide       |
| C. Drive Sprocket                   | J. Heat/PSA Sealer        |
| D. Idler Wheel                      | K. Tape Jam Sensor        |
| E. Sealer Controls & Pressure Gauge | L. Adjustable Width Track |
| F. Cover Tape Reel                  | M. Carrier Tape Guide     |
| G. Low Cover Sensor                 | N. Carrier Tape Arm       |

## Taper Controls

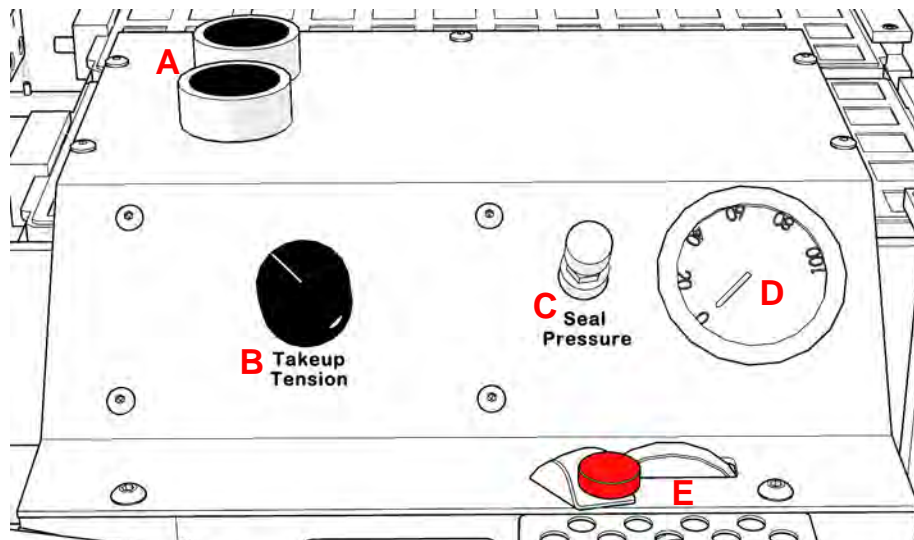

- |                                     |
|-------------------------------------|
| A. Pick Head Jog Buttons            |
| B. Take-up Tension Control          |
| C. Sealer Air Pressure Control      |
| D. Sealer Air Pressure Gauge        |
| E. Inside Seal Position Lock/Adjust |


## Taper: Sealer

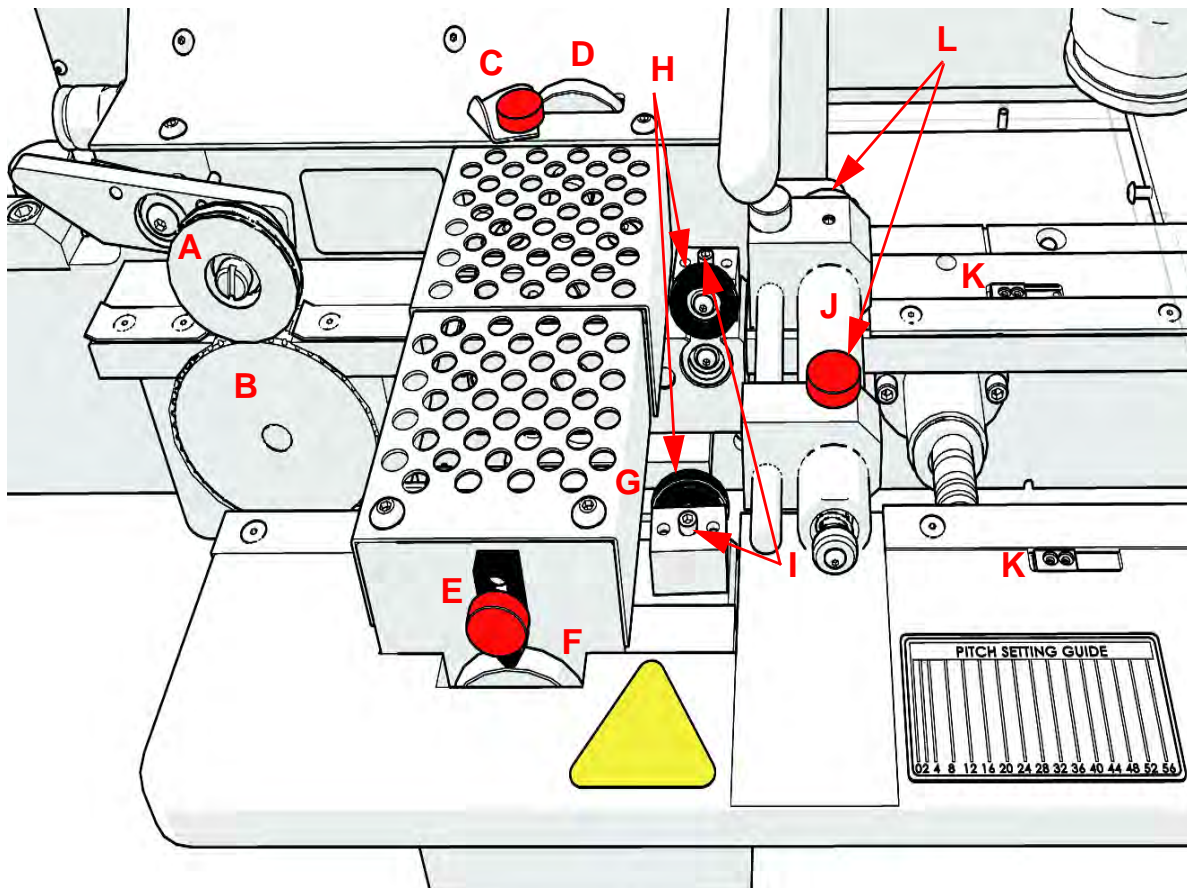

- A.** Idler Wheel  
**B.** Drive Sprocket  
**C.** Outer Seal Lock  
**D.** Outer Seal Adjuster  
**E.** Inner Seal Lock  
**F.** Inner Seal Adjust
- G.** Heat Sealer  
**H.** PSA Pressure Wheels  
**I.** PSA Pressure Adjustment Screws  
**J.** Cover Tape Guide  
**K.** Tape Jam Sensors  
**L.** Cover Tape Width Adjusters

## Pick & Place Assembly


### Pick & Place Head

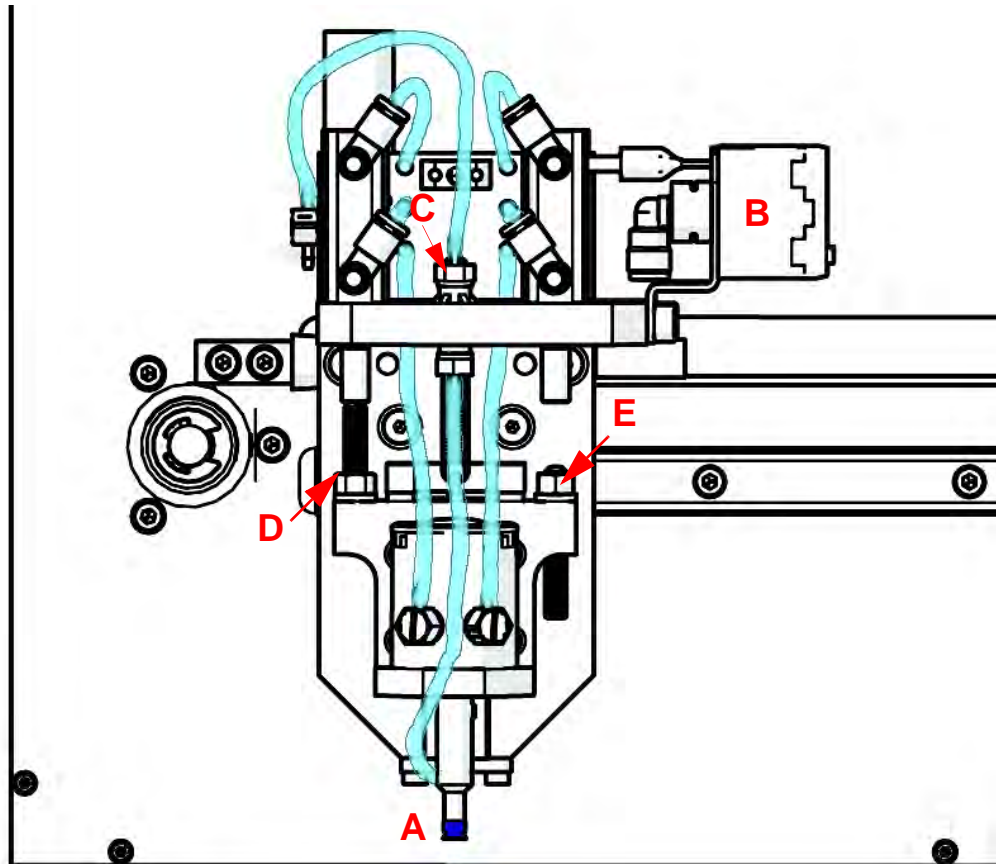

- A. Nozzle  
B. Nozzle Vacuum Sensor  
C. Nozzle Vacuum Filter

- D. Pick Actuator Adjustment Screw  
E. Place Actuator Adjustment Screw

### Pick & Place Controls

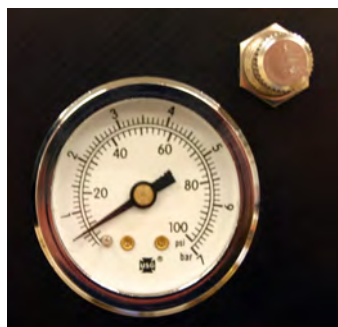


A. Blow-off Air Pressure Gauge & Control



B. Nozzle Vacuum Sensor


## Tray Feeder.

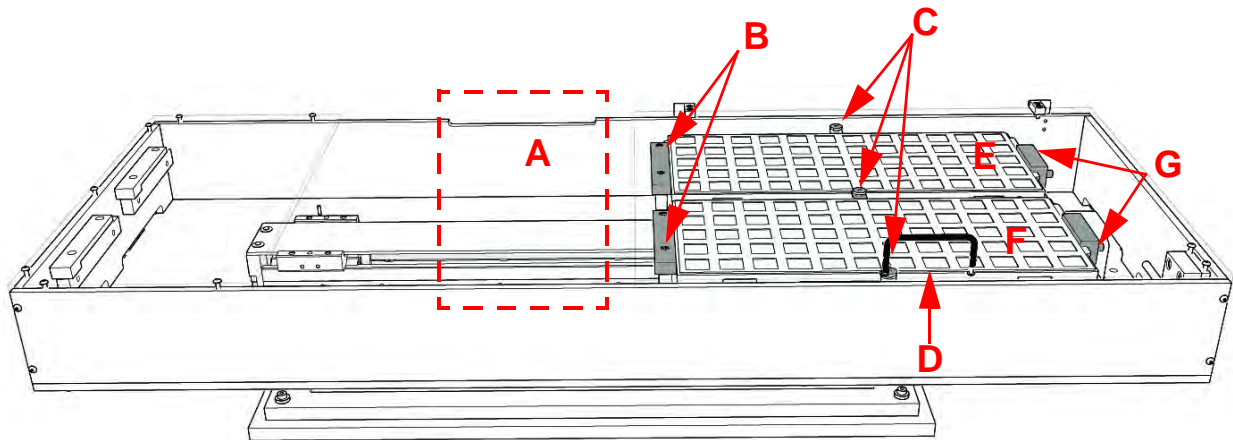

- A. Pick Area
- B. Stationary Tray Clamps
- C. Side & Center Clamps
- D. Safety Enclosure Door
- E. Tray 1
- F. Tray 2
- G. Spring loaded Tray Clamps

## 2D Vision System

The Keyence IV Vision system consists of the following components shown below.

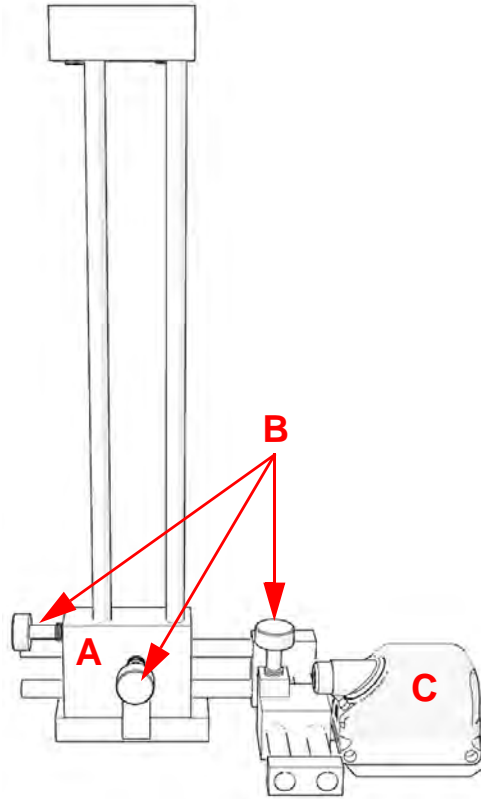

- |  |   |
|--|---|
| <b>A.</b> Adjustable Mounting Bracket    | <b>F.</b> Status LED                    |
| <b>B.</b> Position Adjustment Knobs      | <b>G.</b> Ethernet Traffic Indicator    |
| <b>C.</b> Power & I/O Connector          | <b>H.</b> Keyence IV-G Camera           |
| <b>D.</b> Ethernet Connector             | <b>I.</b> Lens Cover/Focus Ring         |
| <b>E.</b> M12 Ethernet Cable (not shown) | <b>J.</b> Dome Light Option (not shown) |

**Note:** For advanced Vision configuration, a computer or Keyence Monitor is required. These can be purchased as an option from V-TEK, Inc or the user can provide their own computer. System requirements for the vision computer follow:

- Operating system: Microsoft® Windows 7™ (32 or 64 bit)
- 128 MB RAM
- 1024 x 768 (96 DPI) or 1280 x 1024 (120 DPI display)
- Ethernet port

# Chapter 3: Human Machine Interface

---

---

## Contents

<b>Introduction</b>	<b>3-2</b>
Touch Screen	3-2
HMI Tabs	3-3
<b>Job Tab</b>	<b>3-4</b>
Job Wizard	3-8
<b>Taper Tab</b>	<b>3-22</b>
Camera Settings	3-23
Sealer Settings	3-24
<b>Head Tab</b>	<b>3-26</b>
<b>Tray Tab</b>	<b>3-30</b>
<b>Run Tab</b>	<b>3-38</b>

---

## Introduction

This chapter gives an overview of the TM-403 *Human Machine Interface (HMI)*, defining the buttons, screens and setting options that allow the operator to customize the TM-403's performance to their taping needs.

**Note:** Proceed to *Chapter 4: Setup* for instructions on how to configure the HMI, to *Chapter 5: Vision Setup* for instructions on configuring the vision system and to *Chapter 6: Operation* for instructions on how to run a job.

### Touch Screen

The user interacts with the TM-403 through a touch screen HMI which is located on the front of the machine below the *Taper*. Touching the HMI screen has the same effect as a left click with the mouse. Although only lightly touching the buttons or data fields is necessary for activation, the action is referred to as "pressing" in this manual.

**Note:** Use care when operating the touch screen and do not use any objects other than a finger to touch the screen. A stylus can also be used to click the various buttons.

The screenshot displays the V-TEK International TM-403 touch screen interface. At the top, the V-TEK International logo and model name 'TM-403' are visible. On the left side, there is a vertical menu with buttons labeled 'Job', 'Taper', 'Head', 'Tray', and 'Run'. The 'Job' button is currently selected and highlighted in brown. The main area of the screen shows a list of jobs: 'Job 1', 'Job 2', and 'Job 3'. To the left of this list are up and down arrow buttons, and to the right are left and right arrow buttons. Below the job list, there are two input fields: 'Job Quantity' and 'Job Description'. At the bottom of the screen, there are three buttons: 'Open', 'Save', and 'Job Wizard'.

## HMI Tabs



When the TM-403 is powered on, the user interface opens to the *Job Tab*. The *Job Tab* is pictured above as it appears when the motors have been homed.

There are five tabs on the TM-403 HMI: *Job*, *Taper*, *Head*, *Tray* and *Run*. These tabs allow the user to configure pick head, taper, tray feeder and job settings and to run jobs.

The *Tab Menu* (pictured on the right) is located on the left side of all screens. To navigate between tabs, press the desired tab name on the Tab Menu and the selected tab will open.


The active tab button is shaded grey. In the example on the right, the *Job Tab* is selected.

Each tab contains a variety of toggle buttons and open fields. Press any field to open a numeric or alpha-numeric keypad and enter the appropriate information.

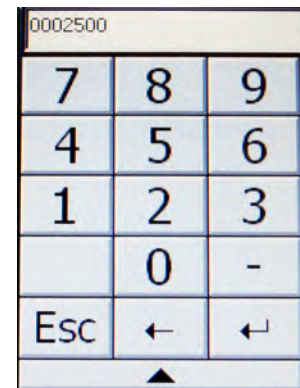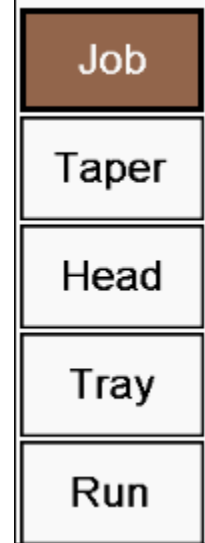


## Job Tab

When the TM-403 is initially powered up, the HMI will open to the Job Tab with a red **Home Required** button at the top of the *Tab Menu* and the other tab buttons grayed out.

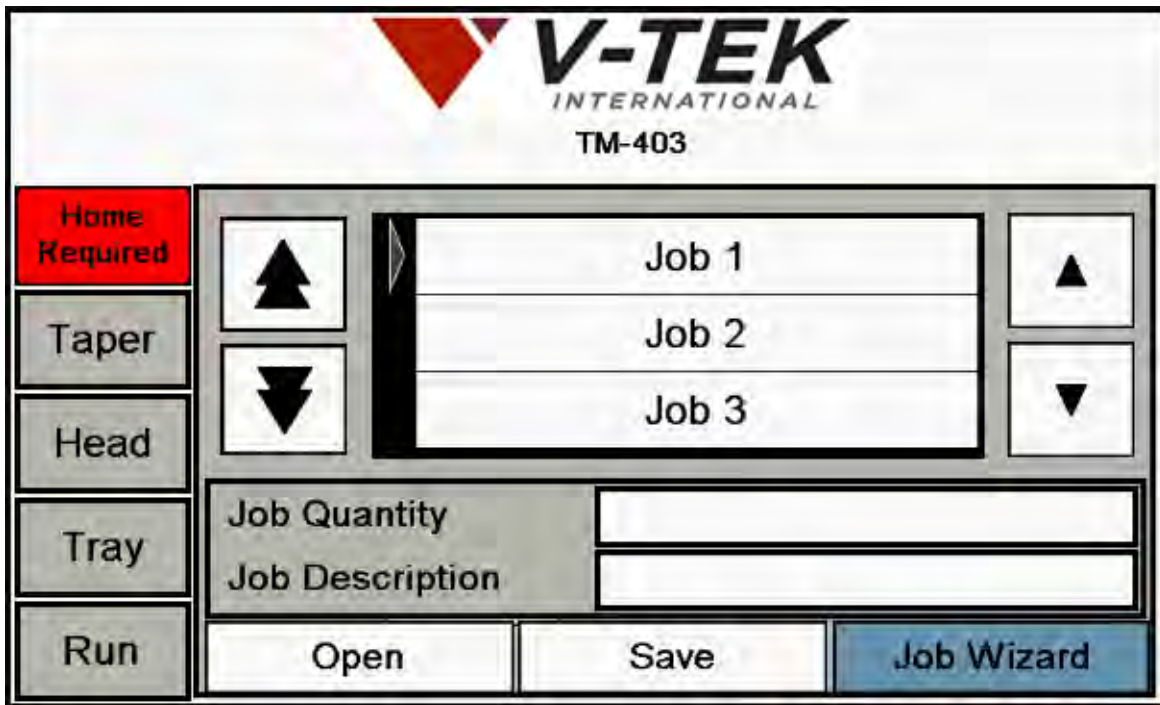


Homing motors should be done following every system power up or emergency stop. Press **Home Required** to open the *Homing Status* window.

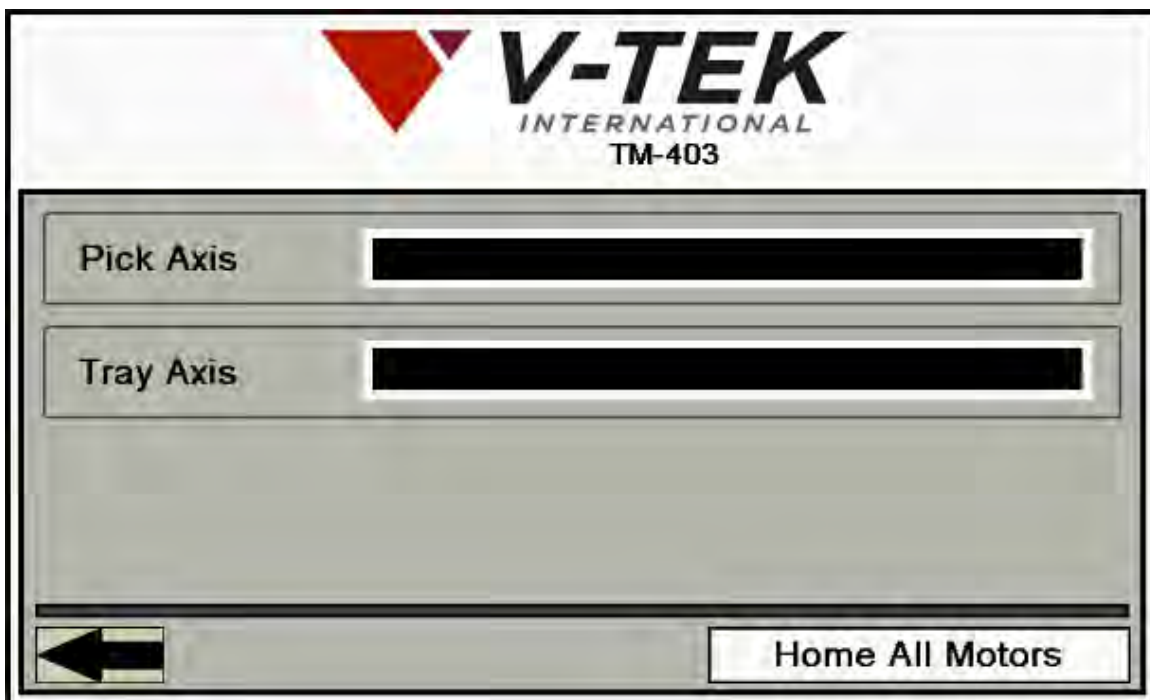


Press the **Home All Motors** button to begin the homing sequence. Homing progress is displayed in the *Pick Axis Motor Status Bar* and the *Tray Axis Motor Status Bar*.

As the homing sequence is completed, the bars gradually turns from black to **green**. A **Homing Succeeded!** message appears at the end of the sequence.

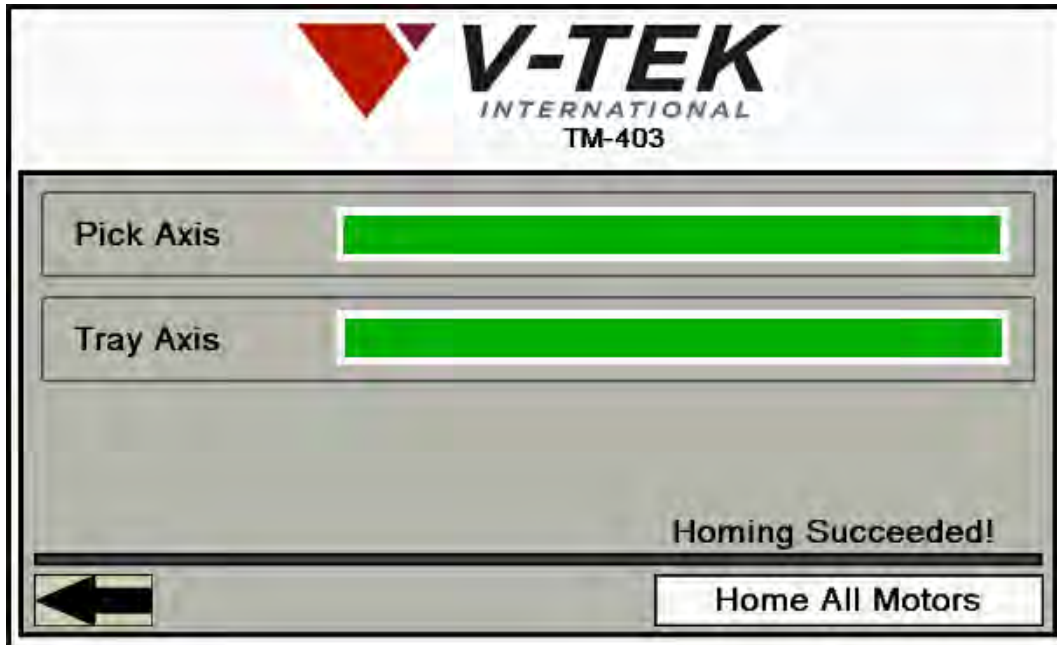

If a problem arises during homing of one or both of the motors, the status bar will turn **red** and a **Homing Failed** message will appear.

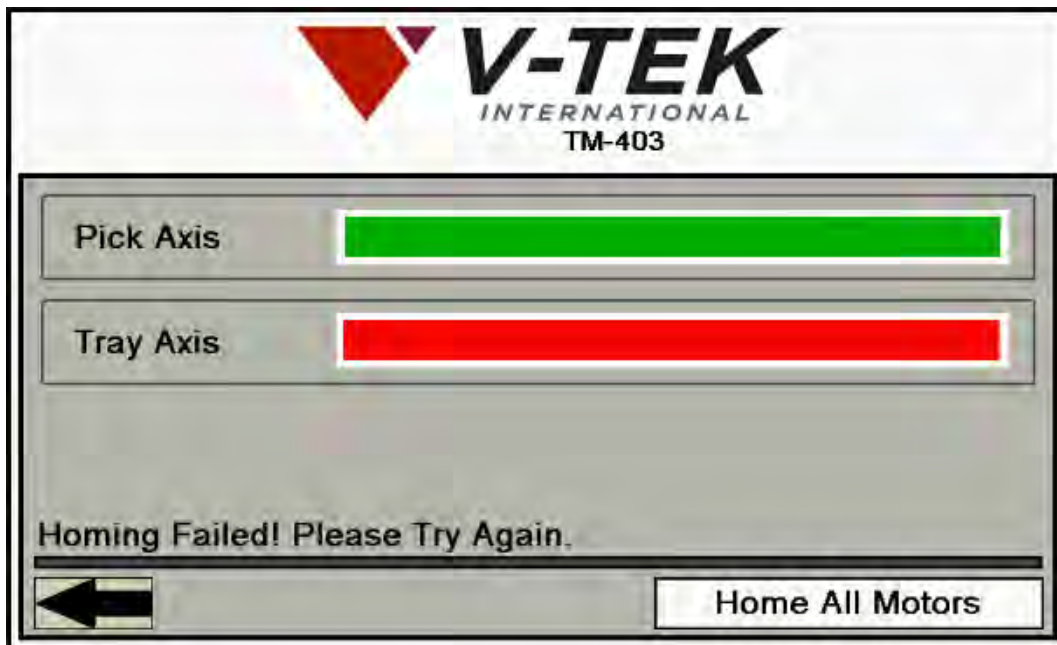

Pressing the **Left Arrow** button in the Homing Screen will open the *Run Tab*.


The screenshot displays the V-TEK INTERNATIONAL TM-403 control interface. At the top center is the V-TEK logo, consisting of a red stylized 'V' followed by the text 'V-TEK INTERNATIONAL' and 'TM-403' below it. On the left side is a vertical 'Tab Menu' with five buttons: 'Job', 'Taper', 'Head', 'Tray', and 'Run'. The 'Run' button is highlighted in brown. The main area of the screen is divided into several sections. The top section contains a 'Quantity' input field with a value of '0', a 'Run' button, and a red 'Stopped' button. Below this is a section with 'Parts Placed' (0), 'Run Time' (00 00 00), and 'PPH' (0). To the right of these are two buttons: 'Reset Job' and 'System Homing'. At the bottom, there is a yellow 'End Of Job' button with a value of '0' and a red 'Doors Open' button.

Tab Menu	Quantity	Run	Stopped
Job	0		
Taper			
Head	Parts Placed 0	Reset Job	
Tray	Run Time 00 00 00	System Homing	
Run	PPH 0		
	End Of Job 0	Doors Open	

Select the *Job Tab* from the *Tab Menu* to navigate back to the *Job Tab*.

## Job Tab Overview

The *Job Tab* allows the user to select a pre-programmed job, change job information and move to the other tab screens. It also features an easy-to-use *Job Wizard* which leads the user through the job set-up process. The *Job Tab* is pictured below.

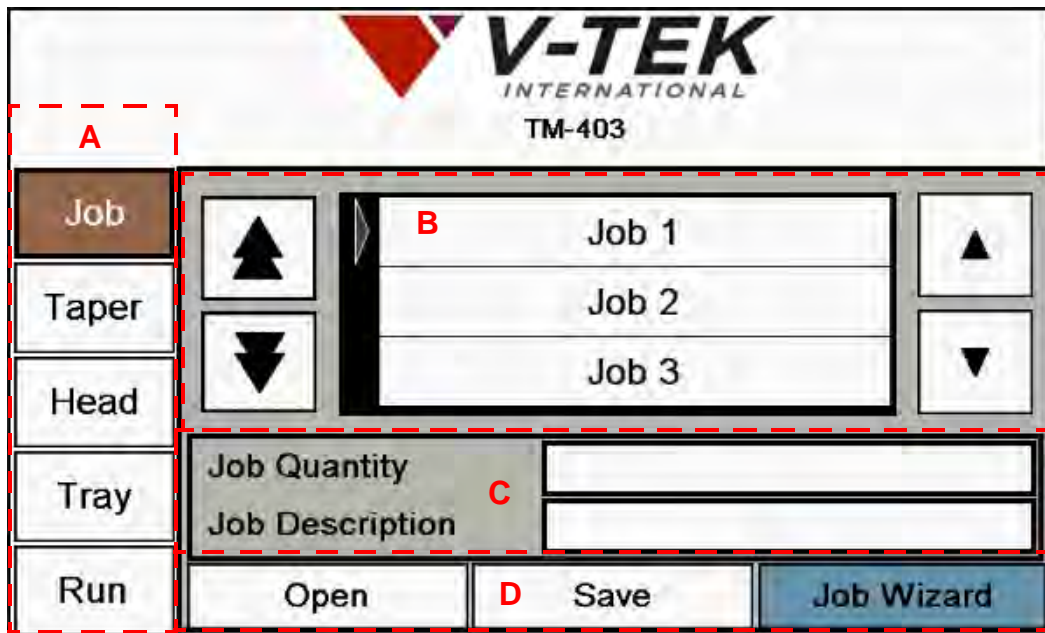

- A. Press any tab in the **Tab Menu** to open that tab window.
- B. The **Job Library** holds up to fifty saved jobs (Job 1 through Job 50). The **Up** and **Down Arrows** buttons to the right of the *Job Library* are used to move through the job list one job at a time. The **Page Up** and **Page Down Arrows** buttons to the left of the *Job Library* are used to move through the job list five jobs at a time. The **Enter** button selects and highlights a job from the *Job Library* list so it can be opened or saved.
- C. The **Job Information** section has two open fields for entering job information: *Job Quantity* and *Job Description*. Press the field to open a keypad for data entry. The maximum number of characters for any field is 20.
- D. At the bottom of the *Job Tab* there are three control buttons:
  - The **Open** button opens the currently selected job.
  - The **Save** button is used to save current job settings for future use.
  - The **Job Wizard** button opens the *Job Wizard*, allowing the user to configure job settings.

## Job Wizard

Pressing the **Job Wizard** button in the *Job Tab* opens the *Job Wizard*.

The *Job Wizard* has 16 screens that lead the user through the job set-up process. Instructions at the top of each *Job Wizard* screen explain each step. The **Arrow** buttons on the bottom of the window move the user forward and backwards through the process. Pressing the right **Arrow** button opens the next *Job Wizard* screen. Pressing the left **Arrow** opens the previous screen.

**Note:** The *Job Wizard* is only used for standard, Tray-to-Tape jobs. To set up a Tray-to-Tray job, open the *Tray Tab* and select **Output Options**. For more details on Tray-to-Tray procedures, see the *Tray Tab* section later in this chapter.

1. In the first *Job Wizard* screen the user resets the job to initialize the system. Press **Reset**

**Job Wizard Step 1**

V-TEK  
INTERNATIONAL  
TM-403


Reset the current job to properly initialize the system for completing the job wizard process.

Reset Job

← →  
Arrow Buttons

**Job**, then press the right **Arrow** key to move to the next *Job Wizard* screen.

2. In the second *Job Wizard* screen the user enters the **Quantity** of parts that will be run and a brief **Description** of the job. When the job parameters are set, press the right **Arrow** key to move to the next *Job Wizard* screen.

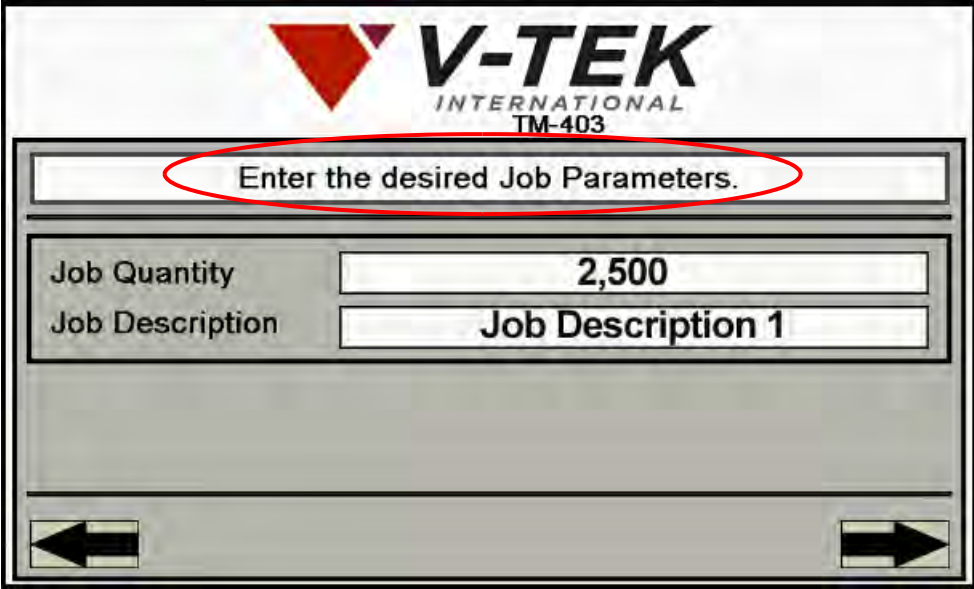**Job Wizard Step 2**

V-TEK  
INTERNATIONAL  
TM-403

Enter the desired Job Parameters.

Job Quantity 2,500

Job Description Job Description 1

← →

3. The third *Job Wizard* step sets up *Taper* operation.

### Job Wizard Step 3


- A. **Tape Pitch** is determined by the carrier tape selected. Use the *Pitch Setting Guide* on the taper to determine the correct pitch. Press the *Tape Pitch* field to open a keypad and type in the desired value.
- B. **Seal Type** toggles between **PSA** and **Heat** seal, select correct seal type.
- C. The **Set Point** fields for the *Inner* and *Outer Sealer* are used to set the desired temperature for Heat Seal. Enter the correct value in both fields, then press the right **Arrow Key** to move to the next *Job Wizard* screen.



**Note:** The TM-403 accommodates a wide range of carrier tapes and cover tapes. Settings may vary from one tape product to another. The recommended starting point is 90° C. The maximum recommended operating temperature is 160° C. The temperature for each seal shoe should be increased or decreased as needed after running a peel force test.

4. The fourth *Job Wizard* screen enables or disables the tape *Leader*..


#### Job Wizard Step 4

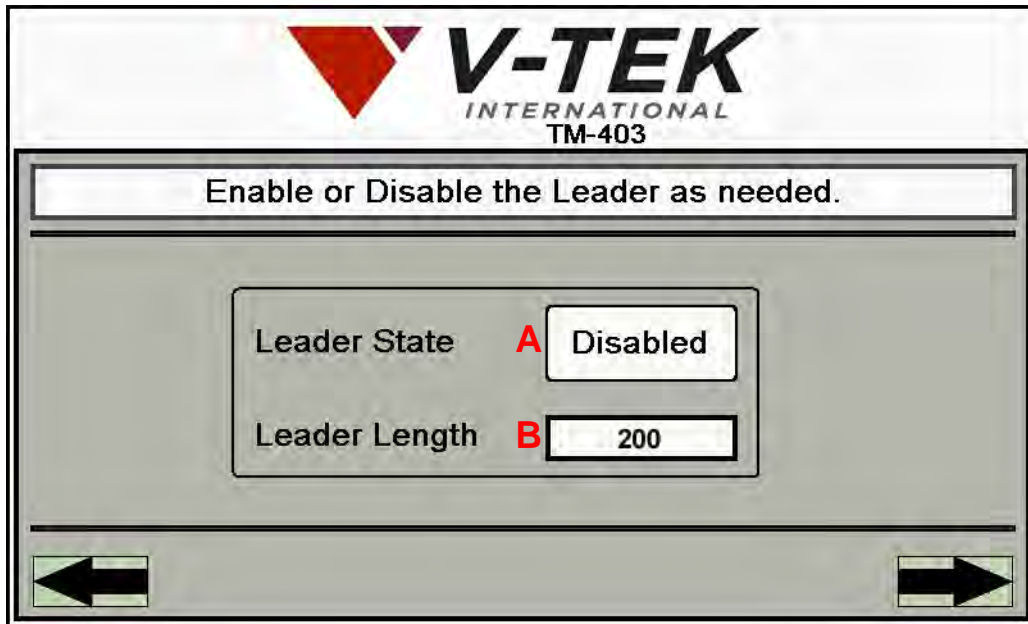

The screenshot shows the 'Job Wizard Step 4' screen. At the top is the V-TEK INTERNATIONAL TM-403 logo. Below the logo is a title bar that reads 'Enable or Disable the Leader as needed.' The main area contains two input fields: 'Leader State' with a red 'A' and a dropdown menu set to 'Disabled', and 'Leader Length' with a red 'B' and a text box containing '200'. At the bottom are two large black arrows pointing left and right.

- A. **Leader State** toggles between **Enabled** and **Disabled**.
- B. Pressing the **Leader Length** field will open a keypad. Type in the desired value, then press the right **Arrow Key** to move to the next *Job Wizard* screen.
5. *Job Wizard Screens 5-7* are used to automatically determine Tray Pitch. Step 5 is where the user defines the tray parameters.


#### Job Wizard Step 5

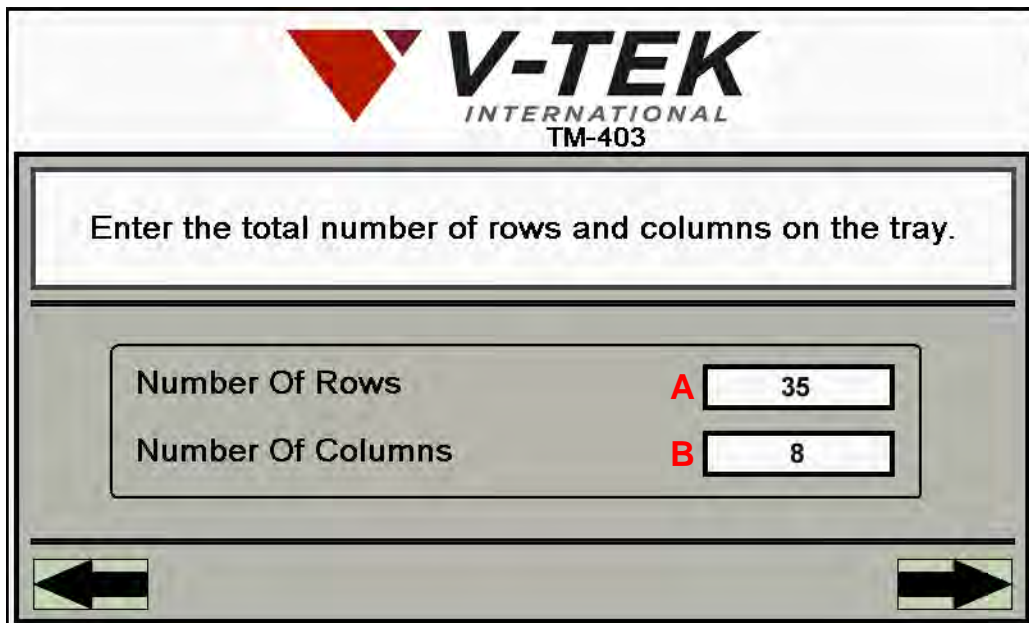

The screenshot shows the 'Job Wizard Step 5' screen. At the top is the V-TEK INTERNATIONAL TM-403 logo. Below the logo is a title bar that reads 'Enter the total number of rows and columns on the tray.' The main area contains two input fields: 'Number Of Rows' with a red 'A' and a text box containing '35', and 'Number Of Columns' with a red 'B' and a text box containing '8'. At the bottom are two large black arrows pointing left and right.

- A. Enter the number of tray rows in the tray that will be processed.

**Note:** *Columns* run parallel to the front of the machine. *Rows* run perpendicular to the front of the machine. In the example below, each tray has 5 columns and 12 rows. The number of rows will always be greater than the number of columns in a tray.

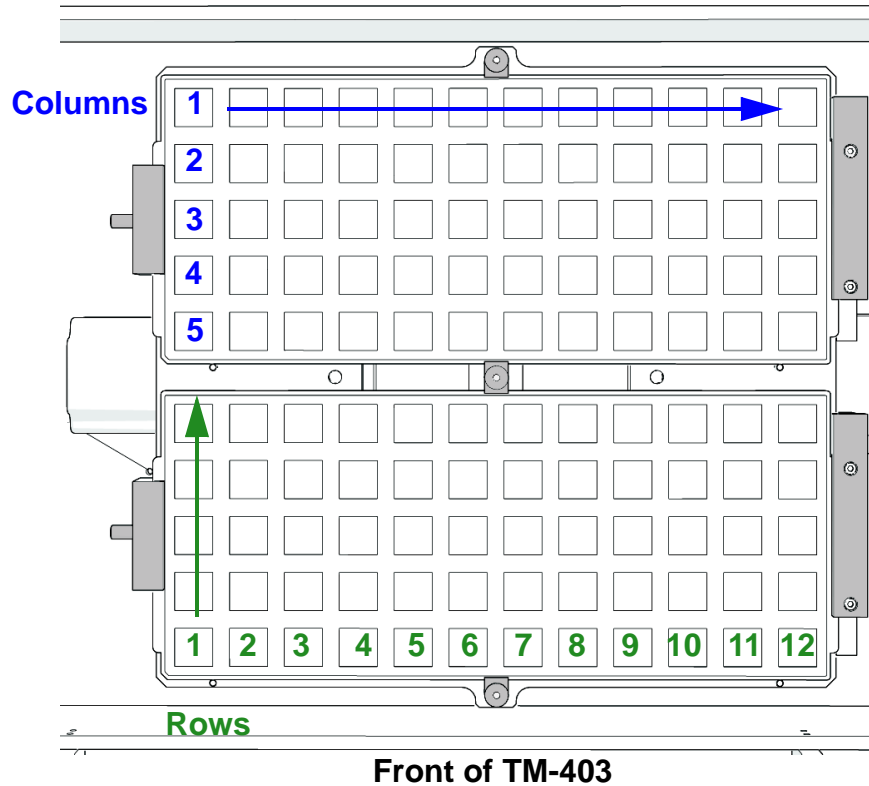

- B. Enter the number of tray columns in the tray that will be processed.

6. Press the right **Arrow Key** to move to the next *Job Wizard* screen.

### Job Wizard Step 6

**V-TEK INTERNATIONAL**

Precisely center the Pick Head's Nozzle over Tray Pocket 1, then, press Learn.

**Head and Tray Jog Controls**

**A** (Jog Buttons)

Head Jog Step **B**

Tray Jog Step

Head Position	000.00	Learned Position	000.00
Tray Position	000.00	Learned Position	000.00


**C** Learn

- A.** Center the *Pick Head* over **Pocket 1** using the HMI **Head & Tray Jog** buttons or the *Pick Head Jog Buttons* on top of the Sealer enclosure and the *Tray Carriage Jog Buttons* on the back of the machine.

To see an illustration of the correct head placement, push the **Help** icon.



An illustration of a tray with *Pocket 1* and *Pocket 2* identified will appear.

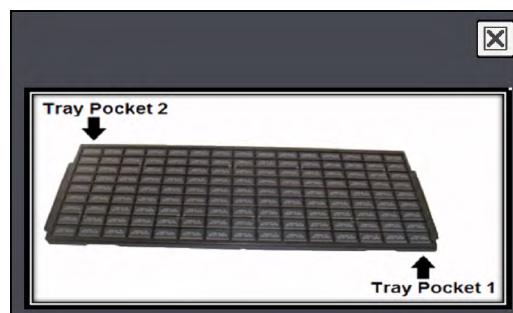

- B.** The distance the head moves with each jog is set in the **Head Jog Step** field.
- C.** Press **Learn**. The *Learned Position* will now match the *Current Position* and the **Learn** button will turn green and update to read **Learned**.

7. Press the right **Arrow** to move to the next *Job Wizard* screen.

### Job Wizard Step 7

**V-TEK INTERNATIONAL**

Precisely center the Pick Head's Nozzle over Tray Pocket 2, then, press Learn.

**Head and Tray Jog Controls**

Head Jog Step

Tray Jog Step

Head Position	000.00	Learned Position	000.00
Tray Position	000.00	Learned Position	000.00


**Learn**

- A. Center the *Pick Head* over Pocket 2 using the **Jog** buttons or the *Pick Head Jog Buttons* on top of the Sealer enclosure and the *Tray Carriage Jog Buttons* on the back of the machine.

To see an illustration of the correct head placement, push the **Help** icon.



An illustration of a tray with *Pocket 1* and *Pocket 2* identified will appear.

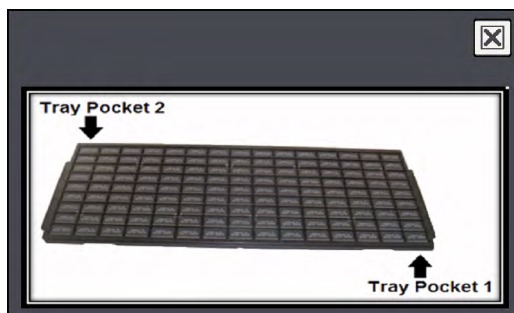


- B. The distance the head moves with each **Jog** is set in the **Head Jog Step** field.
- C. Press **Learn**. The right **Arrow Key** will appear. Press the right **Arrow** to move to the next *Job Wizard* screen.

**Note:** It is useful to note the current position for both *Tray Pocket 1* and *Tray Pocket 2* for future use or to help when making fine adjustments.

8. The next seven *Job Wizard* screens are used to set the *Nozzle* positions at the *Pick* and *Place* locations. The first is shown below.

**Job Wizard Step 8**

- A. Press **Move to Origin** to move the *Pick Head* to the *Tray Feeder's Tray 1, Pocket 1* position.
9. Press the right arrow key to move to the next screen.

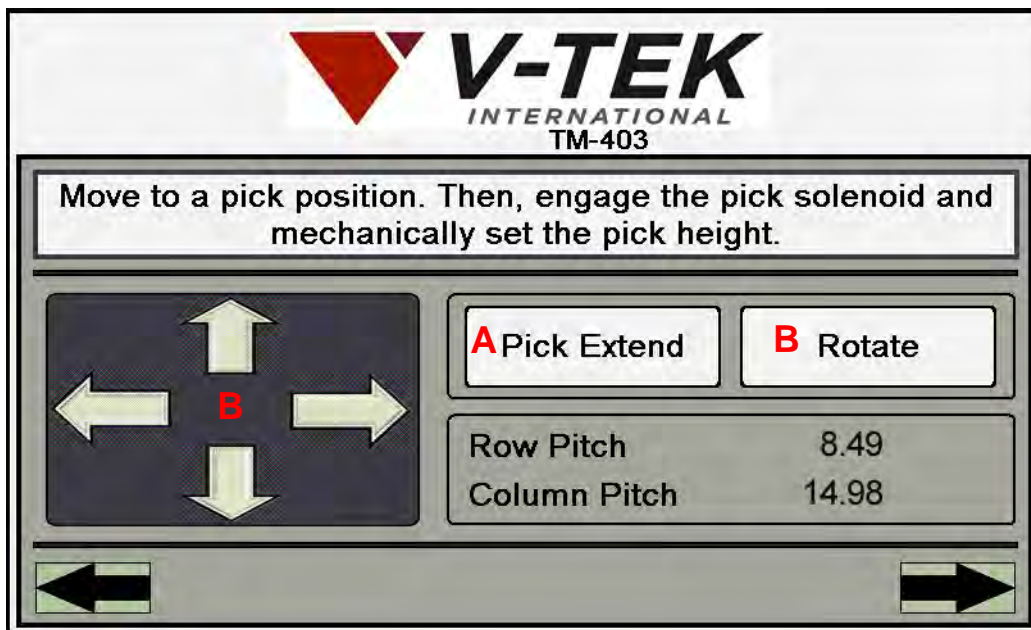**Job Wizard Step 9**


- A. Press **Pick Extend** to lower the *Nozzle* to the tray pocket. The button will change to **Pick Retract**.

**Note:** Follow the directions in *Chapter 4: Setup* for manually adjusting the *Pick Actuator* to set the correct *Nozzle Height*.

- B. If adjusting nozzle height, use the **INDEX** arrow keys to move the *Nozzle* to the last column of Tray 2. Press **Rotate** to turn the nozzle and make the set screw accessible for nozzle height adjustments.
- C. Once the nozzle height has been set, press **Pick Retract** to raise the *Nozzle* to its original height. Press **Rotate** to return the part to its original orientation. Index the *Nozzle* until it is once again at the origin position (Tray 1, Pocket 1).

10. Press the right arrow key to move to the next screen.

#### Job Wizard Step 10

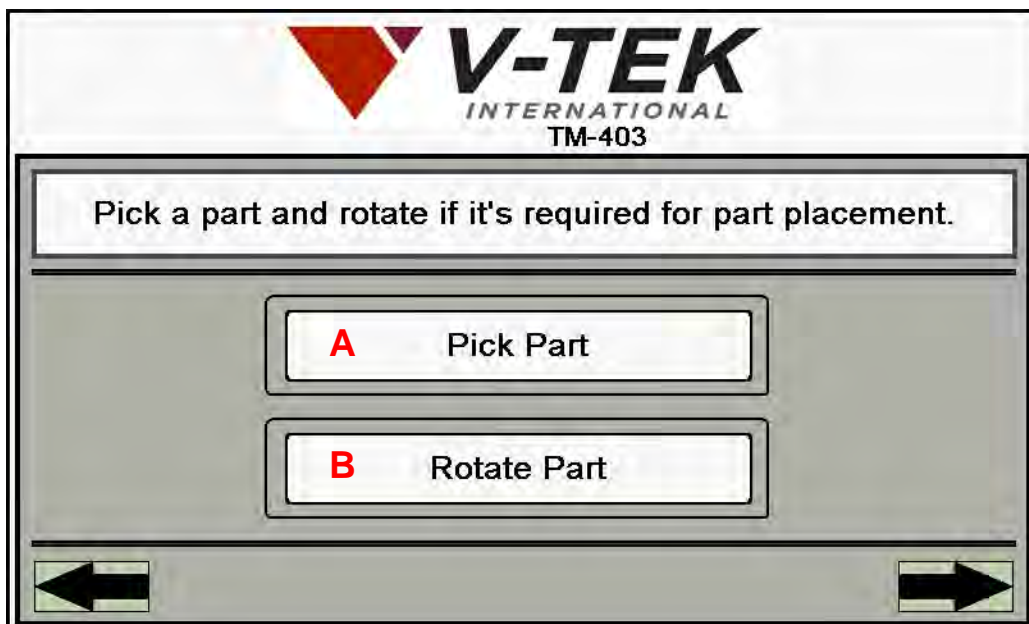

- A. Press **Pick Part** to pick a part from the tray.
- B. If no rotation is required for part picking, skip this step. If part rotation is required for picking, press **Rotate Part** to rotate the *Nozzle* 90°.

**Note:** Follow the directions in *Chapter 4: Setup* for manually adjusting the *Solenoid* to set **Pick Head Rotation**.

11. Press the right **Arrow Key** to move to the next *Job Wizard* screen.

**Job Wizard Step 11**

V-TEK  
INTERNATIONAL  
TM-403

Use the controls to center the part over the carrier tape placement point. Then set the place position.

Head and Tape Jog Controls

A

Head Jog Step B 100.00

Taper Jog Step 1.0

Current Position .00 Learned Position 00.00

C Set Place Position

- A. The **Arrow** keys allow the user to jog the *Pick Head* and *Carrier Tape* forward or backward in small preset increments. This is useful for centering the *Nozzle* in the pick and place positions.

The **Up/Down Arrow** keys move the *Pick Head* forward and backward.

The **Left/Right Arrow** keys move the tape left and right in the *Taper Track*.

- B. Enter the value in millimeters for the **Head Jog Step** and **Taper Jog Step** fields.

- C. Pressing **Set Place Position** saves the current *Nozzle* position as the *Place* position for the current job. The *Learned Position* will update to match the *Current Position* on the screen.

12. Press the right **Arrow Key** to move to the next *Job Wizard* screen..

**Job Wizard Step 12**




- A. Press **Place Extend** to lower the *Nozzle* to the *Carrier Tape Pocket*.

**Note:** The **Place Extend** button toggles between *Place Extend* and *Place Retract*. Once **Place Extend** has been pressed, the button will change to **Place Retract**.

Follow the directions in *Chapter 4: Setup* for manually adjusting the place *Actuator* to set the correct *Nozzle Height* at the *Place* position.


13. Press the right **Arrow Key** to move to the next *Job Wizard* screen.

**Job Wizard Step 13**

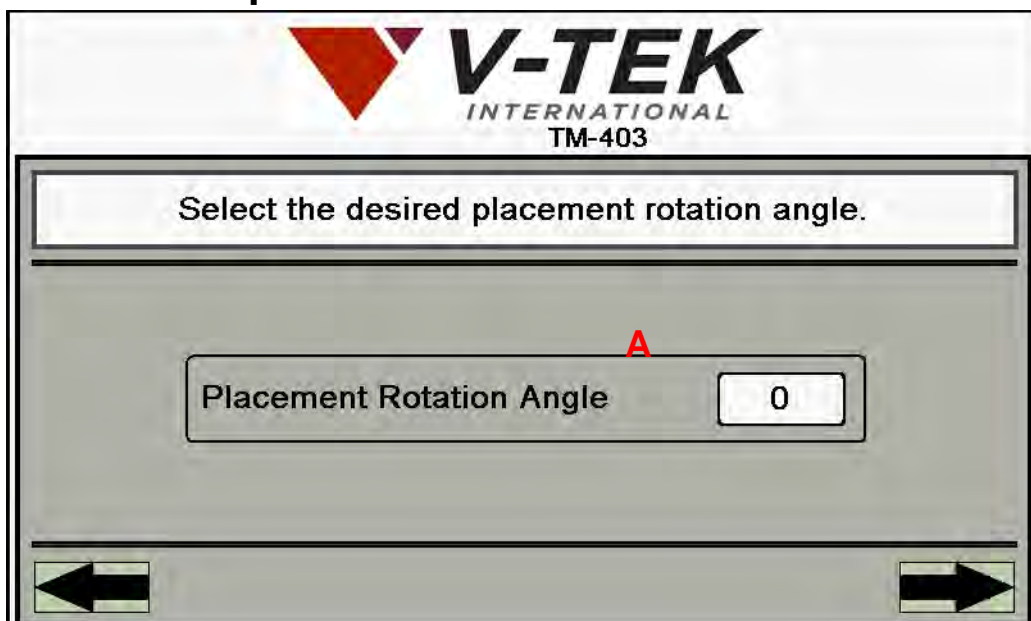

- A. Enter the placement angle which was manually set in Step 8. The options are 0, -90 and +90.

In the photo below, a part is shown at the pick position as viewed from the front of the machine.

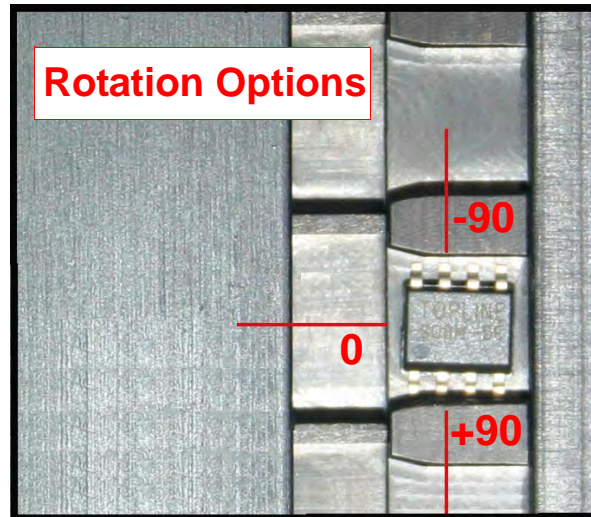

- If rotation is set at **0**, the part will be placed in the same orientation as it was picked.
  - If rotation is set at **-90**, the part will be rotated 90 degrees clockwise prior to placement.
  - If rotation is set at **+90**, the part will be rotated 90 degrees counter-clockwise prior to placement.
14. Press the right **Arrow Key** to move to the next *Job Wizard* screen.

#### Job Wizard Step 14



- A. Test the job settings, using the **Pick Part** and **Place Part** buttons to pick and place parts.
  - B. If adjustment are required, use the left **Arrow** key to return to the desired step and adjust settings until the TM-403 picks and places parts as desired.
15. Press the right **Arrow Key** to move to the next *Job Wizard* screen.

**Job Wizard Step 15**

**V-TEK**  
INTERNATIONAL  
TM-403

Enable or Disable vision. To fully configure the vision system please connect the camera to a computer. See the manual for more details.

Camera State	<b>A</b> Disabled
Parts Until Inspection	<b>B</b>

← →

- A. Set the Camera State to **Enabled/Disabled** as desired.
- B. If the camera is **Enabled**, enter the number of pockets between the *Place* point and the *Inspection* point in the **Parts Until Inspection** field. Begin the count with the *Place* position as 0 so the Place pocket is not included in the count.

16. Press the right **Arrow Key** to move to the final *Job Wizard* screen.

### Job Wizard Step 16

V-TEK  
INTERNATIONAL  
TM-403

Select a job, press enter, then, press Save and Finish.

▲ Job 1  
▼ Job 2  
▼ Job 3

◀ ▶

B Save C Finish

- A. Browse through the *Job Library* using the **Up/Down Arrow** keys to move up or down through the list. To select a *Job Name* from the list, press the **Enter** key.

**Note:** The **Save** function will overwrite the information stored for the currently selected job. Therefore, it is important to select the desired job prior to pressing the **Save** button.

- B. Press the **Save** button to save job settings to the selected job name.
- C. Press **Finish** to close the *Job Wizard* and return to the *Job Tab*.

V-TEK  
INTERNATIONAL  
TM-403

Job Wizard

Job Taper Head Tray Run

▲ Job 1  
▼ Job 2  
▼ Job 3

Job Quantity  
Job Description


Open Save Job Wizard

## Taper Tab

The *Taper Tab* allows the user to adjust taper settings by leading them through four *Taper Setup* screens.

1. The first screen of the *Taper Tab* is shown below.


**Taper Screen 1**

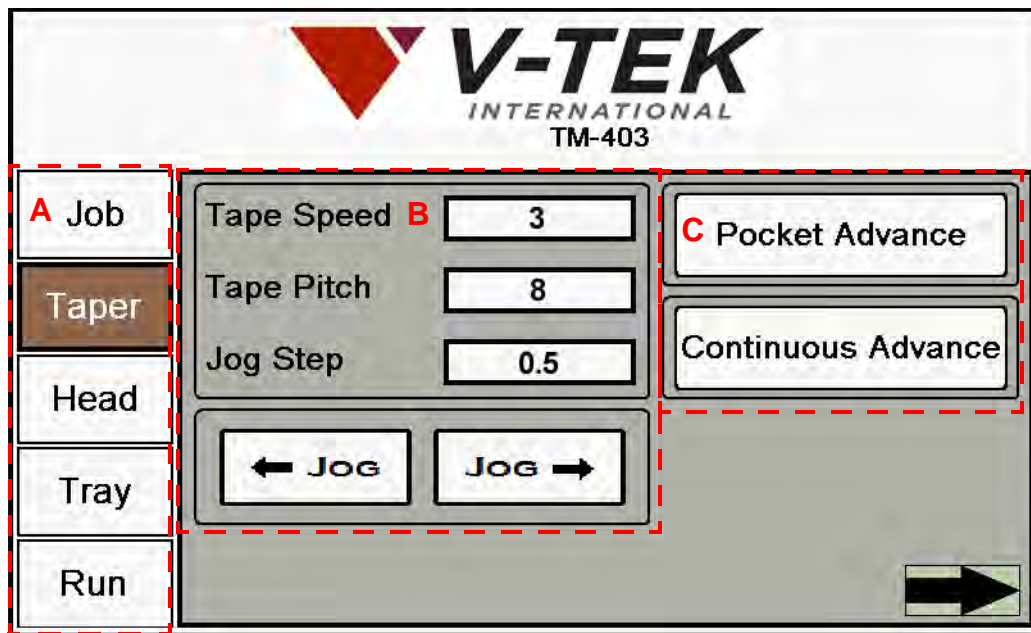

- A. Press the Taper tab in the **Tab Menu** to open that tab window.
- B. **Tape Speed** is a percentage of the maximum velocity the carrier tape can be advanced at. It can be set between 1-10.

**Tape Pitch** is determined by the carrier tape selected. Use the *Pitch Setting Guide* on the taper to determine the correct pitch.

**Jog Step** sets the distance in millimeters the carrier tape will move forward or backward each time a Jog button is pressed.

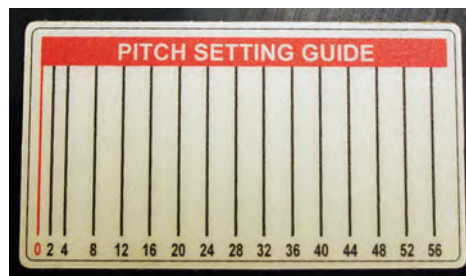

**Note:** The *Jog Step* field requires the value to be entered in the following format: XX.XX. (i.e. 60.00).

- C. The **Jog** buttons in the *Index Settings* section jog the tape forward or backward along the *Taper Track*.


The **Pocket Advance** button advances the tape one pocket at a time. The speed at which the tape advances is set in the *Tape Speed* field.

The **Continuous Advance** button advances the tape through the *Taper* and onto the take-up reel. It will continue to advance until **Continuous Advance** is pressed a second time.

**Note:** **Continuous Advance** is useful for creating a trailer or loading tape at the beginning of a job.

2. Pressing the right **Arrow** button opens the next *Taper Setup* screen which focuses on *Vision Setup*.

### Taper Screen 2

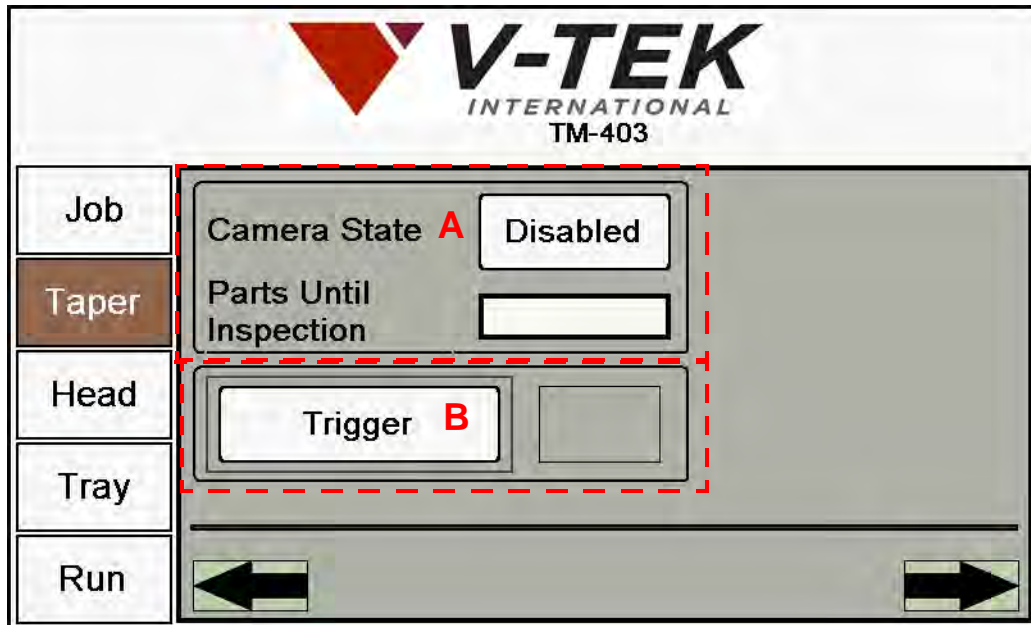

- A. The **Camera State** button toggles between **Enabled** and **Disabled**.

The **Parts Until Inspection** value is the number of pockets between the *Place* point and the *Inspection* point. Begin the count at the *Place* position at **zero**, so the *Place* position is not included.

- B. Pressing the **Trigger** button triggers the *2D Camera* to inspect the part which is currently at the *Inspection* point. The box to the right of the **Trigger** button will display a green **PASS** message or a red **FAIL** message.

**Note:** For more detailed inspection configuration and procedures, see the *Cognex Checker User's Guide* which was included with the TM-403.

Pressing the right **Arrow** button opens the next *Taper Setup* screen.

3. The third *Taper Setup* screen focuses on *Sealer Settings*. It will vary in appearance depending on the type of sealer selected. In the example below, the selected *Seal Type* is **Heat**.

### Taper Screen 3

- A. The **Seal Type** button toggles between Heat seal and PSA seal.

The **Dwell Time** field is only active when heat seal is enabled. Dwell time refers to the amount of time that the *Heat Seal Shoes* are in contact with the *Cover Tape*. Enter the desired dwell time in milliseconds in this field.

The **Manual Seal** button activates the sealer to perform one seal.

- B. The **Set Point** field allows the user to select the *Heat Sealer* set point, or target temperature. Press the field to open the keypad, then enter the desired temperature in degrees Celsius.

The **Measured** field shows the current *Heat Sealer* temperature in degrees Celsius.

**Note:** The TM-403 accommodates a wide range of carrier tapes and cover tapes. Settings may vary from one tape product to another. The recommended starting point is 90° C. The maximum recommended operating temperature is 160° C. The temperature for each seal shoe should be increased or decreased as needed after running a peel force test.

4. Pressing the right **Arrow** button in the third *Taper Setup* screens opens the final *Taper Setup* screen. The fourth *Taper Setup* screen focuses on *Leader* and *Sensor* settings.

#### Taper Screen 4

- A. The *Tape Jam Sensor Enabled/Disabled* button turns the *Tape Jam Sensor* on and off. The *Tape Jam Sensor* registers a tape jam whenever something protrudes above the top of the carrier tape pocket. This might be caused by a misplaced part, a pocket that has been loaded with two parts or by a buckle in the tape.

When the *Tape Jam Sensor* is on, the job that is being run is paused and an error message appears on the HMI screen. The recommended setting for the *Tape Jam Sensor* is **Enabled**.

The *Low Cover Sensor Enabled/Disabled* button turns the *Low Cover Tape Sensor* on and off. The *Low Cover Tape Sensor* detects when the cover tape reel is running low. When the *Low Cover Tape Sensor* is on, an error message appears on the HMI screen. The recommended setting for the *Low Cover Tape Sensor* is **Enabled**.

**Note:** The *Low Cover* error message is only displayed once during a job.

- B. When *Leader State* is **Enabled**, the TM-403 will create a leader of the specified Length at the end of the job.

The **Leader Length** field is only active when **Leader State** is **Enabled**. Enter the desired leader length in millimeters in the field.


**Note:** The TM-403 will use these settings for the current job. To save *Taper Settings* for future jobs, go to the **Job Tab**, select a job name and **Save**.

## Head Tab

The three *Head Setup Tab* screens allow the user to set pick and place head positions, head speed, and blow off time. There are also buttons that allow the user to manually pick, place and rotate parts.

1. Head Screen 1 is used to position the head..

### Head Screen 1

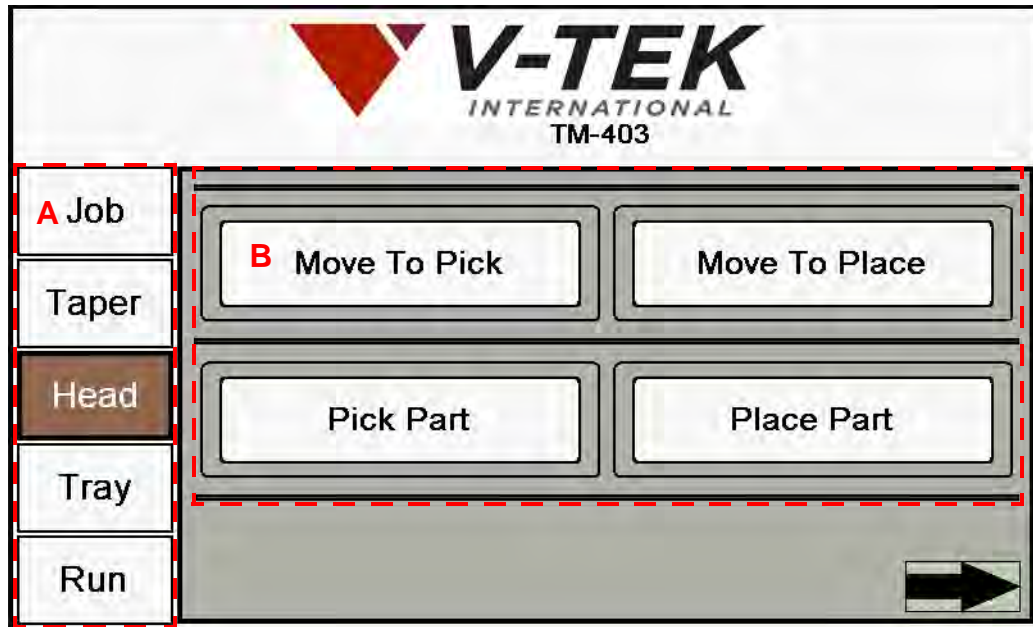

- A. Press the Head Tab in the **Tab Menu** to open that tab window.
- B. The **Move To Pick** button moves the head to the preset *Pick Positions*.

The **Move To Place** button moves the pick head to the preset *Place Position*.

The **Pick Part** button moves the head from its current location and picks a part from the programmed pick location. It then returns the nozzle to its *Ready* (retracted) position.

The **Place Part** button moves the head from its current location and places a part into the programmed place position.

2. Press the right **Arrow** button to open the second *Head Setup* screen (shown below).

### Head Screen 2

- A. This section includes a **Location Field** for entering the desired place position, the **Set Place Position** button and a **Status** button. The status button will appear **green** if the place position has been learned and **red** if it has not been learned. In the screen above, the *Place Position* has already been learned.

To set the place position, use the **Jog** buttons to move the head to the desired position. Press the **Location Field** to open a keypad. Enter the current position from the bottom of the screen, then press the **Set Place Position** button to save it. The **Status** button will now appear green.

- B. The **Jog** buttons jog the head forward or backward along the X Axis (forward/backward).

**Head Speed** is a percentage of the maximum velocity. It can be set between 1-10.


**Jog Step** is the distance in millimeters that the head will move when **Jog** is pressed.

**Note:** The *Jog Step* field requires the value to be entered in the following format: XX.XX. (i.e. 60.00).

- C. The **Current Position** message show the location of the pick head in relation to the *Home* position (when the head is closest to the front of the machine). For example when the pick head is homed, the current position will be 0.00. This distance is measured in millimeters.

3. Press the right **Arrow** button to open the third *Head Setup* screen (shown below).

### Head Screen 3

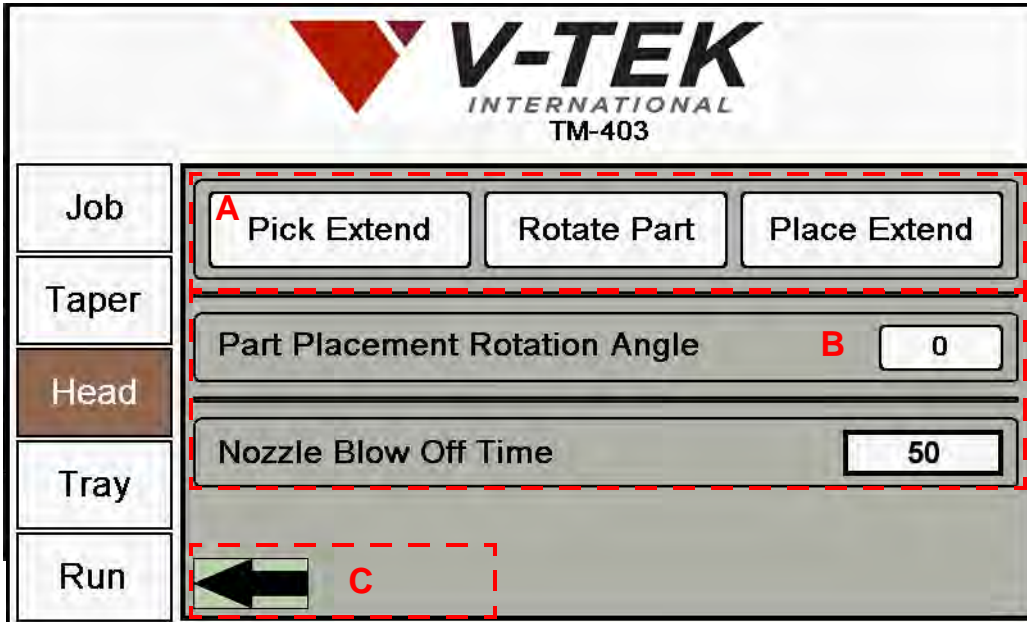


- A. The **Pick Extend/Pick Retract** button actuates the *pick solenoid* to enable the operator to set the pick height.

The **Rotate Part** button rotates the *pick head* to the preset rotation angle.

The **Place Extend/Place Retract** button actuates the *place solenoid* to enable the operator to set the place height.

- B. The **Part Placement Rotation Angle** is manually set during machine setup. The options are 0, -90 and +90.

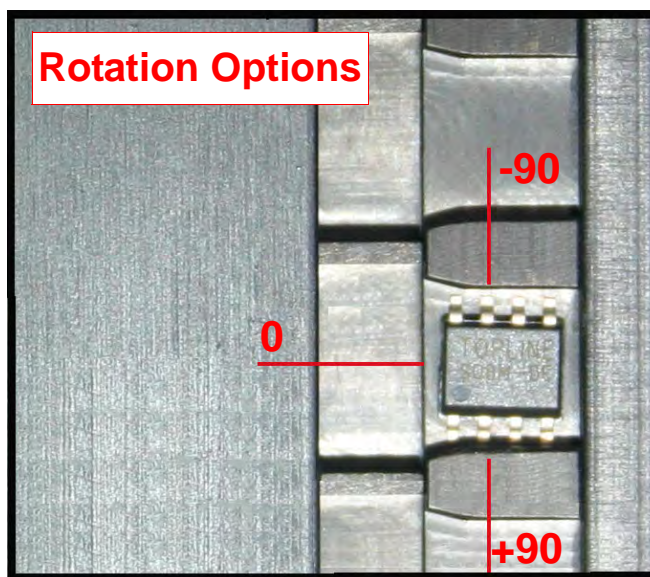

- If rotation is set at **0**, the part will be placed in the same orientation as it was picked.
- If rotation is set at **-90**, the part will be rotated 90 degrees clockwise prior to placement.
- If rotation is set at **+90**, the part will be rotated 90 degrees counter-clockwise prior to placement.

**Blow Off** is the amount of time in milliseconds that the nozzle will activate the blow-off pressure to place a part in the *Taper*.

- C.** Press the left **Arrow** button to return to the second *Head Setup* screen or press a button on the *Tab Menu* to move to a new tab.


**Note:** The TM-403 will use these settings for the current job. To save *Head Settings* for future jobs, go to the **Job Tab**, select a job name and **Save**.

## Tray Tab

The *Tray Setup Tabs* allows the user to manually index the tray and configure tray size and pitch. The user can also utilize the *Pitch Wizard* to calculate pick position.

1. *Tray Screen 1* allows the user to position the trays as desired..

### Tray Screen 1

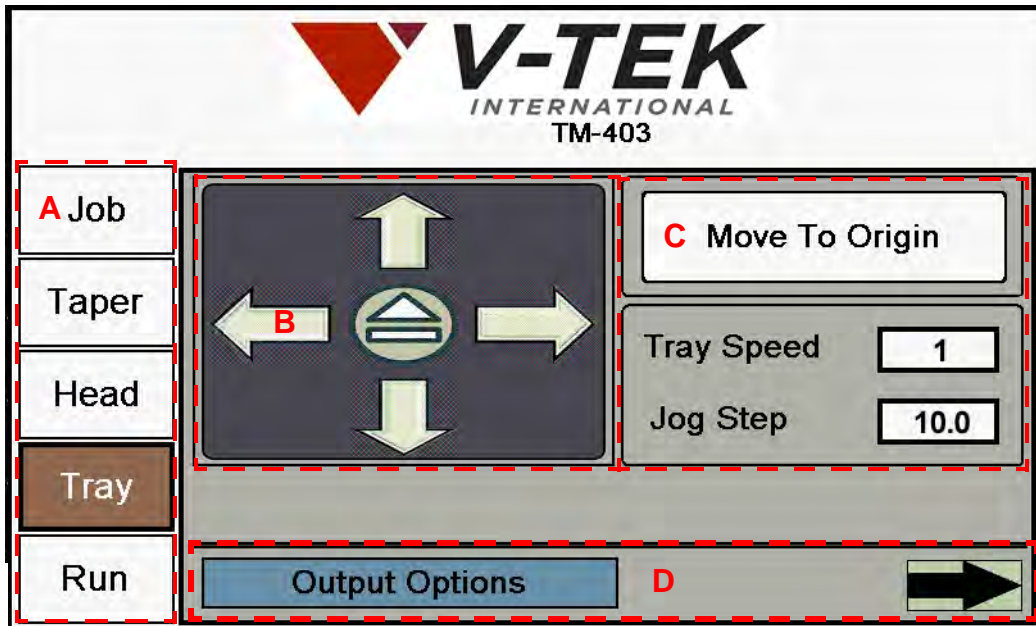

- Press the Tray tab in the *Tab Menu* to open that tab window.
- The right/left **Index Arrow** buttons move the tray right or left one column. The up/down **Index Arrow** buttons move the tray forward or backward one row.

The **Center Index** button brings the *Tray Module* into the Eject Tray position at the front of the machine so it is easily accessible.

- The **Move to Origin** button moves the tray and head to the user-defined first pick position in Tray 1.

**Tray Speed** can be set from 1-10 and the speed at which the tray moves when the **Move to Origin** or **Center Index** buttons are pressed.

**Jog Step** is the distance in millimeters that the tray will move when **Index** is pressed.

- The **Output Options** button allows the user to select *Tray to Tape* or *Tray to Tray* output options. This screen is defined at the end of this section.

The **Arrow** button advances the user to the next *Tray Tab* screen.

2. *Tray Screen 2* allows the user to enter tray parameters and set Pocket 1 and Pocket 2 positions if they are known. The user can also select the *Pitch Wizard* to automatically calculate this information.


### Tray Screen 2

- A. Press the **Tray** tab in the **Tab Menu** to open that tab window.
- B. Enter the **Number Of Tray Rows** and the **Number Of Tray Columns** in their respective fields.

**Note:** Rows run perpendicular to the front of the machine. Columns run parallel to the front of the machine. The number of rows will always be greater than the number of columns in a tray.

If the X/Y location of Pocket 1 and Pocket 2 are known, they can be entered in the **Set X/Y** fields. Click in the field to bring up the keypad, enter the value in millimeters, then press Set X1, etc.

Press the *Help Icon* to see an illustration of X1, Y1 and X2, Y2 positions in relation to the X and Y axis.

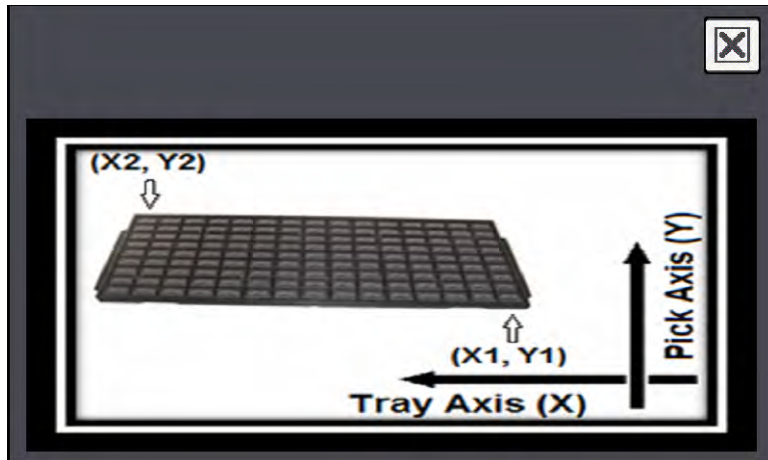

- C. The current **Row Pitch** and **Column Pitch** settings are displayed at the bottom of the screen.

The current **Tray Position** is displayed at the bottom of the screen.

The **Pitch Wizard** button opens the *Pitch Wizard* to automatically calculate tray pitch.

3. Press the **Pitch Wizard** button to open the *Pitch Wizard*.

#### Pitch Wizard 1

Enter number of rows and columns in the tray here.

4. Press the right arrow key to advance to the second *Pitch Wizard* screen.

### Pitch Wizard 2

Precisely center the Pick Head's Nozzle over Tray Pocket 1, then, press Learn.

Head and Tray Jog Controls

Head Jog Step

Tray Jog Step


Head Position	000.00	Learned Position	000.00
Tray Position	000.00	Learned Position	000.00

Learn

- A. The **Jog** buttons are used to jog the head forward or backward along the X Axis (left/right) until the nozzle is centered over the first tray pocket (X1, Y1). To see an illustration of the correct head placement, push the **Help** icon.



An illustration of a tray with *Pocket 1* and *Pocket 2* identified will appear.

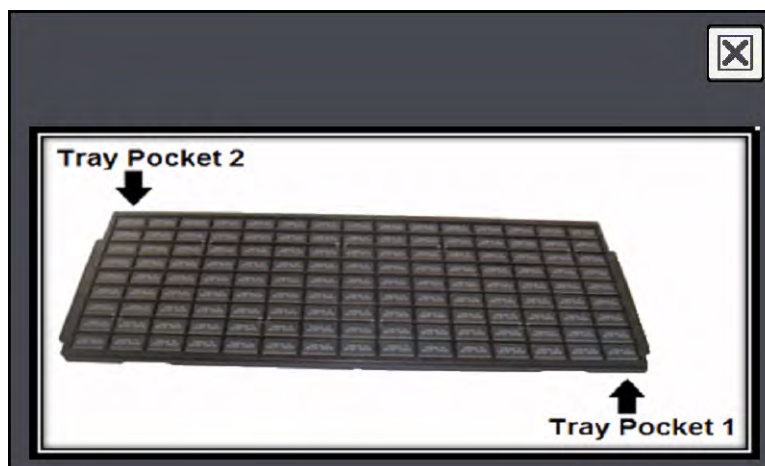

**Head Jog Step** is the distance in millimeters that the head will move when **Jog** is pressed.

**Note:** The *Jog Step* fields require the value to be entered in the following format: XXX.XX. (i.e. 100.00).

**Tray Jog Step** is the distance in millimeters that the tray will move when **Jog** is pressed.

- B. The **Head Position** indicates where the pick head is located in relation to the **Home** position. The **Learned Position** indicates the current Pick position.

The **Tray Position** indicates where the tray is located in relation to the **Home** position. The **Learned Position** indicates the current Pick position.

Pressing the **Learn** button saves the current tray and pick head positions as the programmed pick location. This is the position the pick head will move to along the X Axis (left/right) and the tray will move to along the Y Axis (forward/backward) when picking a part from the *Tray Feeder*.

The **Next** button appears after **Learn** has been pressed.

5. Press the **Next** button to advance to the final *Pitch Wizard* screen.

### Pitch Wizard 3

Precisely center the Pick Head's Nozzle over Tray Pocket 2, then, press Learn.

Head and Tray Jog Controls

Head Jog Step

Tray Jog Step

Head Position	000.00	Learned Position	000.00
Tray Position	000.00	Learned Position	000.00

Learn

- A. The **Jog** buttons are used to jog the head forward or backward along the X Axis (left/right) until the nozzle is centered over **Tray Pocket 2** (X2, Y2). To see an illustration of the correct head placement, push the **Help** icon.



An illustration of a tray with *Pocket 1* and *Pocket 2* identified will appear..



**Head Jog Step** is the distance in millimeters that the head will move when **Jog** is pressed.

**Note:** The *Jog Step* fields require the value to be entered in the following format: XXX.XX. (i.e. 100.00).

**Tray Jog Step** is the distance in millimeters that the tray will move when **Jog** is pressed.

- B.** The **Head Position** indicates where the pick head is located in relation to the **Home** position. The **Learned Position** indicates the current Pick position.

The **Tray Position** indicates where the tray is located in relation to the **Home** position. The **Learned Position** indicates the current Pick position.

Pressing the **Learn** button saves the current tray and pick head positions as the programmed pick location. This is the position the pick head will move to along the X Axis (left/right) and the tray will move to along the Y Axis (forward/backward) when picking a part from the *Tray Feeder*.


Once the **Learn** button has been pressed, the **Cancel** button disappears. Press the **Cancel** button to return to the *Tray Tab*.

Press the **Finish** button to calculate tube pitch and return to the *Tray Feeder Tab*.

**Note:** The TM-403 will use these settings for the current job. To save *Tray Feeder Settings* for future jobs, go to the **Job Tab**, select a job name and **Save**.


6. Pressing the *Tray Options Screen* in the first Tray screen opens the *Tray Options Screen* which allows the user to select output to **Tape** or to **Tray**. The screen below shows the screen with the **Tape Output** selected.

#### Tray Options Screen: TAPE

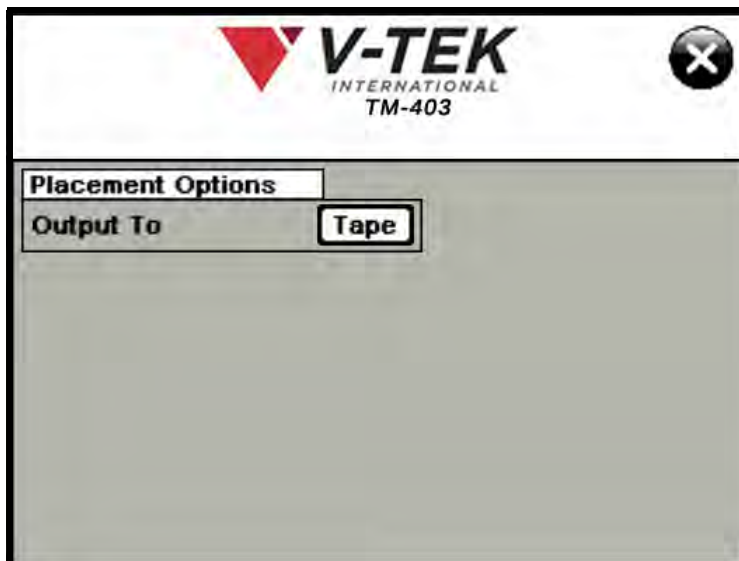

When the **Tray Output** is selected, the *Tray Options Screen* appears as below. This screen allows the user to enter tray parameters and set *Pick* and *Place* positions for running parts from Tray to Tray.

#### Tray Options Screen: TRAY

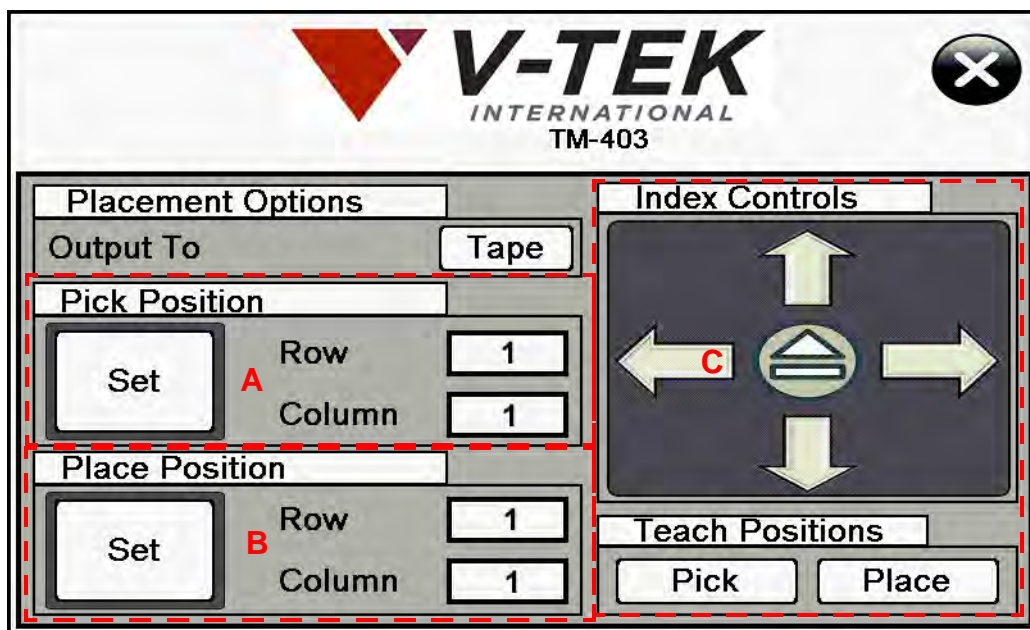

- A. The **Pick Position** section allows the user to designate which row and column to pick from on Tray 1. Pressing **Enter** sets the values into PLC memory for use.

**Note:** Rows run perpendicular to the front of the machine. Columns run parallel to the front of the machine. The number of rows will always be greater than the number of columns in a tray.

- B.** The **Place Position** section allows the user to designate which row and column to place to on Tray 2. Pressing **Enter** sets the values into PLC memory for use.
- C.** The Index Controls sections allows the user to index the trays manually into the desired position. The right/left **Index Arrow** buttons move the tray right or left one column. The up/down **Index Arrow** buttons move the tray forward or backward one row.

The **Center Index** button brings the *Tray Module* into the Eject Tray position at the front of the machine so it is easily accessible.

- D.** The Teach Positions section allows the user to index to the precise pick or place row and column then press the Pick or Place button to save the position

**Note:** The intended use for the Tray-to-Tray function is to pick from Tray 1, which is the tray located closest to the front of the machine, and place to Tray 2.


## Run Tab

When **Run** is selected from the *Tab Menu*, the *Run Tab* opens. It includes job information, current job statistics, Status messages and Run control buttons. The *Run Screen* with all status messages displayed appears below.


V-TEK INTERNATIONAL TM-403		
<b>A</b> Job Taper Head Tray <b>Run</b>	Quantity <b>2500</b> <b>B</b> Job Name Parts Placed <b>D</b> 0 Run Time 00 00 00 PPH 0	Run <b>C</b> <b>Stopped</b> Reset Job System Homing
	<b>E</b> S291XXX.X	

- A. Press any tab in the **Tab Menu** to open that tab window.
- B. The **Job Information** section has two fields: *Quantity* and *Job Description*. This information was entered in the Job Wizard during job setup. The *Job Description* field is greyed out, indicating it cannot be altered in this tab. To edit the *Quantity* field, press anywhere inside the field to open a keypad for data entry.
- C. There are four control buttons on the *Run Tab*: **Run/Running**, **Stop/Stopped**, **Reset Job**, and **System Homing**.
  - The **Run** and **Stop** buttons start and stop job processing. They change color to indicate they are active. In the *Run Tab* above, the red **Stopped** button indicates the current job has been stopped.
  - The **Reset Job** button resets all job statistics to zero. This is useful for running multiple reels of the same job.

When **Reset Job** is pressed, the following message appears.

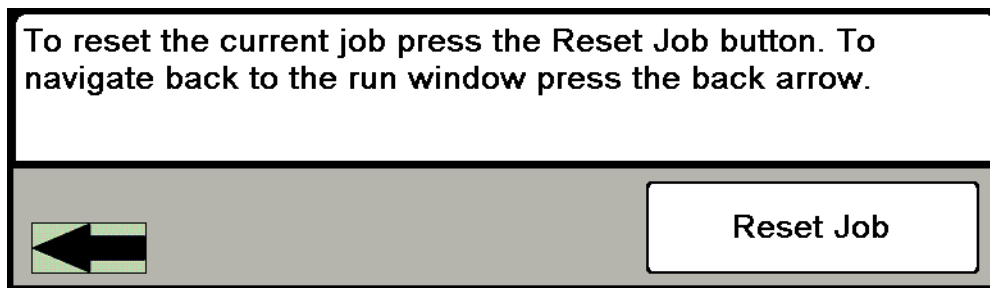


- The **System Homing** button allows the user to home the motor. Homing motors should be done once following every system power up. When *System Homing* is selected, the *Homing Status* window will appear.

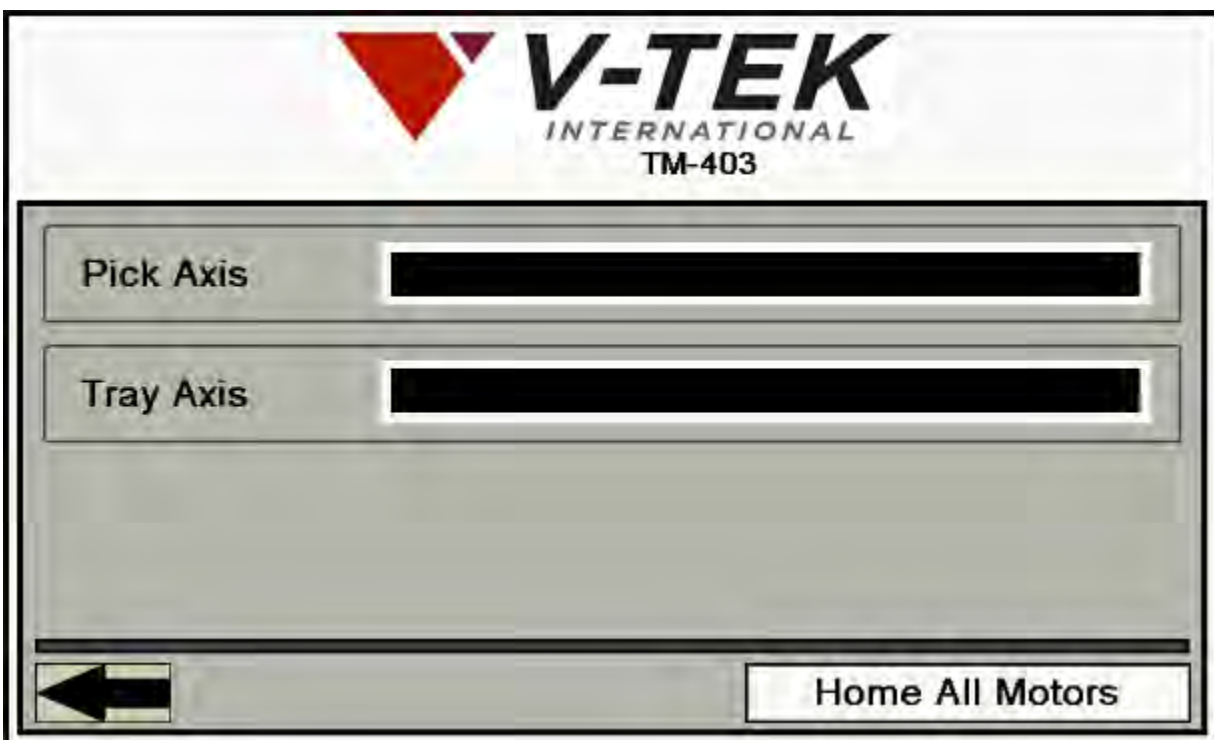


Pressing the **Home All Motors** button begins the homing sequence. Homing progress is displayed in the *Pick Axis Motor Status Bar*.

As the homing sequence is completed, the bar gradually turns from **black** to **green**. A *Homing Succeeded!* message appears at the end of the sequence.

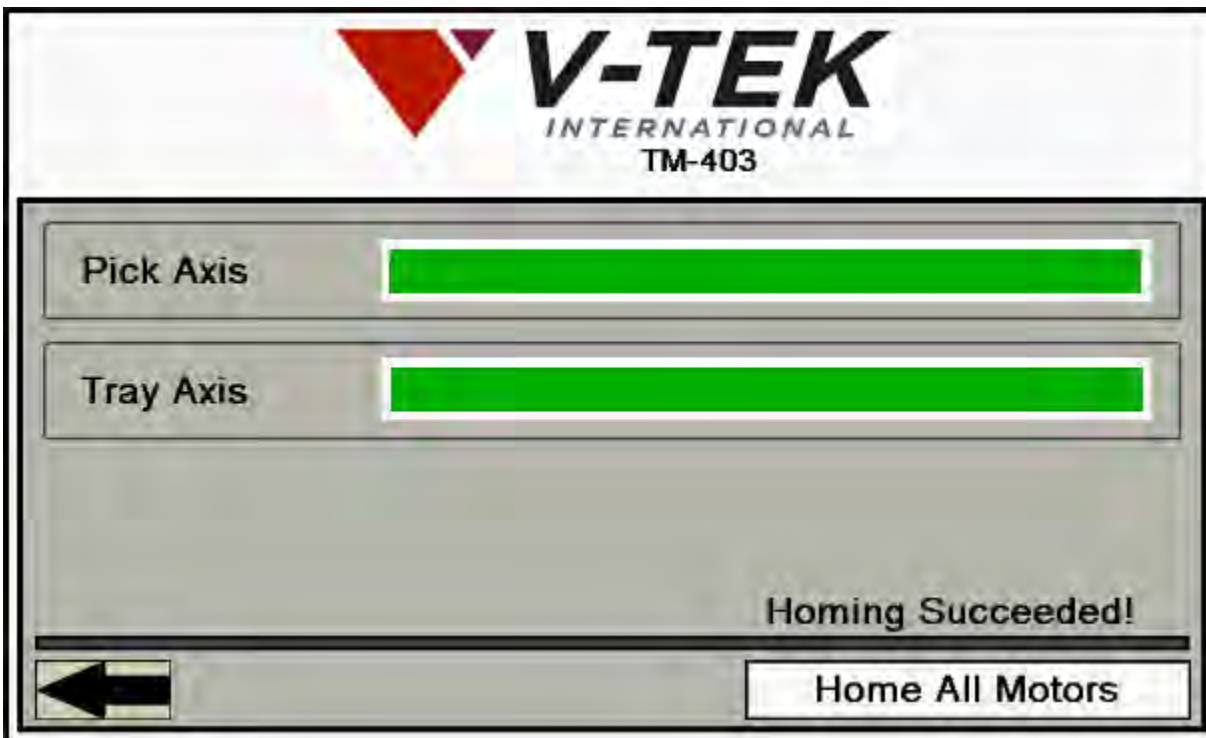

If a problem arises during homing for the motor, the status bar will turn **red** and a *Homing Error* message will appear.

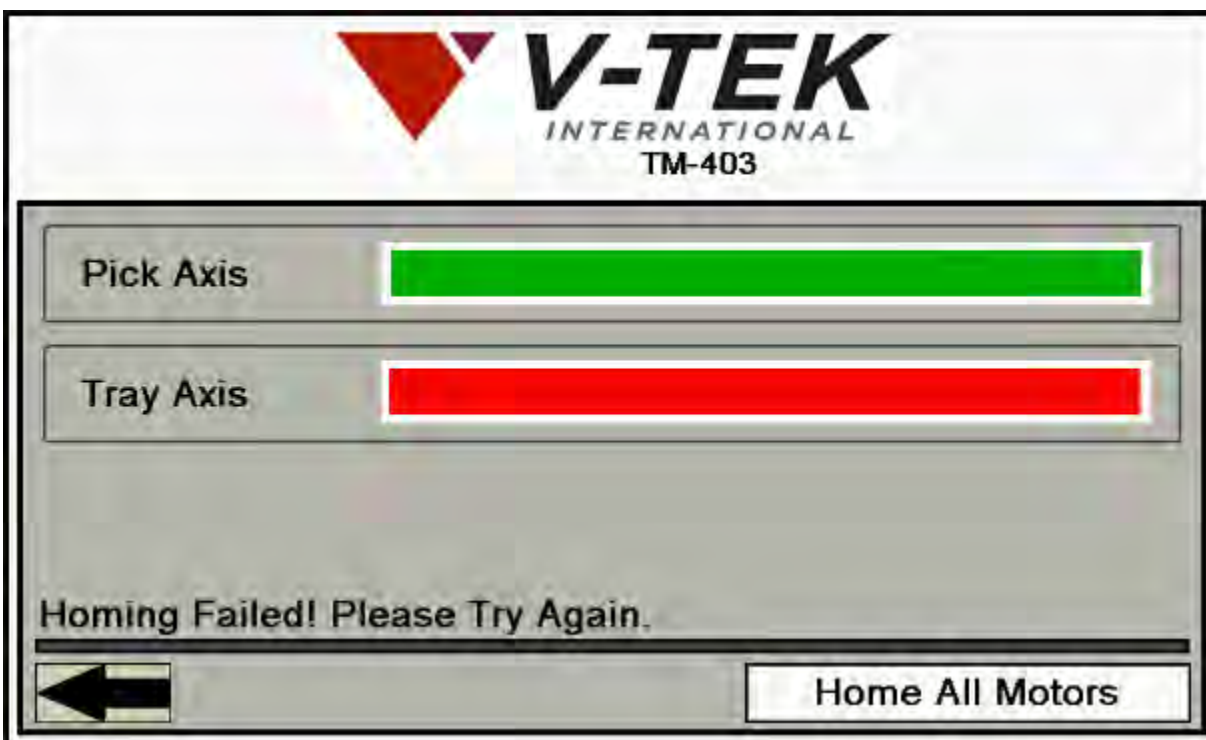

Pressing the **Left Arrow** button returns the user to the *Run Tab*.

- D. The **Statistics** section keeps a running tally of the current job's *Parts Placed*, *Run Time*, and *Parts Per Hour*.
- E. **Status Messages** only appear when conditions exist which require the user's attention before the job can be run.
  - If the preset quantity of parts has been processed, the **End Of Job** message will appear.

A rectangular box with a black border and a yellow background. The text "End Of Job" is centered in black, bold, sans-serif font.

- If the doors are open, the **Doors Open** message will appear and the TM-403 will make a chirping sound.

A rectangular box with a black border and a red background. The text "Doors Open" is centered in black, bold, sans-serif font.

- The current software version is displayed in the center of the bottom of the screen.

A rectangular box with a black border and a light gray background. The text "S291XXX.X" is centered in dark gray, sans-serif font.



# Chapter 4: Machine Setup

---

---

---

## Contents

<b>Quick Start: Setup</b> .....	<b>4-2</b>
<b>Power Up the System</b> .....	<b>4-3</b>
<b>Home Motors</b> .....	<b>4-4</b>
<b>Load the Tray Feeder</b> .....	<b>4-5</b>
<b>Nozzle Installation</b> .....	<b>4-7</b>
Selecting the Correct Nozzle & Nozzle Tip .....	4-7
Installing Nozzle & Nozzle Tip .....	4-8
<b>Taper Setup</b> .....	<b>4-9</b>
Load Carrier Tape .....	4-9
Load Cover Tape .....	4-11
Load Take-up Reel .....	4-12
<b>Configure HMI Settings</b> .....	<b>4-13</b>
<b>Test Seal</b> .....	<b>4-28</b>
<b>Tray-to-Tray Output Option</b> .....	<b>4-30</b>

---

## Quick Start: Setup

---

The following is an outline of the basic steps required to setup the TM-403 for operation. More detailed instructions follow in the next section of this chapter.



**Caution:** Users should always wear protective eye wear when operating or maintaining the TM-403.

1. **Power up**
  - Power up the machine. Press *Reset*. Close all doors.
2. **Home the motors**
  - Press **Home Required** and **Home All Motors**.
3. **Load the Tray Feeder**
  - Load components into the *Tray Feeder*.
4. **Install Nozzle**
  - Ensure correct nozzle size and tip are installed.
5. **Load Taper**
  - Load carrier tape.
  - Load cover tape.
  - Place an empty reel on the *Take-up Arm*.
6. **Configure HMI settings**
  - Go to the *Job Tab* and run the *Job Wizard* to configure job settings.
7. **Test Sealer**
  - Perform a *Seal Test* to ensure a good seal, adjust *Sealer* settings as necessary.

## Step 1: Power Up

# Power Up the System

1. Power up the machine by turning the *Main Power* control on the lower right side of the cabinet to the **ON** position.




2. Press the blue **Reset Button** on the left side of the machine.

There will be a brief popping sound as the *Air Dump Valve* releases air to the machine. As the TM-403 powers up the PLC, Servo Drivers and HMI Monitor will boot up. On top of the machine, the *Tower Light* will flash red indicating the machine is on but not running.



**Note:** The boot up process takes approximately 2 minutes.

The monitor will display the HMI *Job Tab* with a red **Home Required** message at the top of the *Tab Menu*.

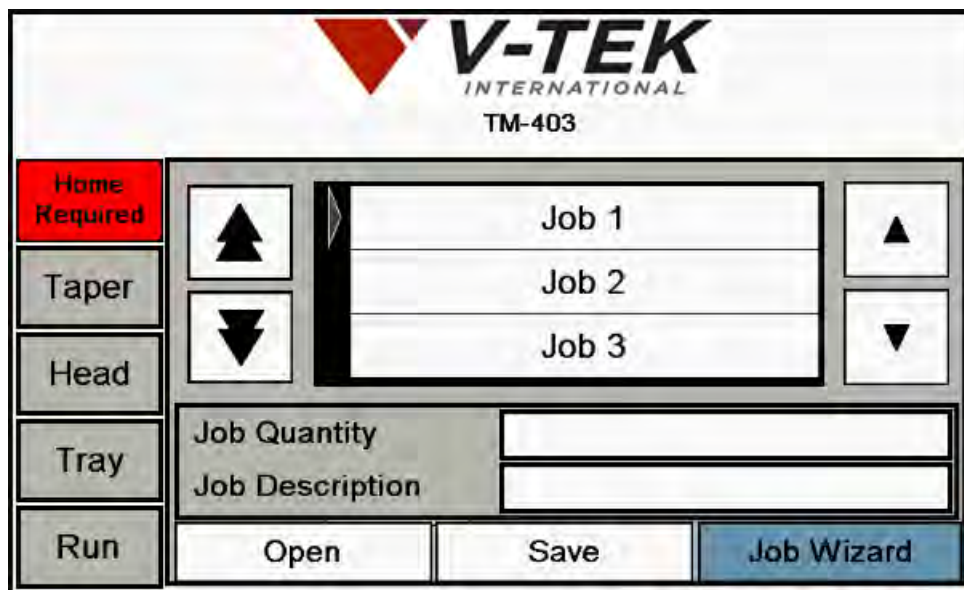


## Home Motors


### Step 2: Home Motors

**Note:** The TM-403 needs to be homed once after each power up or *Emergency Stop* activation. The HMI will prompt the operator to home the motors whenever it is required. Once the motors have been homed, they remain homed until the machine is powered down or the E-Stop is activated.

1. Press the red **Home Required** button at the top of the *Tab Menu*.

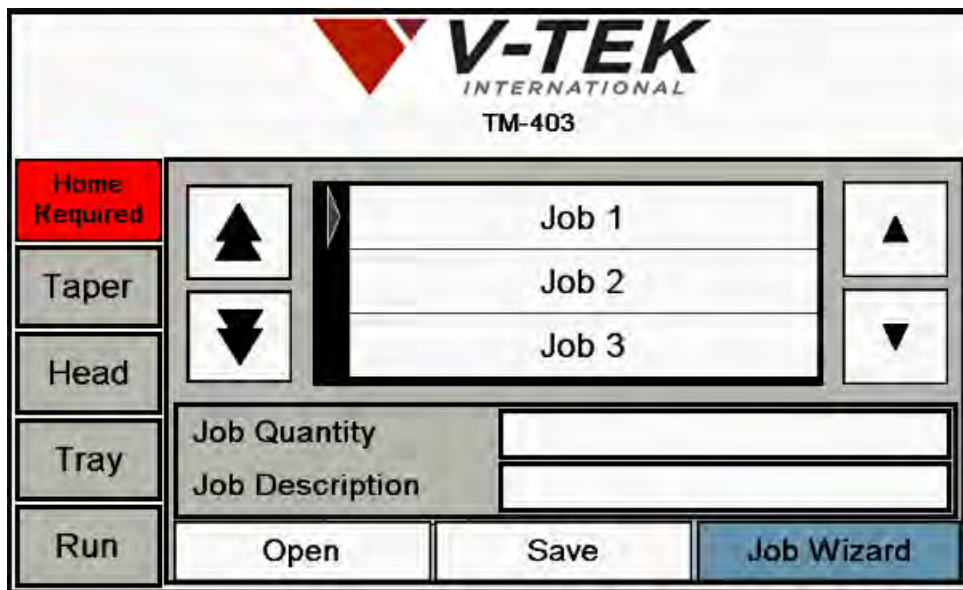

2. The TM-403 motor homing sequence begins with the pick head moving slowly to the right towards the taper (**X Axis** movement).

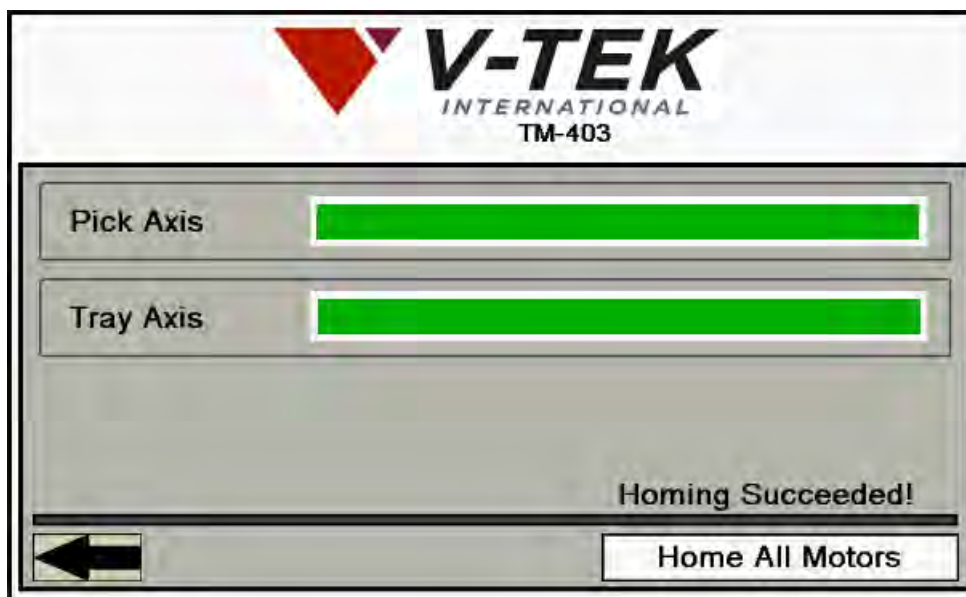


When the head has stopped moving, homing is complete.

**Step 3:  
Load the  
Tray Feeder**

## Load the Tray Feeder


To prepare the *Tray Feeder* for operation, load it with trays.

1. On the HMI, select **Tray** from the tab menu on the left to open the *Tray Setup Tab*.

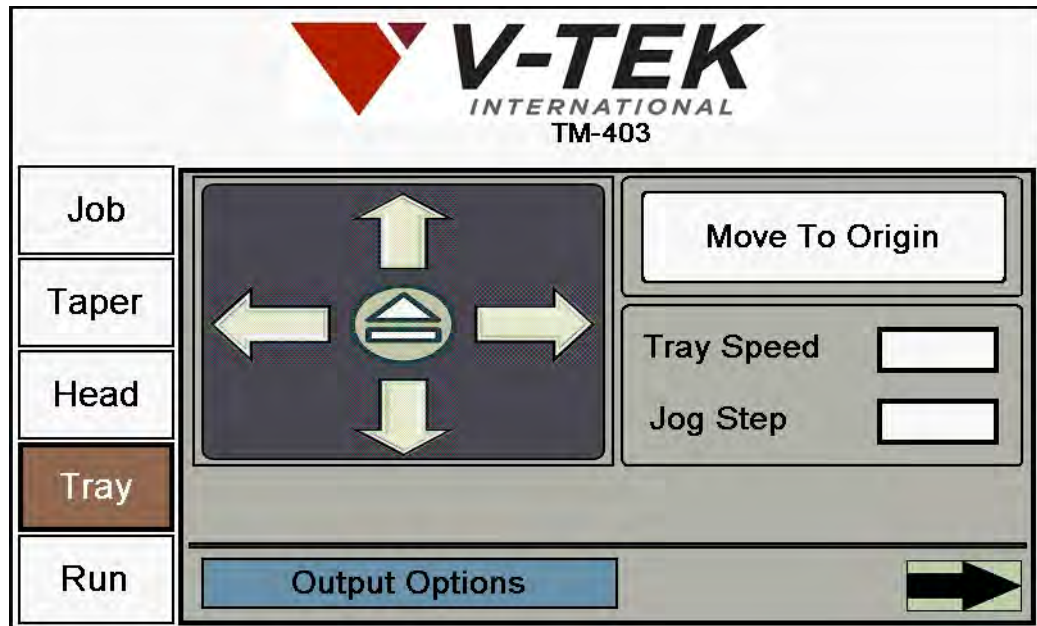

2. Press the **Eject Tray** button to bring the *Tray Module* to the front of the machine so it is easily accessible.
3. **Load Trays:** Load full tray(s) into the *Tray Feeder*, checking to ensure they are being placed in the correct orientation for the job. Follow the directions below to position the trays in the feeder.

- A. Turn the side *Tray Clamps* (B) and center *Tray Clamp* (C) 90 degrees to allow the trays to be placed in the feeder.

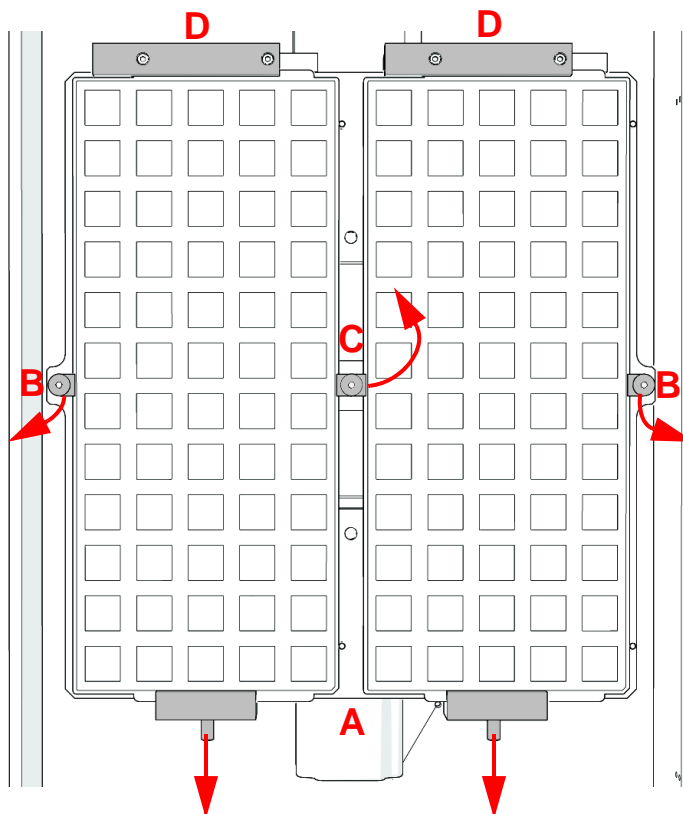

- B. Pull the *Spring Loaded Tray Clamps* (A) back to slide the trays into position. Ensure the tray is placed so that the front lip of the trays is under the *Stationary Tray Clamps* and the side of the tray is pressed against the center datums.



- C. If the tray lip doesn't fit under the *Stationary Tray Clamps* (D), loosen the screws and adjust the clamps as necessary. They may be raised or lowered to adjust to different tray thicknesses or rotated to accommodate different tray orientations.




**Note:** If using Jedec Trays which are thicker than standard Jedec tray thickness (>7.62mm) do NOT use side Tray Clamps. Using the side clamps on trays which exceed this thickness will result in a collision between the Tray Carriage and the Bridge.

The *Tray Feeder* is now ready to operate. Feeder settings will be configured later in this chapter in the *Job Wizard* section.

**Step 4:**  
**Nozzle**  
**Installation**  
**SELECT**  
**NOZZLE**

## Nozzle Installation

The TM-403's is shipped with the following nozzles and nozzle tips:

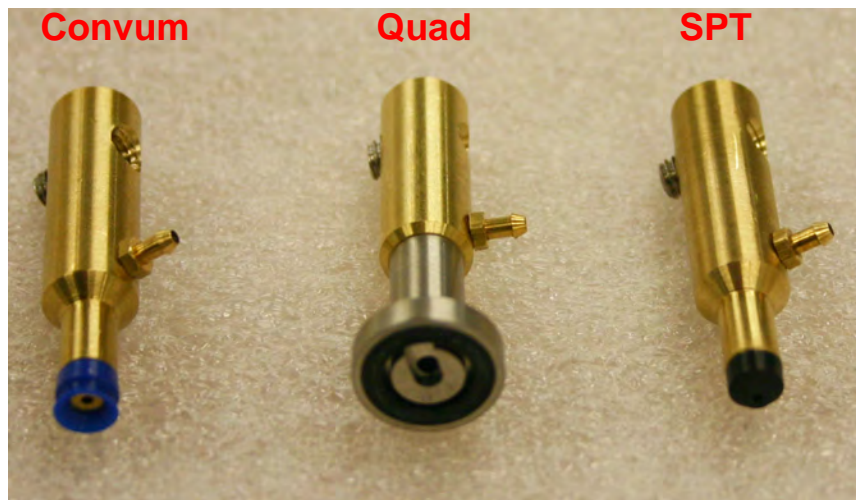

- (1) Quad Nozzle Shank (*Part # 267090*)
- (1) Small Precision Tool (SPT) Nozzle Shank (*Part # 267091*)
- (1) Convum Nozzle Shank (*Part # 267008*)
- (1) Large Quad Vacuum Cup (*Part # 201297*)
- (1) Medium Quad Vacuum Cup (*Part # 201298*)
- (1) Small Quad Vacuum Cup (*Part # 201299*)
- (1) SPT Vacuum Cup (*Part # 201271*)
- (1) Convum Vacuum Cup (*Part # 201207*)
- (2) Nozzle O-Rings (*Part # 212025*)

**Note:** *Nozzle Tips* are available in a wide range of sizes and style. See the Suggested Spare Parts List in the back of this User's Guide for more details. Contact V-TEK Service for information on ordering additional *Nozzle Tips*.

### Selecting the Correct Nozzle & Nozzle Tip




To achieve the best picking results, select the largest cup size the part can accommodate. Maximizing the cup size gives the vacuum access to more surface area which increases its pick-up capability. The goal is to use a nozzle cup that is just slightly smaller than the part being picked.

The Convum bellows-style cups have a flexible flange that are useful for picking irregular or heavy parts.

**Step 4:**  
**Nozzle**  
**Installation**  
**INSTALL**  
**NOZZLE**


## Installing Nozzle & Nozzle Tip

1. Move the *Pick & Place Head* to the **Place** position so it is easily accessible from the front. .
2. Remove the air line from the *Nozzle Shank*, supporting the *Nozzle* with one hand while gently pulling the tube off the *Nozzle Barb*.
3. Using a 2mm Hex wrench, loosen the set screw that retains the *Nozzle Shaft*.
4. Slide the *Nozzle Shank* down and remove it from the *Pick & Place Assembly*. Store the unused *Nozzle Shank* and *Nozzle Cup* in the *Spare Parts Kit*.
5. Select the correct *Nozzle Shank* and *Nozzle Cup* for the part that will be run. Press the *Nozzle Cup* onto the *Nozzle Shaft*.
6. Insert the *Nozzle Shank* into the *Actuator Shaft* in the *Pick & Place Assembly*.  
  
**Note:** When positioning the *Nozzle Shank*, push it all the way up to the *Actuator Shaft*, then pull it back slightly (about 1mm) so the body of the *Nozzle Shank* doesn't rub the body of the *Actuator*.
7. Using a 2mm Hex wrench, tighten the set screw to retain the *Nozzle Shaft*..
8. Re-attach the air line to the *Nozzle Barb*.

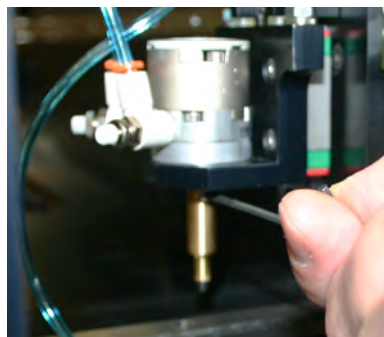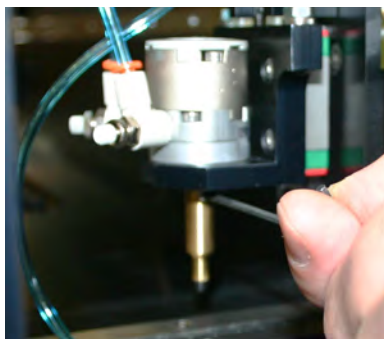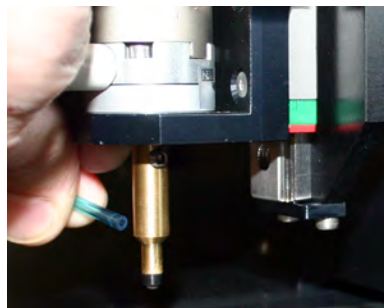

**Step 5:  
Setup  
Taper**

## Taper Setup

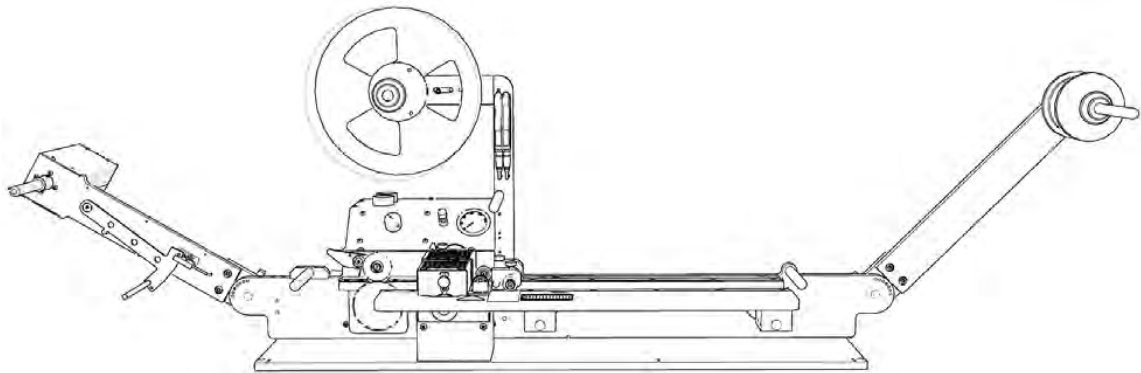


### Loading Tape

The *Taper* must be loaded with carrier and cover tapes and configured for operation. Begin by preparing the *Taper*, then move to the HMI to adjust settings. (Step 7)

**Step 5:  
Setup  
Taper  
CARRIER  
TAPE**

### Load Carrier Tape

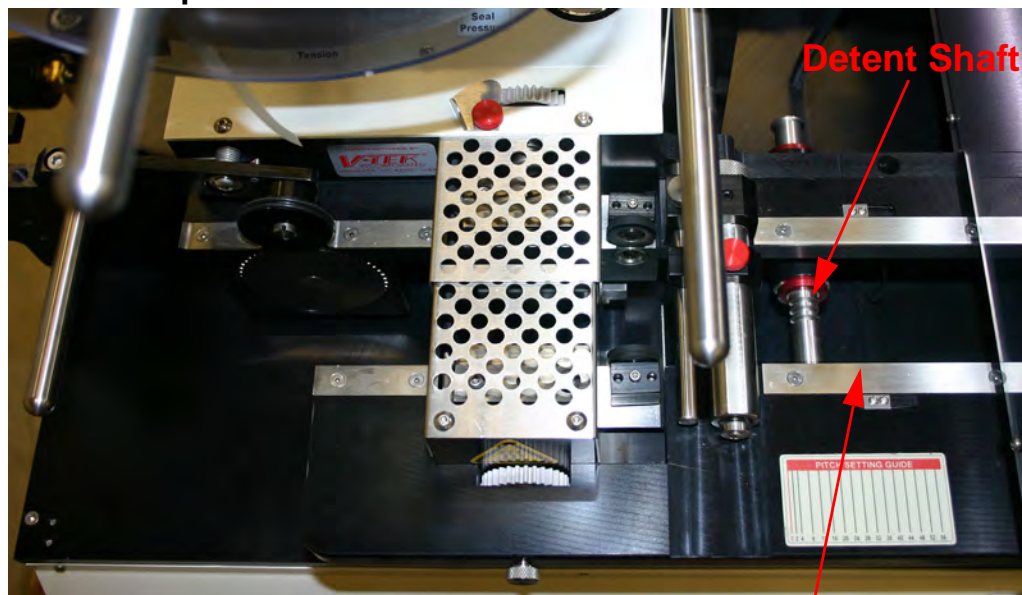

1. The outer track slides along two detent shafts that are marked with preset positions for various tape widths. Detent stops are designed to accommodate the following tape widths: 8mm, 12mm, 16mm, 24mm, 32mm, 44mm, 56mm, and 72mm. The track can be adjusted by sliding the outer track outward until it reaches the correct position.

Check that the taper is set at the correct width for the carrier tape. If not, pull the front track out until it clicks into the correct position.

2. Once the track is adjusted, use a strip of the carrier tape as a test to determine if the setting is correct. The carrier tape should slide through freely, but without excess play back and forth.

**Step 5:  
Setup  
Taper  
CARRIER  
TAPE**

3. Mount the bulk carrier tape reel on the spindle, ensuring that there is sufficient tape for the batch to be run.

The carrier tape should roll off to the left, unwinding from the top so it will feed right side up into the carrier tape channel underneath the Pick Head Enclosure. The sprocket holes of the carrier tape are on the inside for tape widths less than 32mm. Tapes wider than 32mm have holes on both sides.

4. Trim the end of the carrier tape, cutting between two pockets with a sharp scissors so the edge is cleanly cut. Cut the edge of the tape again, cutting through a sprocket hole at a 45° angle so the tape feeds easily.
5. Guide the carrier tape under the *Carrier Tape Guide* and then feed it through the carrier tape channel under the taper.

**Note:** A sharp instrument, such as a pair of tweezers may aid in guiding the carrier tape into the loading track.

6. Continue to guide the carrier tape forward through the loading track and the sealer until it reaches the sprocket.
7. Lift the idler wheel and place the carrier tape onto the sprocket so that the holes engage the teeth. Release the idler wheel so that it is secured in place.


**Mechanical Hazard!**

*Do not attempt to activate the **sprocket** while tape is being routed through the sealer. Pinching or entrapment may occur if safety precautions are not observed.*

**Step 5:  
Setup  
Taper  
COVER  
TAPE****Load Cover Tape**

1. Remove the *Reel Lock* mechanism and place a reel of cover tape of the correct width to match the carrier tape on the cover tape spindle. The tape should unwind to the right from the bottom of the reel. Ensure that there is sufficient tape for the batch to be run. The reel should be pushed onto the holder so that it is flush with the back.
2. Replace the *Reel Lock* and position it so the reel is supported and spins freely on the spindle with little or no drag.


**Note:** To remove the *Reel Lock* mechanism from the cover tape support arm, simply pull the two metal disks apart and slide the *Reel Lock* off the spindle.

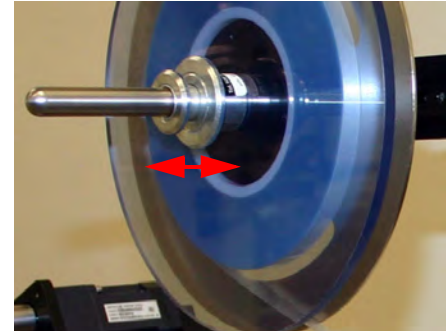

3. Check that the cover tape guide width is adjusted correctly for the cover tape that will be used. Pull the cover tape down and compare it to the current setting

If the guide is set too wide or too narrow, loosen the red knob set screw and pull or push the guide in and out until it matches the width of the cover tape with only a slight amount of extra room..

**Width Adjustment Knobs**

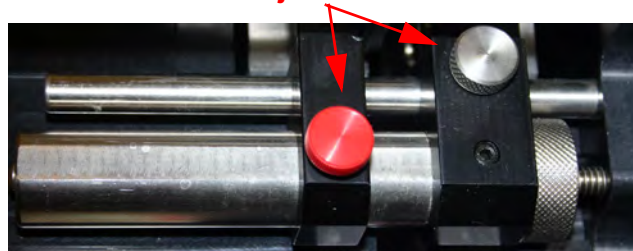

4. If the cover tape is *PSA*, attach it to the carrier tape using the adhesive on the underside of the tape.


If the cover tape is *Heat Seal*, use blue Permacel tape to attach the cover tape to the carrier tape just ahead of the cover tape guide.

5. Thread both the carrier tape and cover tape through the cover tape guide sealer assembly.

**Note:** A sharp instrument, such as a pair of tweezers may aid in guiding the cover tape into the sealer.

**Step 5:**  
**Setup**  
**Taper**  
**TAKE-UP**

6. Adjust the *Cover Tape tension*, turning the *Tension Adjustment Knob* on the back of the *Cover Tape Arm* clockwise (in) to increase tension. The goal is to tighten the cover tape so there is not excess freedom in the tape when it is advanced.

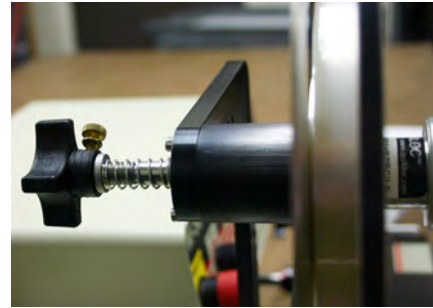

**Load Take-up Reel**

1. Mount an empty take-up reel on the take-up reel spindle. The width of the reel must match the width of the carrier tape and its diameter should be large enough to accommodate the number of components in the taping job.
2. The *Take-up Tension Control* is located on the front of the Heat Sealer enclosure next to the *Seal Pressure Gauge & Control*. Adjust the take-up tension to a rate that suits the weight of the parts that are being processed, adjusting it so the take-up motor pulls the sealed tape gently forward.



**Mechanical Hazard!**


*Avoid placing fingers between the carrier tape and the Take-up Reel when the TM-403 is in operation. Pinching or entrapment may occur if safety precautions are not observed.*

**Step 6:  
Setup  
HMI  
JOB**

## Configure HMI Settings

The TM-403's *Job Wizard* leads the user through the HMI setup process.

### 1. OPEN JOB WIZARD

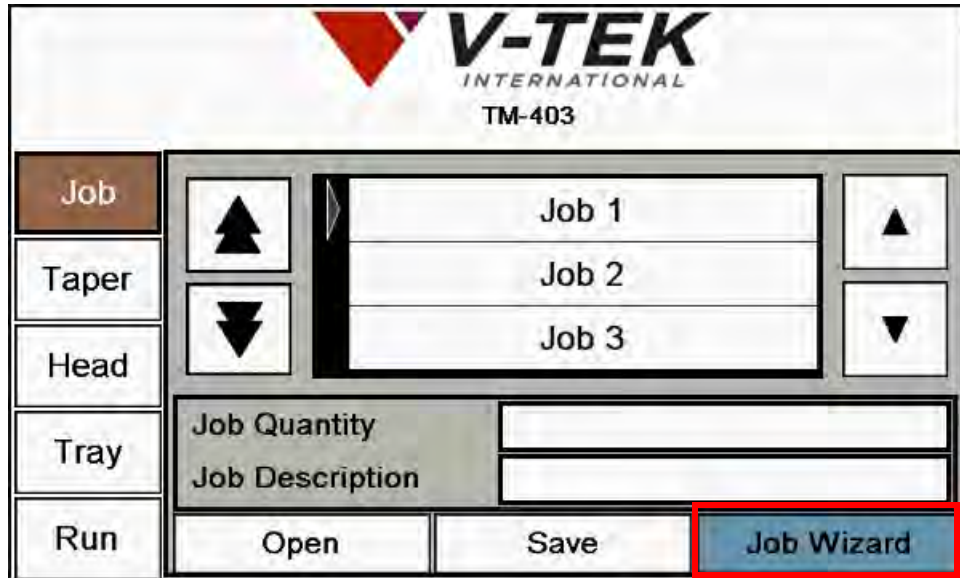

- a. Open the HMI *Job Screen*.
- b. Press the **Job Wizard** button to open the *Job Wizard*.

### 2. RESET JOB



- a. Press **Reset Job** to initialize system for Job Wizard.

- b. Press the right **Arrow** key to open the next *Job Wizard* screen.

3. **ENTER JOB PARAMETERS.**

V-TEK  
INTERNATIONAL  
TM-403

Enter the desired Job Parameters.

Job Quantity 2,500

Job Description Job Description 1

← Arrow Buttons →

- a. Enter *Job Quantity*
- b. Enter *Job Description*. Press the right **Arrow** key to open the next *Job Wizard* screen.

**Step 6:**  
**Setup HMI**  
**TAPER**

4. **TAPER SETUP**  
Enter *Pitch*, *Seal Type* and *Sealer Settings* (Heat only).

V-TEK  
INTERNATIONAL  
TM-403

Set the tape pitch and seal type.

Tape Pitch 8

Continuous Advance

Seal Type PSA

Inner Sealer Settings  
Set Point

Outer Sealer Settings  
Set Point

← →

### Step 6: Setup HMI TAPER

- a. Enter the correct tape pitch for the carrier tape that will be run. If unsure, use the **Pitch Setting Guide** on the *Taper* to determine the pitch.
- b. Select **PSA** or **Heat Seal**.
- c. If **Heat Seal** is enabled, enter the desired temperature in degrees Celsius for both the *Inner* and *Outer Sealer Temperature Settings*. Allow the heat sealer to reach its operating temperature before continuing.



**Note:** The TM-403 accommodates a wide range of carrier tapes and cover tapes. Settings may vary from one tape product to another. The recommended starting point is 90° C. The maximum recommended operating temperature is 160° C. The temperature for each seal shoe should be increased or decreased as needed after running a peel force test.

- d. Set the heat shoe **Seal Pressure** to the appropriate setting. This setting controls the amount of force applied when the sealer shoes drop. The recommended starting point is **50 psi**.



- e. Press the **Continuous Advance** button.

The taping module will begin the advance of the carrier tape and cover tape through the sealer. The cover tape will be sealed onto the carrier tape as it advances.




- f. Observe whether the sealer's width is adjusted correctly for the cover tape. It should seal just inside the outside edges of the carrier tape without going off the edges or over the pockets. If it is not, stop the taper by pressing the **Continuous Advance** button again.

### Step 6: Setup HMI TAPER

The sealer's inside and outside seals are independently adjustable. If one of the seals needs to be moved, loosen the corresponding position lock and turn the adjusters.

Turning the wheel counter-clockwise will move the guide towards the operator. Turning it clockwise will move the guide closer to the machine. Adjust the *Inner Seal Adjust* and the *Outer Seal Adjust* to the desired position, then tighten the *Position Locks* to secure them.

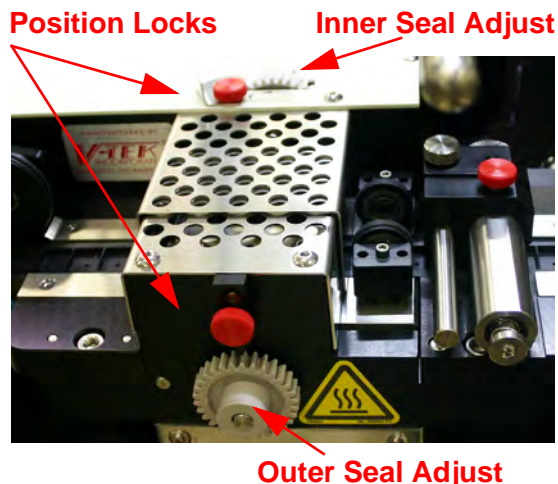

**Note:** See *Chapter 6: Troubleshooting* for sealer adjustment tips.

After the initial adjustment, run the tape out again and observe whether the cover tape aligns itself satisfactorily. If it is still misaligned, continue adjusting the cover tape guide until it is aligned properly.

### 5. CREATE TRAILER (optional)

The term “leader” and “trailer” refer to the lengths of empty carrier tape required at the beginning (leader) and the end (trailer) of the finished reel of placed parts. Therefore, when the reel is being taped on the TM-403, the trailer is the first length of empty carrier tape run before the first part is taped and the leader is the length of empty carrier tape run after the last part is taped.

- a. There are no HMI controls for creating a *Trailer*. If a *Trailer* is desired, simply open the HMI *Taper Tab* and press **Continuous Advance** at the beginning of the reel and run out sealed empty pockets until the desired trailer length is reached.
- b. Press the right **Arrow** key to move to the next screen and configure leader creation.

CONTINUOUS ADVANCE

**Step 6:**  
**Setup HMI**  
**TAPER**

6. ENABLE LEADER.



V-TEK INTERNATIONAL TM-403	
Enable or Disable the Leader as needed.	
Leader State	Disabled
Leader Length	200

- a. Select *Leader State* and enter *Leader Length* in millimeters if enabled.
- b. Press the right **Arrow** key to move to the next screen.

**Step 6:**  
**Setup HMI**  
**TRAY**  
**FEEDER**

7. **Tray Feeder SETUP** The next three *Job Wizard* screens are used to detect Tray Pitch.

V-TEK  
INTERNATIONAL  
TM-403

Enter the total number of rows and columns on the tray.

Number Of Rows

Number Of Columns

← →

- a. Enter the number of tray rows and tray columns in the tray that will be processed.

**Note:** Rows run perpendicular to the front of the machine. Columns run parallel to the front of the machine. The number of rows will always be greater than the number of columns in a tray.

- b. Press the right **Arrow Key** to move to the next *Job Wizard* screen.

V-TEK  
INTERNATIONAL

Precisely center the Pick Head's Nozzle over Tray Pocket 1, then, press Learn.

Head and Tray Jog Controls

Head Jog Step

Tray Jog Step

Head Position 000.00      Learned Position 000.00

Tray Position 000.00      Learned Position 000.00


←  →

**Step 6:**  
**Setup HMI**  
**TRAY**  
**FEEDER**

- c. Center the *Pick Head* over the **Pocket 1** using the HMI **Jog** buttons or the **Jog** buttons on top of the Sealer enclosure. To see an illustration of the correct head placement, push the **Help** icon.



An illustration of a tray with *Pocket 1* and *Pocket 2* identified will appear.

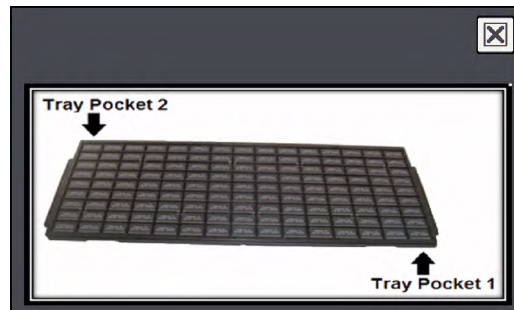

- d. The distance the head moves with each **Jog** is set in the **Head Jog Step** field.
- e. Press **Learn**. The *Learned Position* will now match the *Current Position* and the **Learn** button will turn green and update to read **Learned**.
- f. Press the right **Arrow** to move to the next *Job Wizard* screen.

**V-TEK**  
INTERNATIONAL

Precisely center the Pick Head's Nozzle over Tray Pocket 2,  
then, press Learn.

**Head and Tray Jog Controls**

Head Jog Step

Tray Jog Step

Head Position	000.00	Learned Position	000.00
Tray Position	000.00	Learned Position	000.00

- g. Center the *Pick Head* over Pocket 2 using the **Jog** buttons. To see an illustration of the correct head placement, push the **Help** icon.



An illustration of a tray with *Pocket 1* and *Pocket 2* identified will appear.




- h. The distance the head moves with each **Jog** is set in the **Head Jog Step** field.
- i. Press **Learn**. The *Learned Position* will now match the *Current Position* and the **Learn** button will turn green and update to read **Learned**. The right **Arrow Key** will also appear.

**Note:** It is useful to note the current position for both *Pick Position 1* and *Pick Position 2* for future use or to help when making fine adjustments.

- j. Press the right **Arrow** to move to the next *Job Wizard* screen.

**Step 6:**  
**Setup HMI**  
**NOZZLE**

- 8. **Set Pick Nozzle Height** The *Pick Head's Z Axis* (up/down) position needs to be set at the *Pick* position. Use the controls in the screen below to place the *Pick Head* in an accessible position so the pick height can be adjusted.

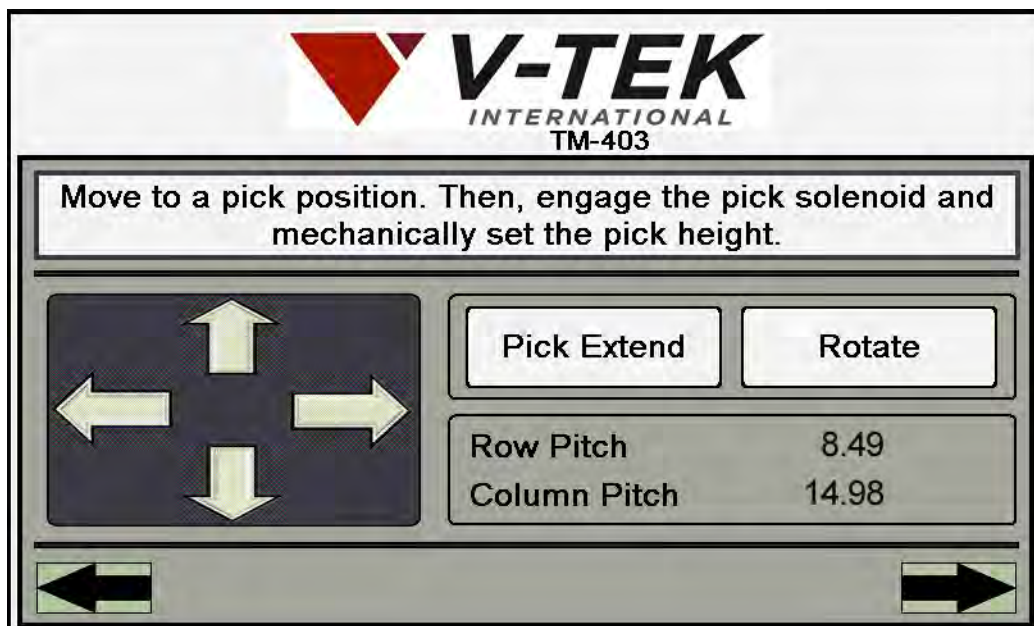

- a. Use the **Index** arrow keys to move the *Nozzle* to the last column of *Tray 2*.
- b. Open the TM-403 enclosure doors to access the pick head.

- c. Press **Rotate** to turn the nozzle so the set screw is accessible.
- d. Use a 2.5mm hex wrench to hold the *Actuator Adjustment Screw* in place from the bottom, while loosening the *Jam Nut* on top of the *Actuator Adjustment Screw* with an 8mm open ended wrench. Raise the *Nozzle* until it is at a safe height so it will not collide with the current part when extended.
- e. Tighten the *Jam Nut*.
- f. Press the **Pick Extend** button.
- g. Loosen the *Jam Nut* on top of the *Actuator Adjustment Screw* again, then lower the *Nozzle* until it is barely touching the part in the *Pick Location*.




### Step 6: Setup HMI NOZZLE

**Note:** For all *Nozzle Tips* except the *Convum Tips*, the pick position should be set just above the surface of the part with a very small clearance between the nozzle and the part. Because the *Convum Nozzle Tips* are flexible, it is all right if the tip is programmed to touch the part when picking.

- h. Tighten the *Jam Nut*.
- i. Press **Pick Retract** to retract the *Nozzle* to a safe height.
- j. Press **Rotate** to return the *Nozzle* to its original orientation.
- k. Use the **Index** arrow keys to move the pick head back to the Tray 1, Pocket 1 position.
- l. Press the right **Arrow** to move to the next *Job Wizard* screen.


## 9. Nozzle Setup: Manual Rotation

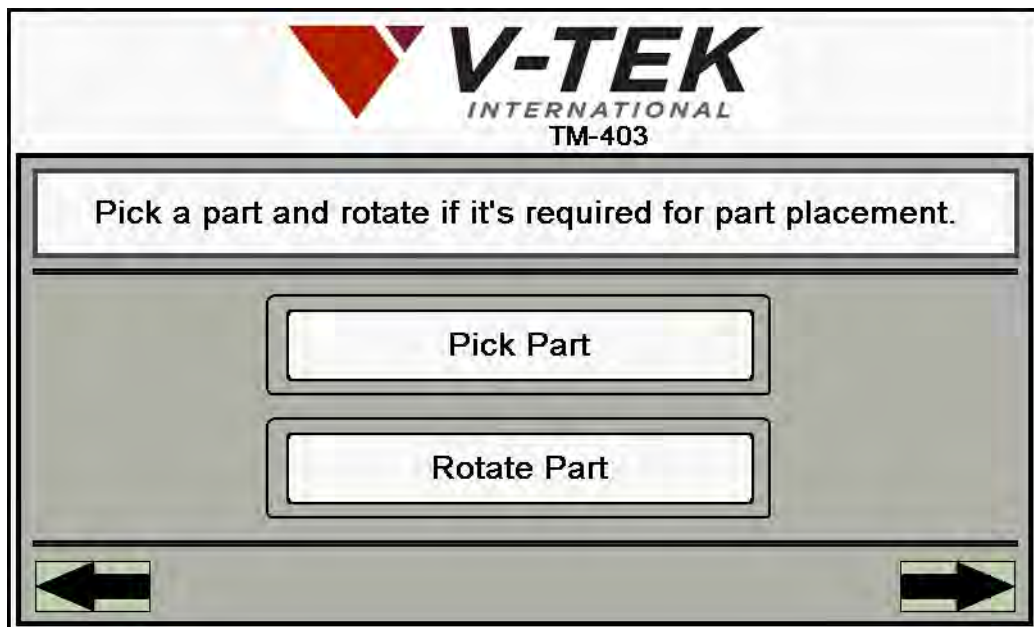

- a. Place a part in the Pocket 1 position. Press **Pick Part** to activate the Pick Head and pick a part from the pick location.
- b. If the part needs to be rotated before it is placed in tape, press **Rotate Part**. This will rotate it +90°. If no rotation is required for part placement, skip this step.
- c. Press the right **Arrow Key** to move to the next *Job Wizard* screen.

**Step 6:**  
**Setup HMI**  
**NOZZLE**

## 10. Set Place Position


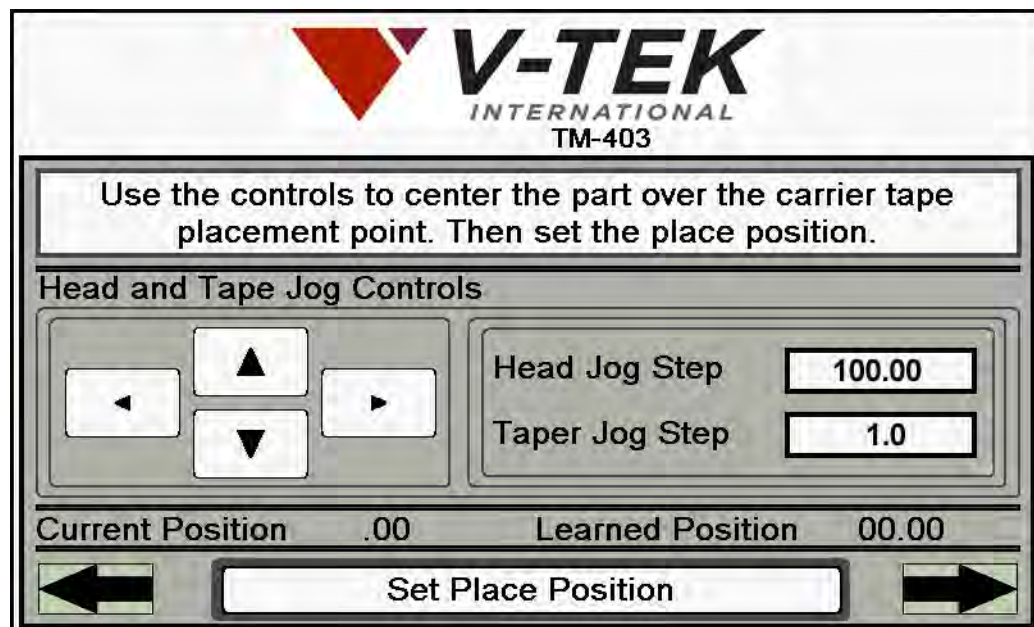


- a. Use the **Arrow** keys to position the *Pick Head* and *Carrier Tape* so the *Nozzle* is centered over the carrier tape placement position. The **Up/Down Arrow** keys move the *Pick Head* forward and backward. The **Left/Right Arrow** keys move the tape left and right in the *Taper Track*.
  - b. When the Nozzle is centered over the tape pocket, press **Set Place Position** to set the position.
  - c. Press the right **Arrow Key** to move to the next *Job Wizard* screen.
11. **Set Place Nozzle Height** The *Pick Head's Z Axis* (up/down) position needs to be set at the *Place* position..



**Step 6:  
Setup HMI  
NOZZLE**


- a. To manually set the *Place Actuator* to the correct nozzle height, press **Place Extend**
- b. Use a 2.5mm hex wrench to hold the *Actuator Adjustment Screw* in place from the bottom, while loosening the *Jam Nut* on top of the *Actuator Adjustment Screw* with an 8mm open ended wrench. Lower the *Nozzle* until the part is barely touching the top of the pocket in the *Place Location*.
- c. Tighten the *Jam Nut*.
- d. Press **Place Retract** to retract the Nozzle to a safe height.
- e. Press the right **Arrow Key** to move to the next *Job Wizard* screen.

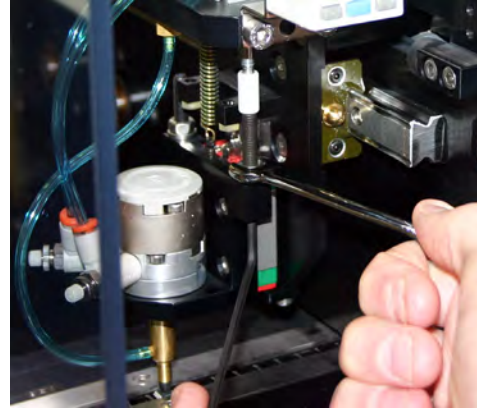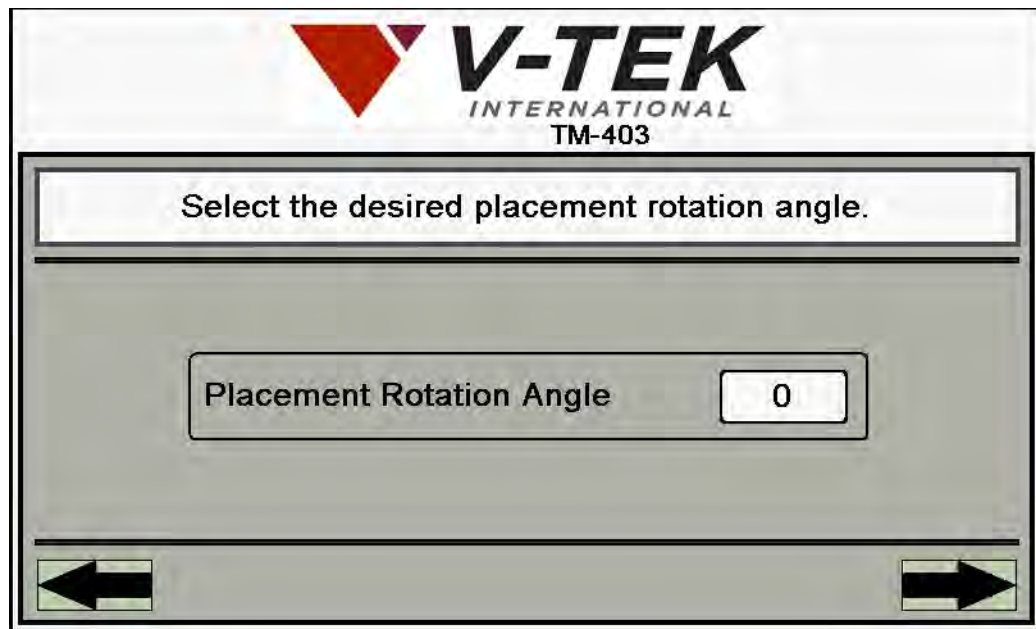**12. Set Rotation Angle**

- a. Press the Placement Rotation Angle field to toggle through the rotation options. The options are 0, -90 and +90. Select the correct placement angle.

**Step 6:**  
**Setup HMI**  
**NOZZLE**

- If rotation is set at **0**, the part will be placed in the same orientation as it was picked.
- If rotation is set at **-90**, the part will be rotated 90 degrees clockwise prior to placement.
- If rotation is set at **+90**, the part will be rotated 90 degrees counter-clockwise prior to placement.

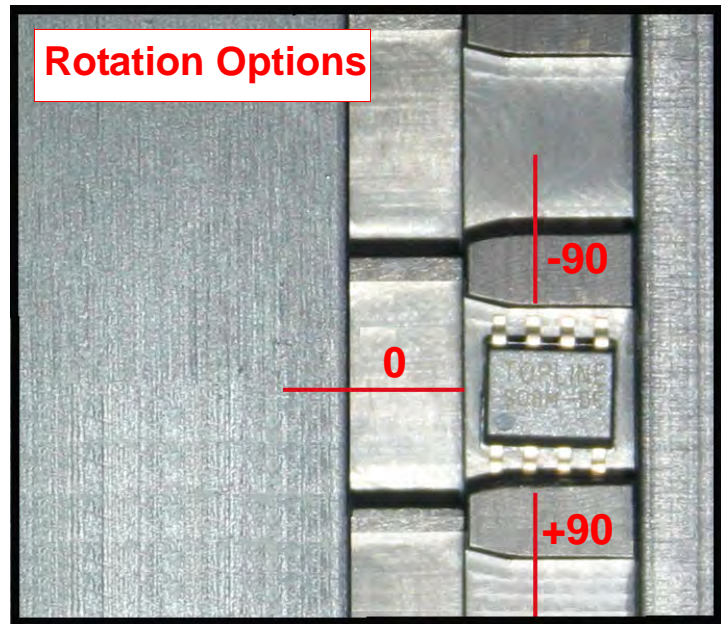

- b. Press the right **Arrow Key** to move to the next *Job Wizard* screen.

**Step 6:**  
**Setup HMI**  
**VERIFY**

13. **Verify Job Settings**



Test the job settings, using the **Pick Part** and **Place Part** buttons to pick and place parts. If adjustment are required, use the left **Arrow** key to return to the desired step and adjust settings. Press the right **Arrow Key** to move to the next *Job Wizard* screen.

**Note:** Manually placed parts will be counted in the current job.

**Step 6:**  
**Setup HMI**  
**VISION**

14. Vision Settings

V-TEK  
INTERNATIONAL  
TM-403

Enable or Disable vision. To fully configure the vision system please connect the camera to a computer. See the manual for more details.

Camera State Disabled

Parts Until Inspection

- Set *Camera State* to **Enabled** or **Disabled**.
- If camera is enabled, enter number of **Parts Until Inspection** (do not include part at Pick point.). Press the right **Arrow Key** to move to the final *Job Wizard* screen

**Step 6:**  
**Setup HMI**  
**SAVE**  
**SETTINGS**

15. Save Job Settings

V-TEK  
INTERNATIONAL  
TM-403

Select a job, press enter, then, press Save and Finish.

Job 1

Job 2


Job 3

Save Finish

- Browse through the *Job Library* using the **Up/Down Arrow** keys to move up or down through the list. To select a *Job Name* from the list, press the **Enter** key.

**Note:** The **Save** function will overwrite the information stored for the currently selected job. Therefore, it is important to select the desired job prior to pressing the **Save** button.

- b. Press the **Save** button to save job settings to the selected job name, then press **Finish** to close the *Job Wizard* and return to the main *Job Tab*.



V-TEK  
INTERNATIONAL  
TM-403

Job	▲	Job 1	▲
Taper	▼	Job 2	▼
Head		Job 3	
Tray	Job Quantity		
Run	Job Description		
	Open	Save	Job Wizard


**Step 7:  
Seal Test****Test Seal**

Perform a *Seal Test* to ensure a good seal. Adjust *Sealer* settings in the HMI *Taper* tab as necessary.




1. Run the tape through the taping module by pressing the **Continuous Advance** button in the HMI *Taper Tab*.
2. As the seal is occurring, watch the alignment of the cover tape with the carrier tape. The cover tape should run exactly in the groove of the cover tape guide and the seal should appear as a solid, consistent line. If the seal width is incorrect, stop the *Taper* by pressing the **Continuous Advance** button again.
3. Adjust the seal positions as necessary. The sealer's inside and outside seals are independently adjustable. If one of the seals needs to be moved, loosen the

corresponding position lock and turn the adjusters.

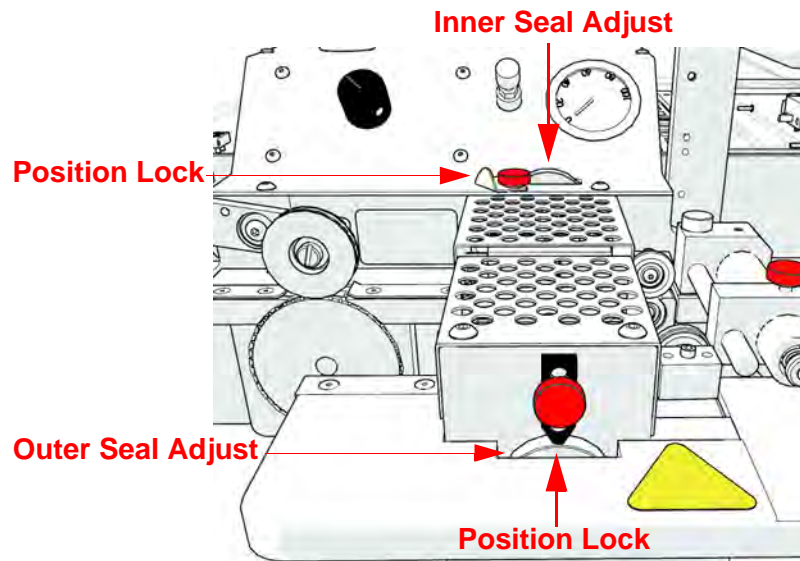

Turning the wheel counter-clockwise will move the guide towards the operator. Turning it clockwise will move the guide closer to the machine. Adjust the *Inner Seal Adjust* and the *Outer Seal Adjust* to the desired position, then tighten the *Position Locks* to secure them.

4. Perform a Seal Test.

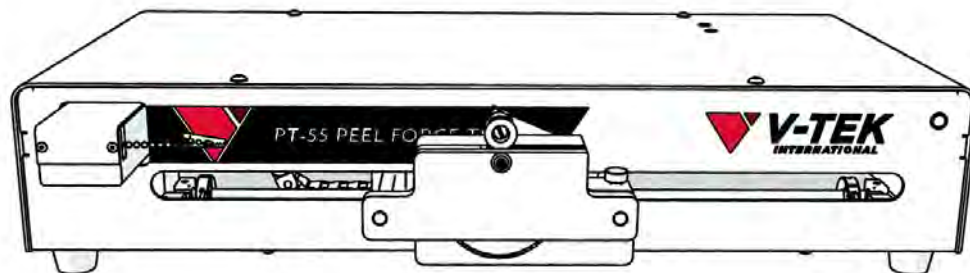

The V-TEK *PT-55 Peel Force Tester* is pictured above. (Sold separately.)

Proceed to *Chapter 5: Vision Setup* to configure the Vision System for operation.

If processing from tray to tray, see the next section of this chapter.


## Tray-to-Tray Output Option

If desired, the TM-403 can combine two partially filled trays by picking from Tray 1 and placing to Tray 2. Follow the procedure below to configure Tray-to-Tray placement.


**Note:** The intended use for the Tray-to-Tray function is to pick from Tray 1, which is the tray located closest to the front of the machine, and place to Tray 2.

1. Open the *Tray Tab*, then press the **Center Index** button to move the tray carriage to the *Eject Tray* position for convenient loading. ..


### Tray Screen 1

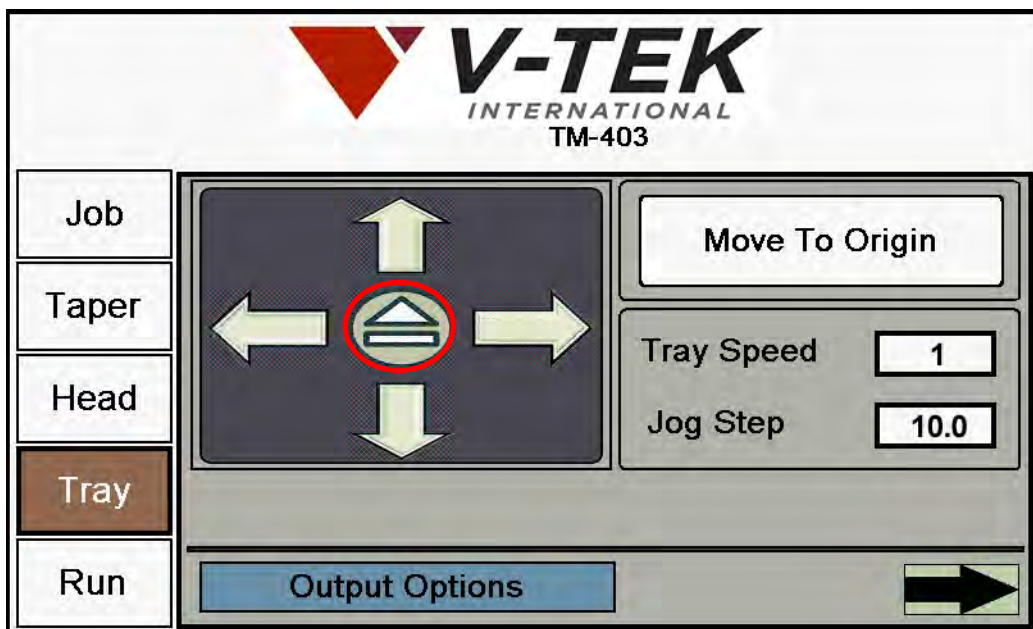

2. Load the Tray that the parts will be picked from into the *Tray 1 Position*. Load the tray that the parts will be placed to into the *Tray 2 Position*. Ensure the parts are consistently oriented in both trays.

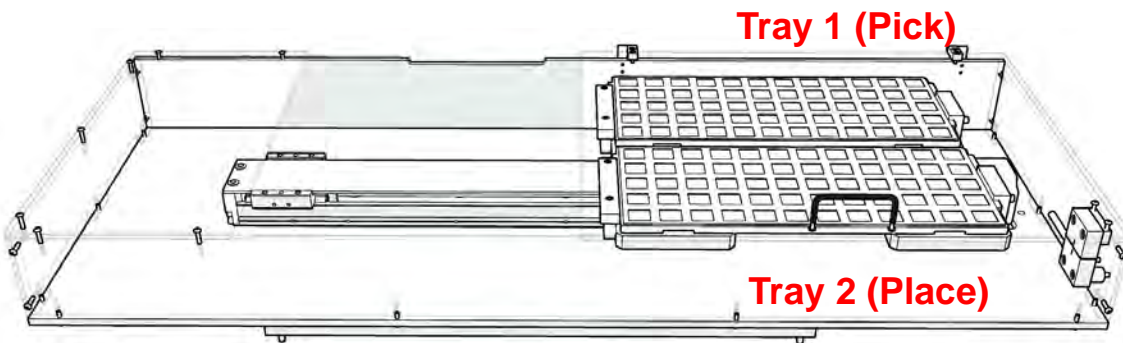

Pull the *Spring Loaded Tray Clamps* back to slide the trays into position. Ensure the trays are placed so that the front lip of the trays is under the *Stationary Tray Clamps* and the side of the tray is pressed against the center datums.

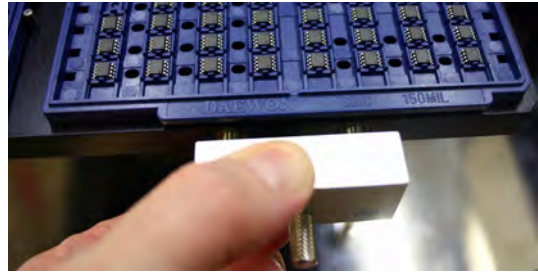

If the tray lip doesn't fit under the *Stationary Tray Clamps*, loosen the screws and adjust the clamps as necessary. They may be raised or lowered to adjust to different tray thicknesses or rotated to accommodate different tray orientations.



**Note:** If using Jedec Trays which are thicker than standard Jedec tray thickness (>7.62mm) do NOT use side Tray Clamps. Using the side clamps on trays which exceed this thickness will result in a collision between the Tray Carriage and the Bridge.

3. Press **Output Options**. Select **Tray Output**, then set *Pick* and *Place* locations for running parts from Tray to Tray.

#### Tray Options Screen: TRAY

**V-TEK INTERNATIONAL TM-403**

Placement Options	
Output To	Tape
Pick Position	
Set	Row 1 Column 1
Place Position	
Set	Row 1 Column 1

**Index Controls**

Teach Positions: Pick, Place

**Note:** Rows run perpendicular to the front of the machine. *Columns* run parallel to the front of the machine. The number of rows will always be greater than the number of columns in a tray.

Proceed to *Chapter 5: Vision Setup* to configure Inspection.

# Chapter 5: Vision Setup

---

---

## Contents

<b>Quick Start: Vision Setup</b>	<b>5-2</b>
<b>Connect Vision</b>	<b>5-3</b>
Setup HMI	5-3
Connect Computer	5-5
Connect Keyence Monitor	5-9
<b>Configure Inspection</b>	<b>5-10</b>
Configure Computer	5-10
Configure Keyence Monitor	5-28

---

## Quick Start: Vision Setup

---

The following is an outline of the basic steps required to configure inspection on the TM-403. More detailed instructions follow in the next section of this chapter.

1. **Load Vision Software** (user supplied computer only)
2. **Connect Vision Computer/Monitor to Camera**
3. **Configure Inspection**



If the optional laptop was purchased for vision configuration V-TEK, Inc. recommends users create a computer **Recovery Disk** prior to operation and conduct periodic back-ups as needed. Visit the computer manufacturer's website for instructions on creating a recovery disk.

V-TEK, Inc. does not create or maintain recovery information for this laptop. Creating a recovery disk is solely the users' responsibility.

**Step 1:**  
**Vision**  
**Setup**  
**CONNECT**

## Connect Vision

**Note:** The TM-403 vision system can be run with a computer or a Keyence IV-G Monitor. These options are not included with the TM-403. They can be purchased separately from V-TEK, Inc. or the user may provide their own computer.

System requirements for the vision computer follow:


- Operating system: Microsoft® Windows XP™ (32 bit), Windows Vista™ (32bit), or Windows 7™ (32 or 64 bit)
- 128 MB RAM
- 1024 x 768 (96 DPI) or 1280 x 1024 (120 DPI display)
- Ethernet port

If vision is enabled for a job, the vision computer/monitor must be connected to the *Keyence IV-G Camera* and the camera must be trained to inspect the part before the job can be run.

## Setup HMI

Follow the steps below to enable Vision Inspection on the TM-403.

1. On the TM-403 HMI, open the *Taper Tab*. Press the right **Arrow** button to advance to the second *Taper* screen. Ensure the *Camera State* is set to **Enabled**.

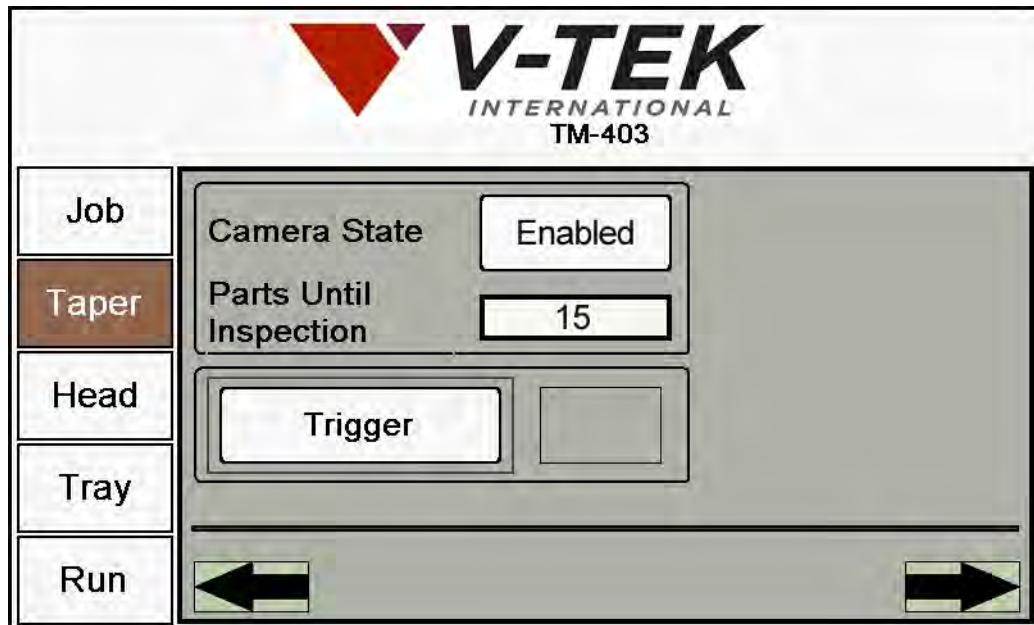

2. Using the M12 ethernet cable which was provided with the TM-403 system, connect the vision computer to the Keyence camera.

**Step 1:**  
**Vision**  
**Setup**  
**CONNECT**




If the optional laptop was purchased for vision configuration V-TEK, Inc. recommends users create a computer **Recovery Disk** prior to operation and conduct periodic back-ups as needed. Visit the computer manufacturer's website for instructions on creating a recovery disk.

V-TEK, Inc. does not create or maintain recovery information for this laptop. Creating a recovery disk is solely the users' responsibility.

3. Turn the computer on, then insert the Keyence IV-G software CD. When the software installation screen appears, follow the prompts to install the Keyence software.

**Note:** Keyence IV-G Software is automatically installed if using the optional V-TEK laptop or Keyence IV-G Monitor. If using one of these options, skip this step and proceed to *Configure Inspection*.

4. On the TM-403 HMI, select the *Taper Tab*, then press the **Right Arrow** key to advance to the second Taper screen.

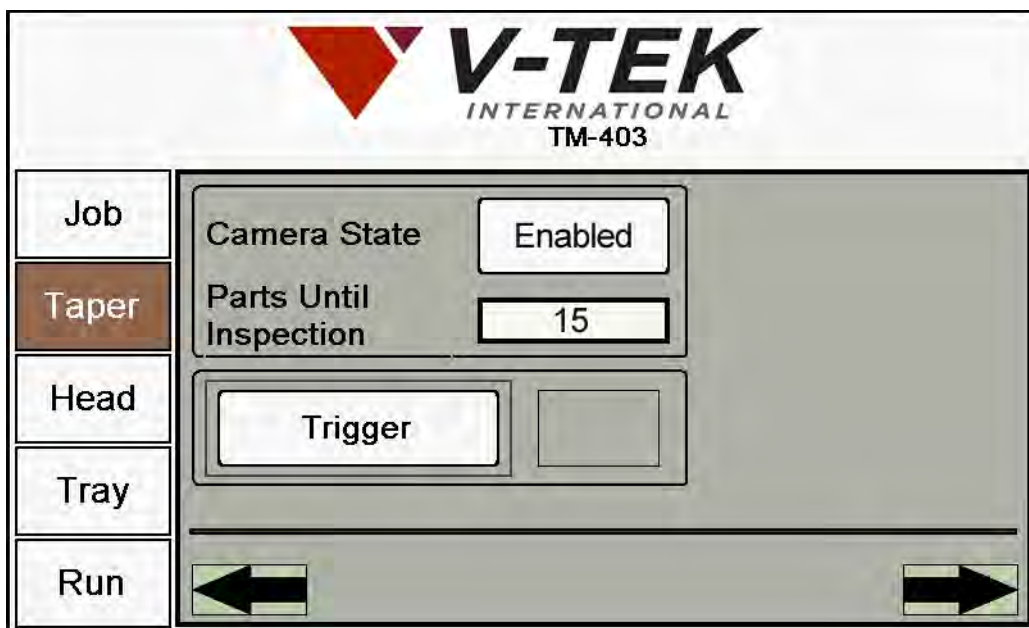


5. Ensure the *Camera State* is **Enabled**. Ensure the *Parts Until Inspection* field is correct.

**Note:** The **Parts Until Inspection** value is the number of pockets between the *Place* point and the *Inspection* point. Begin the count at the *Place* position at zero, so the *Place* position is not included.


**Step 1:  
Vision  
Setup  
CONNECT  
LAPTOP****Connect Computer**

Follow the steps below to connect the Keyence IV-G Camera to the vision computer. (Proceed to the next section if using the Keyence Monitor instead of a computer.)

1. Open the *Control Panel*, then select *Network and Sharing Center*. In the *Connect or Disconnect* section, click **Local Area Connection**.

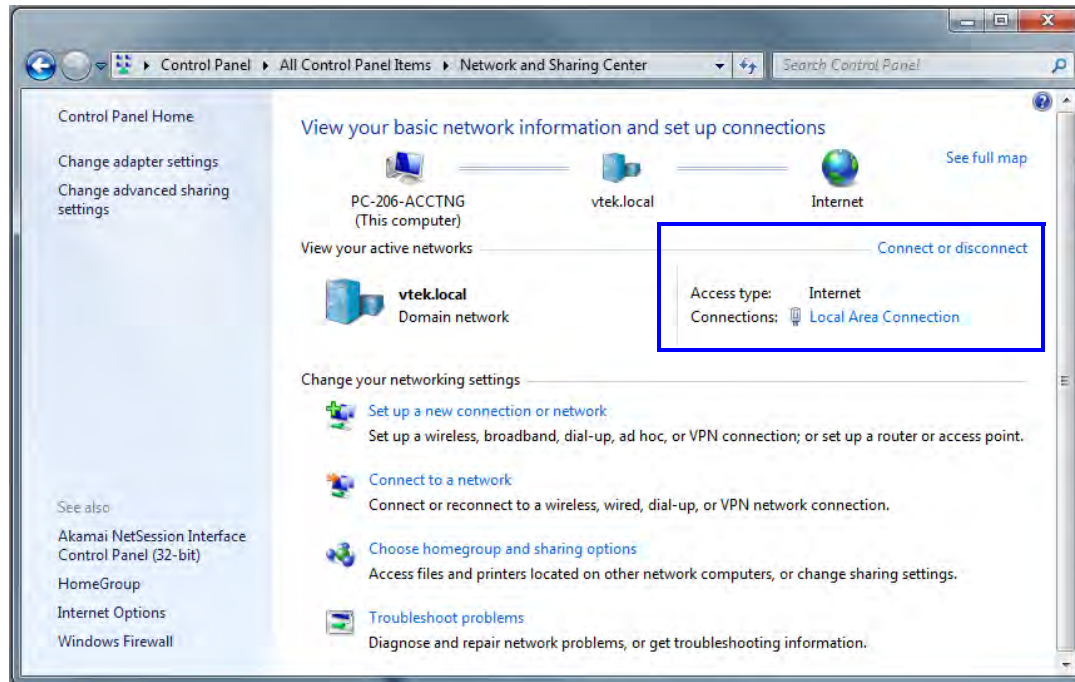


2. The *Local Area Connection Status* window will open. Click **Properties**.

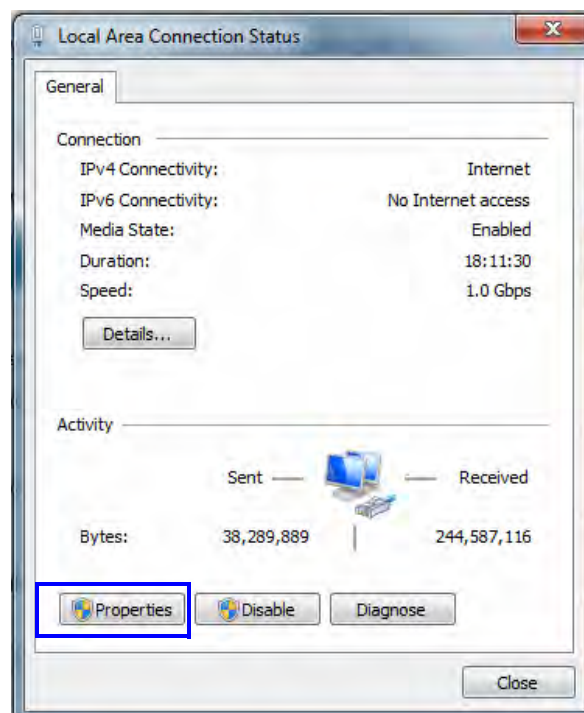


**Step 1:**  
**Vision**  
**Setup**  
**CONNECT**  
**LAPTOP**

3. Double click **Internet Protocol version4 (TCP/IPv4)**

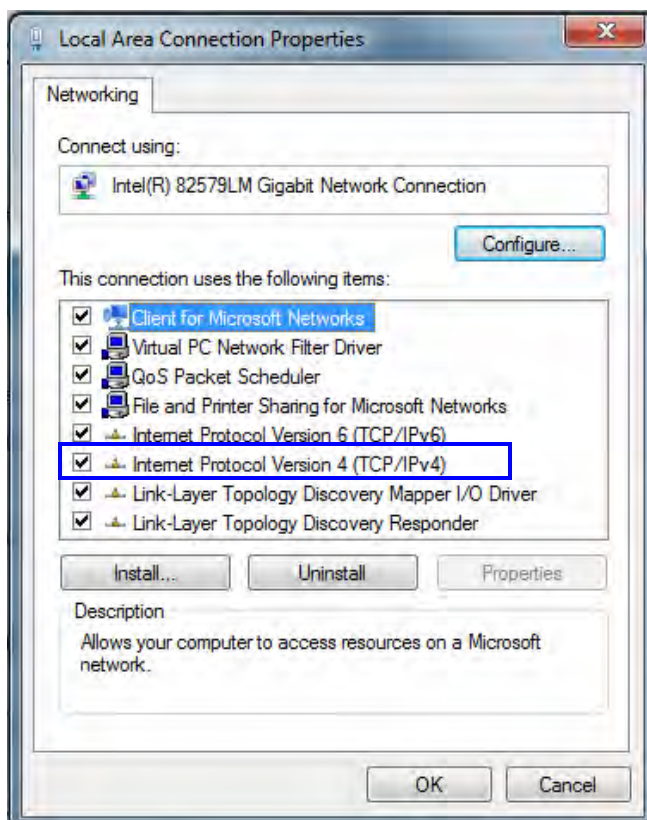

4. Ensure *Obtain an IP address automatically* is selected. Click **OK**.

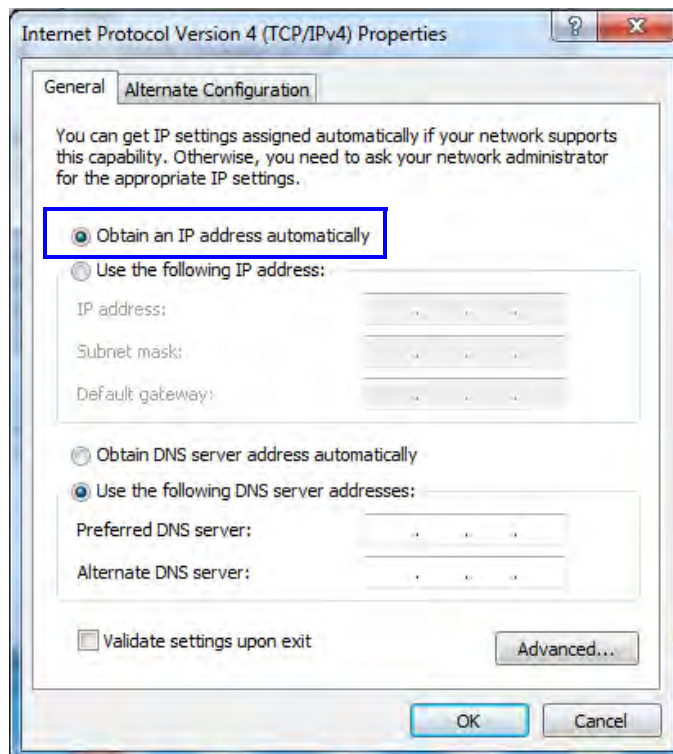

**Step 1:**  
**Vision**  
**Setup**  
**CONNECT**  
**LAPTOP**


5. To select a stored inspection or configure a new inspection, open the *Keyence Inspection System* software by double-clicking on the **IV Navigator** icon on the desktop.



6. Select **Direct Connection**.




7. The following pop-up will appear. Press **Connect**.

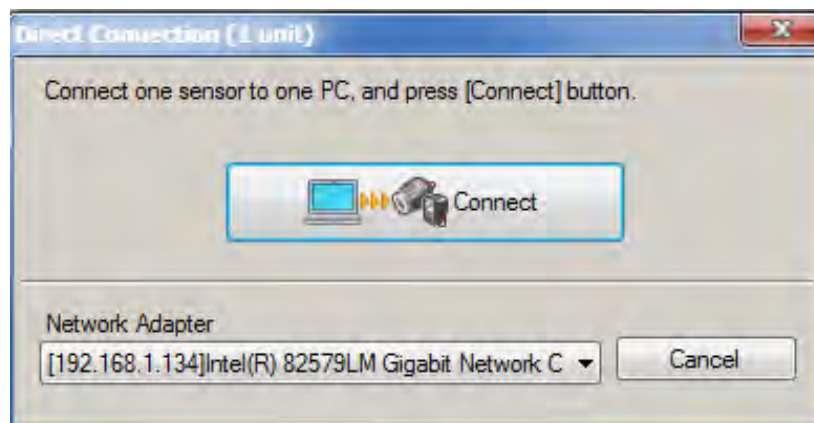


**Step 1:**  
**Vision**  
**Setup**  
**CONNECT**  
**LAPTOP**

A *Connecting to Sensor* status window will open.

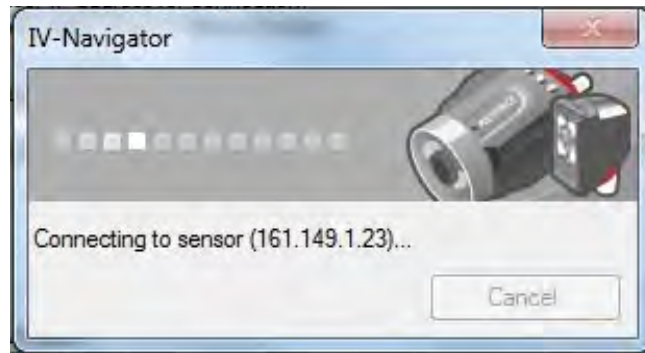

8. Once the connection is complete, the *Run/Program* window will open.

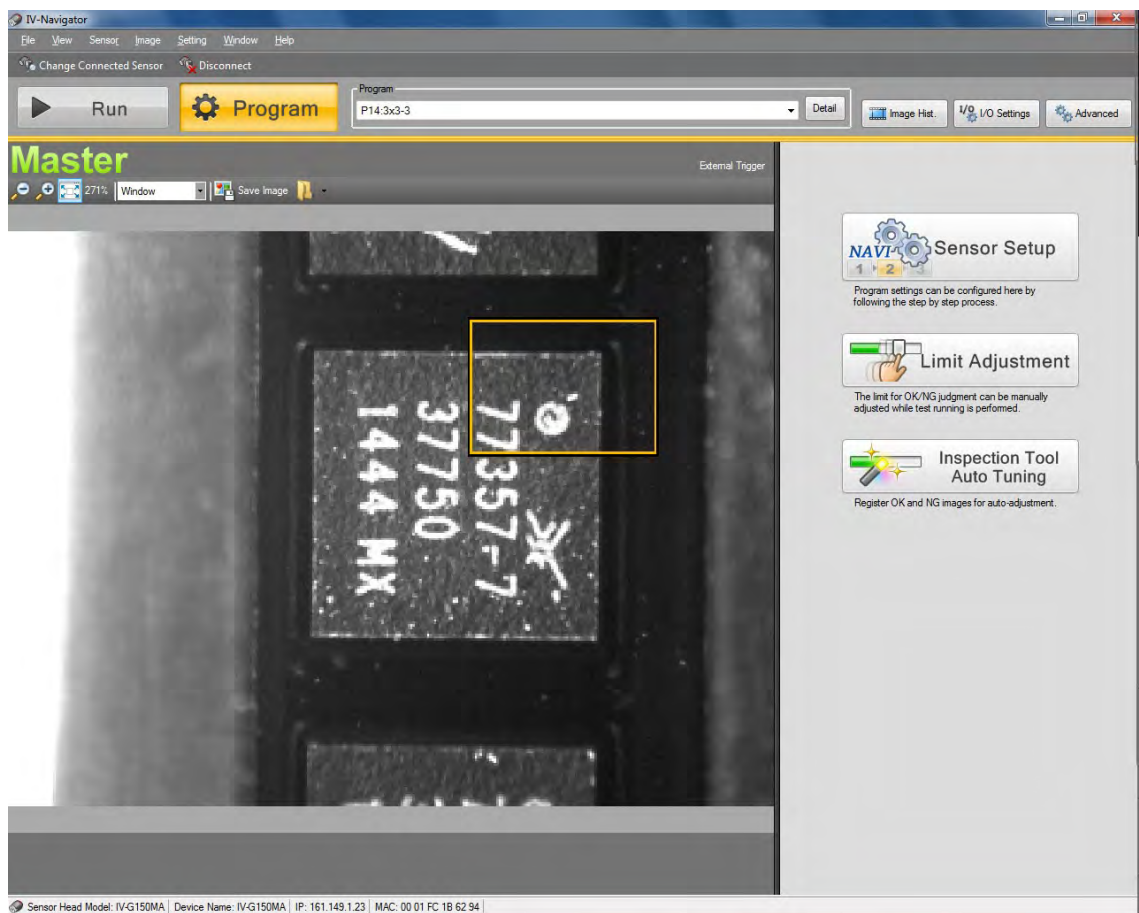


**Step 1:**  
**Vision**  
**Setup**  
**CONNECT**  
**MONITOR**

## Connect Keyence Monitor

Follow the steps below to connect the Keyence IV-G Camera to the Keyence Monitor.  
(See previous section if using the Keyence computer.)

1. Connect the Monitor's Ethernet cable to the Ethernet port on the back of the TM-403 **(A)**.

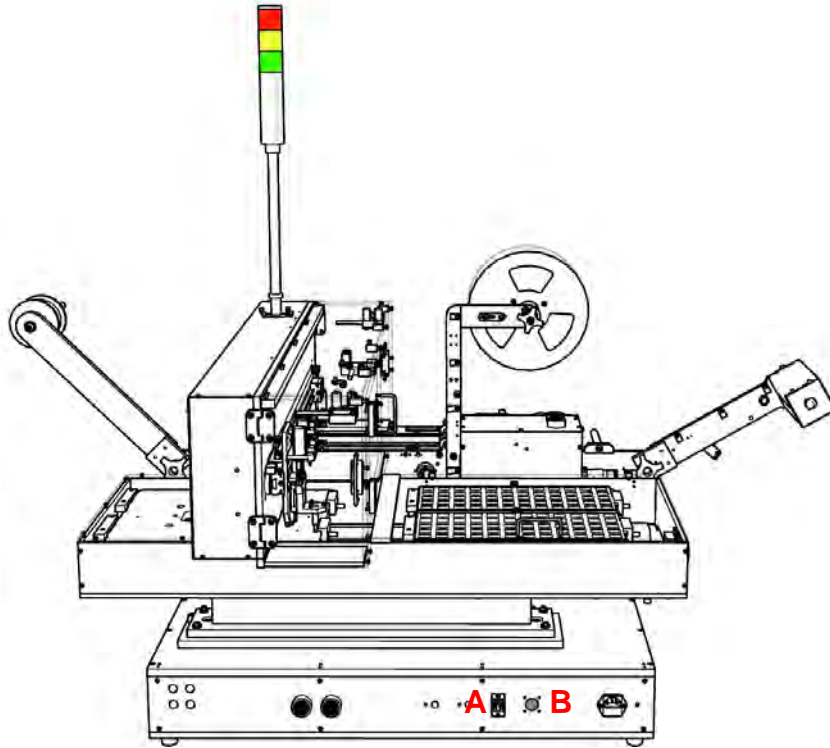


2. Connect the Monitor's power cable to the power connection on the back of the TM-403 **(B)**.
3. Turn the TM-403 **ON**. The Keyence Monitor will automatically start and open the Keyence software program.
4. Select **Direct Connection**, then press **Connect** to establish a connection between the Keyence Monitor and the Keyence Camera.

## Configure Inspection

**Note:** Significant portions of this documentation were provided by: *Keyence Corporation of America*. In order to use the Keyence IV Vision System, the camera must be configured and set to **Run Mode** in the Keyence HMI as well as being enabled on the TM-403 HMI. Please complete the following instructions to correctly configure the vision system.


### Configure Computer

1. Once the connection is complete, the *Run/Program* window will open. Select **Program**.

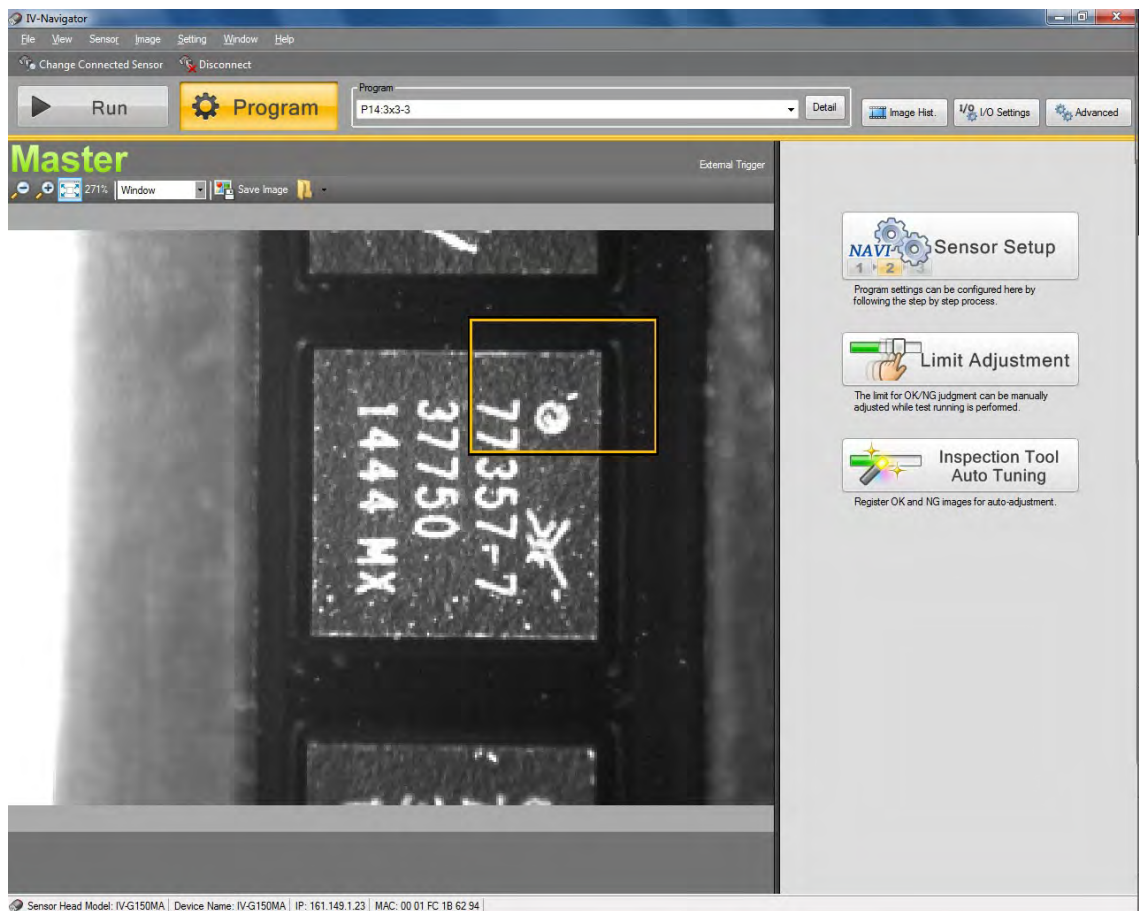

**Step 2:**  
**Vision**  
**Setup**  
**CONFIGURE**  
**COMPUTER**

2. Click **Trigger ON**, then center a part under the camera.

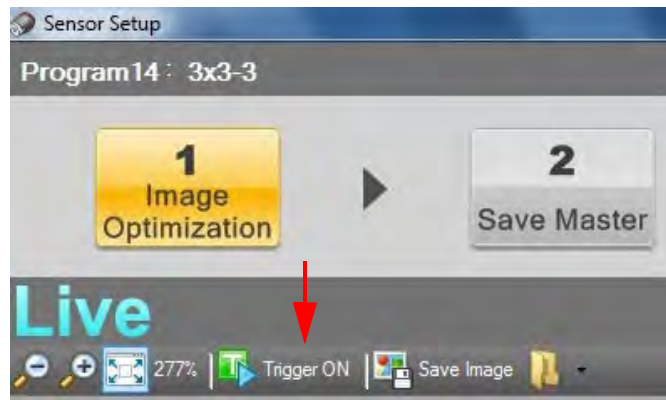

3. Select or create a program from the **Program** drop-down menu. A yellow *Selection Box* will appear over the part image.




4. Click **NAVI Sensor Setup**.




**Step 2:**  
**Vision**  
**Setup**  
**CONFIGURE**  
**COMPUTER**

5. The *Image Optimization* window will open.

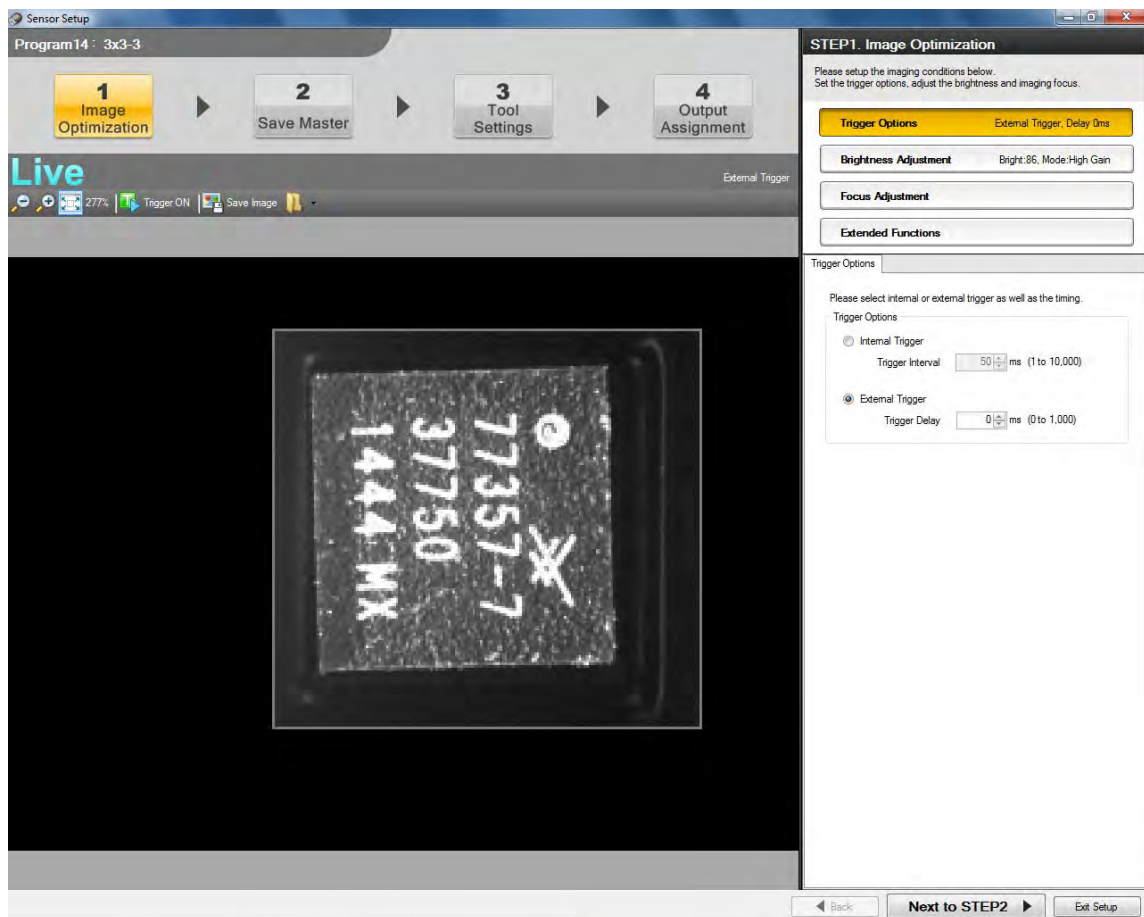


Select the **Trigger Options** button on the right.

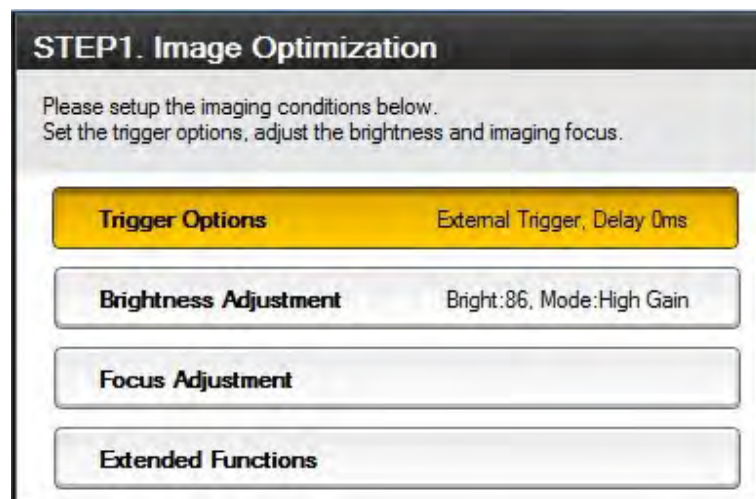


**Step 2:**  
**Vision**  
**Setup**  
**CONFIGURE**  
**COMPUTER**

Adjust *Trigger Options* to **External Trigger** with a **0ms Trigger Delay**.

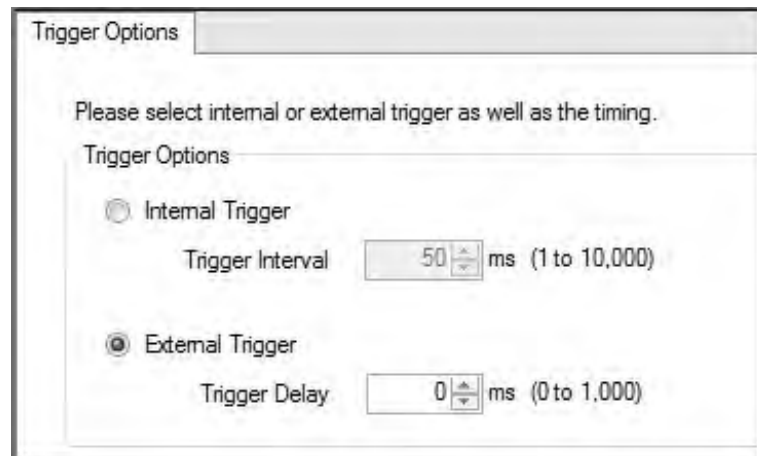

The screenshot shows a dialog box titled "Trigger Options". Inside, there is a text prompt: "Please select internal or external trigger as well as the timing." Below this, there are two radio button options. The first is "Internal Trigger" with a "Trigger Interval" of 50 ms (range 1 to 10,000). The second is "External Trigger" (which is selected) with a "Trigger Delay" of 0 ms (range 0 to 1,000).


6. Select the **Brightness Adjustment** button on the right

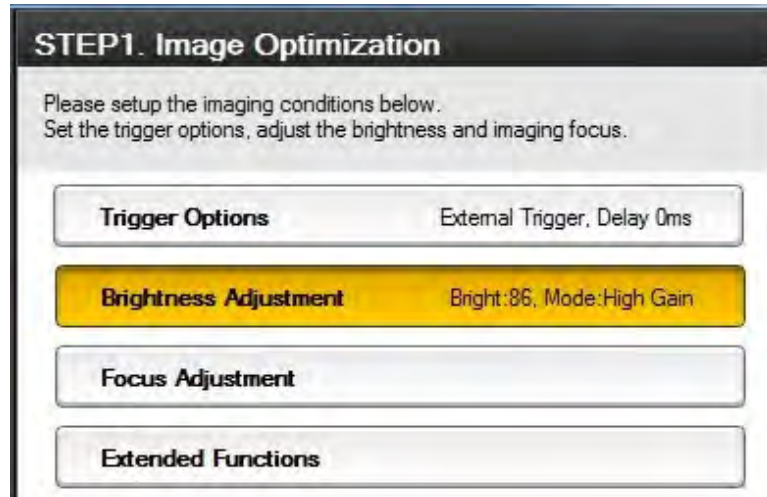


The screenshot shows a dialog box titled "STEP1. Image Optimization". It contains a text prompt: "Please setup the imaging conditions below. Set the trigger options, adjust the brightness and imaging focus." Below the prompt are four buttons. The first button is "Trigger Options" with the text "External Trigger, Delay 0ms". The second button is "Brightness Adjustment" (highlighted in yellow) with the text "Bright:86, Mode:High Gain". The third button is "Focus Adjustment". The fourth button is "Extended Functions".

Set the *Imaging Mode* to **High Gain**, then click the **Automatic Brightness Adjustment** button. Adjust the *Exposure Time* as needed to achieve the best contrast between the laser mark and the part.

**Step 2:**  
**Vision**  
**Setup**  
**CONFIGURE**  
**COMPUTER**

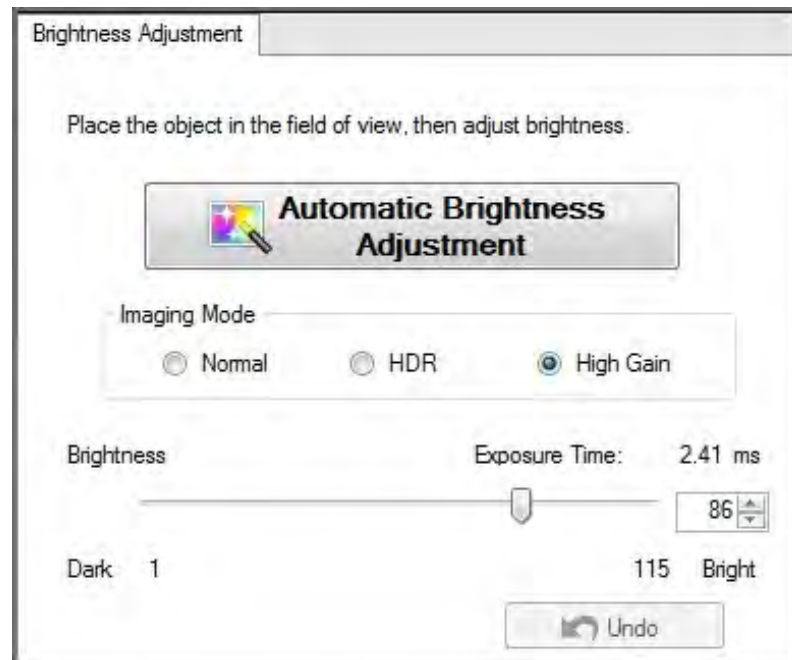


7. Select the **Focus Adjustment** button on the right.

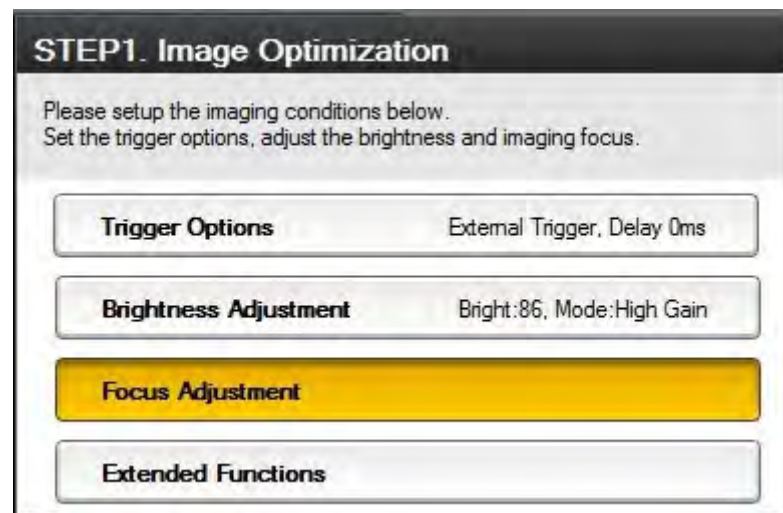


Click the **Automatic Focus Adjustment** button. One or more yellow dots may appear above the **Undo** button, representing the best focus point(s). Click on the yellow dot(s) to jump to the associated focus point and select the best one. Adjust *Focus Position* as needed using the plus/minus buttons.

**Step 2:**  
**Vision**  
**Setup**  
**CONFIGURE**  
**COMPUTER**

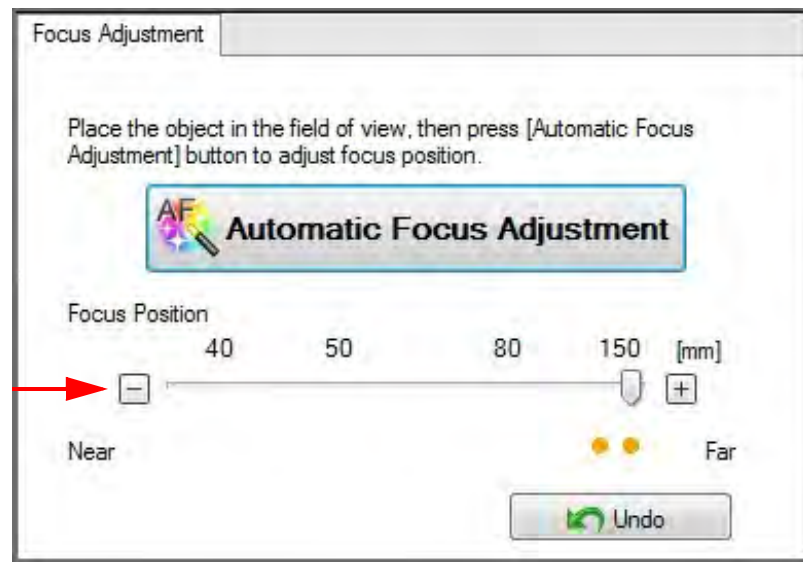


8. Select the **Extended Functions** button on the right.

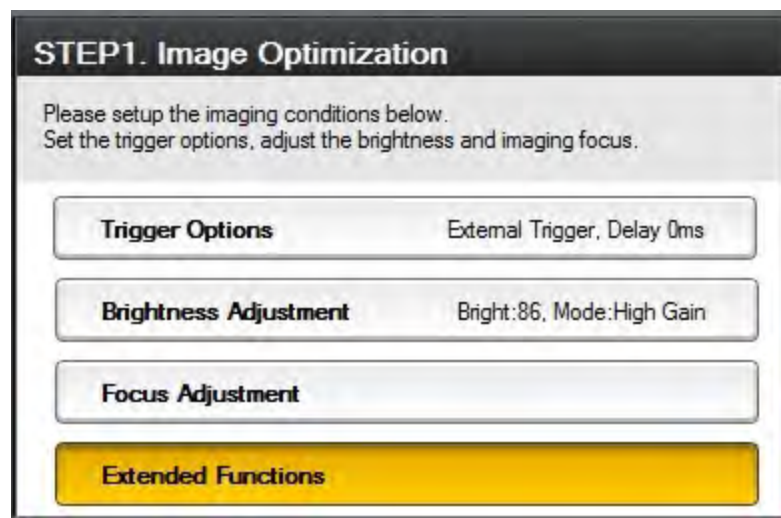


Click on the *Imaging Area* tab (not shown) and adjust the selection box so it captures the minimum area needed to achieve the desired inspection.

**Step 2:**  
**Vision**  
**Setup**  
**CONFIGURE**  
**COMPUTER**

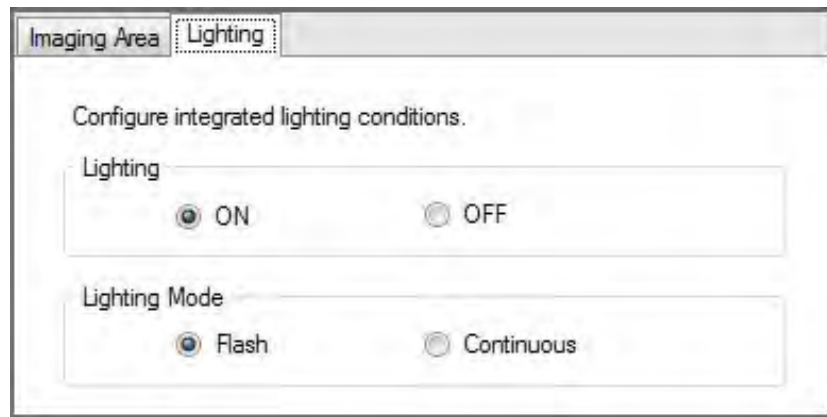


Click on the *Lighting* tab and select **ON** and **Flash**. Then click the **Next to STEP2** button which is located in the bottom right corner of the window.

9. The *Save Master* window will open.

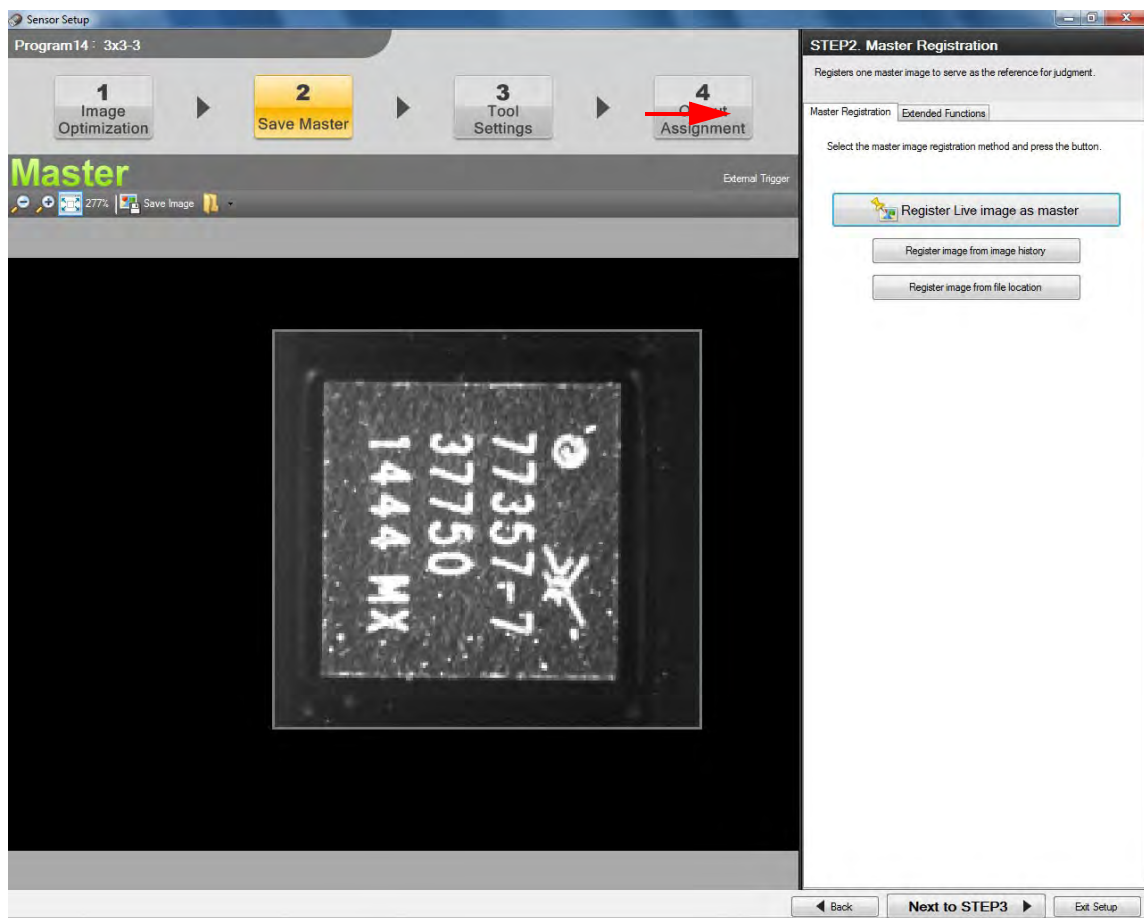

**Step 2:**  
**Vision**  
**Setup**  
**CONFIGURE**  
**COMPUTER**

Select **Register Live image as master**.

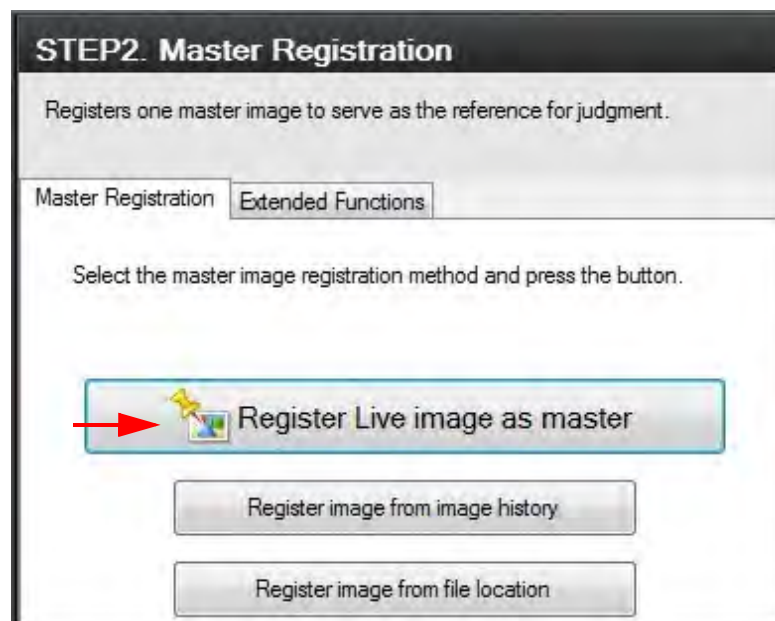

Select **Register the image**.




Once the image has been registered, click **OK**. Then click **Next to STEP3**.




**Step 2:**  
**Vision**  
**Setup**  
**CONFIGURE**  
**COMPUTER**

10. The *Tool Settings* window will open.

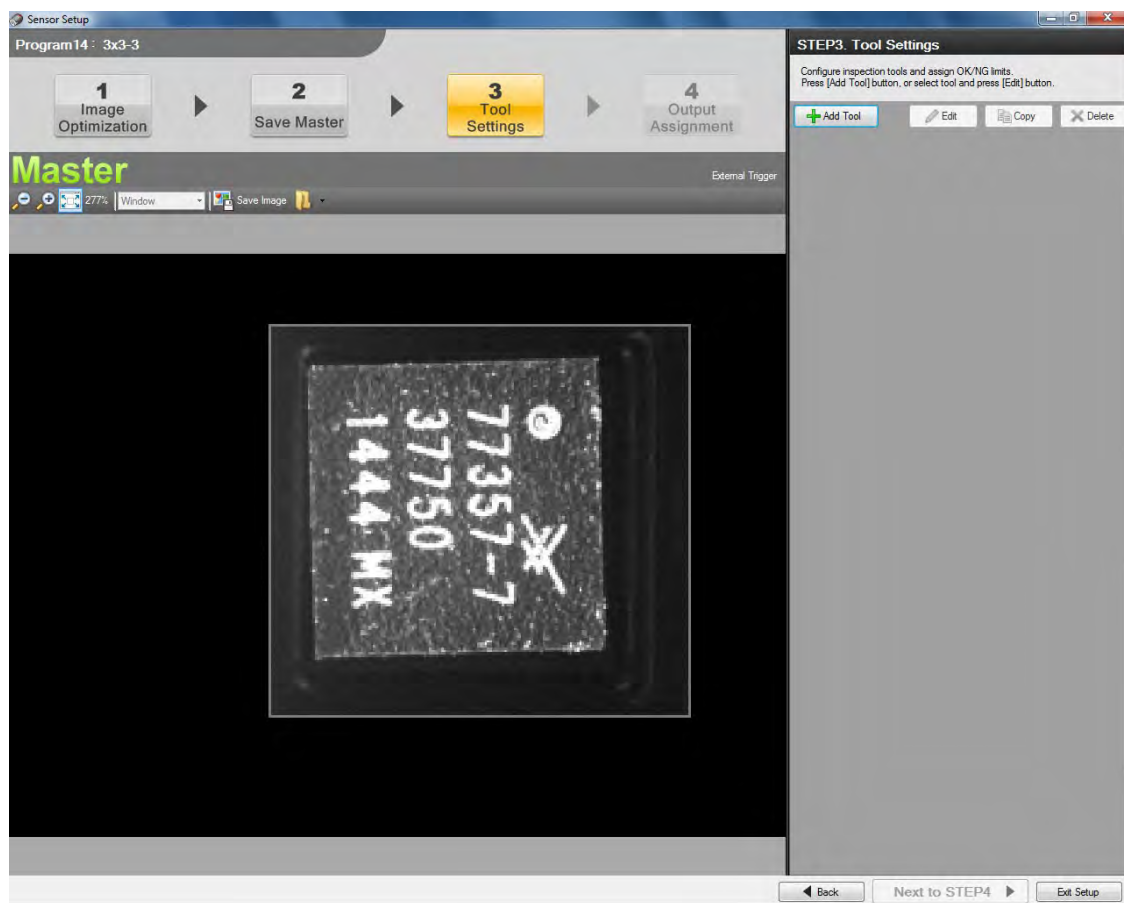


Select **Add Tool**.

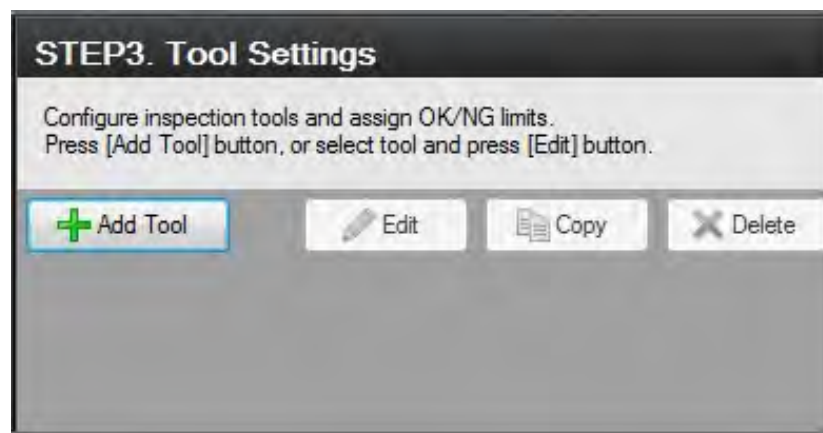


**Step 2:**  
**Vision**  
**Setup**  
**CONFIGURE**  
**COMPUTER**

Select the **Outline** tool, then click **OK**.

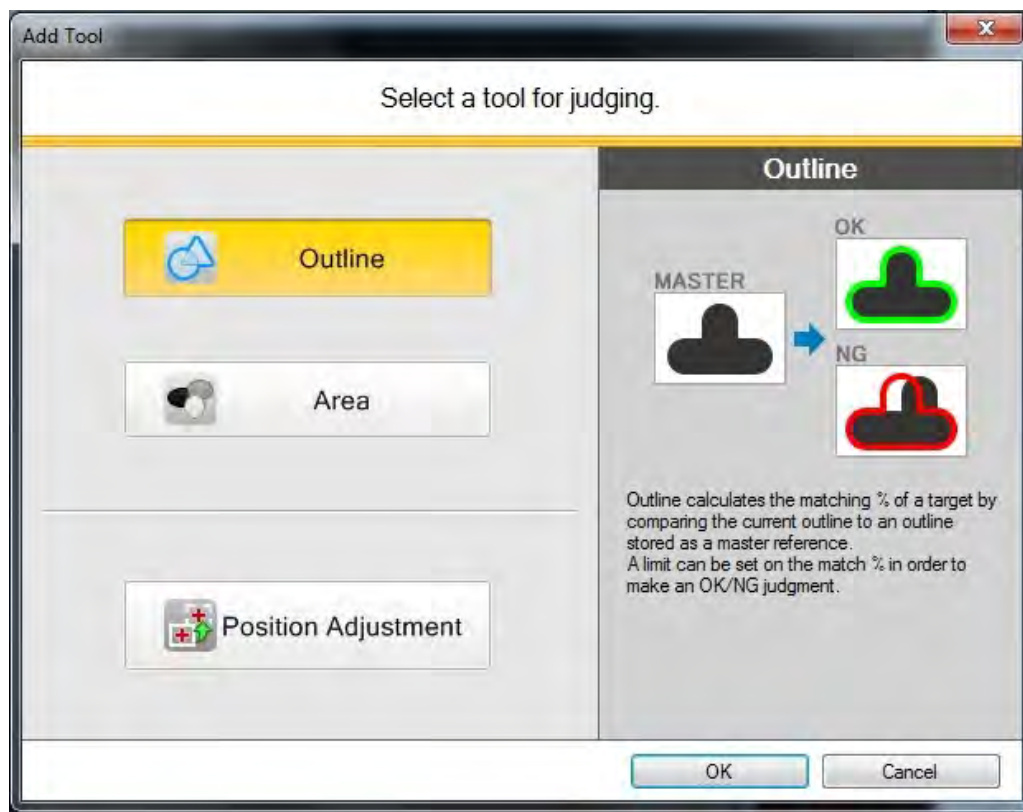

A green outline will now appear around the selected mark. Click **OK**.

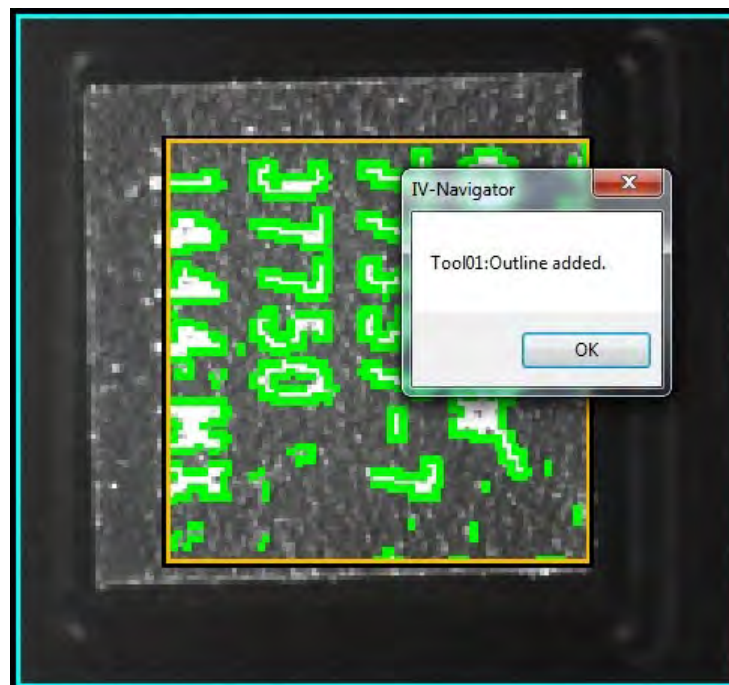

**Step 2:**  
**Vision**  
**Setup**  
**CONFIGURE**  
**COMPUTER**

The *Tool Settings Options* will now appear as below.

### STEP3. Tool Settings

Configure inspection tools and assign OK/NG limits.  
Press [Add Tool] button, or select tool and press [Edit] button.

**01:Outline**

Settings

Extended Functions

Edit Window

Select the window shape and search region.

Window Shape

☒ Rect ☐ Circle

Search Region

☒ Entire ☐ Partial

Angle Reset

Fine Tune Outline

Adjust extraction sensitivity and remove outline detail.

Sensitivity

Normal Sensitivity

Remove Outline

Limit Adjustment

Please adjust the limit of matching rate.

Match

-

0

50

70


100

+

Live Adjustment

**Step 2:**  
**Vision**  
**Setup**  
**CONFIGURE**  
**COMPUTER**

Adjust the yellow *Selection Box* so it surrounds the selected mark.

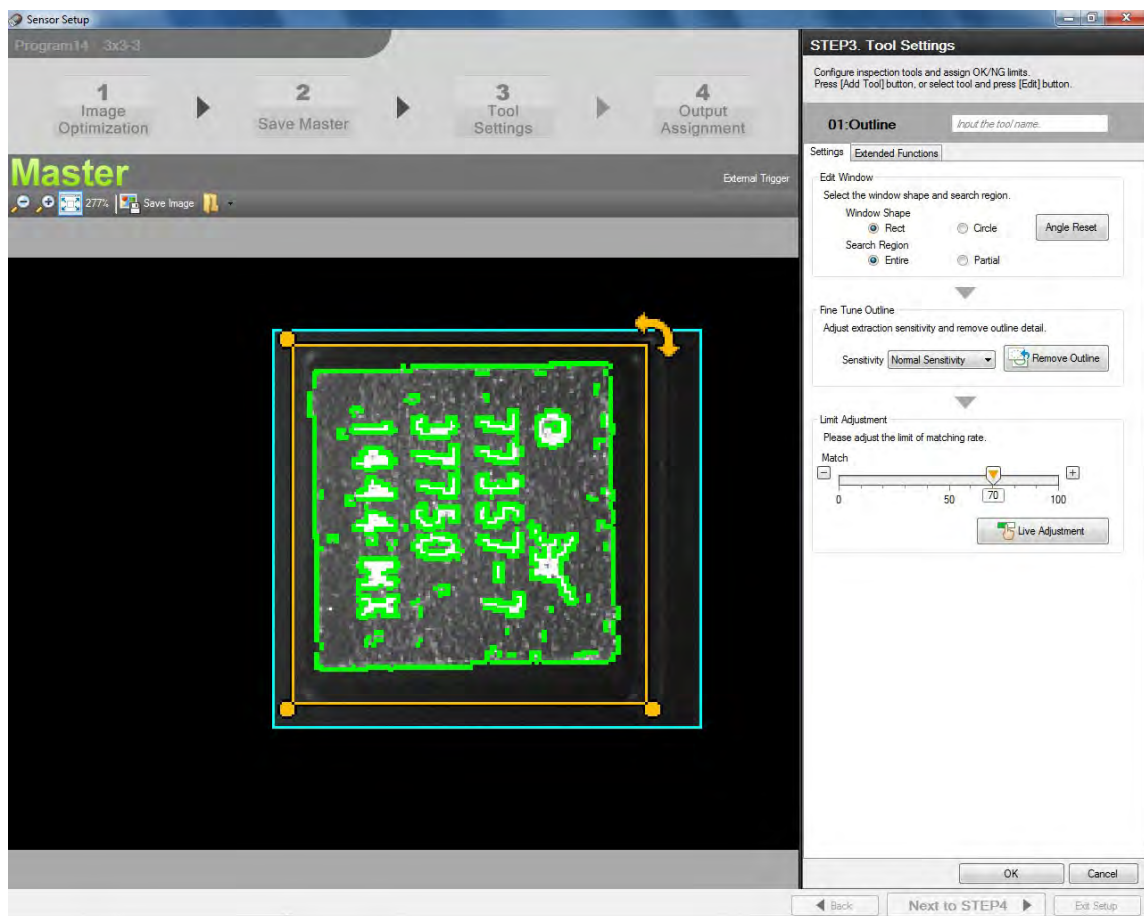


In the *Fine Tune Outline* section, click the **Remove Outline** button.




**Step 2:**  
**Vision**  
**Setup**  
**CONFIGURE**  
**COMPUTER**

The *Eraser Settings* window will open.

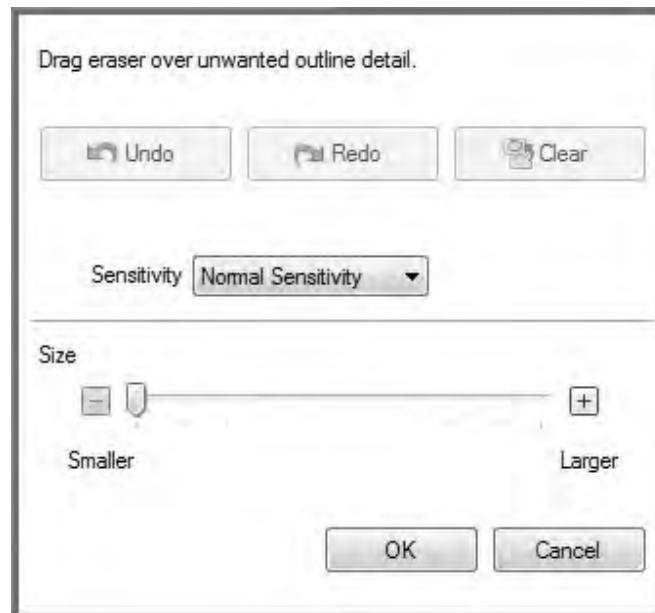


The *Eraser* appears as a white square on the image. Adjust eraser size as needed, then click and drag it over any unwanted data that is outlined in green on the image.

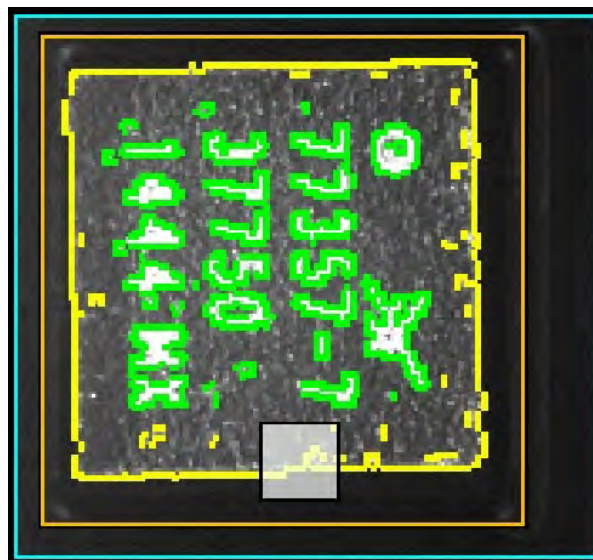


Reduce *Eraser* size to remove any smaller green spots of unnecessary data. Click **OK** to finalize edit.


Step 2:  
Vision  
Setup  
CONFIGURE  
COMPUTER

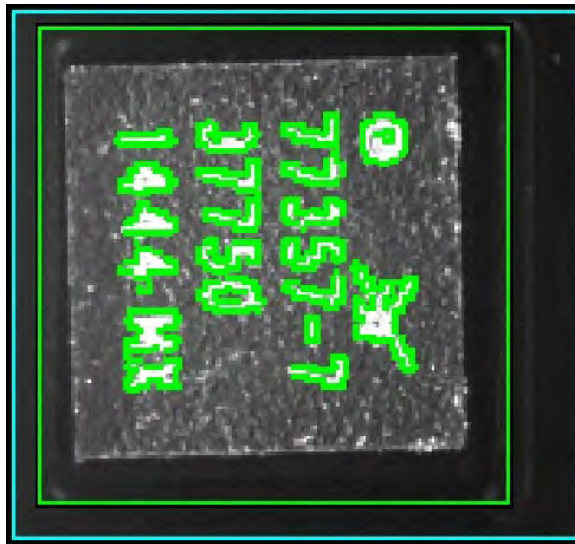

Click **Live Adjustment** and the sensor will continuously take measurements.

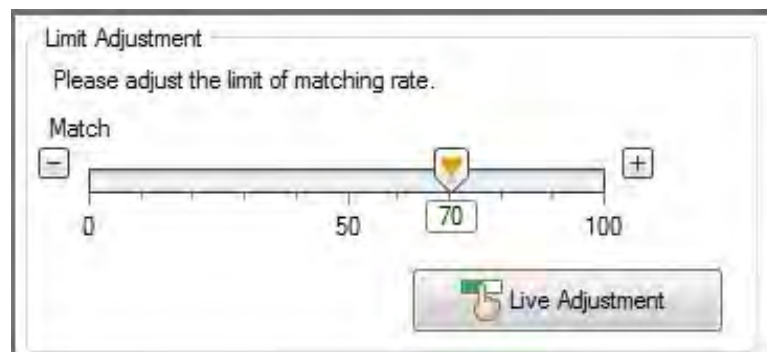

Adjust the threshold to yield the highest difference between good and bad parts, then click **OK**.

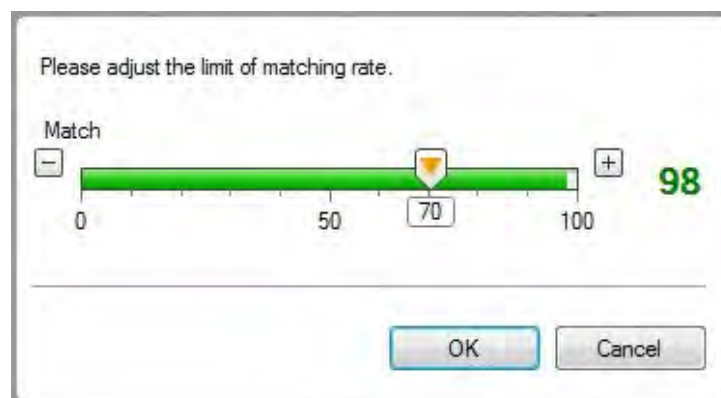

**Step 2:**  
**Vision**  
**Setup**  
**CONFIGURE**  
**COMPUTER**


11. The *Output Assignment* window will open. Set up the Outputs as shown below.



- Set *OUT1* to **Total Status**.
- Set *OUT2* to **Tot.StatusNG**.
- Set *OUT3* to **Busy**.
- Set *OUT4* - *OUT8* to **OFF**.
- Set *Trigger Error Output* to **Disable**.

**Step 2:**  
**Vision**  
**Setup**  
**CONFIGURE**  
**COMPUTER**

12. Click **Complete** to return to the *Run/Program* window. Select **Run**.

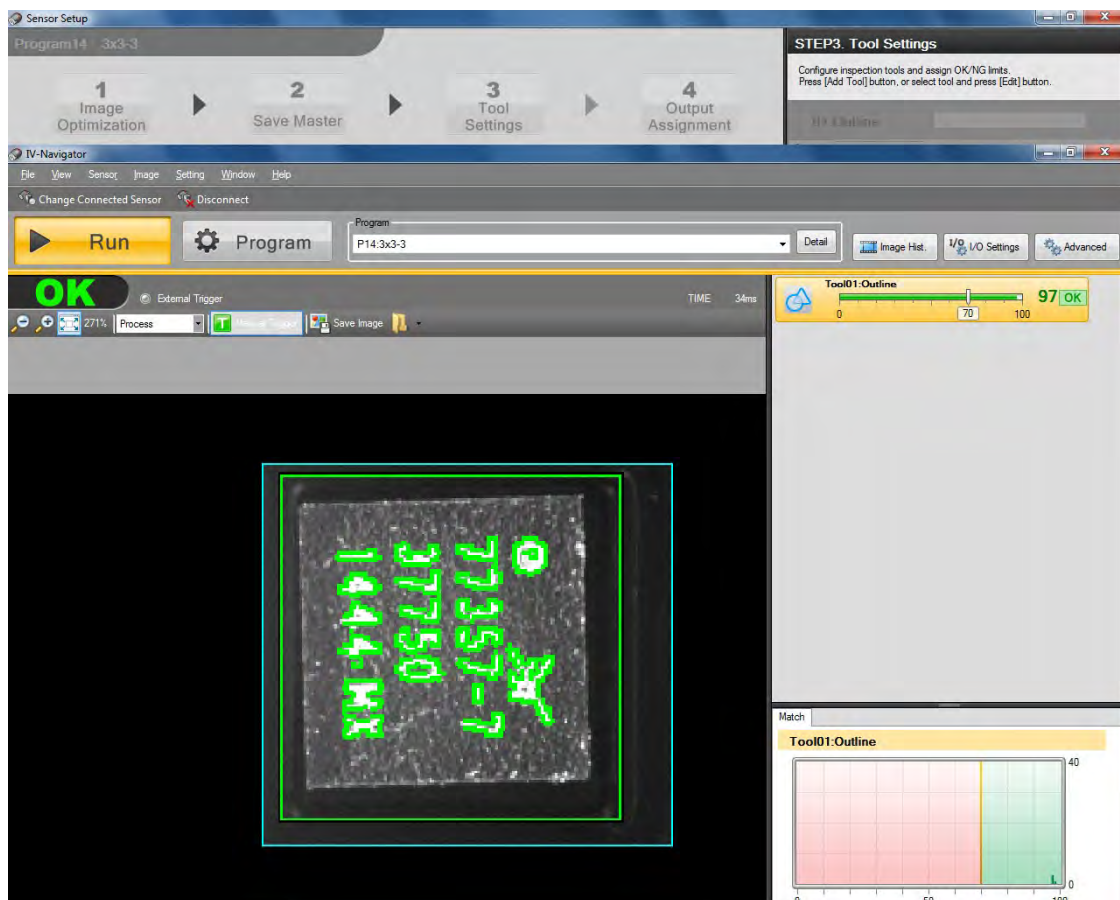

13. Click the **Manual Trigger** button which is located under the **Program** button to test the inspection criteria.




The test results will appear on the right side of the window.




**Step 2:**  
**Vision**  
**Setup**  
**CONFIGURE**  
**COMPUTER**

A *Statistics Graph* of all test results will appear in the lower right corner.

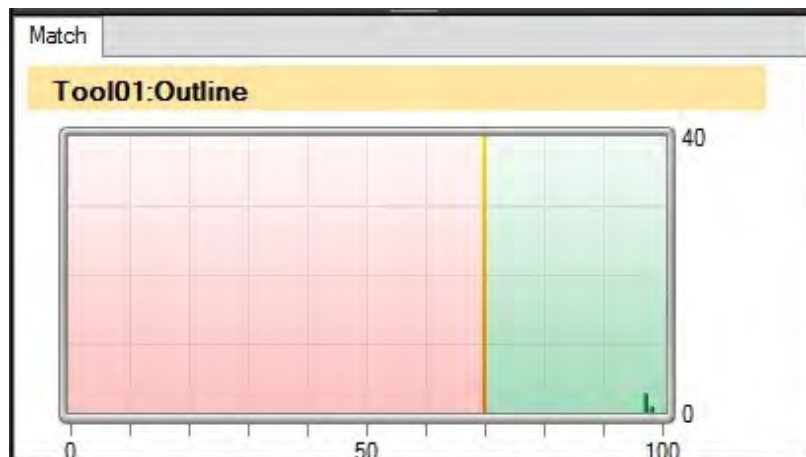

14. On the TM-403 HMI, open the *Taper Tab*. Press the right **Arrow** button to advance to the second *Taper* screen.

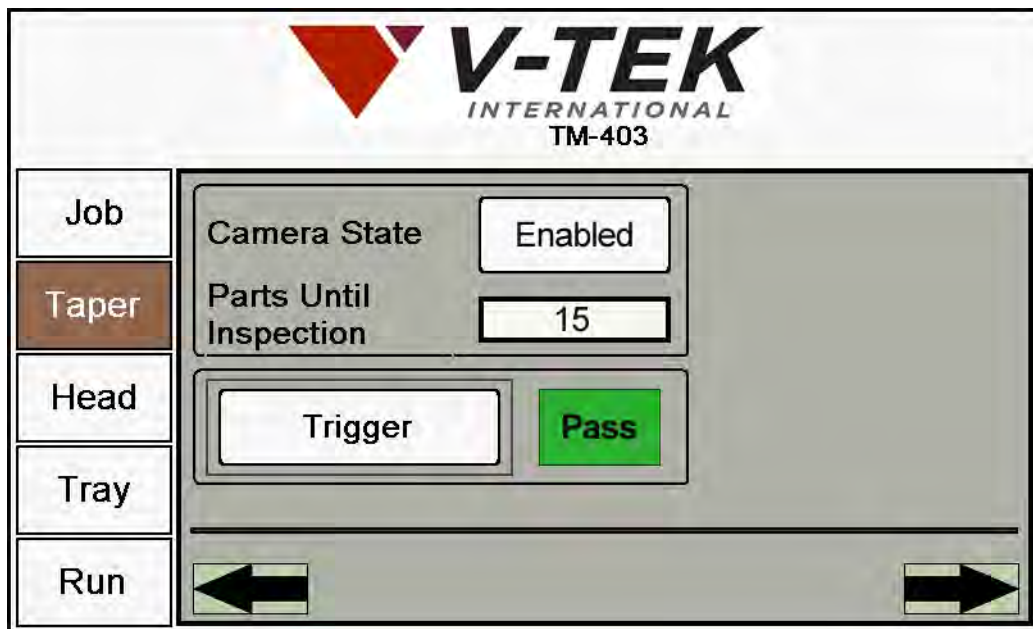

Press **Trigger** to manually trigger an inspection of the part under the camera. The green **PASS** message should appear. Test several good parts to ensure TM-403 correctly and consistently passes good parts.

**Step 2:**  
**Vision**  
**Setup**  
**CONFIGURE**  
**COMPUTER**


15. Next trigger inspections with parts which are incorrectly oriented, badly marked or with an empty pocket to ensure that they generate a red **FAIL** message.

The screenshot shows the V-TEK INTERNATIONAL TM-403 configuration screen. On the left is a vertical sidebar with five tabs: 'Job', 'Taper' (which is highlighted in brown), 'Head', 'Tray', and 'Run'. The main panel on the right contains the following elements: at the top, the 'V-TEK INTERNATIONAL TM-403' logo; below it, a 'Camera State' label next to a button labeled 'Enabled'; then a 'Parts Until Inspection' label next to a text box containing the number '15'; then a 'Trigger' button next to a red button labeled 'Fail'; and at the bottom, two large black arrow buttons pointing left and right.


The TM-403 is now ready for operation. Select the *Run Tab* to run the job.

## Step 2: Vision Setup

### CONFIGURE Monitor Display: Menu OFF

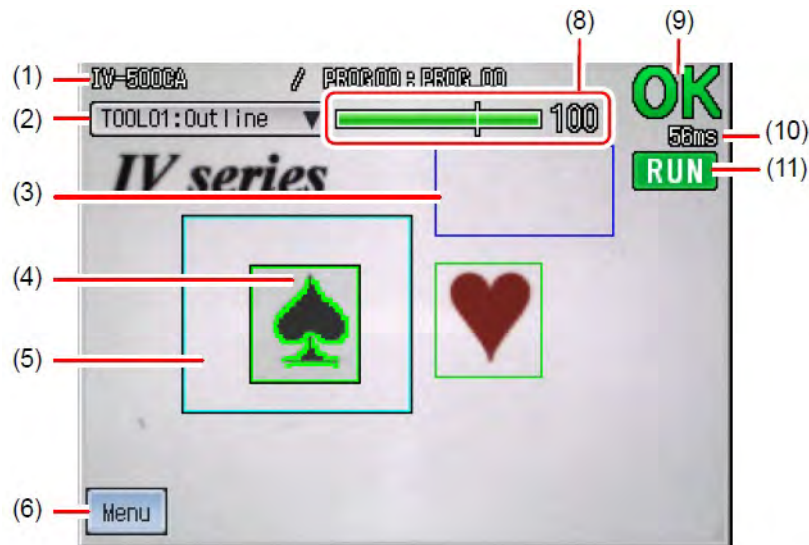


1. **Title:** Displays the device name, the program number and the program name.
2. **Tool name:** Displays the tool number and the tool name of the tool selected. The selected tool can be switched.
3. **Brightness correction range:** When Brightness correction is set, the range will be displayed with a blue frame.
4. **Tool window:** Displays the tool window which has been set.
5. **Search Window:** If the search window of the tool is set, the range will be displayed with a light blue frame.
6. **MENU/OFF button:** Changes the screen from Menu ON to Menu OFF.
7. **Status gauge:** Displays the result (OK/NG) of the tool selected.

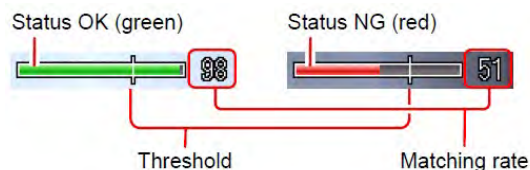

9. **OK/NG display:** Displays the total status result.
10. **Processing time:** Displays the time from receiving a trigger until the result is output.
11. **Image Type display:** Displays the situation of the screen. Run mode or Test mode.

**Step 2:**  
**Vision**  
**Setup**  
**CONFIGURE**  
**MONITOR**

**Monitor Display: Menu ON**

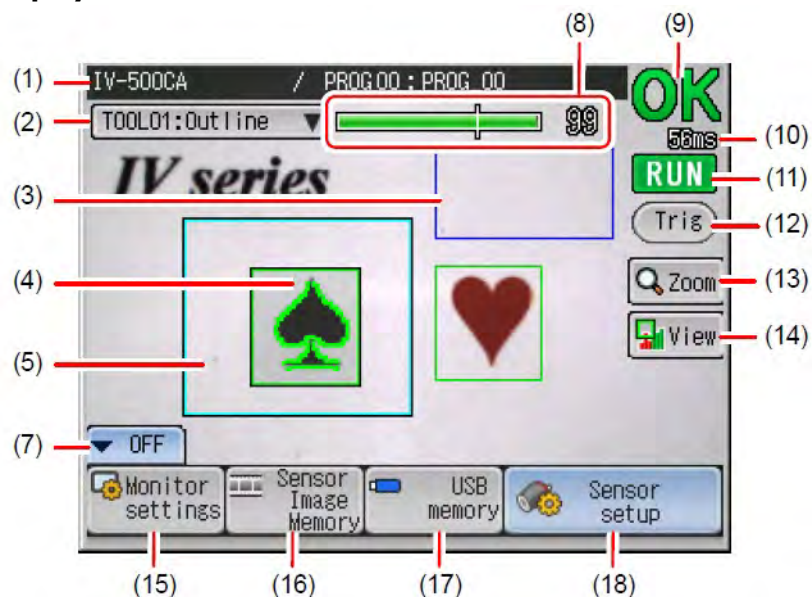


1. **Title:** Displays the device name, the program number and the program name.
2. **Tool name:** Displays the tool number and the tool name of the tool selected. The selected tool can be switched.
3. **Brightness correction range:** When Brightness correction is set, the range will be displayed with a blue frame.
4. **Tool window:** Displays the tool window which has been set.
5. **Search Window:** If the search window of the tool is set, the range is displayed with a light blue frame.
7. **MENU/OFF button:** Changes the screen from Menu ON to Menu OFF.
8. **Status gauge:** Displays the result (OK/NG) of the tool selected.
9. **OK/NG display:** Displays the total status result.
10. **Processing time:** Displays the time from receiving a trigger until the result is output.
11. **Image Type display:** Displays the situation of the screen. Run mode or Test mode.
12. **Trig button:** Displayed when the external trigger is set. When this button is touched, a trigger signal is sent to the sensor.
13. **Zoom button:** Changes the display to full screen mode and allows image enlargement.
14. **View button:** Displays the menu to select how to show the tools and the analyze screen.
15. **Monitor settings button:** Displays the monitor screen.


- Step 2:**  
**Vision**  
**Setup**  
**CONFIGURE MONITOR**
16. **Sensor Image Memory button:** Displays the Sensor Image Memory screen.
  17. **USB memory button:** Displays the USB memory screen.
  18. **Sensor setup button:** Stops running mode and displays the Sensor setup menu screen.

## Program Job Start Navigator

1. Touch the **Sensor setup** button.

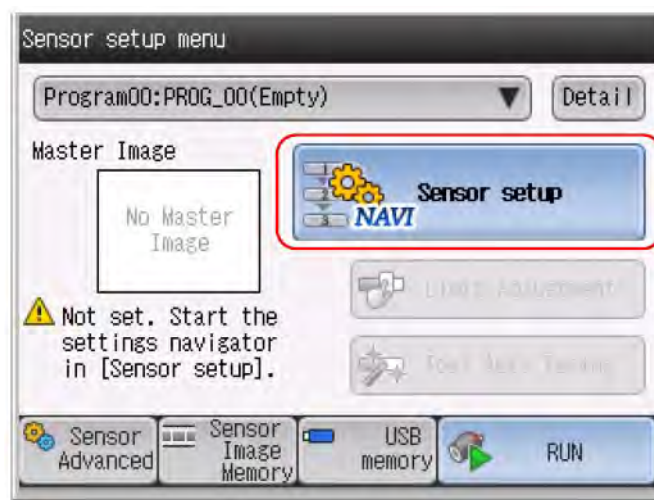

2. Touch the **Start** button.

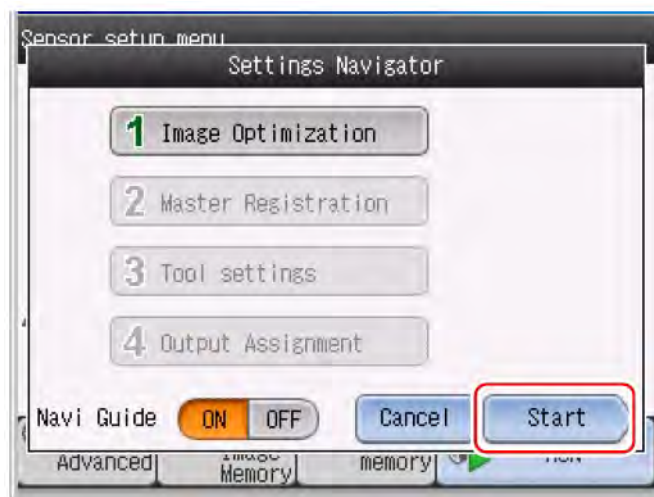


**Step 2: Setup Image Optimization****Vision****Setup****CONFIGURE  
MONITOR**

1. Touch **Trigger Options**.




2. Select the **External** Trigger type. Touch **OK**.

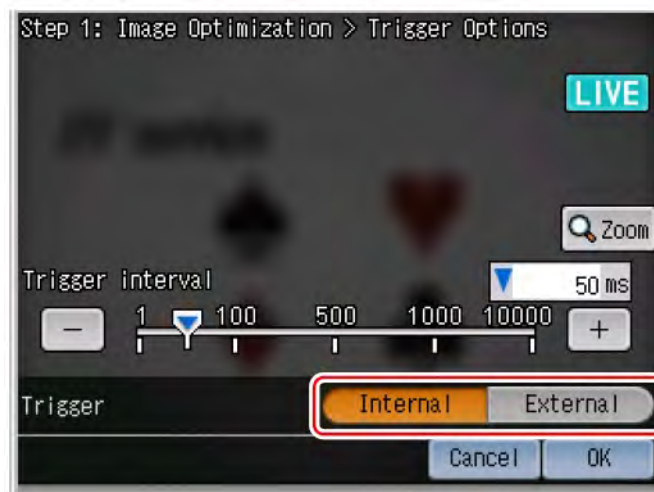

**Step 2:**  
**Vision**  
**Setup**  
**CONFIGURE**  
**MONITOR**

3. Touch **Auto Brightness Adjustment**. Touch **OK**.

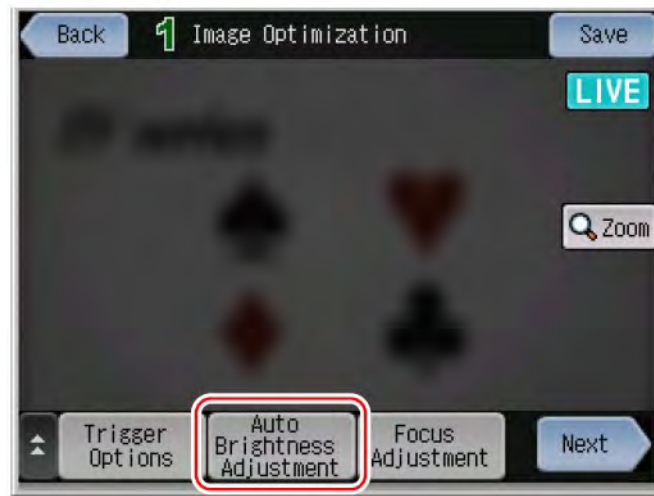

4. Touch **Focus Adjustment**. If *Auto* focusing is selected, the focus position is adjusted automatically. If *Manual* focusing is selected, the focus indicator will be displayed. Adjust focus as desired. Touch **OK**.



5. Touch **Next** to proceed to "STEP2".

**Step 2: Register Master Image****Vision****Setup****CONFIGURE  
MONITOR**

1. After setting the image optimization, press **Register Live Image as Master**.



2. Image the target and touch the **Trig** button.




3. Check the image displayed on the monitor and touch the **Register** button. Touch **OK**.
4. Touch **Next** to proceed to "STEP3".

**Step 2: Setup Outline Detection Tool****Vision****Setup****CONFIGURE  
MONITOR**


1. Touch the **Add Tool** button.



2. Select **Outline**.

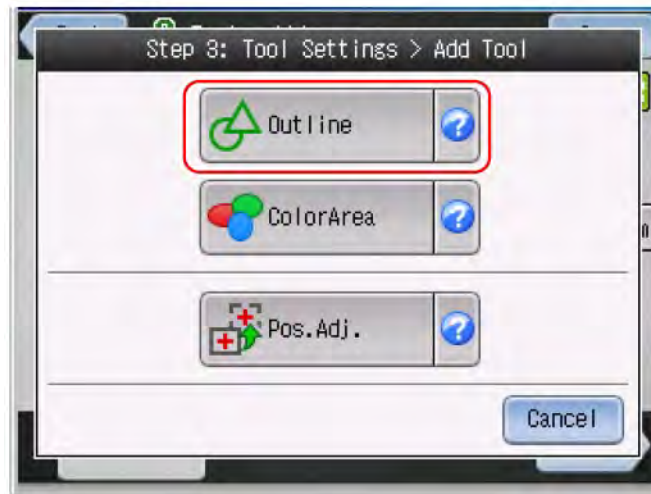


3. Touch **Edit Window**.

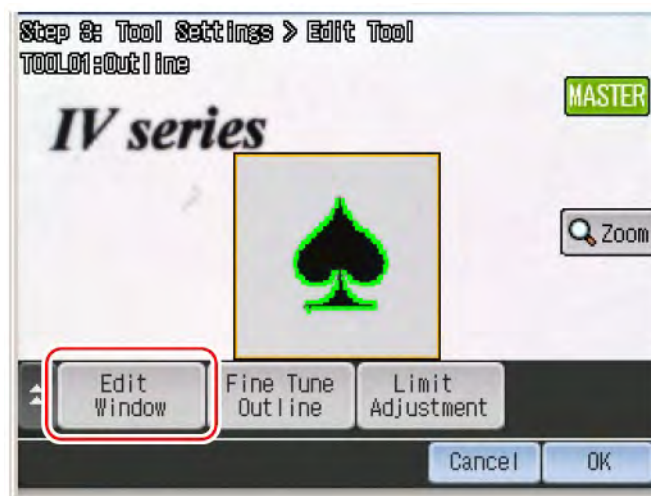

**Step 2:**  
**Vision**  
**Setup**  
**CONFIGURE**  
**MONITOR**

4. Set the position, size, and the angle of the tool window. The detected outline will be displayed in green. After the setting is completed, touch **OK**.

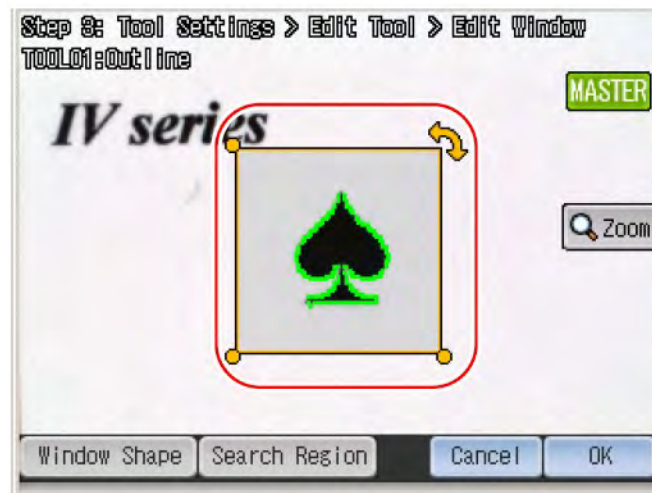


5. Touch the **Limit Adjustment** button.



**Step 2:**  
**Vision**  
**Setup**  
**CONFIGURE**  
**MONITOR**

6. Set the threshold to judge OK and NG.

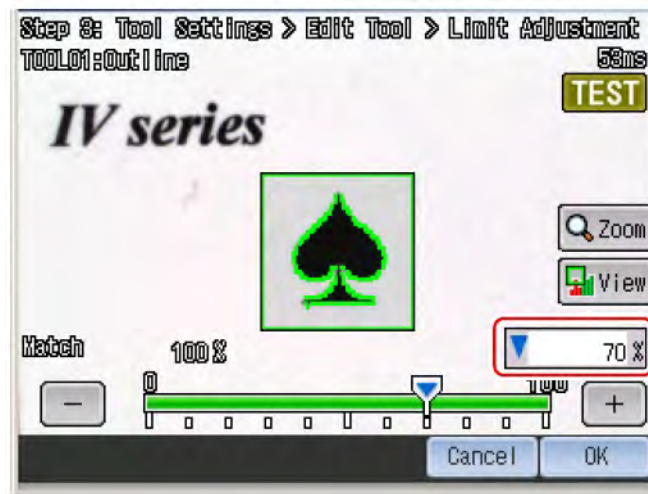


7. The display will return to the main screen for the Outline tool.
8. Touch **OK**, then touch **Next** to proceed to "STEP4".

### Setup Area Detection Tool

1. Touch the **Add Tool** button.



2. Select **Area**.

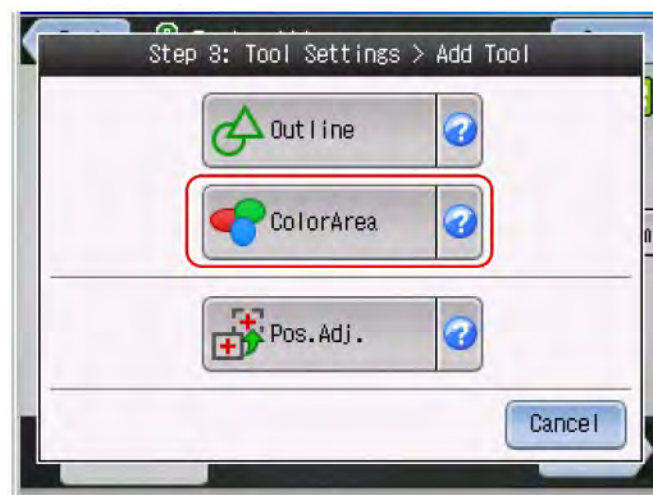

**Step 2:**  
**Vision**  
**Setup**  
**CONFIGURE**  
**MONITOR**

3. Touch **Edit Window** button.



4. Set the position, size, and the angle of the tool window. After the setting is completed, touch **OK**



**Step 2:**  
**Vision**  
**Setup**  
**CONFIGURE**  
**MONITOR**

5. Touch the **Brightness Extraction** button.




6. Touch the brightness area to be the reference of judgment for the Area tool, then touch **OK**.




**Step 2:**  
**Vision**  
**Setup**  
**CONFIGURE**  
**MONITOR**

7. Touch the **Limit Adjustment** button.

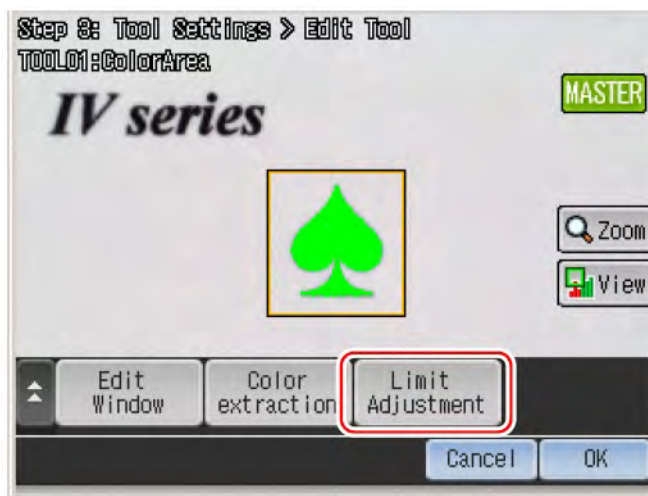


8. Set the threshold to judge OK and NG, then touch **OK**. The display will return to the main screen for the Color Area/Area tool.

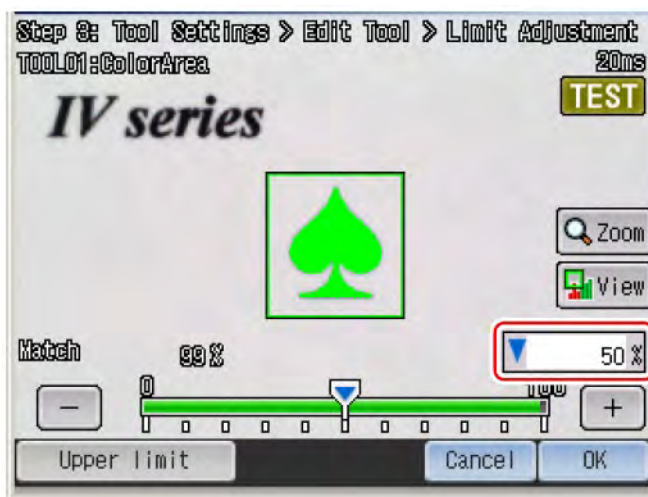


9. Touch **OK**, then touch **Next** to proceed to "STEP4".

**Step 2: Setup Position Adjust Detection Tool****Vision****Setup****CONFIGURE  
MONITOR**


1. Touch the **Add Tool** button.

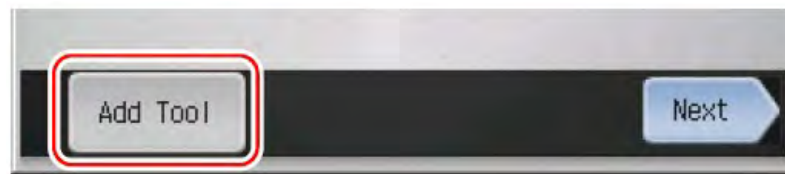

2. Touch the **Pos.Adj.** button.

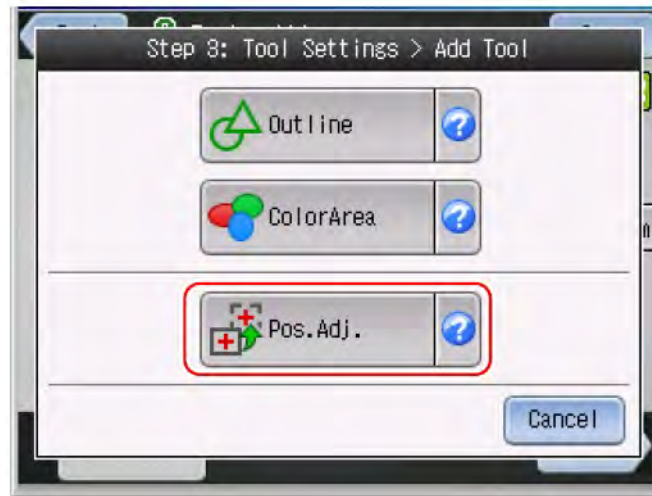

3. Touch the **Edit Window** button.

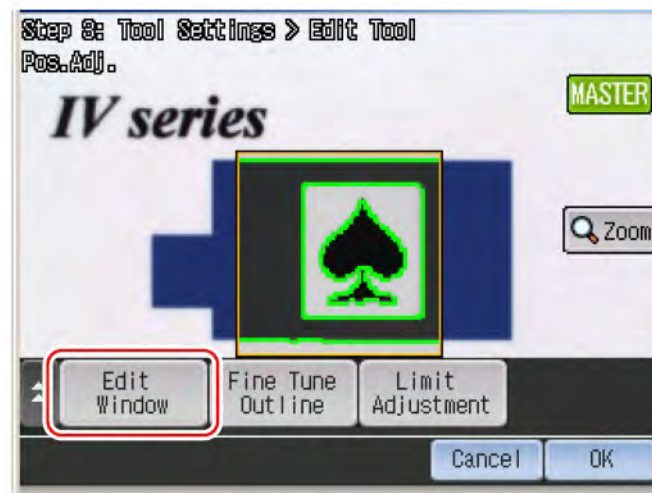


**Step 2:**  
**Vision**  
**Setup**  
**CONFIGURE**  
**MONITOR**

4. Set the position, size, and the angle of the tool window. The detected outline will be displayed in green. Touch **OK**.




5. Touch the **Limit Adjustment** button.

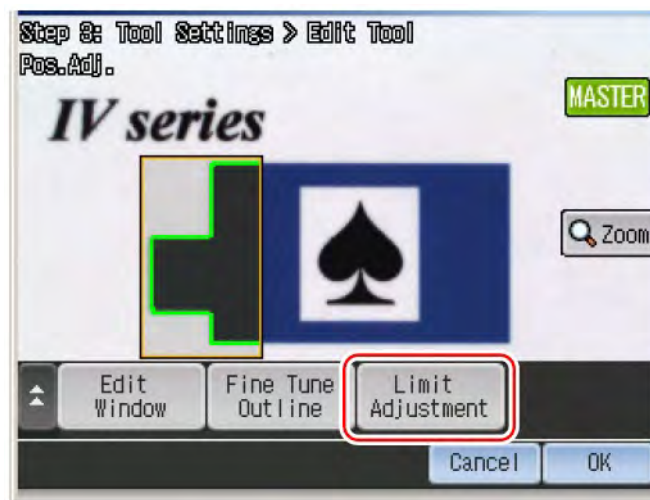

**Step 2:**  
**Vision**  
**Setup**  
**CONFIGURE**  
**MONITOR**


6. Set the threshold to judge OK and NG.

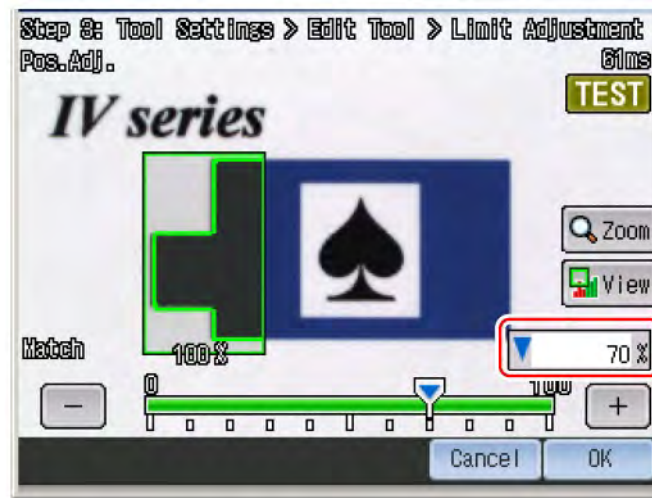


7. After the setting is completed, touch **OK**. The display will return to the main screen for Position Adjustment tool.
8. Touch **OK** again, then touch **Next** to proceed to "STEP4".

### Confirm I/O Settings


1. In the *Sensor Setup Menu*, touch **Sensor Advanced**.

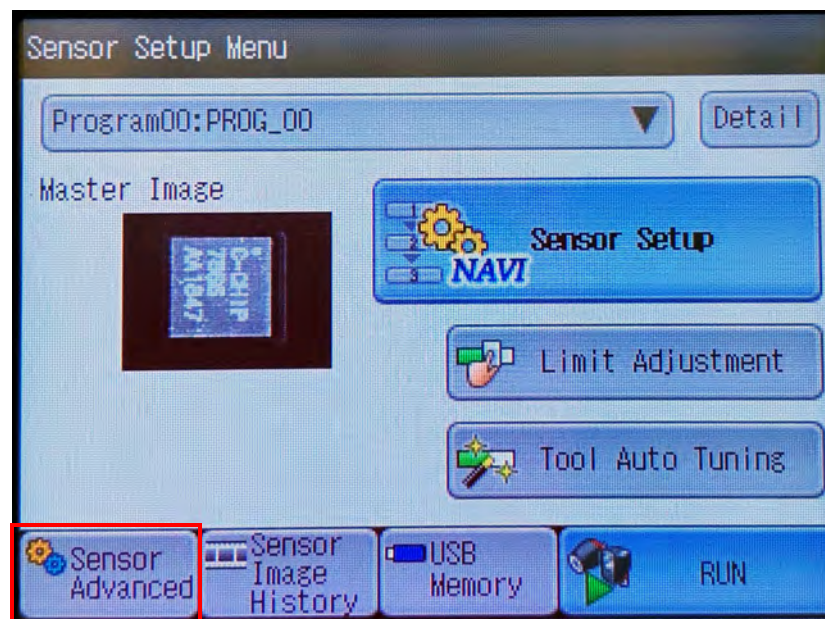

2. In the *Sensor Advanced* screen, touch **I/O Settings**.

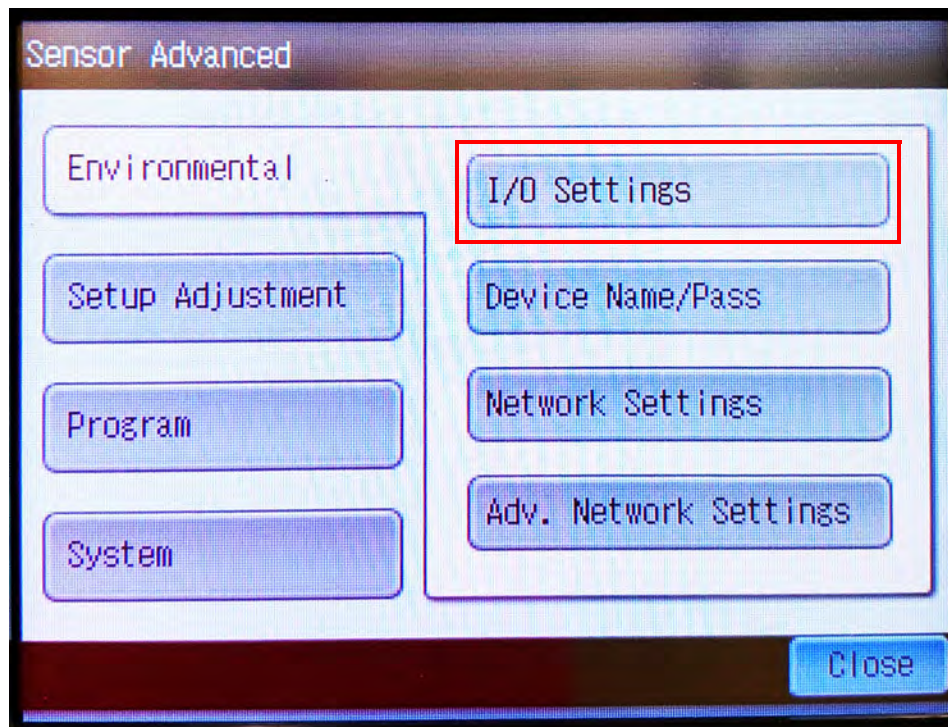


3. In the *I/O Settings* screen, ensure Polarity is set to **PNP**. **(A)**

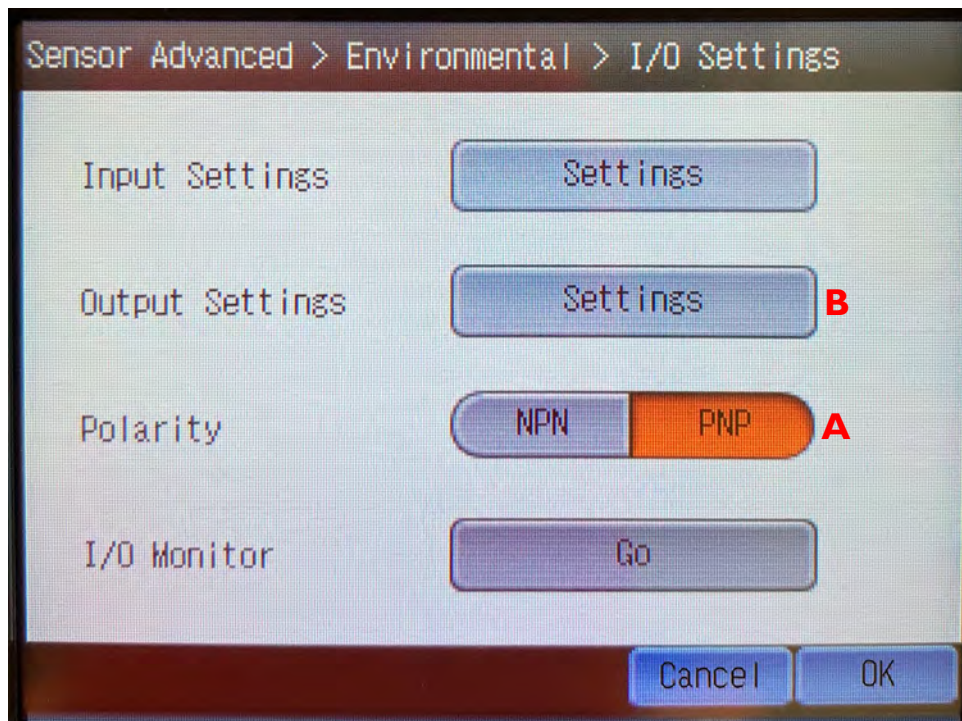


Next, touch the **Output Settings** button. **(B)**

4. In the *Output Settings* screen, touch the **Common Output Settings** button.

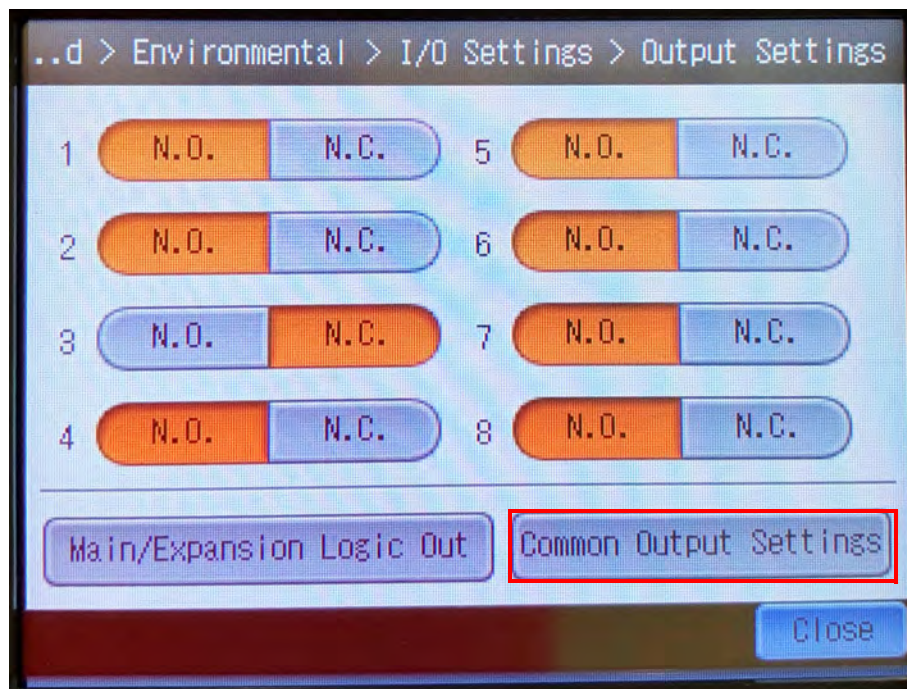


5. In the *Common Output Settings* screen, adjust settings as follows:

- **One-Shot ON Time** = 100 ms
- **ON-Delay Time** = 0 ms

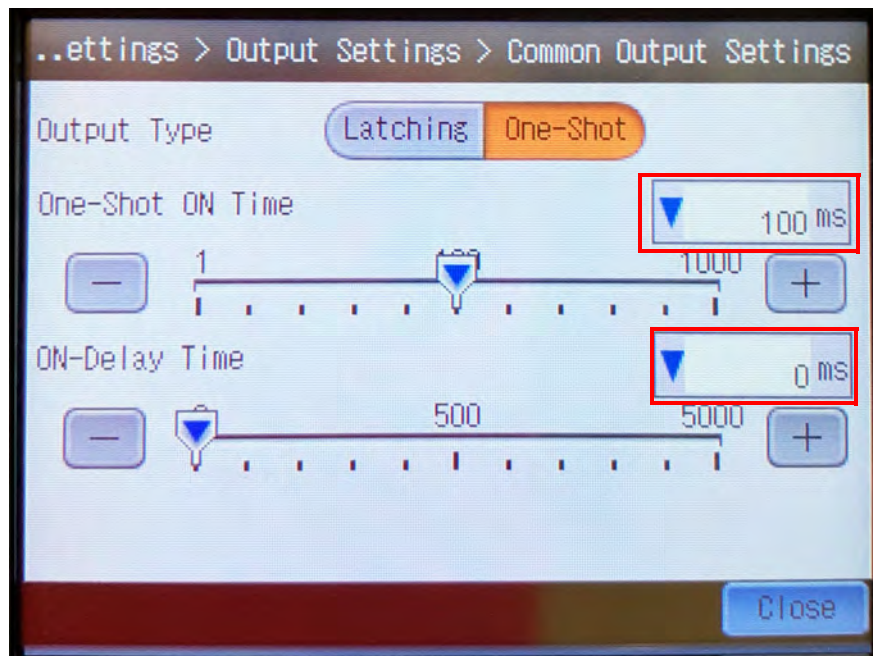

## Setup Output

1. Touch the output line to assign the output function.

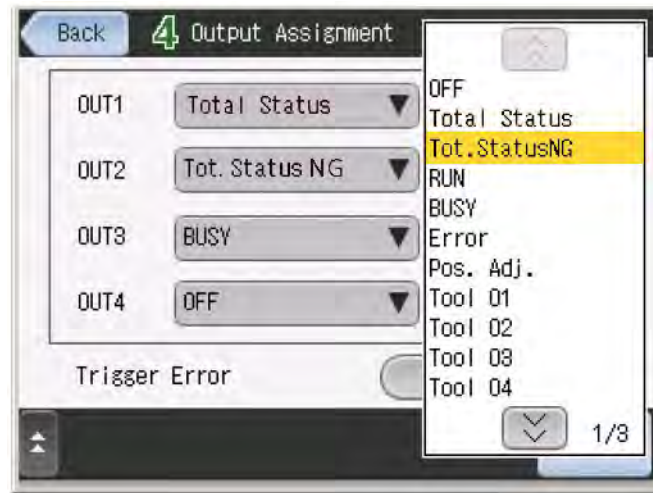


### Step 2: Vision Setup CONFIGURE MONITOR

Output function	Explanation
OFF	No output assigned
Total Status	When the total status result is OK, the output is ON.
Tot. Status NG	When the total status result is NG, the output is ON.
RUN	When the sensor is running with no system error, the output is ON.
BUSY	While the sensor cannot receive the trigger signal, the output is ON.
Error	When an error has occurred, the output is ON.
Pos. Adj.	When the position adjustment tool is OK, the output is ON.
Tool 1 to 16	When the result of the tool is OK, the output is ON.
Logic 1 to 4	When the result of the logic is OK, the output is ON.

Set the output functions as follows:

- Set **OUT1** = **Total Status**.
- Set **OUT2** = **Tot.StatusNG**.
- Set **OUT3** = **Busy**.
- Set **OUT4 - OUT8** = **OFF**.

- Set *Trigger Error Output* = **OFF**.
2. After the setting is completed, touch **Complete**, then touch **Yes**.

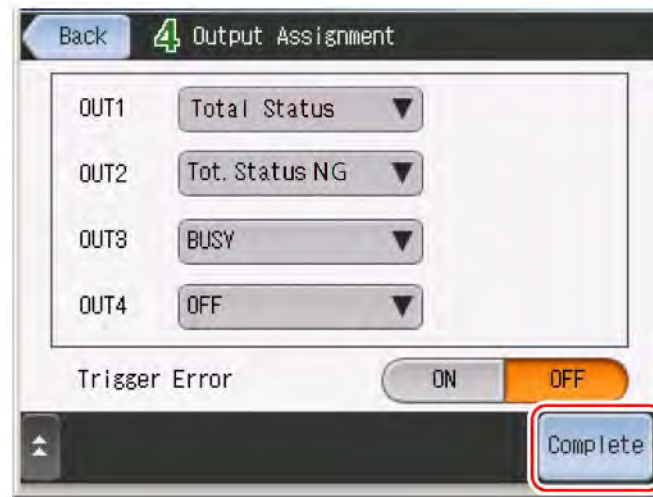

# Chapter 6: Operation

---

---

## Contents

<b>Quick Start: Running a Job</b>	<b>6-2</b>
<b>Preparing to Run a Pre-programmed Job</b>	<b>6-4</b>
Power up the System	6-4
Home Motors	6-4
Setup the Tray Feeder	6-6
Setup the Taper	6-8
Select Job	6-9
Setup the Pick Head	6-10
Setup Vision	6-11
Run the Job	6-12

---

**Quick  
Start**

## Quick Start: Running a Job

---

The following is an outline of the basic steps required to run a pre-programmed job. More detailed instructions follow in the next section of this chapter.



**Caution:** Users should always wear protective eye wear when operating or maintaining the TM-403.

1. **Power up.**
  - Power up the machine by turning on the *Main Power Switch*.
  - Press the **Reset** button.
2. **Home the motors.**
  - Open the *Run Tab* on the *HMI* and select **Home Motors**.
3. **Setup Tray Feeder.**
  - Load components.
4. **Setup Taper.**
  - Ensure sufficient carrier tape and cover tape are loaded to complete the job.
  - Load an empty take-up reel.
  - Run peel force test to verify seal.
5. **Setup the Pick Head.**
  - Ensure the correct nozzle is installed for the part that will be picked.
  - Observe the vacuum sensor, adjusting nozzle pressure as necessary.
  - Adjust Blow-off Pressure as needed to achieve proper part placement.
  - Close the enclosure doors.
6. **Select Job.**
  - Open the *Job Tab* on the *HMI*. Select the desired job from the *Job Library* and press Open to open the selected job in the *Run Tab*.

**Quick  
Start****7. Setup Vision.**

- Open the *Taper Tab* on the HMI and advance to the second screen.
- Ensure camera is enabled. Configure inspection as needed.

**Note:** To configure vision inspection, see *Chapter 4: Setup*.

**8. Run the Job.**

- On the HMI, select the *Run Tab* then press **Run**.
- Load/unload parts and reels as needed.

**Caution!**

V-TEK® Incorporated takes no responsibility for the safety of TM-403 if it is used for any purpose other than the intended purpose as specified in this User's Guide.

## Preparing to Run a Pre-programmed Job

The initial set-up and configuration of a new job are covered in *Chapter 4: Setup*. This chapter discusses the procedure for setting up existing jobs, running a job and routine operator tasks.



**Caution:** Users should always wear protective eye wear when operating or maintaining the TM-403.

### Step 1: Power Up

#### Power up the System

1. Power up the machine by turning the *Main Power Switch*, which is located on the right side of the machine, to the **ON** position.
2. Press the blue **Reset** button on the left side of the machine.




### Step 2: Home Motors

#### Home Motors


**Note:** The TM-403 only needs to be homed once after each power up or emergency stop. Once the motors have been homed, they remain homed until the machine is powered down.

1. The HMI will open to the Job Tab with a red **Home Required** button at the top of the *Tab Menu* and the other tab buttons grayed out. Press **Home Required** to open the *Homing Status* window.

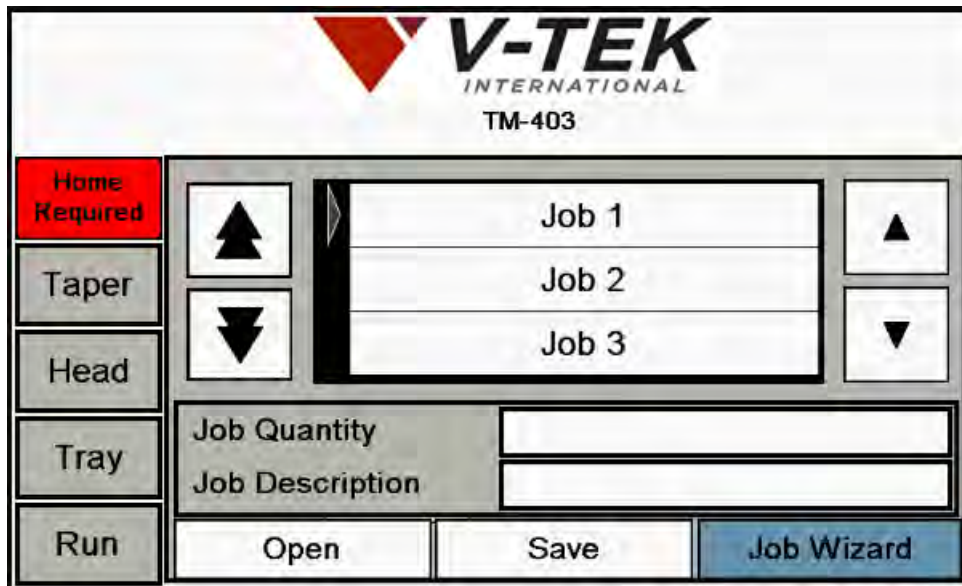


**Step 2:  
Home  
Motors**

2. Press the **Home All Motors** button.

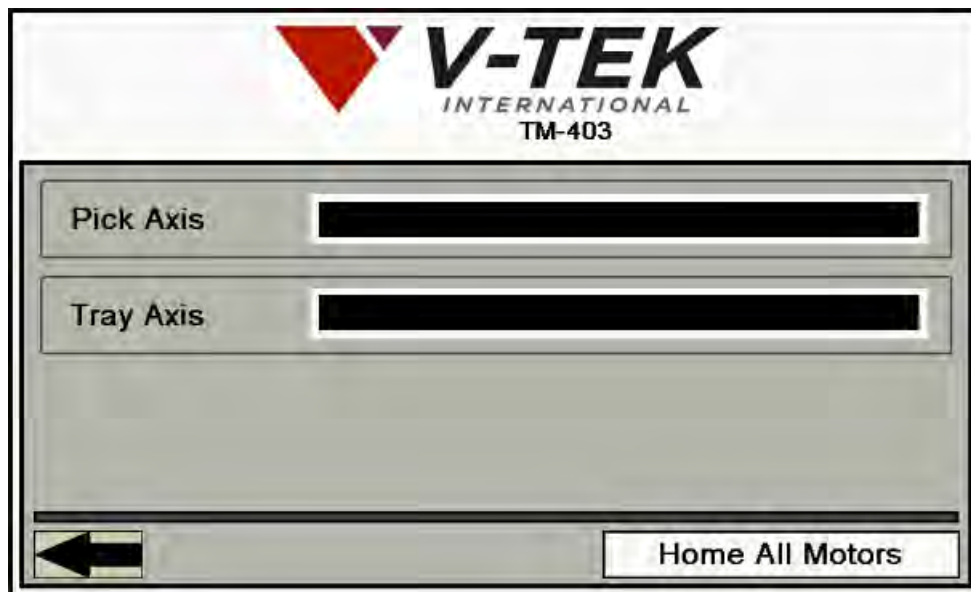

The motor homing sequence begins with the nozzle moving slowly upwards (**Z Axis** movement). After about a three second delay, the pick head will begin to move slowly to the right towards the taper (**X Axis** movement). At the same time, the tray carriage will move slowly out to its *Tray Eject* position.

The pick head homing sequence will continue until the nozzle has risen to its highest position and then returned to home and the head has moved all the way to the right and then returned to home. The tray carriage homing sequence will continue until the tray carriage has moved all the way out to the *Tray Eject* position and then returned to home

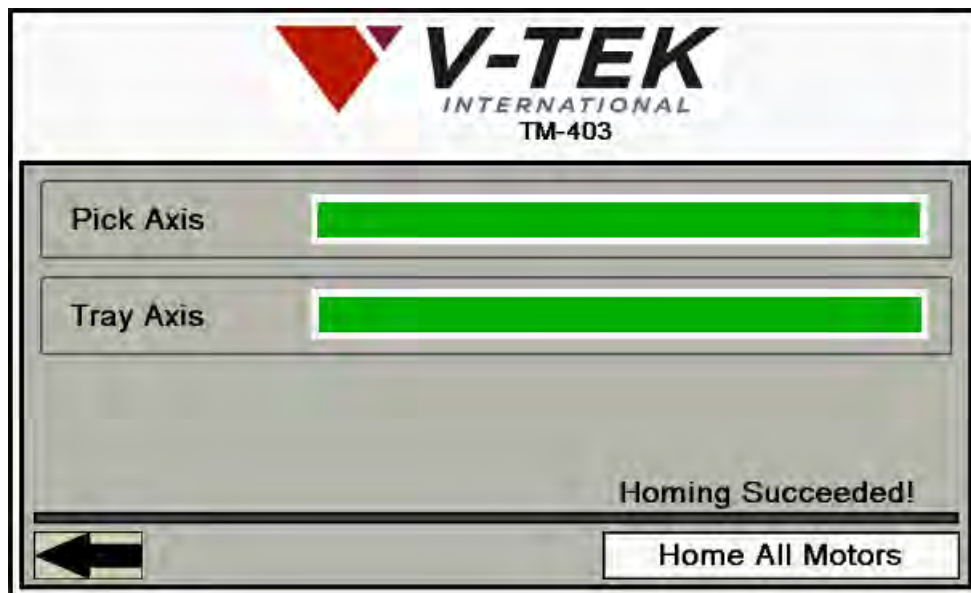


Homing progress is displayed as a green bar in the *Pick Axis Motor* field of the *Homing* window. Once the nozzle and head have stopped moving, homing is complete. A **Homing Succeeded!** message will appear on the bottom of the screen.

**Step 3:**  
**Setup**  
**Tray Feeder**


## Setup the Tray Feeder

1. On the HMI, select **Tray** from the tab menu on the left to open the *Tray Setup Tab*.

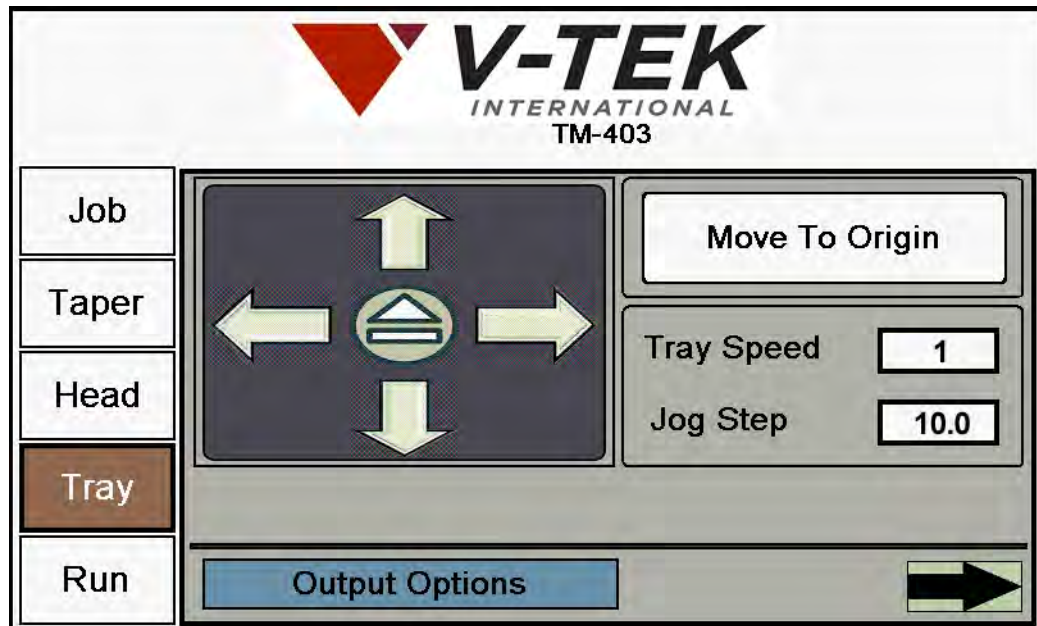

2. Press the **Eject Tray** button to bring the *Tray Module* to the front of the machine so it is easily accessible.
3. **Load Trays:** Load full tray(s) into the *Tray Feeder*, checking to ensure they are being placed in the correct orientation for the job. Follow the directions below to position the trays in the feeder.

- A. Turn the side *Tray Clamps* (B) and center *Tray Clamp* (C) 90 degrees to allow the trays to be placed in the feeder.

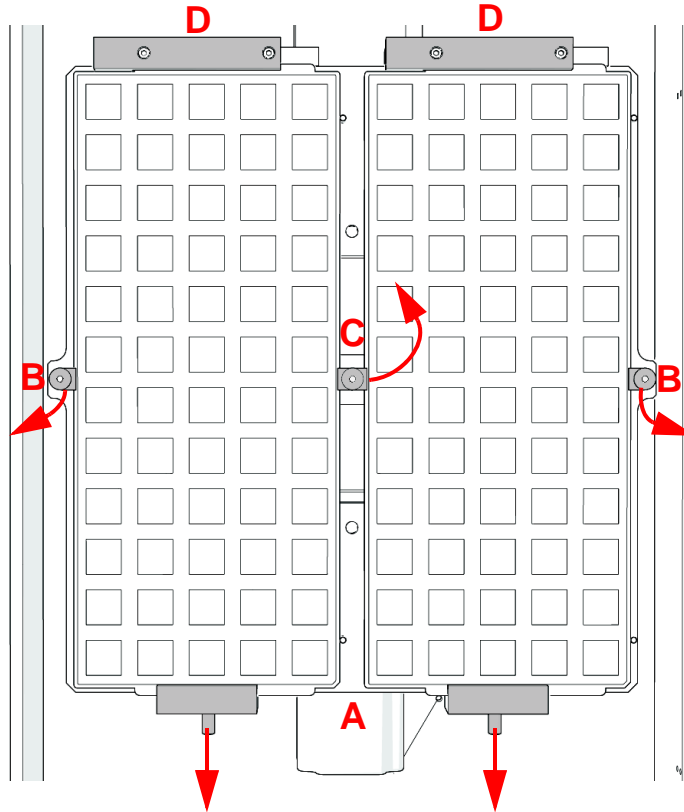

- B. Pull the *Spring Loaded Tray Clamps* (A) back to slide the trays into position. Ensure the tray is placed so that the front lip of the trays is under the *Stationary Tray Clamps* and the side of the tray is pressed against the center datums.
- C. If the tray lip doesn't fit under the *Stationary Tray Clamps* (D), loosen the screws and adjust the clamps as necessary. They may be raised or lowered to adjust to different tray thicknesses or rotated to accommodate different tray orientations.




**Note:** If using Jedec Trays which are thicker than standard Jedec tray thickness (>7.62mm) do NOT use side Tray Clamps. Using the side clamps on trays which exceed this thickness will result in a collision between the Tray Carriage and the Bridge.

The *Tray Feeder* is now ready to operate. Feeder settings will be configured later in this chapter in the *Job Wizard* section.

# Step 4: Setup Taper

## Setup the Taper

1. Load the correct carrier tape and cover tape, adjusting the track width as necessary.
2. Select *PSA* or *Heat* seal.
3. Align cover tape with carrier tape.
4. Run a pull test and adjust seal strength as needed.
5. Place an empty reel onto the take-up reel spindle.
6. Use the **Continuous Advance** button on the *Taper Tab* to run out the tape until it can be attached to the reel.

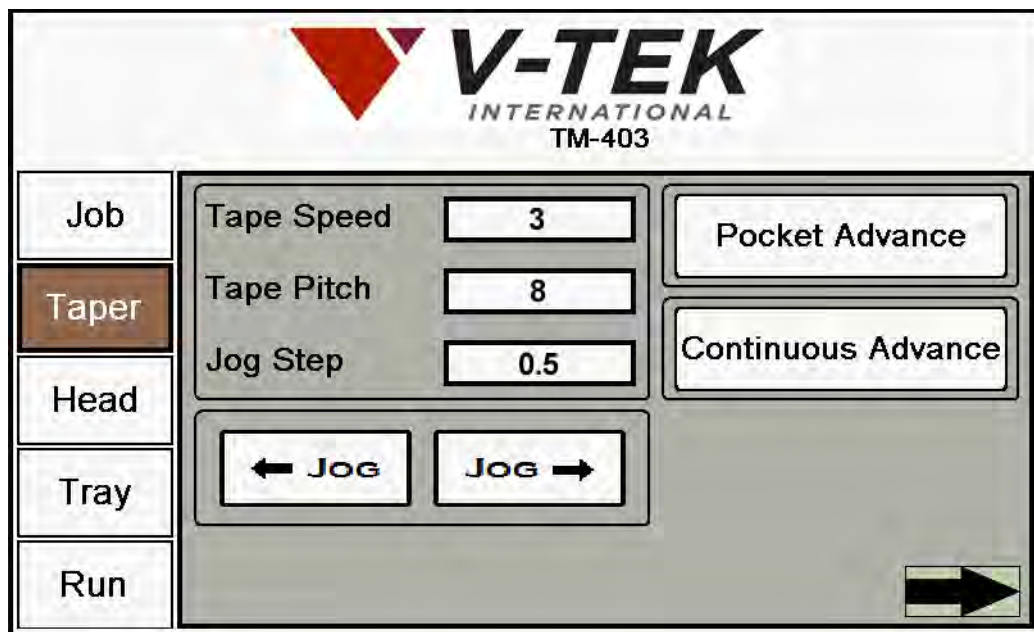


The tape normally can be attached by inserting it into the reel hub or with blue Permacel tape.

**Step 5:**  
**Select**  
**Job**


## Select Job

When a job is already set up and saved in the machine's memory, the first step in running the job is to call it up with the *Job Select* screen.

1. On the HMI, select the *Job Tab*

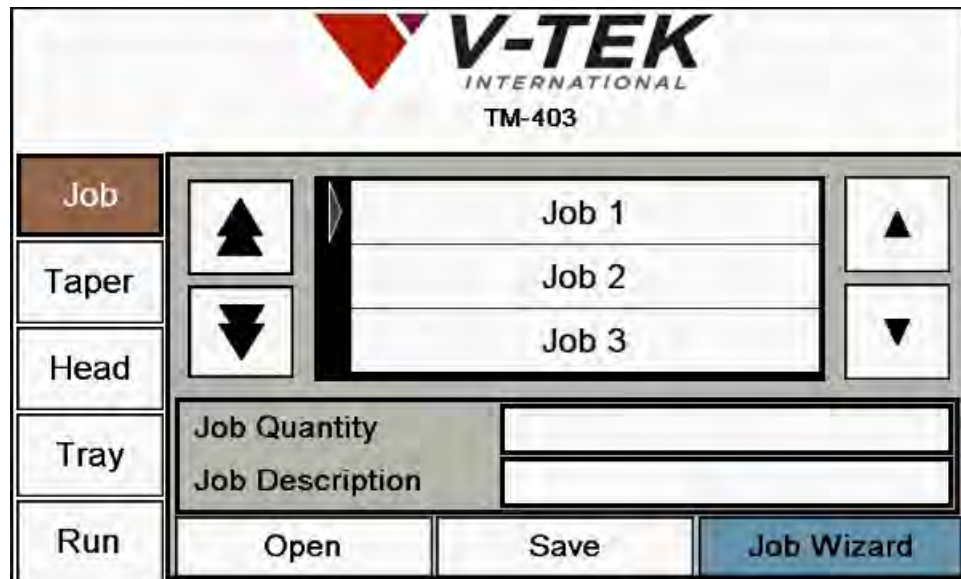

2. Browse through the *Job Library* to locate the desired job by using the up and down **Arrow** buttons.
3. Press **Open** to open the selected job in the *Run Tab*.

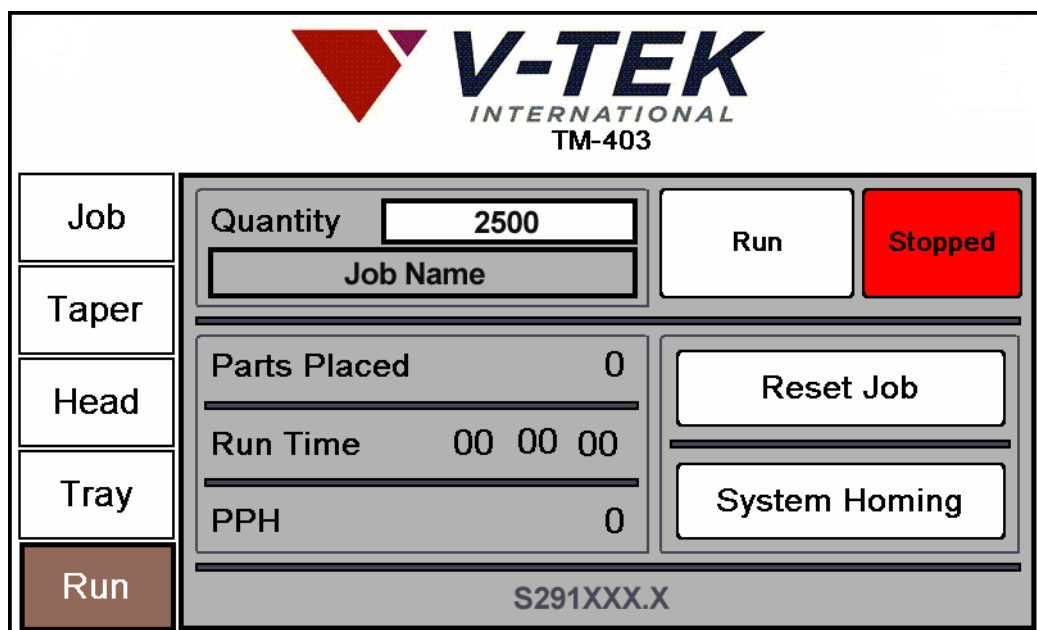


## Step 6: Setup the Pick Head

1. Ensure the correct *Nozzle* and *Nozzle Tip* are installed for the job that will be run.:



**Note:** See the *Chapter 4: Setup for nozzle change procedures.*

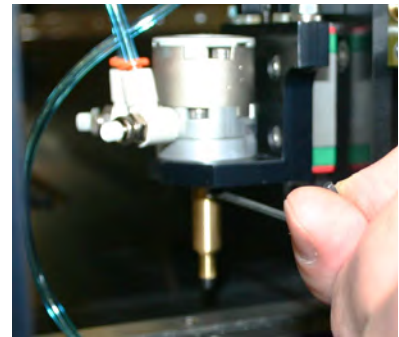

2. Open the *Head Tab* on the HMI.



3. Press **Move To Pick**, then press **Pick Part**. Observe the vacuum sensor which is located on top of the head to see if it is set correctly for the current part. The numbers should be lit in **green** with components on the nozzle and **red** if components are not

**Note:** See the *Chapter 6: Troubleshooting* for vacuum sensor adjustment procedures.



4. Return to the *Head Setup Tab*. Press **Move To Place**, then press **Place Part**.



5. Check that the **Blow Off Pressure** is set correctly for the current part. The *Blow-off Pressure Gauge* is located on the front of the *Pick Head Bridge*. If components are not dropping properly, loosen the locking nut and rotate to adjust pressure levels. When the desired pressure level is reached, tighten locking nut.



## Step 7: Setup Vision

### Setup Vision

The TM-403 Vision System will automatically revert to the previous inspection. If the same part is being run, there is no need to retrain the camera. Proceed to Step 8. If a different job/inspection is being run, follow the setup instructions in *Chapter 4: Setup*.

**Step 8:**  
**Run**  
**Job**


## Run the Job

1. Close the enclosure doors, then open the HMI *Run Tab* and press **Run**.

V-TEK INTERNATIONAL TM-403	
Job	Quantity <input type="text" value="2500"/>
Taper	<input type="text" value="Job Name"/>
Head	Parts Placed <input type="text" value="0"/>
Tray	Run Time <input type="text" value="00 00 00"/>
Run	PPH <input type="text" value="0"/>
S291XXX.X	

During operation, the operator will add additional parts to the *Tape Feeder* and unload packaged parts from the *Taper* as necessary. The operator may also replace parts that fail 2D Inspection. Otherwise no other adjustments are required for a job that has already been defined properly.

2. When the preset number of parts has been run, the TM-403 will automatically stop operation.
3. Cut the sealed tape at the cut point and use a piece of blue Permacel tape to secure the finished reel. Remove processed output.

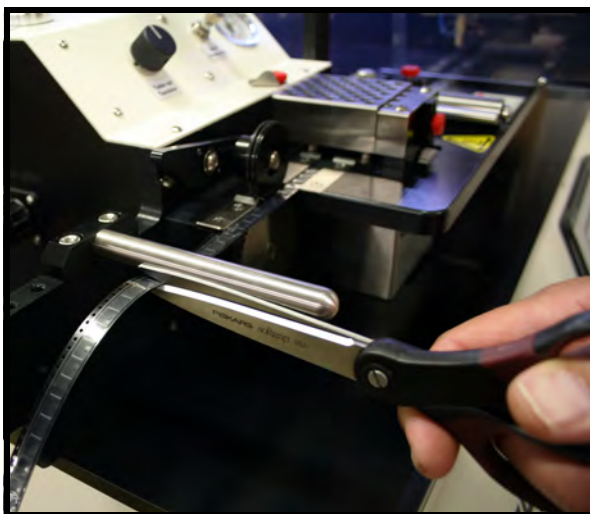

# Chapter 7: Troubleshooting

---

---


## Contents

<b>Emergency Stop</b>	<b>7-2</b>
Activating an Emergency Stop	7-2
Clearing an Emergency Stop	7-2
<b>System Alarm Messages</b>	<b>7-5</b>
Error Message Table	7-18
<b>Adjusting Nozzle Vacuum Sensors</b>	<b>7-20</b>
<b>Tips on Part Placement</b>	<b>7-21</b>
<b>Sensor Adjustments</b>	<b>7-24</b>
Adjusting the Low Cover Sensor	7-24
Adjusting the Tape Jam Sensor	7-24
<b>Adjusting Heat Seal Quality</b>	<b>7-25</b>
Heat Seal Shoe Temperature	7-25
Seal Pressure	7-26
Sealer Dwell Time	7-26
<b>Adjusting PSA Seal Quality</b>	<b>7-27</b>
Materials Used	7-27
Seal Roller Pressure	7-27

## Emergency Stop

The **Emergency Stop Button** is located on the left side of the TM-403.

If the **Emergency Stop** is pushed, the TM-403 will automatically enter an *Emergency Stop* state. When an *Emergency Stop* is triggered, the *Tower Light* switches to red and all operations cease.

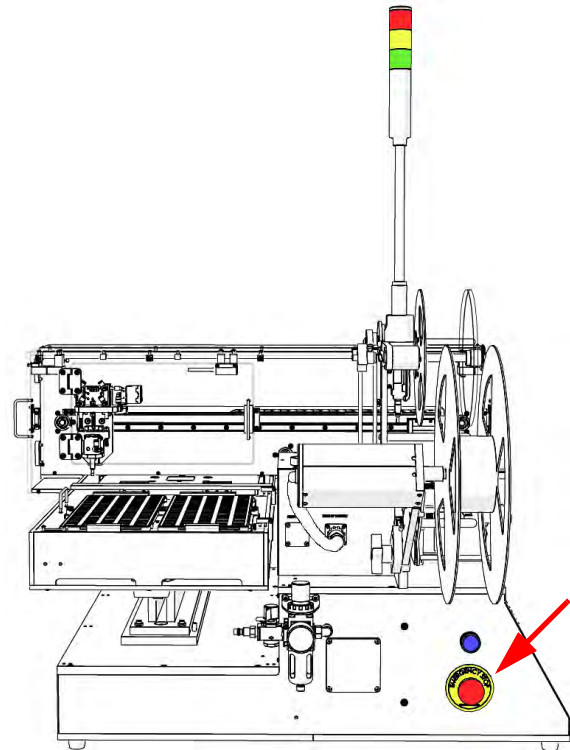

### Activating an Emergency Stop

If emergency stop condition occurs, follow the steps below to resolve the failure.

1. Press the red **E-Stop** button to place the TM-403 into an *Emergency Stop* state. The *Tower Light* will switch to red and all operations will cease and the HMI will power off.
2. Resolve the problem.(See tips on resolving error conditions which follow.)



### Clearing an Emergency Stop

To clear an *Emergency Stop*, follow the directions below.


1. Twist the activated **Emergency Stop** button to turn it off and release the button.
2. Close all the doors on the TM-403.




3. Press the blue **Reset** button.




4. The *Boot Screen* will appear on the HMI Monitor and display a loading progress message. This process typically takes about 90 seconds to complete.
5. Once the system has finished booting, the HMI will open to the *Job Tab* with the **Home Required** button displayed. Press **Home Required** to begin the homing sequence.

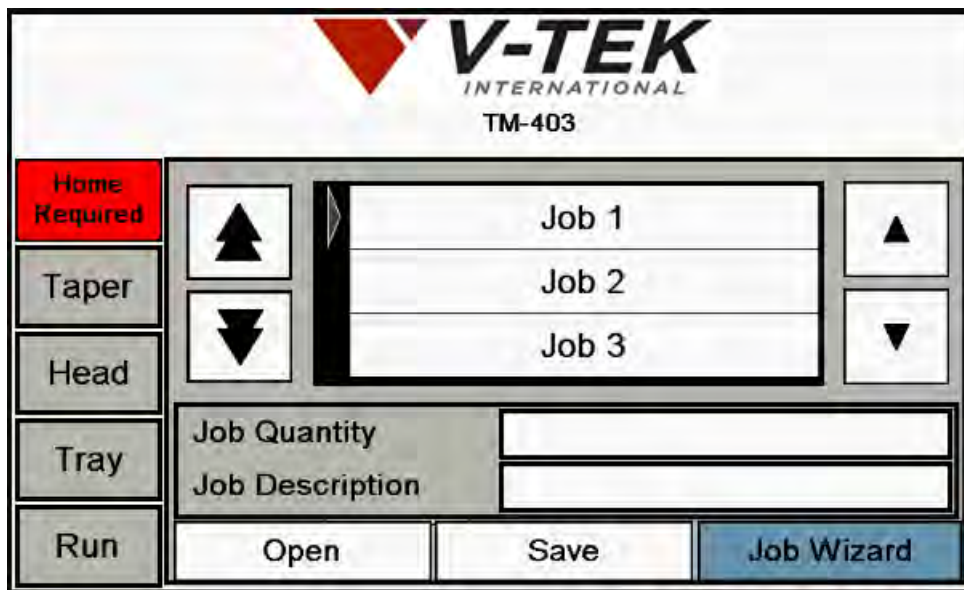


6. The *Homing Status* window will open. Press **Home All Motors**

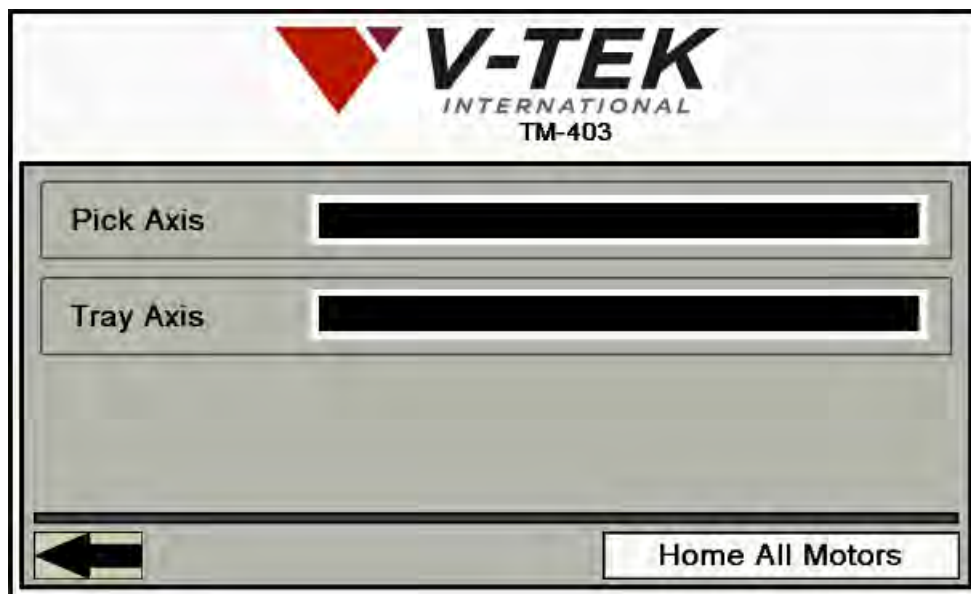

7. When the homing sequence is completed, the bar will turn from black to **green** and a **Homing Succeeded!** message will appear.

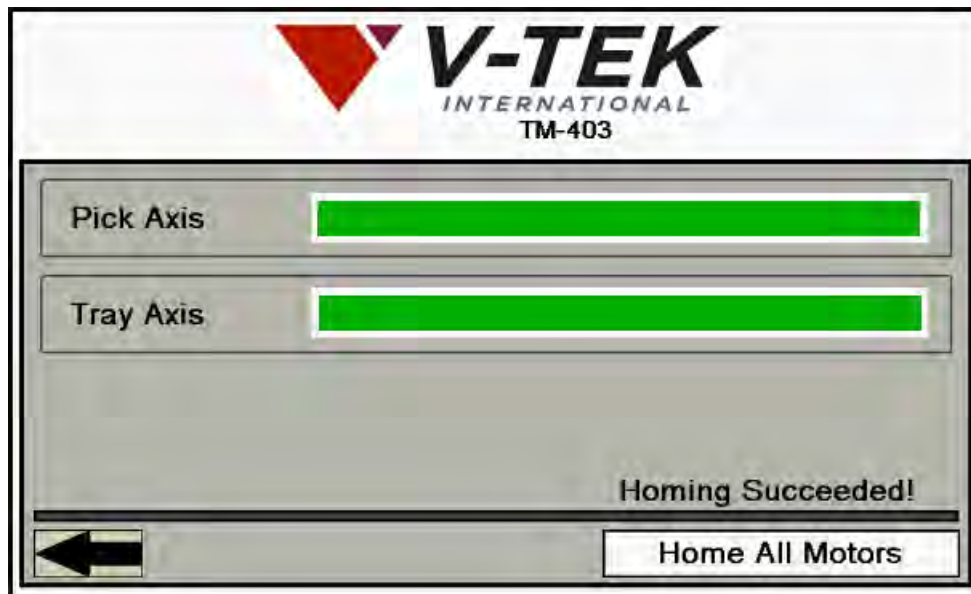

8. Once homing is complete, press the **Left Arrow** button will open the *Run Tab*.

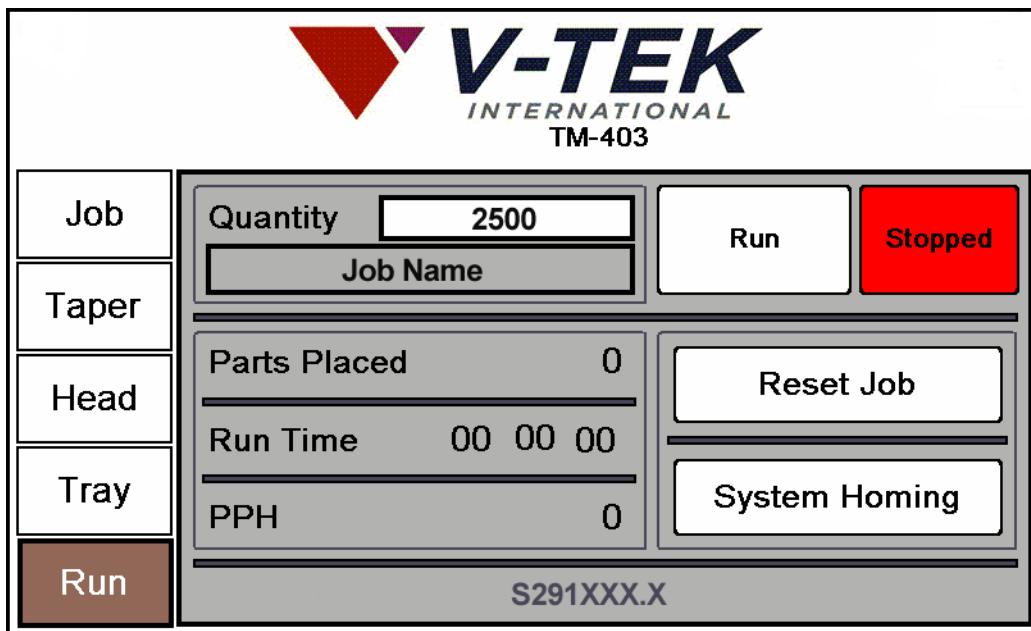

9. Press the **Run** button on the HMI *Run Tab* to resume operation.


## System Alarm Messages

During TM-403 operation, the operator will occasionally be prompted to fill the *Tray Feeder* with parts, unload the *Taper* or check an *Inspection Fail*.

When the TM-403 requires attention it will automatically stop. A beep will sound and the *Tower Light* will turn flashing red to draw the operator's attention.



On the HMI, a **System Alarm Message** will appear.

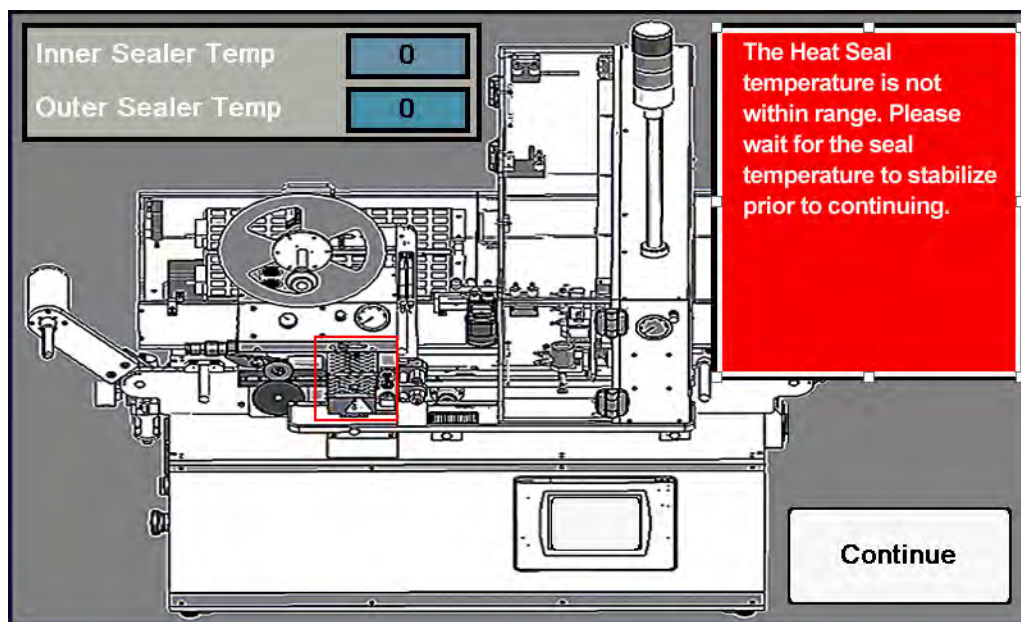

*System Alarms* are triggered for several reasons. When the TM-403's sensors detect an error situation such as *Low Cover Tape* or a *Tape Jam*, the *System Alarm Message* alerts the user to the error. *System Alarms* will also appear if the TM-403 needs to be adjusted before operation can begin. For example, if the *E-Stop* button is depressed preventing operation, the *System Alarm* alerts the user so the situation can be resolved and operation can begin.

*System Alarm Messages* contain a description of the problem and suggestions for resolving the problem. They also include an illustration of the TM-403 with the area of interest indicated by a flashing red outline.


To resolve a *System Alarm*, follow the suggested steps to clear the error situation then click **Continue** to return to the HMI screen that was active before the alarm was activated. To resume operation, press **Start** on the HMI *Run Tab*.

**Note:** There are a variety of error conditions which could cause the machine to stop. See the [Error Message Table](#) at the end of this section for an explanation of the various error messages and their suggested solutions.

An illustration and description of each *System Alarm Message* follows.

### Unable to Pick System Alarm

If the nozzle is unable to pick a part from the Tray Feeder, the *Unable to Pick* system alarm will be activated. When this happens, operation stops, a beep sounds, and a warning appears on the HMI.

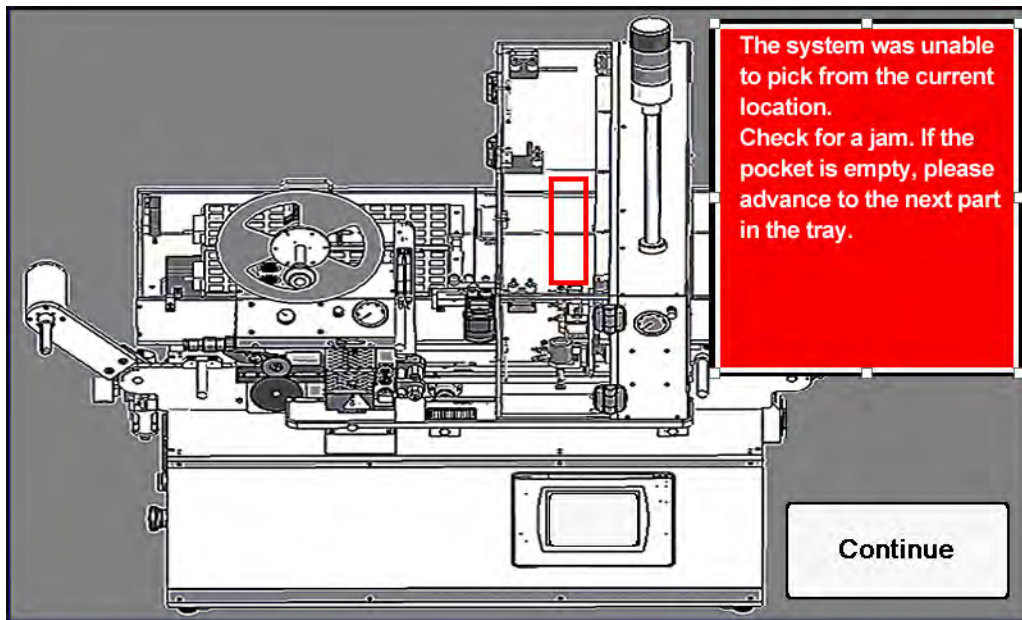


To clear the *Unable to Pick Alarm*, ensure there are parts in the Tray Feeder and it is feeding properly. If that does not resolve the problem, ensure the *Pick Height* is not set too high.

When the *Tray Feeder* is ready for operation, press **CONTINUE** to clear the alarm and resume operation.

## Part Lost System Alarm

If a part falls off the nozzle and is lost during the Pick process, the *Part Lost* system alarm will be activated. When this happens, operation stops, a beep sounds, and a warning appears on the HMI.

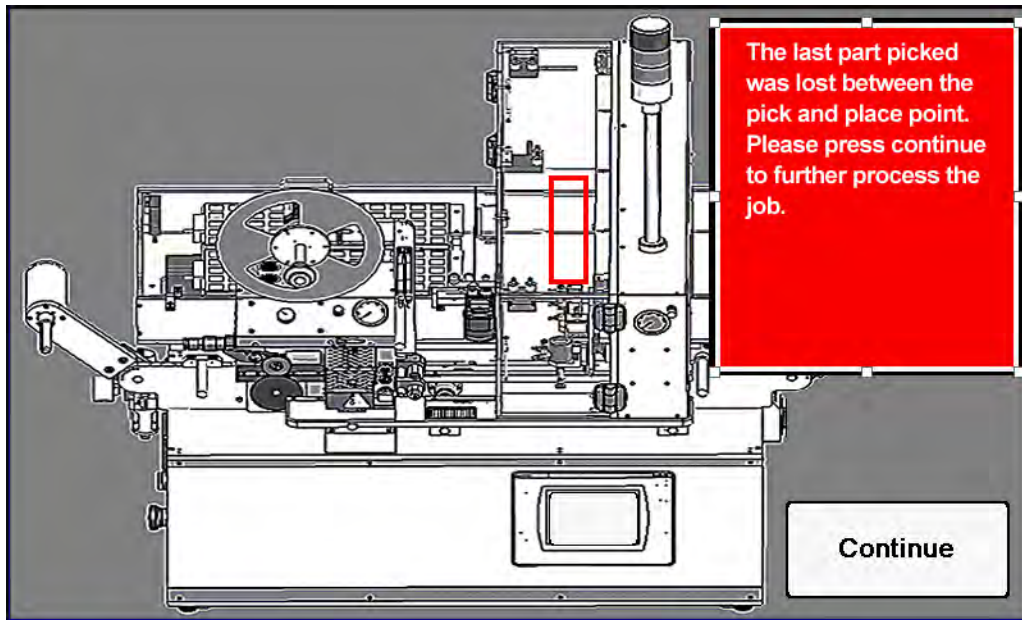


To clear the *Part Lost System Alarm*, check the *Vacuum Sensor* to ensure it is set correctly. Next, ensure the correct *Nozzle Tip* for the part that is being picked is installed. Finally, check the *Pick Position* to ensure it is centered correctly. Adjust as necessary.

When the *Tray Feeder* is ready for operation, press **CONTINUE** to clear the alarm and resume operation.

## No Part To Place System Alarm


If the user attempts to place a part in tape when there is no part on the Nozzle, the *No Part To Place System Alarm* will be activated. When this happens, operation stops, a beep sounds, and a warning appears on the HMI.

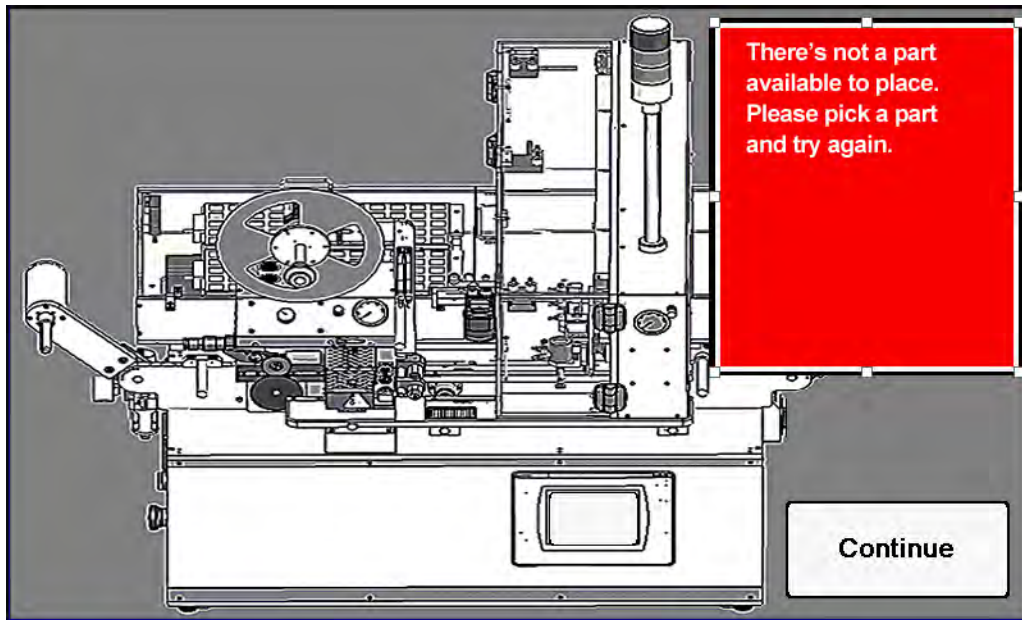


To clear the *No Part To Place System Alarm*, pick a part then press **CONTINUE** to clear the alarm and resume part placement.

## Tape Jam Sensor System Alarm

The *Tape Jam Sensor* is located on the *Taper Track* just before the *Sealer*. It detects when parts are protruding above the top of the pocket due to a misplaced part or tape jam.

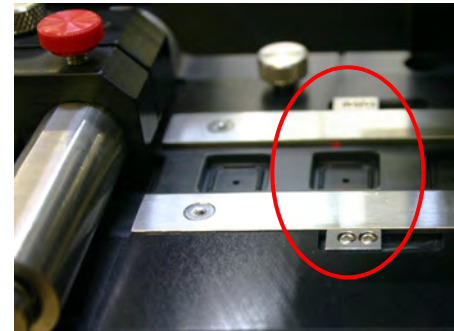

When the *Tape Jam* sensor is enabled and a jam occurs, operation stops, a beep sounds and a warning appears on the HMI


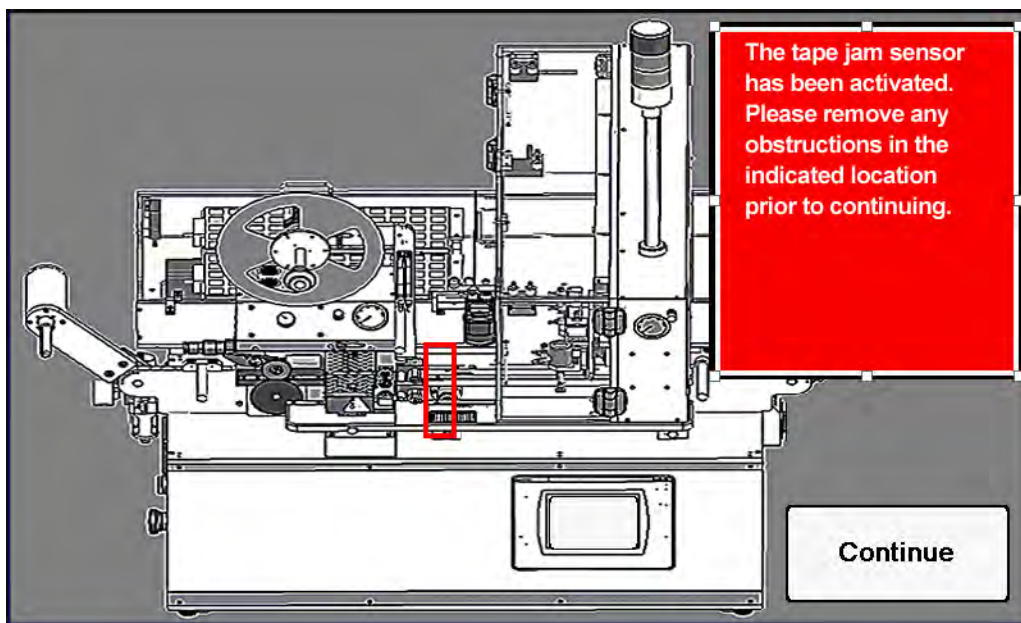


Clear the tape jam and then press **CONTINUE** to clear the error message and continue operation.

## Vision Error System Alarm

The *2D Inspection System* is mounted on the *Taper* between the place point and the *Sealer*. It inspects parts for mark and orientation. It also detects empty pockets


If the *2D Inspection System* detects an inspection error, the *2D Inspection System Alarm* will be activated. Tape advance stops, a beep sounds and a warning appears on the HMI.

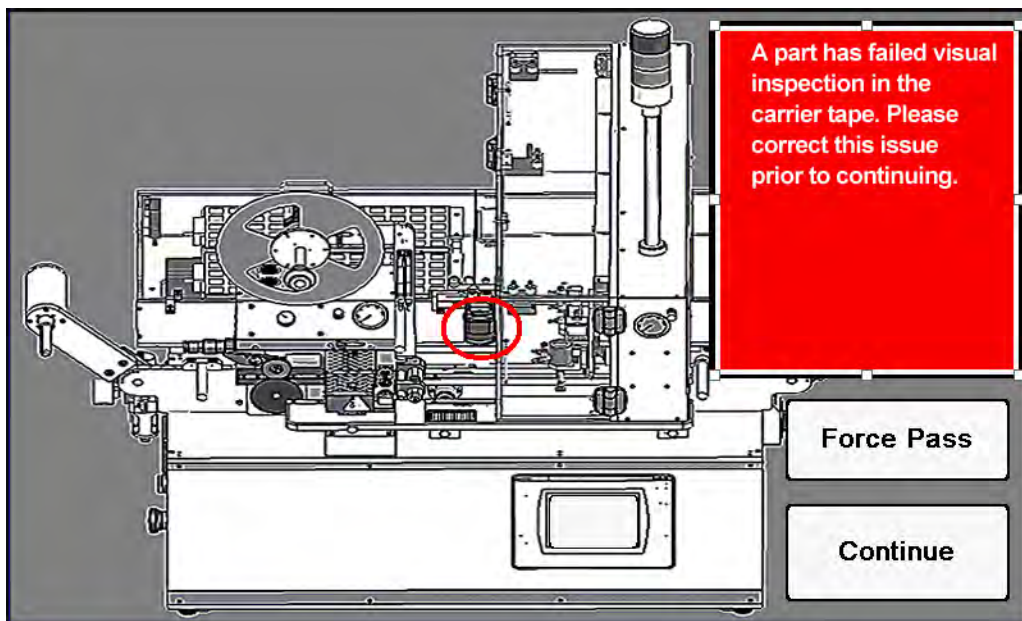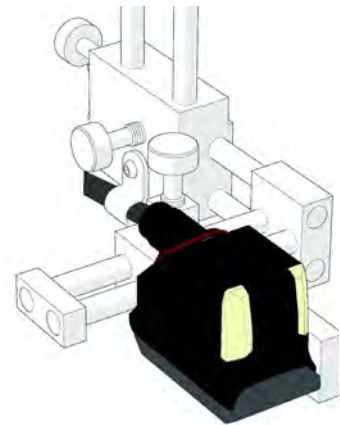

To clear the *Vision Error* system alarm, re-orient or replace the failed part under the *2D Inspection Camera*. Press **CONTINUE** to clear the alarm and resume operation.

## Inspection Time-out System Alarm

If the *2D Inspection System* fails to inspect a part within a preset time period, the *Inspection Time-out System Alarm* will be activated. Tape advance stops, a beep sounds and a warning appears on the HMI.

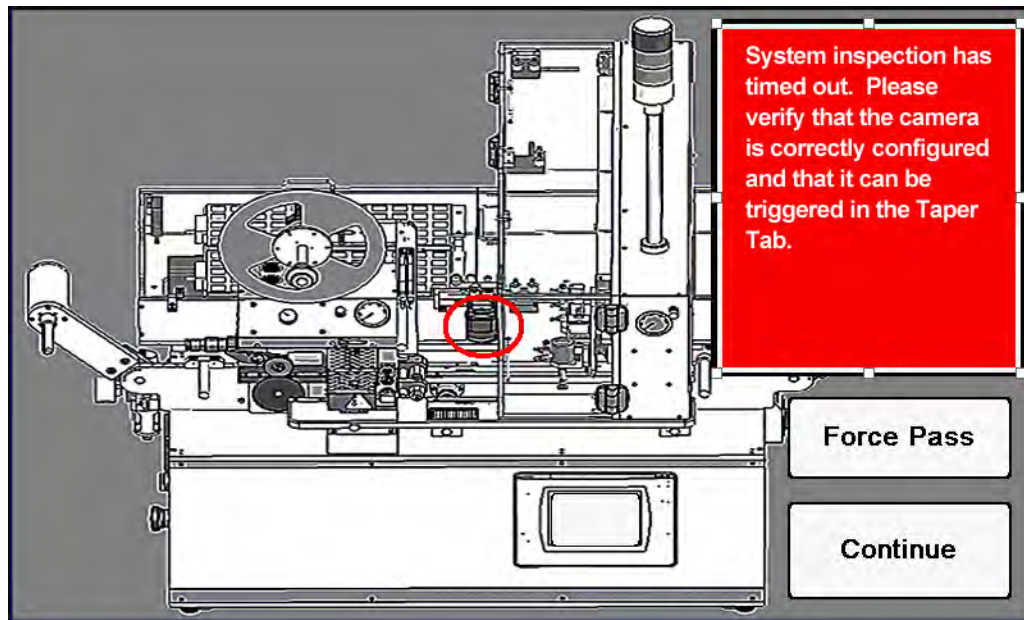


To clear the *Inspection Time-out System Alarm*, ensure the *2D Inspection Camera* is connected to power and setup correctly. Press **CONTINUE** to clear the alarm and resume operation.

## Temperature Out of Range System Alarm

When *Heat Seal* is enabled and the *Heat Shoe* temperatures are either too hot or too cold, a *Heat Seal Temperature Out of Range* system alarm will activate.

When this occurs, tape advance stops, a beep sounds and a warning appears on the HMI.

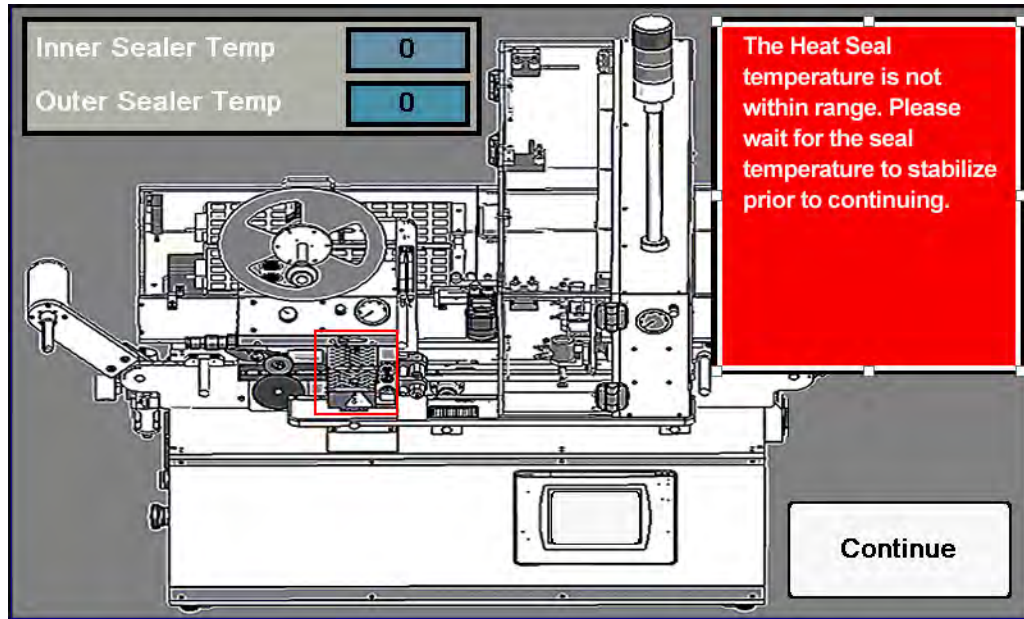


To clear the *Heat Seal Temperature Out of Range System Alarm*, wait for the heat shoes to reach their set point and then press **CONTINUE** to clear the alarm and resume operation.

## Heat Sealer Inactivity System Alarm

If the *Taper* is inactive for 40 minutes or longer, the *Heat Sealer* is automatically disabled. Once that occurs, if a user attempts to run a job, or use *Continuous Advance*, *Pocket Advance* or *Manual Seal* a *Heat Sealer Inactivity* system alarm will activate.

When this occurs, tape advance stops, a beep sounds and a warning appears on the HMI.

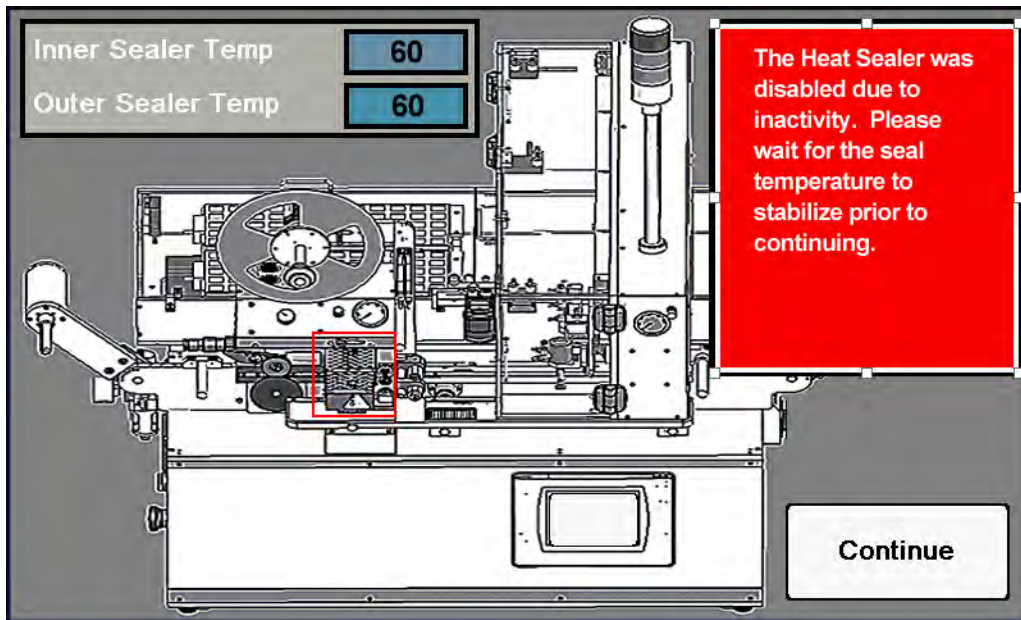



To clear the *Heat Seal Inactivity System Alarm*, wait for the heat shoes to reach their set point and then press **CONTINUE** to clear the alarm and resume operation. The current temperature is displayed on the system alarm message.

**Note:** If the user presses **Continue** and then attempts to move tape through the sealer before the temperature has reached the set point, the *Temperature Out Of Range* system alarm will appear, prompting the user to wait until the sealer temperature is correct.

## Low Cover Tape System Alarm

The *Low Cover Tape* sensor is located on the *Cover Tape Arm*. It detects when the cover tape supply on the *Cover Tape Reel* is below a preset minimum.

If an operator attempts to start a job when the cover tape level is below the sensor, operation will not begin. Instead a beep will sound and a *Low Cover Warning* message will appear on the HMI.

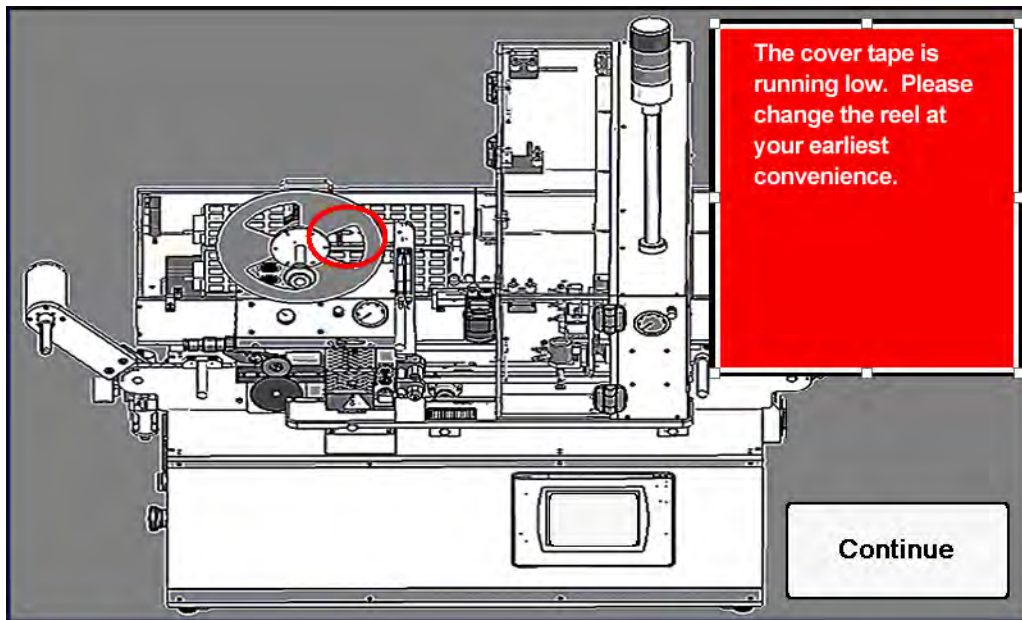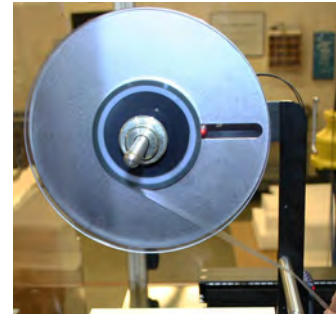


The operator can either resolve the warning by loading a full reel of cover tape or ignore the warning and push **START** again to continue with the current level of cover tape.

**Note:** The *Low Cover Tape* warning will only appear once during a job. If the user ignores the message and continues operation, the TM-403 will continue taping until the job is finished or the cover tape is empty.

## Job Quantity Inadequate System Alarm


If during the course of a job, the operator changes the job quantity to less than the amount of parts that have already been processed a *Job Quantity Inadequate* message will appear on the HMI.

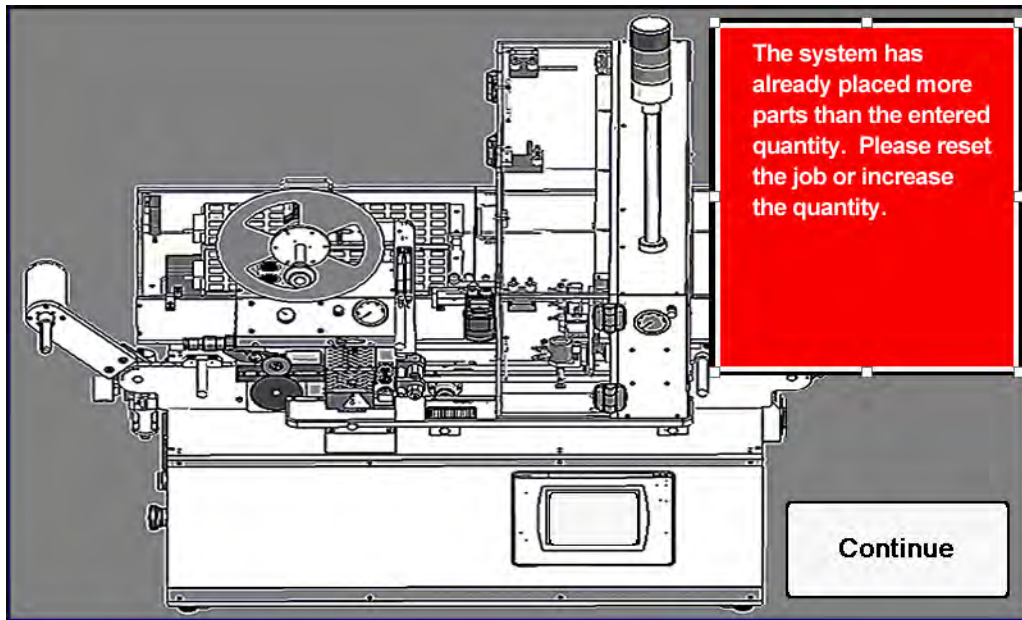

The operator can resolve the warning by either resetting the job or increasing the job quantity. Push **Continue** to clear the alarm message and resume processing.

## Job Completed System Alarm


If the operator completes a job and then attempts to run the same job again without resetting the job, a *Job Completed System Alarm* will appear on the HMI.

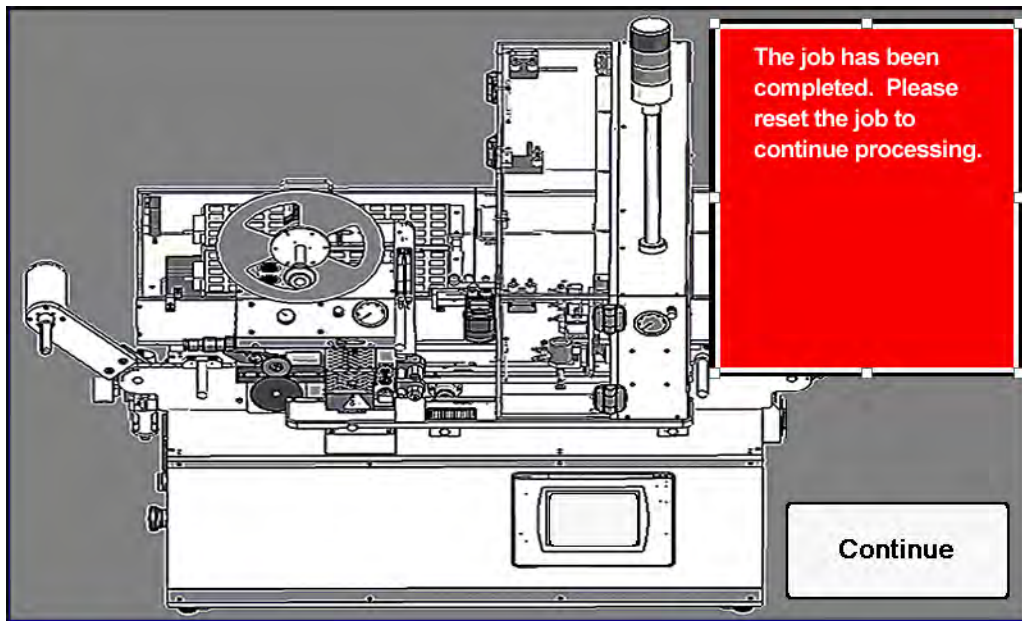

The operator can resolve the alarm by resetting the job. Push **Continue** to clear the alarm message and resume processing.

**HMI Error Condition**

If the operator enters a value in a setup field that is outside the accepted range for the field or if the Ethernet connection to the PLC is lost, the following message will appear on the HMI.

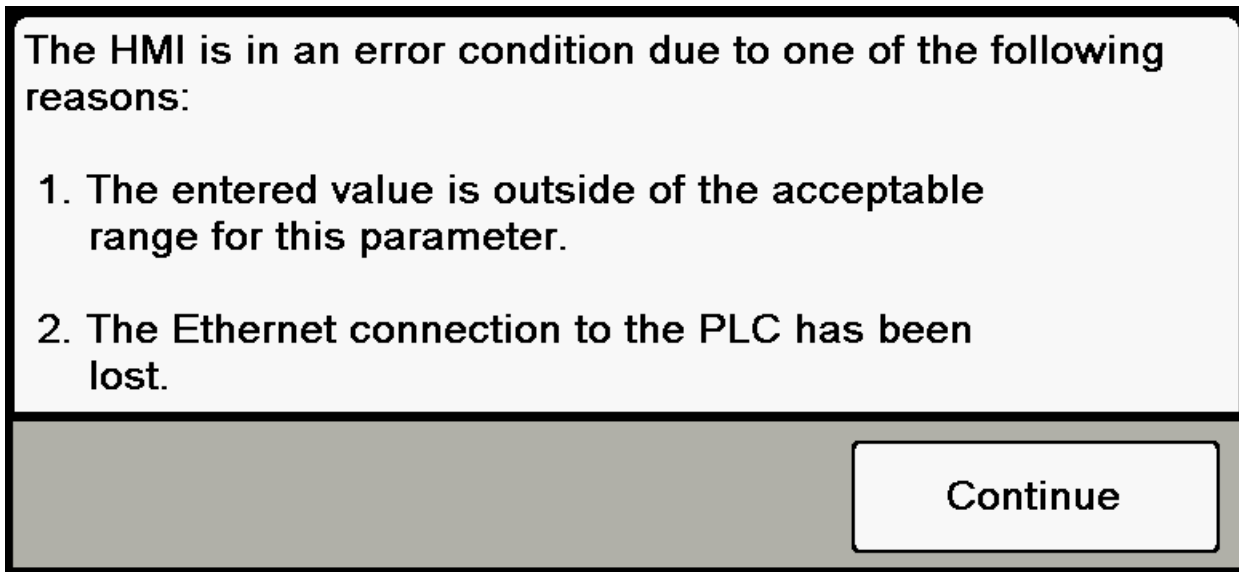

To resolve the error condition in this instance, enter an acceptable value into the field.

If this message persists, it indicates that the Ethernet connection to the PLC may have been lost. Contact V-TEK Service for support.

## Error Message Table

Error Condition	Solution
<b><i>"The system was unable to successfully pick from the feeder."</i></b>	Nozzle is not picking parts from the <i>Tray Feeder</i> . Check the following: <ul style="list-style-type: none"> <li>- Feeder is empty.</li> <li>- Tray Feeder is jammed.</li> <li>- Pick height is too high.</li> </ul>
<b><i>"The heat seal temperature is not within range."</i></b>	The <i>Heat Sealer</i> on the <i>Taper</i> has not reached the correct temperature. Wait until sealer has had enough time to reach the correct temperature.
<b><i>"The heat sealer was disabled due to inactivity."</i></b>	The <i>Heat Sealer</i> on the <i>Taper</i> was automatically disabled after being inactive for more than 40 minutes. Wait until sealer has had enough time to reach the correct temperature, then proceed.
<b><i>"The tape jam sensor has been activated."</i></b>	Check carrier tape prior to <i>Sealer</i> to ensure part is not sticking out of pocket. Remove any obstructions, then resume operation.
<b><i>"The cover tape is running low."</i></b>	Refill cover tape.
<b><i>"A part has failed visual inspection in the carrier tape."</i></b>	Check the following: <ul style="list-style-type: none"> <li>- Part is incorrectly oriented.</li> <li>- Part <i>Mark</i> is missing or obscured.</li> <li>- Part is missing.</li> </ul>
<b><i>"The inspection system has timed out."</i></b>	Check the following: <ul style="list-style-type: none"> <li>- Vision system is not connected to power</li> <li>- Vision System is setup incorrectly.</li> </ul>
<b><i>"The last part picked was lost between the pick and place point."</i></b>	Check the following: <ul style="list-style-type: none"> <li>- <i>Vacuum Sensor</i> is set correctly.</li> <li>- The correct <i>Nozzle Tip</i> is installed.</li> <li>- <i>Pick Position</i> is centered correctly.</li> </ul>
<b><i>"There's not a part available to place."</i></b>	Pick a part and proceed.
<b><i>"The job has been completed. Reset the job to continue processing."</i></b>	Reset the job.
<b><i>"The system has already placed more parts than the entered quantity."</i></b>	The job quantity was changed after parts have been run. Reset job or increase quantity.

Error Condition	Solution
<b><i>“The HMI is in an error condition...”</i></b>	<ul style="list-style-type: none"><li>- If an unacceptable value has been entered into a setup field, change the value to one that fits that field’s parameters.</li><li>- If this message persists, the Ethernet connection to the PLC may have been lost. Contact V-TEK Service for support.</li></ul>

## Adjusting Nozzle Vacuum Sensors

The TM-403's *Nozzle Vacuum Sensor* is setup before the machine is shipped. It may occasionally require adjustment depending on vacuum sensitivity and the type of part that is being processed.

If the TM-403 places “empty” pockets (i.e. places as though it held a part when it did not) or returns a picking part error when it picked a part, the vacuum sensor's threshold point probably needs to be adjusted.

### Vacuum Sensor Settings

1. Close the enclosure doors, then open the *Head Setup Tab*.



2. Press the **Pick Part** button to activate vacuum and pick a part. Observe the vacuum sensor indicator which is located on the *Pick & Place Head* above the nozzles. The numbers should be lit in **green** with components on the nozzle and **red** if components are not.
3. If the sensors require adjustment, Press the blue **Set** button once. The sensor will alternately flash **P\_1** and the current value.
4. Use the **Up/Down Arrow Keys** to adjust the sensor as needed with components both on and off of the nozzles.
5. Press the blue **Set** button again to exit back to normal operation.



## Tips on Part Placement

If components are not dropped properly, there are four variables that can be adjusted to correct the problem.


**Note:** Each part is different and may require a different combination of adjustments to obtain proper place performance.

1. **Adjust Blow-off Pressure.** The *Blow-off Pressure Gauge* is located on the front of the *Pick Head enclosure*. If components are not dropping properly, loosen locking nut and rotate to adjust pressure levels. When the desired pressure level is reached, tighten locking nut.


**Note:** Every part is different and may require a different combination of adjustments to obtain proper place performance.



2. **Adjust Place Position X.** Open the HMI *Head Tab*. Press the **Move To Place** button

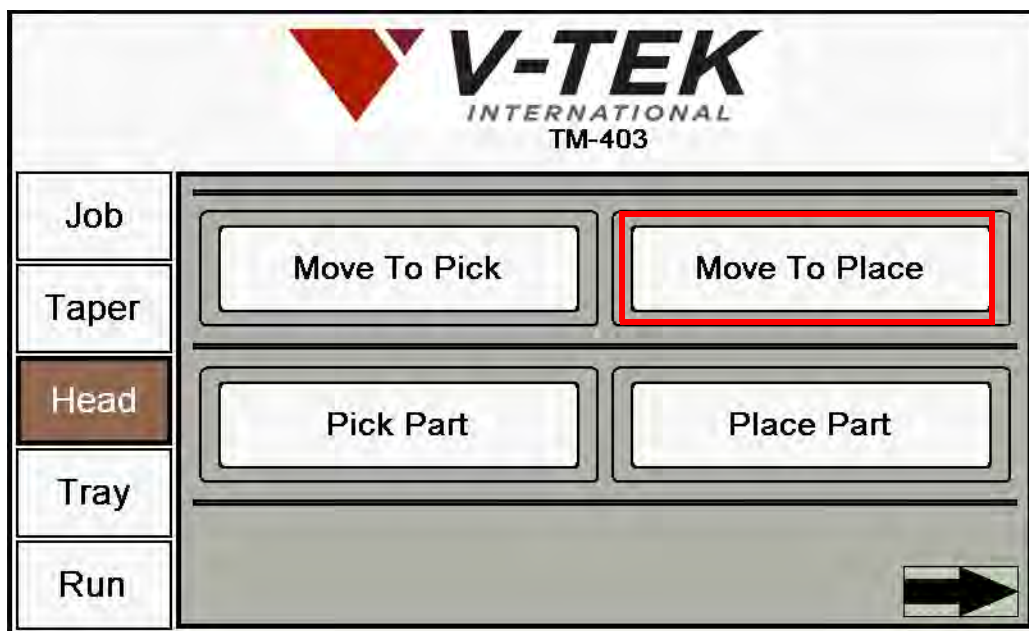


3. Press the **Right Arrow** to move to the next *Head Tab*..

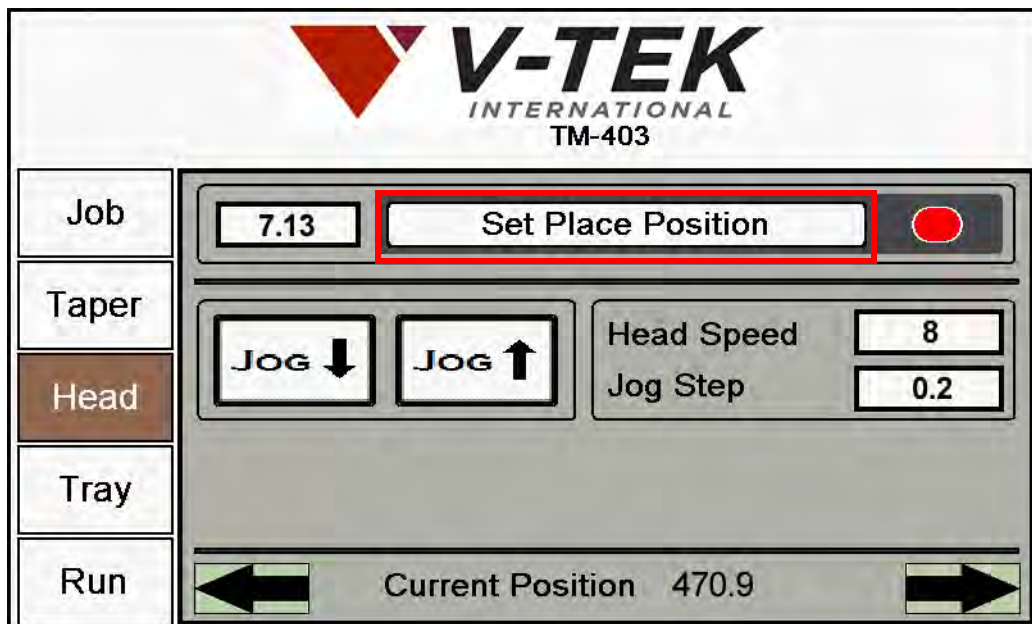


Jog the head up or down until the nozzle is centered correctly over the place location. When the nozzle is positioned correctly, press the **Set Place Position** button.

4. **Adjust Place Position Z.** Manually adjust the right *Actuator Adjustment Screw* up or down until the nozzle is extended the appropriate distance above the place location. You may need to experiment with placing a part to determine what Z Axis height works best. When the nozzle is positioned correctly, press the **Set Place Position** button.

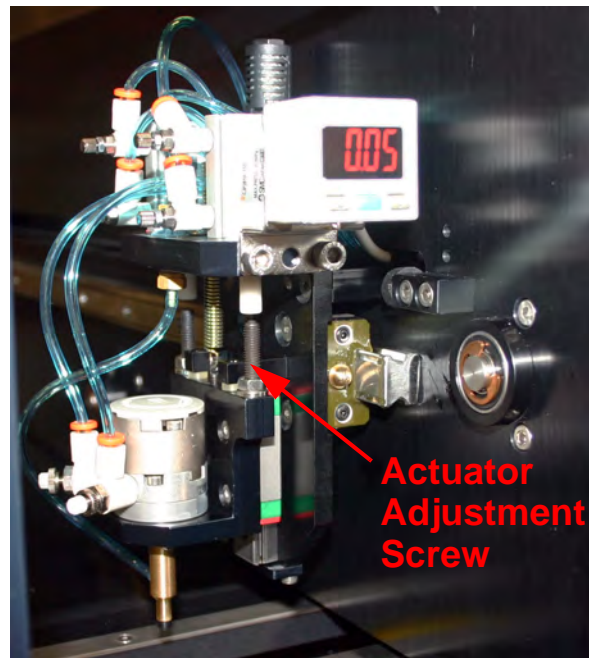

5. **Adjust Blow Off Time.** Press the right **Arrow** button on the bottom of the second *Head Tab* to move to the last *Head Tab* screen

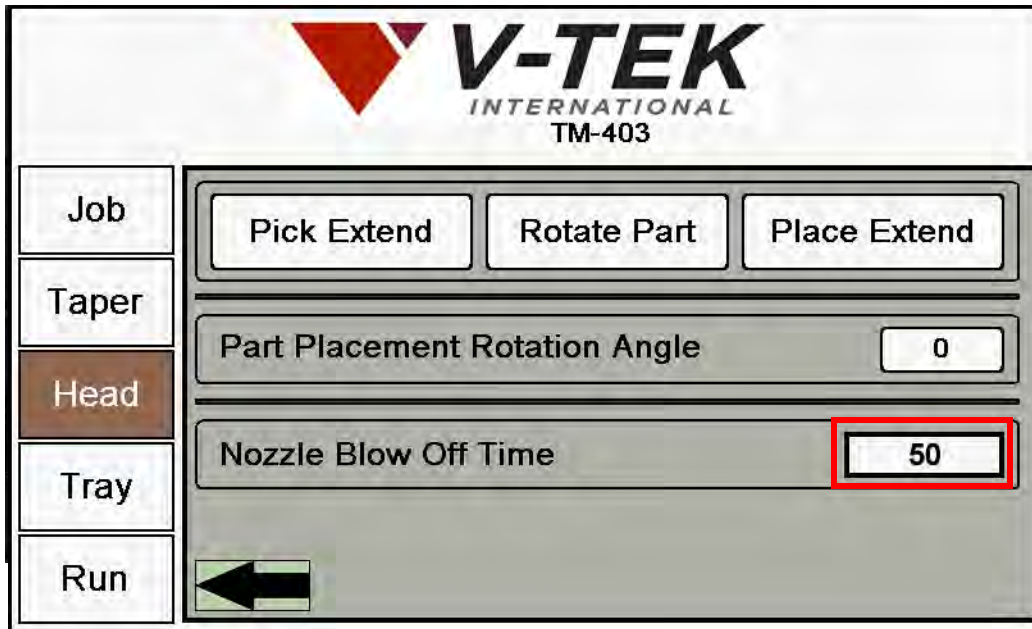

6. Adjust the length of **Blow Off** as needed to drop the part properly.

**Note:** If *Nozzle Blow Off* is set too low, the part may remain on the *Nozzle Tip* or “float” down, resulting in an incorrectly placed part in the pocket.

If *Nozzle Blow Off* is set too high, the excess air may cause the part to bounce back out of the pocket. Adjust the *Nozzle Blow Off* value until the TM-403 consistently and accurately places parts in the carrier tape.

## Sensor Adjustments



### Adjusting the Low Cover Sensor

The *Low Cover Sensor* alerts the operator at the beginning of a job if there is not enough cover tape loaded on the *Cover Tape Reel* to complete the job.

Loosen the screws on the *Cover Tape Low Sensor* to adjust its position. It should rest so the sensor light is positioned at the minimum level of cover tape required to complete a job.

If sensor sensitivity needs to be fine tuned, adjust the amplifiers at the base of the *Cover Tape Arm*. For more information on the sensor/amplifier, refer to *Appendix A: Sensors*

No further setup is required. The *Low Cover Sensor* is ready to operate.

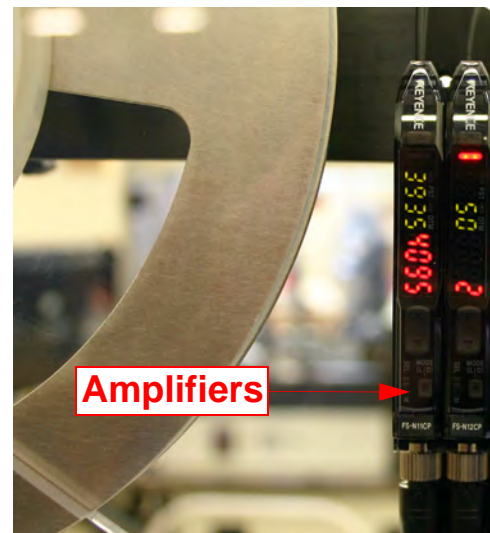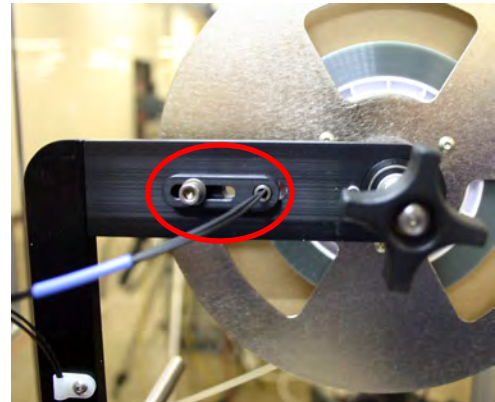


### Adjusting the Tape Jam Sensor

The *Tape Jam Sensor* is located on the *Taper* track just before the *Sealer*. It detects if parts are doubled up or incorrectly placed in a carrier tape pocket so that the part protrudes above the level of the track and would interfere with cover tape placement.

If sensor sensitivity needs to be fine tuned, adjust the amplifiers at the base of the *Cover Tape Arm*. For more information on the sensor/amplifier, refer to *Appendix A: Sensors*.

No further setup is required. The *Jam In Tape Sensor* is ready to operate.

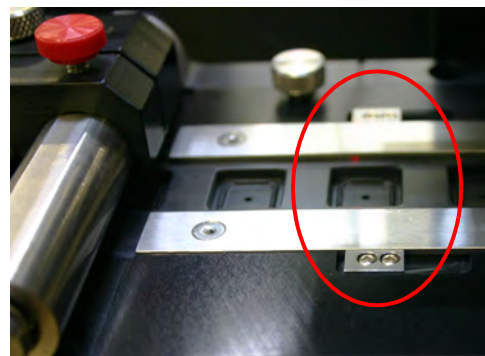


## Adjusting Heat Seal Quality

If a *Peel Force Test* determines the *Heat Sealer* is not generating a satisfactory seal, try one of the adjustments below to improve seal strength.

### Heat Seal Shoe Temperature

Open the HMI *Taper Tab*. Press the right **Arrow** button twice to advance to the third *Taper* screen.

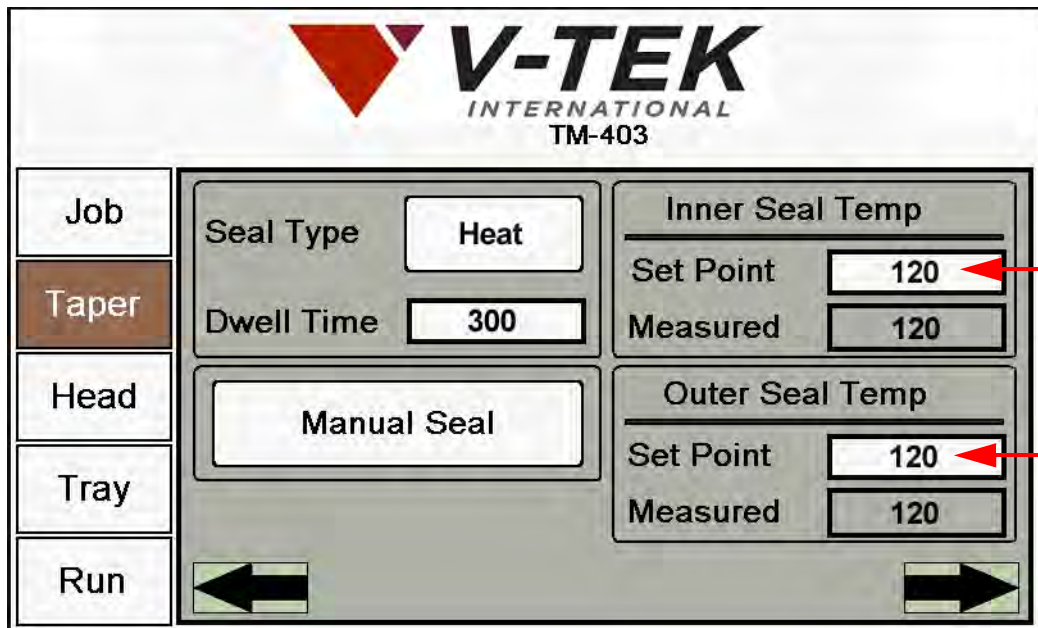


Increase or decrease the temperature of the sealer shoes. The inside and outside seals have independent temperature controllers. Increase or decrease the **Set Point** for each sealer as needed. Under normal conditions and materials, changing the temperatures should suffice.

**Note:** Generally it is best practice to adjust the temperature to achieve the desired peel force.

The TM-403 accommodates a wide range of carrier tapes and cover tapes. Settings may vary from one tape product to another. The suggested starting point is *90 degrees Celsius*. The maximum recommended operating temperature is 160° C. The temperature for each seal shoe should be increased or decreased as needed after running a peel force test.

## Seal Pressure


This control is located on the front of the *Taper*. It controls the amount of force applied when the sealer shoes drop. Turning the **Seal Pressure Control** clockwise will increase the pressure, while turning it counter-clockwise will decrease the pressure.

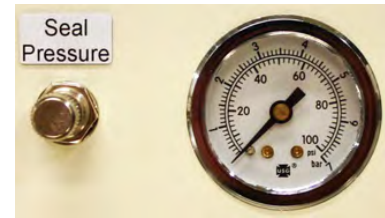

Adjust the heat shoe **Seal Pressure** to the appropriate setting. The recommended starting point is between **40-60 psi**.

## Sealer Dwell Time

Open the HMI *Taper Tab*. Press the right **Arrow** button twice to advance to the third *Taper* screen.

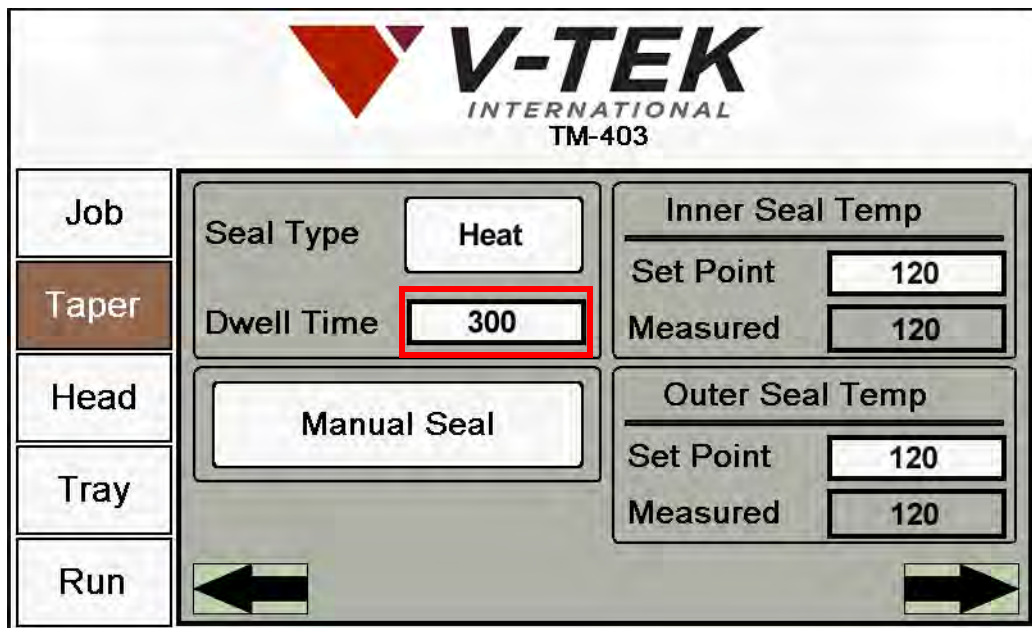

The *Dwell Time* is the amount of time the sealer spends in contact with the cover tape. Increase or decrease the dwell time.

**Note:** The dwell time affects the throughput of the taper. **The recommended Dwell Time is 400 ms.**

## Adjusting PSA Seal Quality

If a *Peel Force Test* determines the *PSA Sealer* is not generating a satisfactory seal, try one of the adjustments below to improve seal strength.

### Check Sealer Settings

Open the HMI *Taper Tab*. Review the settings on the four *Taper Tab* screens to ensure *Tape Settings* and *Sealer Settings* are appropriate for the current job.



### Materials Used

For a **PSA seal**, seal strength is determined first by the nature of the materials used. It is normally recommended to use the same brand of cover and carrier tapes together as the manufacturers use the appropriate adhesive to match the material used to make the carrier tapes.


### Seal Roller Pressure

The second factor in PSA seal strength is the pressure applied to the cover tape as it is sealed to the carrier tape. The seal should appear as a solid stripe and it should not show any inconsistencies. If it does, the alignment of the cover tape should be confirmed and then the pressure to the seal rollers adjusted.

On the top of each sealer block, there are three holes with a screw in the center hole. With carrier and cover tape loaded, spin the *Sealer Wheel*. While spinning the *Sealer Wheel*, turn the screw clockwise until the wheel no longer spins freely, then turn the screw another 1/8 turn. The wheel should be firmly in contact with the tape.

Adjust the seal roller pressure until the PSA adhesive is firmly adhered to the carrier tape.

Experience will allow the operator to judge the correct adjustment by feel. Repeat for the other sealer wheel.

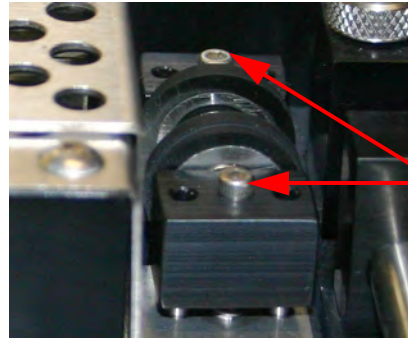

**PSA Seal  
Pressure  
Adjustment  
Screws**

**Note:** Excessive roller pressure may cause carrier tape advance problems or elongation of sprocket holes in the carrier tape.

# Chapter 8: Maintenance

---

---

---

## Contents

<b>Safe Maintenance Steps</b> .....	<b>8-2</b>
<b>Maintenance</b> .....	<b>8-3</b>
Routine Maintenance Schedule .....	8-3
General Maintenance Instructions .....	8-4
<b>Lubrication</b> .....	<b>8-4</b>
<b>Air Pressure Regulator</b> .....	<b>8-4</b>
<b>Pick Head Maintenance</b> .....	<b>8-5</b>
Nozzle Tip .....	8-5
Vacuum Levels .....	8-5
Replace the Vacuum Filter .....	8-5
Check Actuator Belt Tension .....	8-7
<b>Taper Maintenance</b> .....	<b>8-8</b>
Heat Sealer .....	8-8
Loading Track .....	8-10
PSA Sealer .....	8-10
Cover Tape Guide .....	8-11

## Safe Maintenance Steps



**Caution!** It is dangerous to service or maintain the TM-403 while it is connected to air and power supplies.

Before performing any maintenance tasks, ensure the machine is stationary and disconnect the electrical and pneumatic power supplies placing the unplugged cables in clear view. Follow your company's *Lock-out/Tag-out Procedures*.

Follow the steps below when performing routine maintenance or cleaning the TM-403.

1. Turn the TM-403 **OFF**.
2. Ensure the *Main Power Switch* is rotated to the **OFF** position. The *Main Power Switch* is Lock-out/Tag-out capable. Follow your company's Lock-out/Tag-out procedure to ensure safe maintenance.
3. Ensure the *Air Regulator* is rotated to the **OFF** position. The *Air Regulator* is Lock-out/Tag-out capable. Follow your company's Lock-out/Tag-out procedure to ensure safe maintenance.
4. Disconnect the air supply and place the unplugged air hose so it is clearly visible.
5. Disconnect the power supply and place the unplugged power cord so it is clearly visible.
6. Remove all carrier and cover tape from the *Taper*.
7. Remove parts from the *Tray Feeder*.
8. Perform cleaning/maintenance as needed.
9. Reload *Tray Feeder* parts.
10. Reload *Taper* carrier tape and cover tape.
11. Reconnect the air supply.
12. Reconnect the power supply.
13. Turn the TM-403 back **ON**.



lockout/tagout hole



## Maintenance

Only maintenance personnel that have thoroughly read and understand the TM-403 User's Guide and have several years experience operating and maintaining similar machines should be permitted to maintain the TM-403.

### Routine Maintenance Schedule

The TM-403's simple, low-maintenance design keeps required maintenance to a minimum. The following schedule indicates common maintenance tasks and how frequently they should be performed.

Maintenance Task	Schedule	Materials needed
Vacuum or brush dust and debris off machine, including sensors	Daily	<ul style="list-style-type: none"> <li>• soft bristled paint brush or vacuum</li> </ul>
Inspect nozzle tip for wear or damage	Daily	<ul style="list-style-type: none"> <li>• To replace worn nozzle tip, call V-TEK Service for specific nozzle part number.</li> </ul>
Check and set incoming air pressure to 85 psi with the vacuum on	Every 120 hours of operation or as needed.	<ul style="list-style-type: none"> <li>• None</li> </ul>
Check & record vacuum levels	Every 40-80 hours of operation	<ul style="list-style-type: none"> <li>• None</li> </ul>
Clean Heat Sealer shoes	Every 120 hours of operation or as needed	<ul style="list-style-type: none"> <li>• 3/32" hex wrench</li> <li>• plastic or brass brush</li> <li>• alcohol</li> </ul>
Clean Loading Track	Every 40 hours of operation	<ul style="list-style-type: none"> <li>• small, stiff bristled paint brush</li> </ul>
Clean Cover Tape Guide	Every 40 hours of operation	<ul style="list-style-type: none"> <li>• alcohol</li> <li>• cotton swabs</li> </ul>
Inspect Air Pressure Regulator for moisture build-up	Every 40 hours of operation	<ul style="list-style-type: none"> <li>• none</li> </ul>
Clean PSA Sealer assembly	Every 40 hours of operation	<ul style="list-style-type: none"> <li>• alcohol</li> <li>• cotton swabs</li> </ul>
Replace nozzle vacuum filter	Every 200-300 hours of operation	<ul style="list-style-type: none"> <li>• nozzle vacuum filter (p/n 201026)</li> </ul>
Remove heat shoes, replace if necessary	Every 4 months	<ul style="list-style-type: none"> <li>• Heat Shoes (p/n 261122)</li> </ul>



#### Caution!

Users should always wear protective eye wear when operating or maintaining the TM-403.

## General Maintenance Tasks

### Daily cleaning

Vacuum or brush off the machine with a stiff bristled paint brush **daily**, removing dust and debris from all operating areas including the sensors.


### Air Pressure Regulator

Check the incoming air pressure **every 40-80 hours of operation** to ensure it is set to 85 psi with all vacuums ON. Adjust if necessary.

Inspect the air regulator for moisture accumulation after **every 40 hours of operation**. Turn the petcock on the bottom of the regulator clockwise to release the fluid if moisture is present. Tighten the petcock when moisture is gone.

**Note:** Frequency of moisture build-up will vary with air quality. Check the Air Pressure Regulator periodically to determine if fluids need to be released more frequently.

Other than the release of moisture build-up, the TM-403 pneumatic system should not require adjustment or replacement. Should an issue with the pneumatic system arise, call V-Tek Service for assistance.

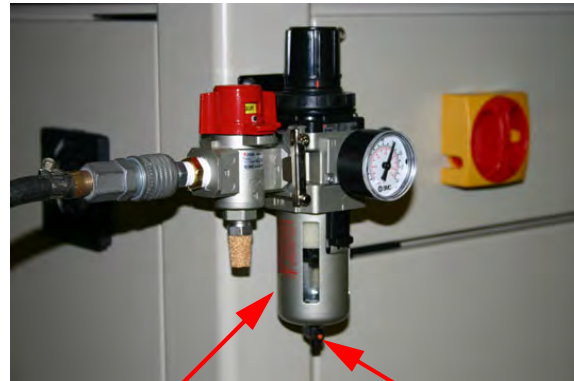

### Caution!

The TM-403 air supply should be adjusted to operate at a maximum working pressure not exceeding 7.6 bar (110 psi). The maximum permissible source pressure should not exceed 9 bar (130 psi). Failure to set the within these limits could result in a failure in the pneumatic system which could lead to injury.

### Lubrication

No lubrication is required or desired on the TM-403 as all parts are no maintenance in this regard and the use of lubricants could interfere with components.

## Pick Head Maintenance

### Nozzle Tip

Inspect the nozzle tip **daily** for excessive wear or damage. Remove and replace as necessary. See *Chapter 4: Machine Setup* for instructions on changing the nozzle tip.

### Vacuum Levels.

Check Vacuum levels **weekly**. This recorded information on high/low vacuum levels is useful on a week to week basis and can indicate pneumatic problems such as loose fittings or seal problems.

1. Turn on the vacuum generator from the HMI.
2. Observe and record vacuum level for the nozzle with no part present.
3. Cover the nozzle (with part or some object) and record vacuum levels.
4. Compare the current vacuum levels with those previously recorded. A partially blocked nozzle or restricted filter in the nozzle assembly is indicated by a smaller vacuum swing.
5. Remove and replace the nozzle vacuum filter if there are high vacuum levels without part or poor pickup.




### Replace the Vacuum Filter



If parts are not picking consistently or if the *Nozzle Vacuum Sensor* indicates there is a part on the *Nozzle* (values appear green) without a part on the nozzle, this is an indicator that the *Vacuum Filter* needs to be cleaned or replaced. Typically the *Vacuum Filter* will require attention after 200-300 hours of operation.

The *Vacuum Filter* is located on top of the *Pick Head Assembly*.

1. Open the front door and manually move the pick head all the way to the front for easy access.

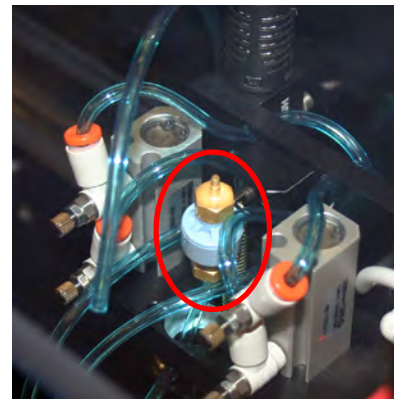


2. Remove the air line from the *Nozzle Shank*.
3. Use a needle-nose pliers to remove the air line from the *Upper Filter Fitting* which is located at the top of the *Vacuum Filter*.
4. Use a 2.5mm Hex wrench to remove the retaining screw that holds the *Filter* in place.
5. Lift the *Filter* from the housing and remove it from the machine.
6. Blow air through the filter to clean it or replace with a new filter. (See *Spare Parts List* in the back of this User's Guide for order information.).
7. Replace the *Filter* on the *Pick Head*, reconnecting the air line at the top of the *Vacuum Filter* and at the *Nozzle Shank*.

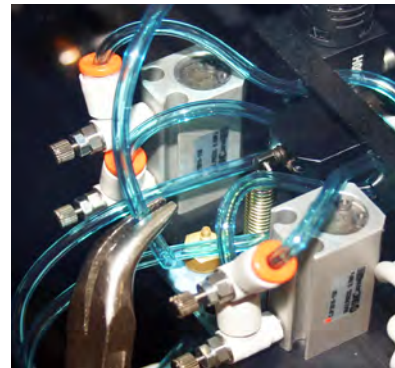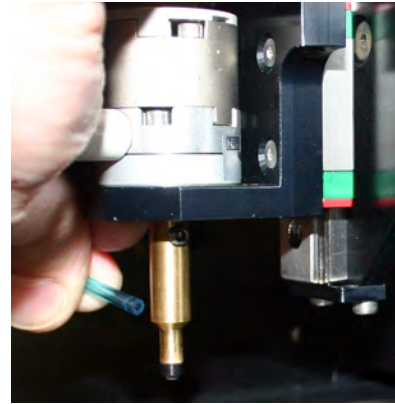


## Check Actuator Belt Tension

The Actuator Belt tension should be measured after its first 30-40 hours of run time, then annually after that. To measure belt tension, follow the instructions below.


1. Position the Pick Head Carrier so the edge of the carrier is 6" from the inside end of the Actuator Head.

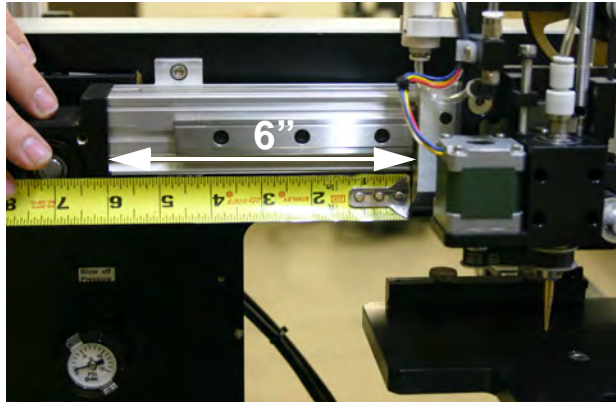

2. Position a force gauge on the Belt 2" from the inside end of the Actuator Head.

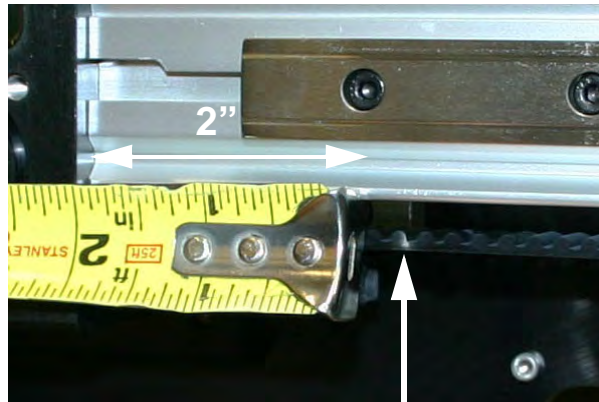

3. Deflect the Belt 1/4" (6 mm) in either direction. The force gauge should read between 12 and 16 lbs. [53 - 62 N].

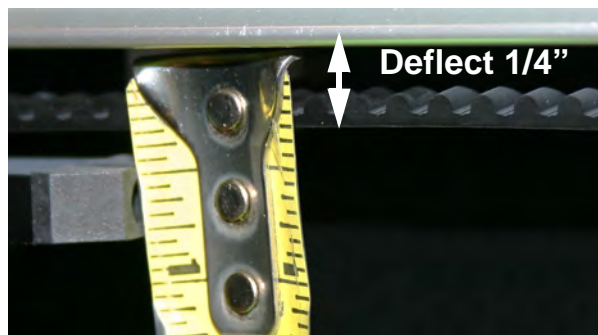

**Note:** Contact V-TEK Service for tensioning procedure if belt tension is outside tolerance.


## Taper Maintenance

### Heat Sealer

Heat sealer maintenance consists mainly of cleaning built-up debris and adhesive residues from the heat shoes. It should be cleaned after **every 120 hours of operation or as needed**.

To clean the heat shoes, follow the steps below.


1. Slide the loading track all the way out.

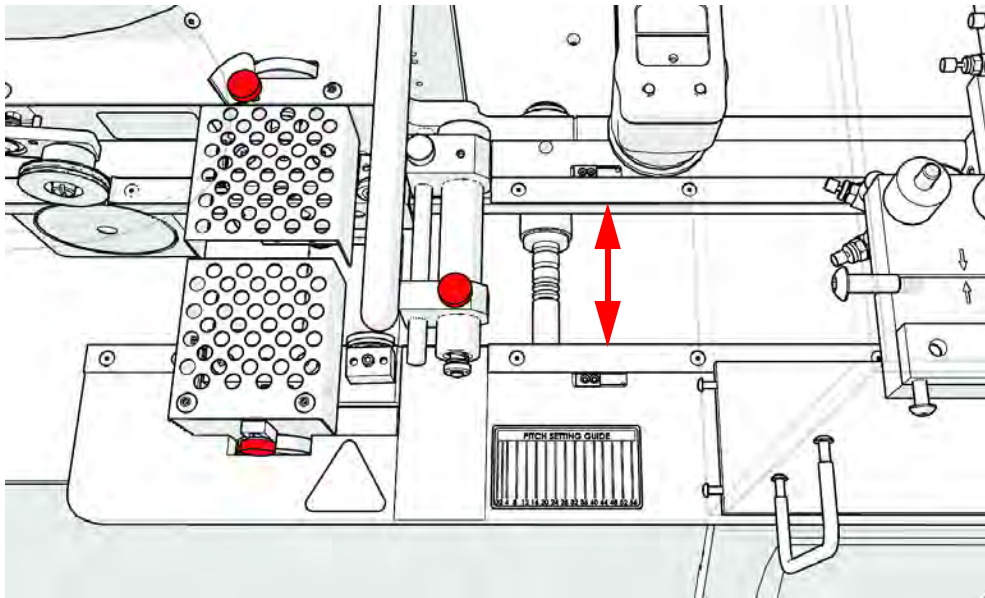

2. If the sealer assembly is still hot, allow it to cool completely before continuing.


**Note:** Do not attempt to use alcohol when the sealer is hot.

3. Using a 3/32" hex wrench, remove the (3) *Button Head Cap Screws* and the red *Thumb Screw* from the two sheet metal covers.

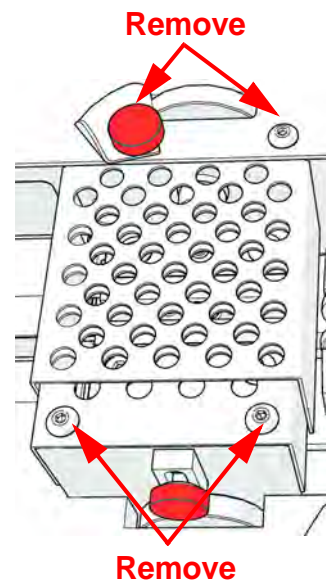


4. Clean the residues from the heat shoes by using a plastic or brass brush soaked in alcohol to remove any residue that has built up on the lip of the heat shoe.

**Note:** Do not use a steel bristled brush. It could damage the heat shoes.

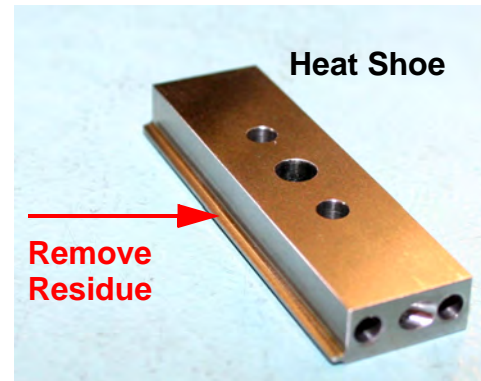

## Remove/Replace Heat Shoes


Remove heat shoes **every four months** and inspect and clean them. Replace if necessary.

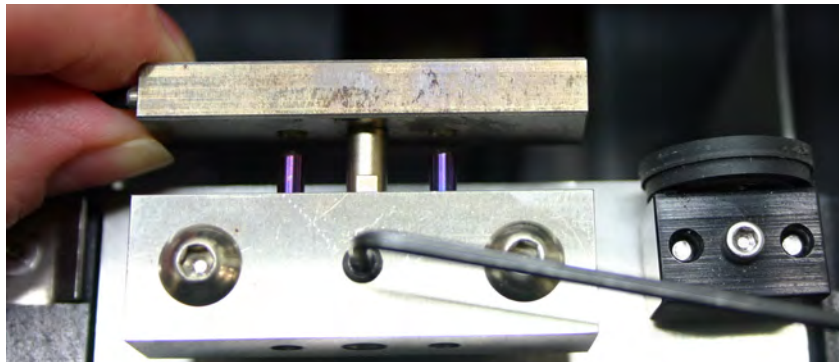

1. Ensure the heater is off and has cooled completely.
2. Remove the outer heat sealer guard as described above.
3. Use a 5/64 inch hex wrench to release the shoe from the heat sealer assembly.
4. Use a 5/64 inch hex wrench to unscrew the set screws on both ends of the heat shoe so the heater and the thermocouple can be removed.
5. Insert the heater and the thermocouple in a new heat shoe, aligning them so their ends are flush with the end of the heat shoe. Tighten the set screws to hold them in position.
6. Place the heat shoe back on the sealer assembly and tighten the set screw.
7. Replace the outer sealer guard.

## Loading Track.


The *Loading Track* should be cleared of dust and debris after **every 40 hours of operation**.

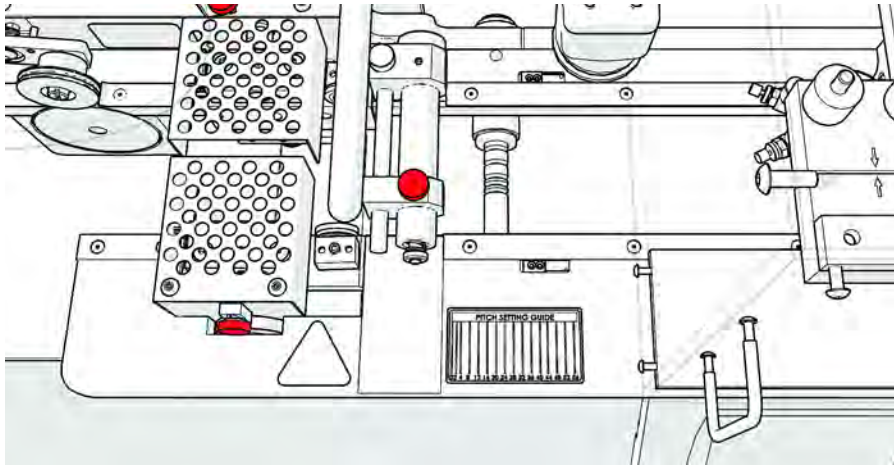

Strip the machine, remove the cover tape guide, and brush the dust and debris from the track with a small, stiff bristled paint brush. Excessive build-up of dirt and debris can cause carrier tape jams.

## PSA Sealer

The adhesive residues should be cleaned from the sealer assembly **every 40 hours of operation**.

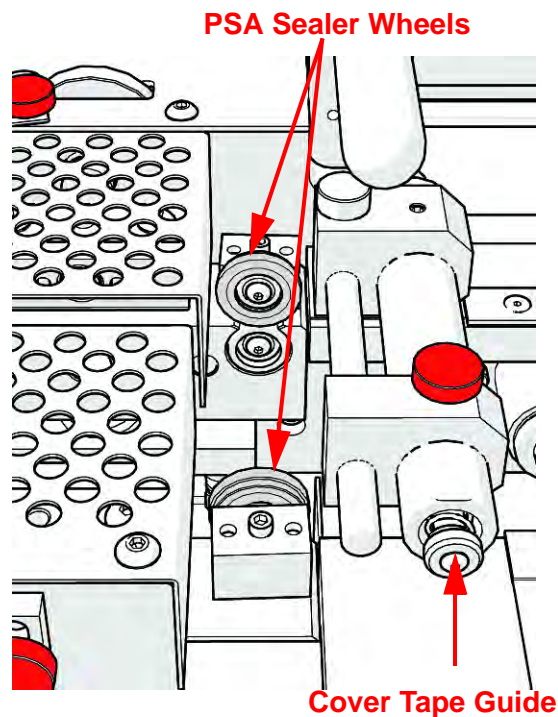


Wipe the entire assembly using a cloth soaked in alcohol. Using a cotton swab soaked in alcohol, clean between the sealer wheels. Also, clean the entire surface of the black polyurethane wheel.

**Note:** Do not use solvents other than alcohol when cleaning the black polyurethane wheels.

If during the cleaning process the sealer has become completely out of adjustment, turn the small screw behind the wheel counterclockwise approximately three turns. Slowly turn the screw clockwise while spinning the top wheel. Stop adjusting when the bottom wheel starts spinning with the top wheel.

### Cover Tape Guide

The Cover Tape Guide may become coated with adhesive and dirt during taping. It is important to keep the tape groove clean for proper alignment of the cover tape.

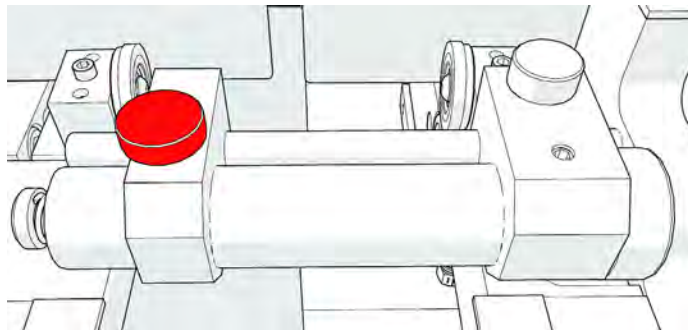

Clean the tape groove with alcohol and a cotton swab whenever it appears dirty. The recommended cleaning schedule is **every 40 hours of operation**.



# Appendix A: Sensors

---

---

## Contents

Keyence FS-N11CVP/FS-N12CP Sensor Amplifiers . . . . .	A-2
SMC ZSE30 Vacuum Sensor . . . . .	A-4

## Keyence FS-N11CP & FS-N12CP Sensor Amplifiers

The *Keyence FS-N11CP* and *FS-N12CP* sensor amplifiers (shown in Figure A.1 below) are used on the TM-403 for the *Low Cover Tape Sensor* and the *Tape Jam Sensor*. Both amplifiers are mounted on the *Cover Tape Arm*. The *Low Cover Tape* amplifier (FS-N11CP) is located on the left. The *Tape Jam* amplifier (FS-N12CP) is located on the right.

The two amplifiers are designed to be attached electrically and share power. Otherwise, the two units function independently of one another.

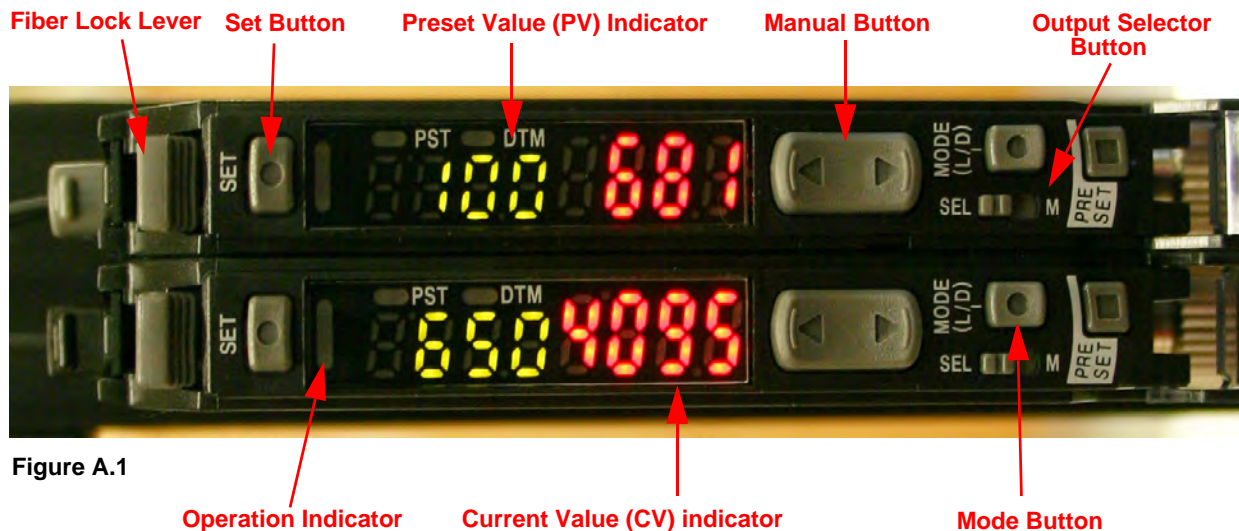


Figure A.1

### Selecting the Output Mode

The FS-N11CP/FS-N12CP sensor-amplifiers can be set to two *Output Modes*: **light-ON** or **dark-ON**. This determines under what conditions the sensor is triggered and the *Operation Indicator* is lit.

In **light-ON** mode, the sensor will be triggered when the current value (CV) of detected light from the emitter is higher than the preset value (PV). In **dark-ON** mode, the sensor is triggered when the CV of detected light is lower than the PV. Essentially, in **light-ON Output Mode** the sensor detects when an obstruction occurs (causing reflected light to increase) and in **dark-ON Output Mode** the sensor detects when an obstruction is removed (causing reflected light to decrease).

1. Press the **Output Selector** button. The *CV Indicator* will display the current mode.
2. Press the **Manual** button within 5 seconds of having pressed the **Output Selector** button. The *Output Mode* will be toggled.
3. The *CV Indicator* will return to its normal display after 5 seconds have elapsed.

## Locking the Keys

It is sometimes desirable to lock the keys of the sensor amplifiers so that the currents settings are not inadvertently changed.

1. Hold down the **Manual** button and the **Mode** button simultaneously for at least three seconds.
2. The *CV indicator* will display **Loc** to indicate that the lock is in place.
3. Repeat the same procedure to unlock the keys. The display will flash the message **unL**.


## Two-point Calibration

1. With an obstructing object between the sensors (ideally, a full reel of cover tape), press and release the **SET** button. The *PV Indicator* will be lit.
2. Remove the obstruction between the sensors and press **SET** again. The amplifier will return to its normal operating mode. The number shown on the *PV Indicator* should change.
3. If the sensor is in dark-ON mode, the operation indicator should be lit while there is an obstruction between the sensors. If the sensor is in light-ON mode, the operation indicator should be lit while there is no obstruction between the sensors.

## SMC ZSE30 Vacuum Sensor

The SMC ZSE30 Vacuum Sensor functions as a *Pick & Place Head* part present sensor. It compares the vacuum pressure at the pick and place nozzle to a threshold point.

When the vacuum pressure drops beneath this level the sensor sends an **OFF** signal to the machine (the LCD display will be green). When the vacuum rises above the threshold, the sensor sends an **ON** signal to the machine (the LCD screen will be red).

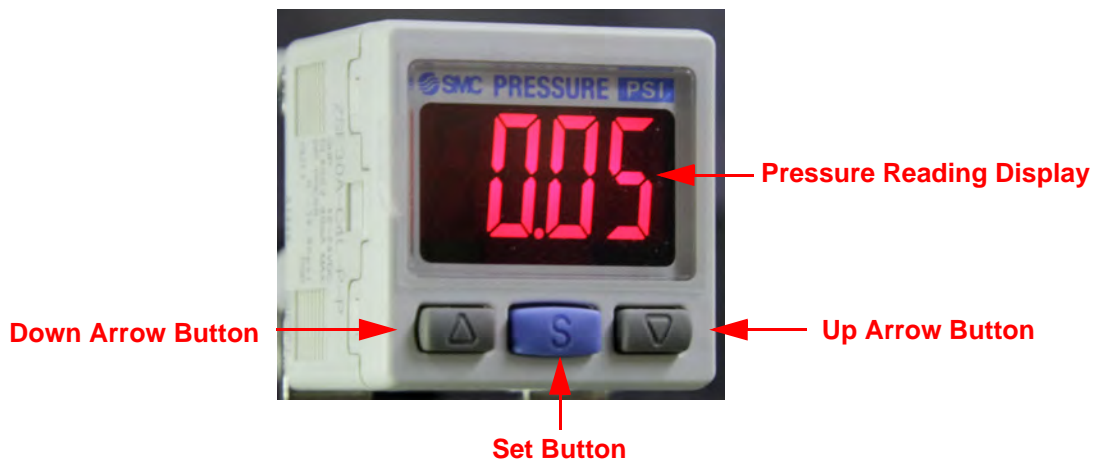

### Adjusting the Vacuum Sensor

If the machine places “empty” pockets (i.e., places as though it held a part when it did not) or returns a picking part error when it picked a part, the vacuum sensor’s threshold point probably needs to be adjusted.

To adjust the threshold point, follow these instructions:

1. With no part on the nozzle and the vacuum **ON**, note the reading on the vacuum sensor.  
*Example: -60.5.*
2. Press the **Set** button. The sensor will alternately flash **n\_1** and the current setting. This is the threshold point.
3. Using the **Up Arrow** and **Down Arrow** buttons, adjust the value of **n\_1** to about 5 less than the pressure reading that was noted with no part on the nozzle. *Example:  $-60.5 - 5 = -65.5$ .*
4. Press the **Set** button again. The sensor will now display the **h** (hysteresis) setting. This should read **0.0**.
5. Press the **Set** button again to exit back to *Normal Operation* mode. Run the machine and observe if the vacuum sensor is functioning properly.
6. If the machine places empty pockets, set the threshold point closer to the pressure reading when a part is on the nozzle. If the machine fails to detect a part on the nozzle when

one is present, set the threshold closer to the pressure reading when no part is on the nozzle. In this way, the optimum setting for each specific part can be reached.

## Initial Factory Settings

If for some reason the sensor needs to be re-initialized to the default factory settings, follow the steps below:

1. Press and hold the **Set** button for at least two seconds. The sensor will enter initialization mode. The first setting to appear will be the *Indication Unit* setting. This should be set to **PA**. Use the **Up Arrows** and **Down Arrows** to adjust this, if necessary.
2. Press the **Set** button to advance to the *Display Color* setting. This should be set to **Sor** (Red/ON).
3. The next setting is the *Operation* mode setting. This should be set to **HyS** (hysteresis).
4. The next setting is the *Output* mode setting. This should be set to **nC** (normally closed). If this setting is incorrect, the sensor will function backwards, such that the machine will not detect a part when is on the nozzle and detect a part when no part is present.
5. The next setting is the *Response Time* setting. This should be set to **2.5**.
6. The final setting is the *Auto Preset* setting. This should be set to **mAn** (manual).
7. Press the **Set** button to return to *Normal Operation* mode.



# **TM-403 Suggested Spare Parts List**

<b><u>Part Number</u></b>	<b><u>Description</u></b>	<b><u>Qty</u></b>
102534	Reset Switch Contact	1
102597	Digital Pressure Switch	1
105786	Take-up Motor	1
200401	Sealer Air Regulator	1
200636	Solenoid Air Valve	1
201026	Pick & Place Vacuum Air Filter	1
201207	Convum Vacuum Cup	1
209250	Pick & Place Spring	1
201271	SPT Vacuum Cup	1
201297	Large Quad Vacuum Cup	1
201298	Medium Quad Vacuum Cup	1
201299	Small Quad Vacuum Cup	1
210019	Taper Timing belt	1
210109	Pick & Place Timing Belt	1
212001	Solenoid O-Rings	3
212008	Taper Idler O-Ring	2
212025	Nozzle O-Rings	2
244007	Taper Thermocouple	2
244009	Taper Heater	2
261122	Heat Shoe	1
266737	Taper Drive Sprocket	1
292464	Convum Nozzle Kit	1
292465	Quad Nozzle Kit	1
292467	SPT Nozzle Kit	1
290603	Taper Upper PSA Wheel Assembly	2
500440	Vision Sensor Amplifier	1



**Caution!**

Only genuine spares should be used on the TM-403. Failure to use genuine spare parts could render the machine unsafe and void factory warranty.

# TM-403 Exploded Views





## Document List

---


TM-403 Final Assembly	Pages 1 - 7	292381.slddrw
Electrical Panel	Pages 1 - 5	291685.slddrw
Base	Pages 1 - 7	291681.slddrw
Pick & Place Assembly	Pages 1 - 10	291822.slddrw
Pick & Place Head	Pages 1 - 2	292752.slddrw
Nozzle Overtravel Assembly	Pages 1 - 2	292749.slddrw
Pick & Place Head Frame	Pages 1 - 2	292750.slddrw
Pick & Place Head Frame	Pages 1 - 2	292751.slddrw
Guard Assembly	Pages 1 - 4	291824.slddrw
Nozzle Set Long	Page 1 of 1	292756.slddrw
Taper	Page 1 - 3	291674.slddrw
Taper Base	Pages 1 - 5	291675.slddrw
Taper Motor Enclosure	Page 1 - 3	291676.slddrw
Take-up	Pages 1 - 2	292049.slddrw
Front Track Assembly	Page 1 - 2	291678.slddrw
Inner Seal PSA & Heat	Page 1 - 2	291624.slddrw
Outer Seal PSA & Heat	Page 1 - 2	291626.slddrw
Cover Tape Arm	Page 1 - 2	291583.slddrw
Cover Tape Guide	Page 1 - 3	290942.slddrw
Carrier Tape Arm	Page 1 - 2	290945.slddrw
Camera Over Tape	Pages 1 - 2	292050.slddrw
Tray Feeder	Page 1 - 6	291876.slddrw
Frame (optional)	Pages 1 - 6	291667.slddrw
Crate	Pages 1 - 6	291693.slddrw




REVISIONS				
ECO #	REV.	DESCRIPTION	DATE	APPROVED
	A	RELEASE	9/1/2016	PVO
2954	B	UPDATE LOGO DECALS	7/17/2017	PVO
3099	C	ADDED NOZZLE KIT 292756 TO THE BOM	3/5/2019	PVO

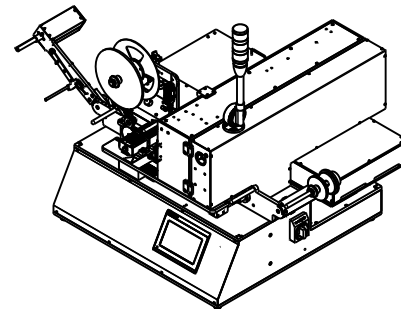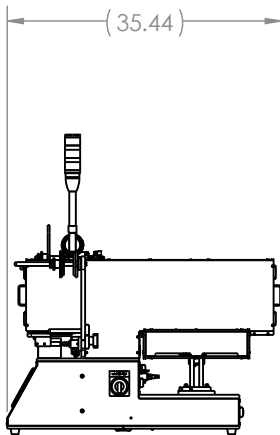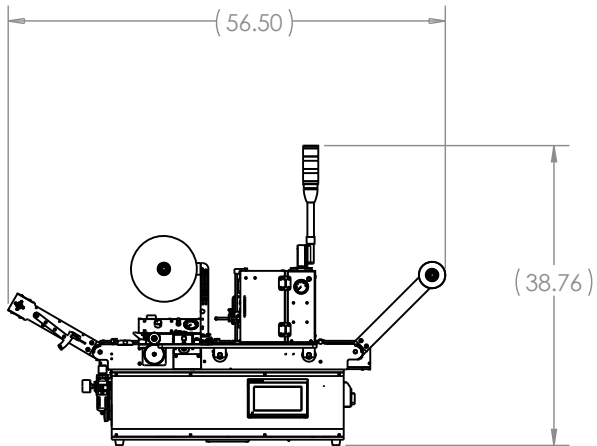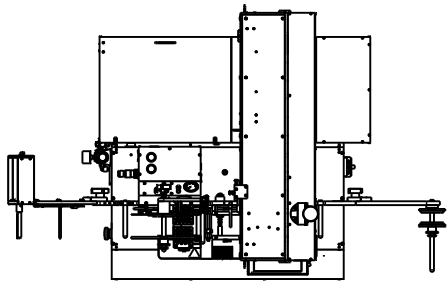


INSTRUCTIONS FOR ALIGNMENT OF  
TRAY ASSEMBLY WITH PICK HEAD ARE  
LOCATED ON SHEET 7


UNLESS OTHERWISE SPECIFIED:				NAME		DATE		 THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MANKATO, MN.	
DIMENSIONS ARE IN INCHES		DRAWN		CMA		9/1/2016			
TOLERANCES: .XXX ± 0.005		ENG APPR.		PVO		~			
XX ± 0.010									
X ± 0.015									
ANGULAR: MACHINED ± 0.1 °									
BEND ± 0.5 °									
SURFACE: 32									
GENERAL NOTES:									
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5									
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED									
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED									
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES									
MUST RESULT IN ROHS COMPLIANT PART									
- DO NOT SCALE DRAWING									

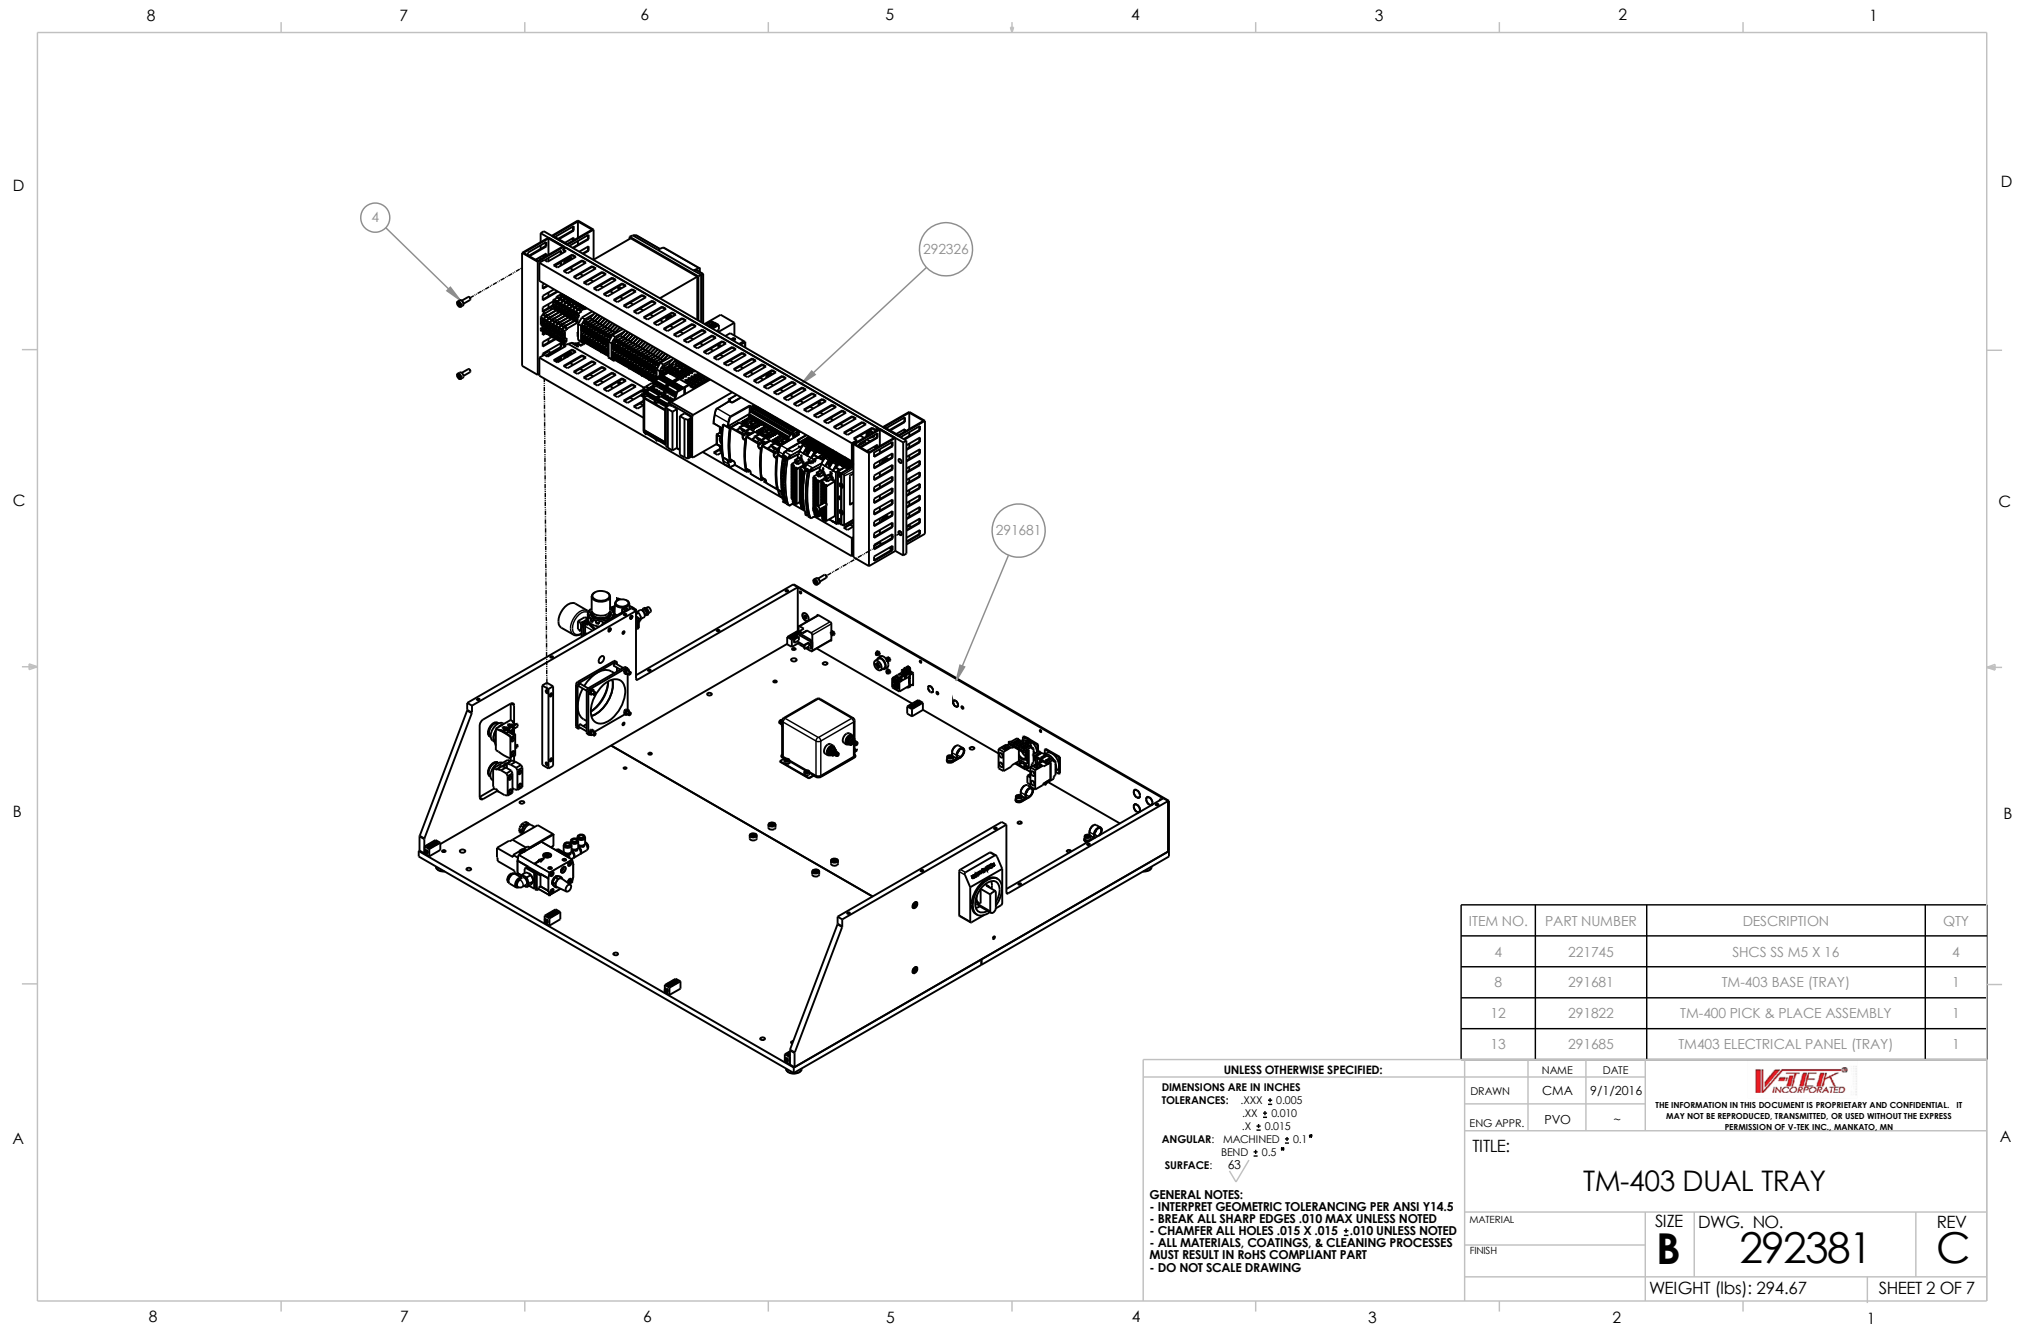

ITEM NO.	PART NUMBER	DESCRIPTION	QTY
4	221745	SHCS SS M5 X 1.6	4
8	291681	TM-403 BASE (TRAY)	1
12	291822	TM-400 PICK & PLACE ASSEMBLY	1
13	291685	TM403 ELECTRICAL PANEL (TRAY)	1

UNLESS OTHERWISE SPECIFIED:		
DIMENSIONS ARE IN INCHES		
TOLERANCES: .XXX ± 0.005		
.XX ± 0.010		
.X ± 0.015		
ANGULAR: MACHINED ± 0.1°		
BEND ± 0.5°		
SURFACE: 63		
GENERAL NOTES:		
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5		
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED		
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED		
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES		
MUST RESULT IN ROHS COMPLIANT PART		
- DO NOT SCALE DRAWING		

	NAME	DATE	 THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MANKATO, MN.	
DRAWN	CMA	9/1/2016		
ENG APPR.	PVO	~		
TITLE:				
TM-403 DUAL TRAY				
MATERIAL	SIZE	DWG. NO.	REV	
FINISH	B	292381	C	
		WEIGHT (lbs): 294.67	SHEET 2 OF 7	

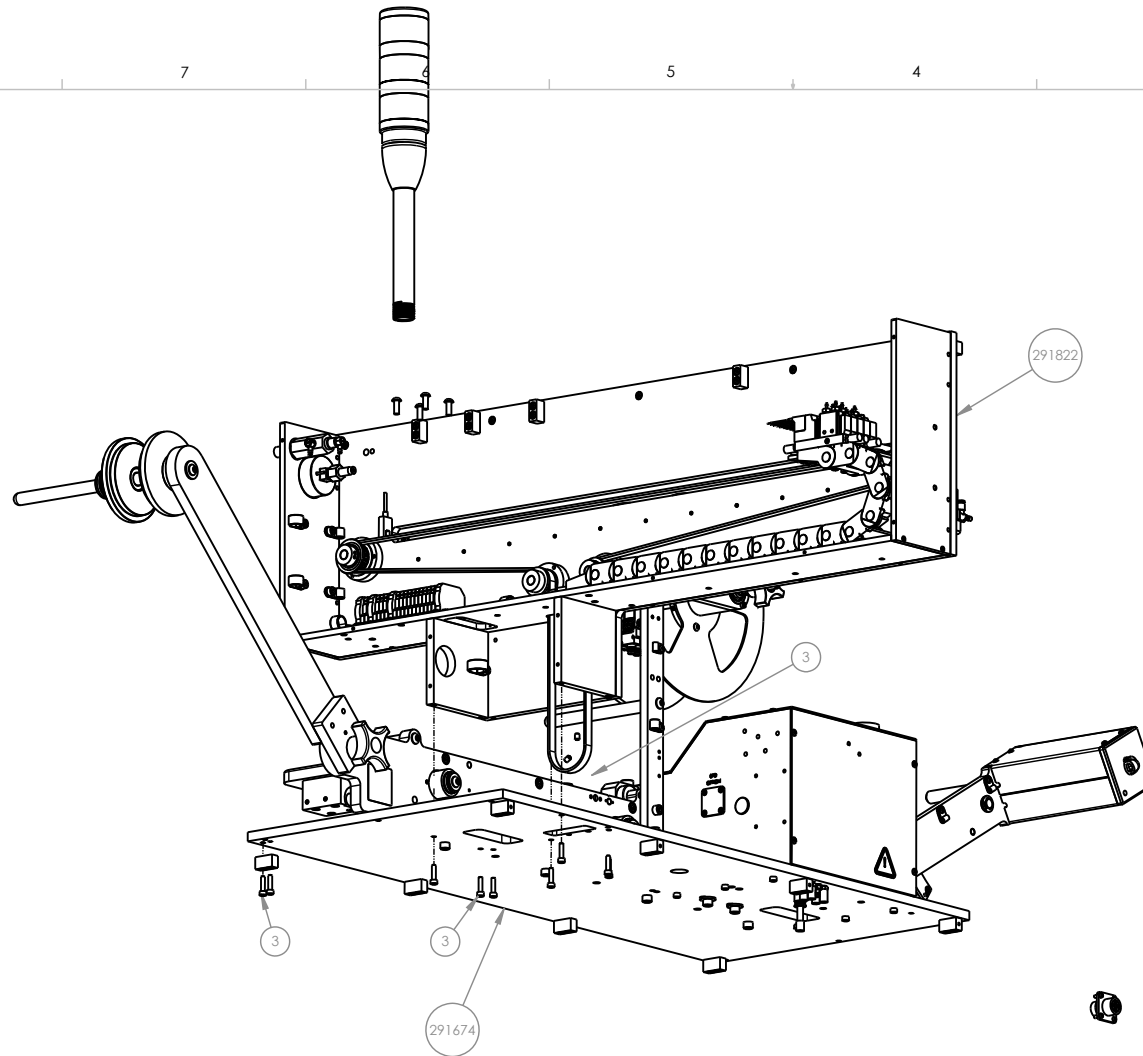


**NOTE:**  
THIS IS THE FINAL ASSEMBLY OF THE  
**TM-400 P&P ASSEMBLY (291822)** AS  
NOTED ON THE ASSEMBLY DRAWING.

UNLESS OTHERWISE SPECIFIED:  
DIMENSIONS ARE IN INCHES  
TOLERANCES: .XXX ± 0.005  
.XX ± 0.010  
.X ± 0.015  
ANGULAR: MACHINED ± 0.1°  
BEND ± 0.5°  
SURFACE: 63  
GENERAL NOTES:  
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5  
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED  
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED  
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES  
MUST RESULT IN ROHS COMPLIANT PART  
- DO NOT SCALE DRAWING

ITEM NO.	PART NUMBER	DESCRIPTION	QTY
3	221733	SS SHCS M4X16	31
7	291674	TM-400 TAPER ASSEMBLY	1
12	291822	TM-400 PICK & PLACE ASSEMBLY	1
13	291685	TM403 ELECTRICAL PANEL (TRAY)	1


DRAWN	CMA	NAME	DATE
ENG APPR.	PVO		9/1/2016
<b>TITLE:</b> <b>TM-403 DUAL TRAY</b>			
MATERIAL	SIZE	DWG. NO.	REV
FINISH	<b>B</b>	<b>292381</b>	<b>C</b>
WEIGHT (lbs): 294.67			SHEET 3 OF 7

**V-TEK**  
INCORPORATED  
THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT  
MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS  
PERMISSION OF V-TEK INC., MANKATO, MN

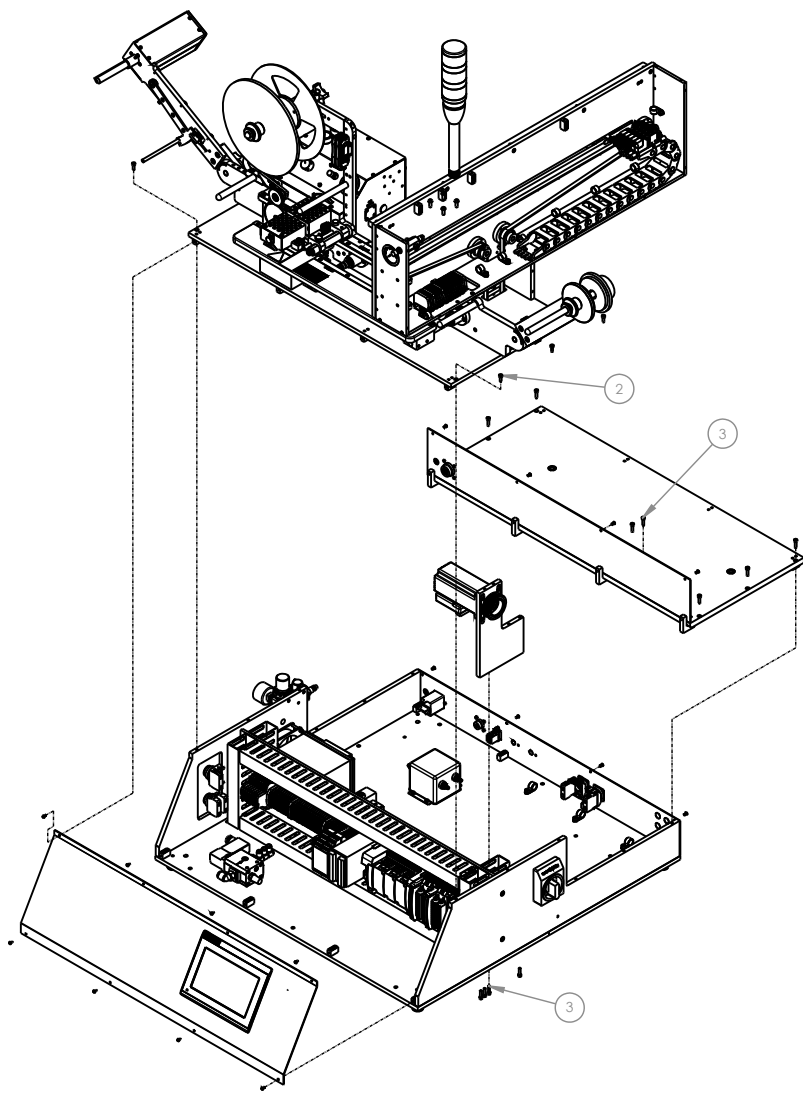

**NOTE:**  
THIS IS THE FINAL ASSEMBLY OF THE  
**TM-403 BASE ASSEMBLY** (291681)  
AND THE **TM-400 P&P ASSEMBLY**  
(291822) AS NOTED ON THE  
ASSEMBLY DRAWING.

ITEM NO.	PART NUMBER	DESCRIPTION	QTY
2	221731	SHCS SS M4 X 12	6
3	221733	SS SHCS M4X16	31
12	291822	TM-400 PICK & PLACE ASSEMBLY	1
13	291685	TM403 ELECTRICAL PANEL (TRAY)	1

UNLESS OTHERWISE SPECIFIED:			NAME		DATE	
DIMENSIONS ARE IN INCHES			DRAWN	CMA	9/1/2016	
TOLERANCES: .XXX ± 0.005			ENG APPR.	PVO	~	 THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MANKATO, MN.
.XX ± 0.010						
.X ± 0.015						
ANGULAR: MACHINED ± 0.1°			TITLE:			
BEND ± 0.5°						
SURFACE: 63			TM-403 DUAL TRAY			
GENERAL NOTES:						
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5			MATERIAL	SIZE	DWG. NO.	REV
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED						
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED			FINISH	B	292381	C
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES						
MUST RESULT IN ROHS COMPLIANT PART						
- DO NOT SCALE DRAWING			WEIGHT (lbs): 294.67		SHEET 4 OF 7	

8 7 6 5 4 3 2 1


D

C

B

A

NOTE:  
THIS IS THE FINAL ASSEMBLY OF THE  
P&P ASSEMBLY (291822) AS NOTED  
ON THE ASSEMBLY DRAWING.

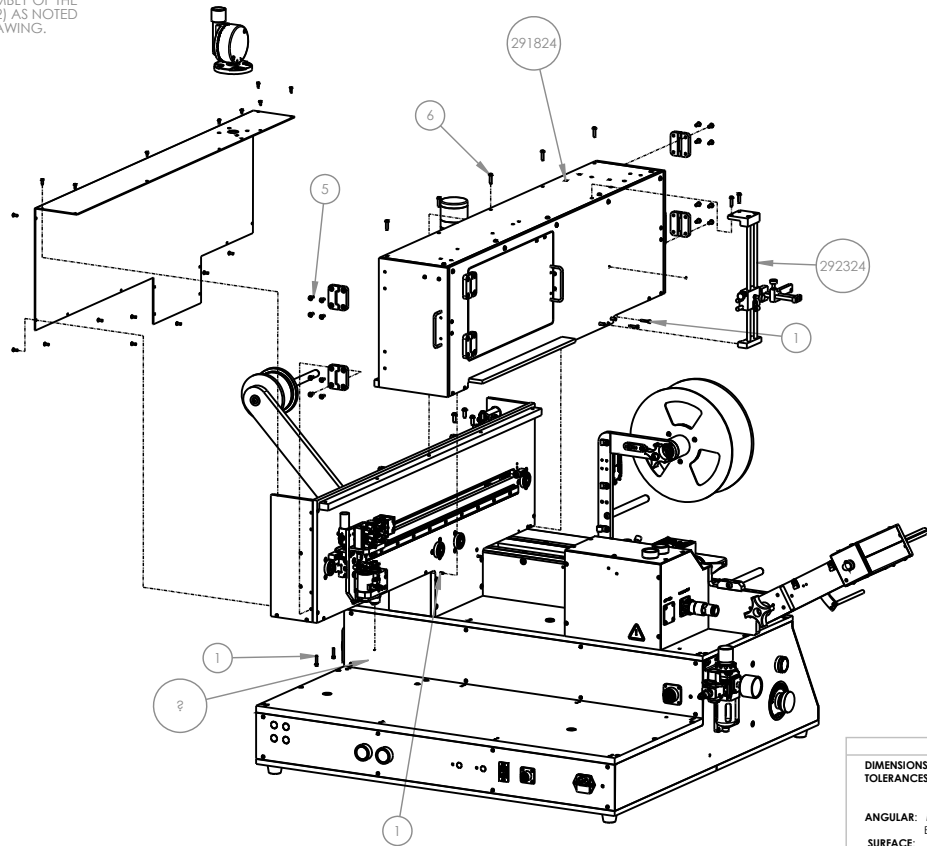

UNLESS OTHERWISE SPECIFIED:

DIMENSIONS ARE IN INCHES  
TOLERANCES: .XX ± 0.005  
.XX ± 0.010  
.X ± 0.015  
ANGULAR: MACHINED ± 0.1°  
BEND ± 0.5°  
SURFACE: 63


GENERAL NOTES:  
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5  
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED  
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED  
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES  
MUST RESULT IN ROHS COMPLIANT PART  
- DO NOT SCALE DRAWING

ITEM NO.	PART NUMBER	DESCRIPTION	QTY
1	221714	SHCS SS M3 X 16	6
5	223730	BHCS SS M4 X 10	8
6	223733	BHCS SS M4 X 16	5
9	291824	TM-403 GUARD ASSEMBLY (TRAY)	1
10	292324	CAMERA MOUNT	1
12	291822	TM-400 PICK & PLACE ASSEMBLY	1
13	291685	TM403 ELECTRICAL PANEL (TRAY)	1

DRAWN	CMA	DATE	9/1/2016
ENG APPR.	PVO		
TITLE:			
TM-403 DUAL TRAY			
MATERIAL	SIZE	DWG. NO.	REV
FINISH	B	292381	C
WEIGHT (lbs): 294.67			SHEET 5 OF 7

VITEK  
INCORPORATED

THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT  
MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS  
PERMISSION OF V-TEK INC., MANKATO, MN

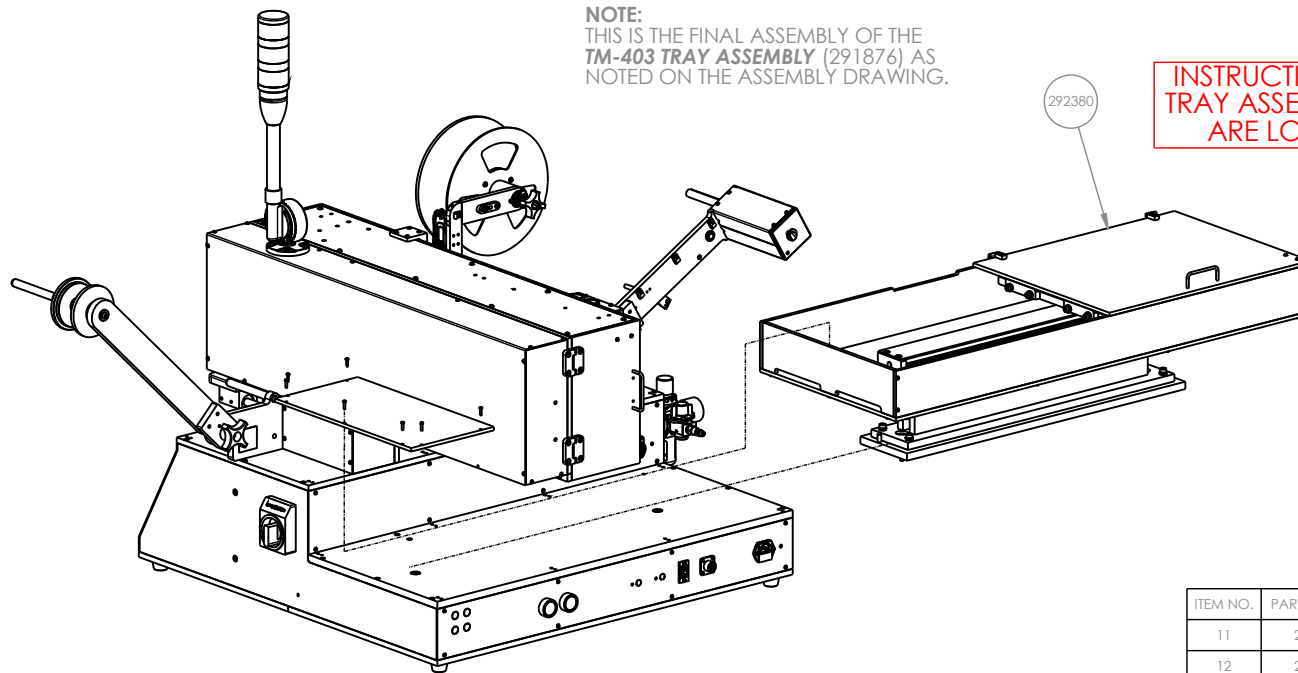


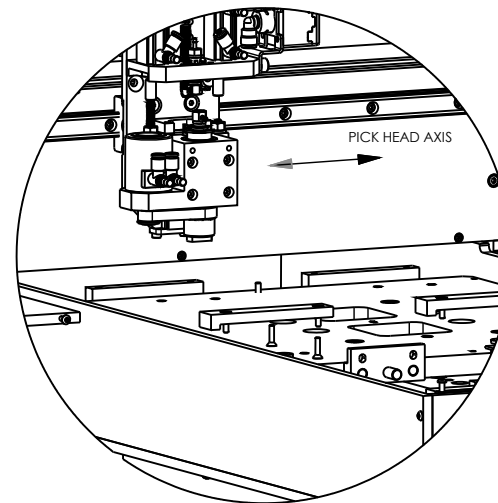
NOTE:  
THIS IS THE FINAL ASSEMBLY OF THE  
**TM-403 TRAY ASSEMBLY** (291876) AS  
NOTED ON THE ASSEMBLY DRAWING.

INSTRUCTIONS FOR ALIGNMENT  
TRAY ASSEMBLY WITH PICK HEAD  
ARE LOCATED ON SHEET 7



ITEM NO.	PART NUMBER	DESCRIPTION	QTY
11	292380	TM-403 TRAY ASSEMBLY ADJUSTABLE	1
12	291822	TM-400 PICK & PLACE ASSEMBLY	1
13	291685	TM403 ELECTRICAL PANEL (TRAY)	1

UNLESS OTHERWISE SPECIFIED:  
DIMENSIONS ARE IN INCHES  
TOLERANCES: .XXX ± 0.005  
                  .XX ± 0.010  
                  .X ± 0.015  
ANGULAR: MACHINED ± 0.1°  
                  BEND ± 0.5°  
SURFACE: 63  
GENERAL NOTES:  
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5  
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED  
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED  
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES  
MUST RESULT IN ROHS COMPLIANT PART  
- DO NOT SCALE DRAWING

	NAME	DATE	 THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MANKATO, MN.
DRAWN	CMA	9/1/2016	
ENG APPR.	PVO	~	
TITLE:			
TM-403 DUAL TRAY			
MATERIAL	SIZE	DWG. NO.	REV
FINISH	B	292381	C
WEIGHT (lbs): 294.67			SHEET 6 OF 7





THE TRAY ASSEMBLY NEEDS TO BE ALIGNED WITH THE PICK HEAD AXIS. USE INDICATOR HOLDER PART NUMBER 270108 TO MOUNT A DIAL INDICATOR TO THE PICK & PLACE HEAD. SWEEP THE INDICATOR OVER THE FRONT TRAY KEEPERS (269225) AND ADJUST THE POSITION OF THE TRAY ASSEMBLY SO THE DIFFERENCE FROM END TO END IS .001" OR LESS.



UNLESS OTHERWISE SPECIFIED:		NAME		DATE		 	
DIMENSIONS ARE IN INCHES		DRAWN		CMA		9/1/2016	
TOLERANCES: XXX ± 0.005 XX ± 0.010 X ± 0.015		ENG APPR.		PVO		THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MANKATO, MN OR ROYCE INSTRUMENTS LLC, NAPA, CA.	
ANGULAR: MACHINED ± 0.1° BEND ± 0.5° SURFACE: 32		TITLE:		TM-403 DUAL TRAY			
GENERAL NOTES: - INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5 - BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED - CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED - ALL MATERIALS, COATINGS, & CLEANING PROCESSES MUST RESULT IN RoHS COMPLIANT PART - DO NOT SCALE DRAWING		MATERIAL		SIZE DWG. NO.		REV	
		FINISH		<b>B</b>		<b>292381</b>	
				WEIGHT (lbs): 294.67		SHEET 7 OF 7	

8 7 6 5 4 3 2 1


REVISION				
ECO #	REV.	DESCRIPTION	DATE	APPROVED
	A	RELEASE	9/16/2013	PVO
2873	B	ADD 1x 104178	8/10/2015	RH

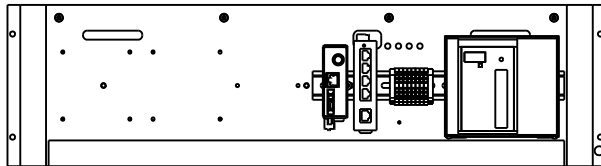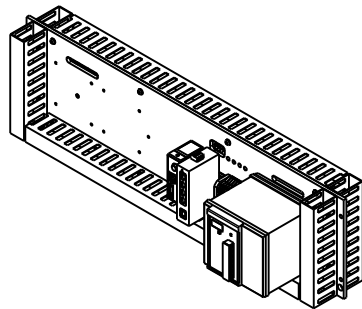

ELECTRICAL PANEL SIDE A

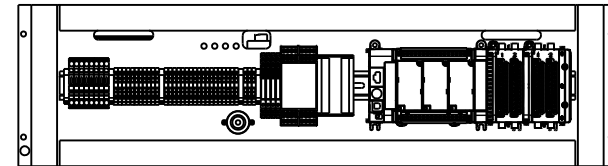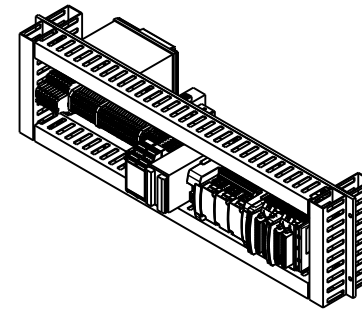

ELECTRICAL PANEL SIDE B

UNLESS OTHERWISE SPECIFIED:		NAME	DATE	 THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MANKATO, MN.	
DIMENSIONS ARE IN INCHES		DRAWN	RH		
TOLERANCES: .XXX ± 0.005 .XX ± 0.010 .X ± 0.015		ENG APPR.	PVO		
ANGULAR: MACHINED ± 0.1° BEND ± 0.5°		TITLE:		TM403 ELECTRICAL PANEL (TRAY)	
SURFACE: 32		MATERIAL		SIZE	DWG. NO.
GENERAL NOTES: - INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5 - BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED - CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED - ALL MATERIALS, COATINGS, & CLEANING PROCESSES MUST RESULT IN RoHS COMPLIANT PART - DO NOT SCALE DRAWING		FINISH		<b>B</b>	291685
				REV	B
				WEIGHT (lbs): 14.63	
				SHEET 1 OF 5	

8 7 6 5 4 3 2 1

D

C

B


A

D


C

B


A

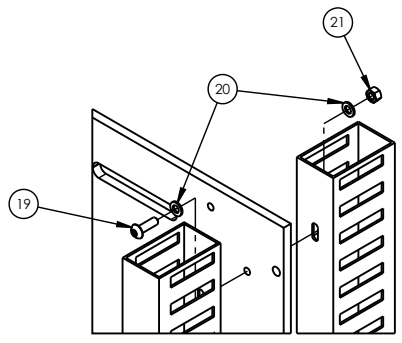

DETAIL A  
WIRE CHASE ATTACHMENT  
SCALE 1:3

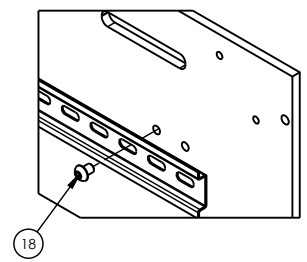

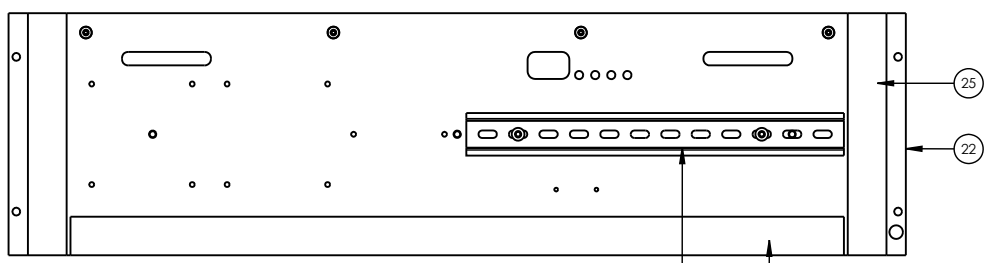


DETAIL B  
DIN RAIL ATTACHMENT  
SCALE 1:3



ELECTRICAL PANEL SIDE A

ITEM NO.	PART NO.	DESCRIPTION	QTY
18	223749	BHCS SS M6X8	5
19	223750	SHBS SS M5 X 16	12
20	238044	M5 SS FLAT WASHER	24
21	239105	M5 SS HEX NUT	12
22	267029	TM-400 ELECTRICAL PANEL	1
23	267030	TM-400 DIN RAIL - SHORT	1
24	267031	TM-400 WIRE CHASE #1	3
25	267032	TM-400 WIRE CHASE #2	4


 
UNLESS OTHERWISE SPECIFIED:			NAME		DATE	
DIMENSIONS ARE IN INCHES			DRAWN	RH	9/12/13	
TOLERANCES: .XXX ± 0.005			ENG APPR.	PVO	~	
.XX ± 0.010						
.X ± 0.015						
ANGULAR: MACHINED ± 0.1°			 THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MANKATO, MN.			
BEND ± 0.5°						
SURFACE: 			TITLE:			
GENERAL NOTES:			TM403 ELECTRICAL PANEL (TRAY)			
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5			MATERIAL	SIZE	DWG. NO.	REV
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED						
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED			FINISH	B	291685	B
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES MUST RESULT IN ROHS COMPLIANT PART						
- DO NOT SCALE DRAWING						
			WEIGHT (lbs): 14.63		SHEET 2 OF 5	

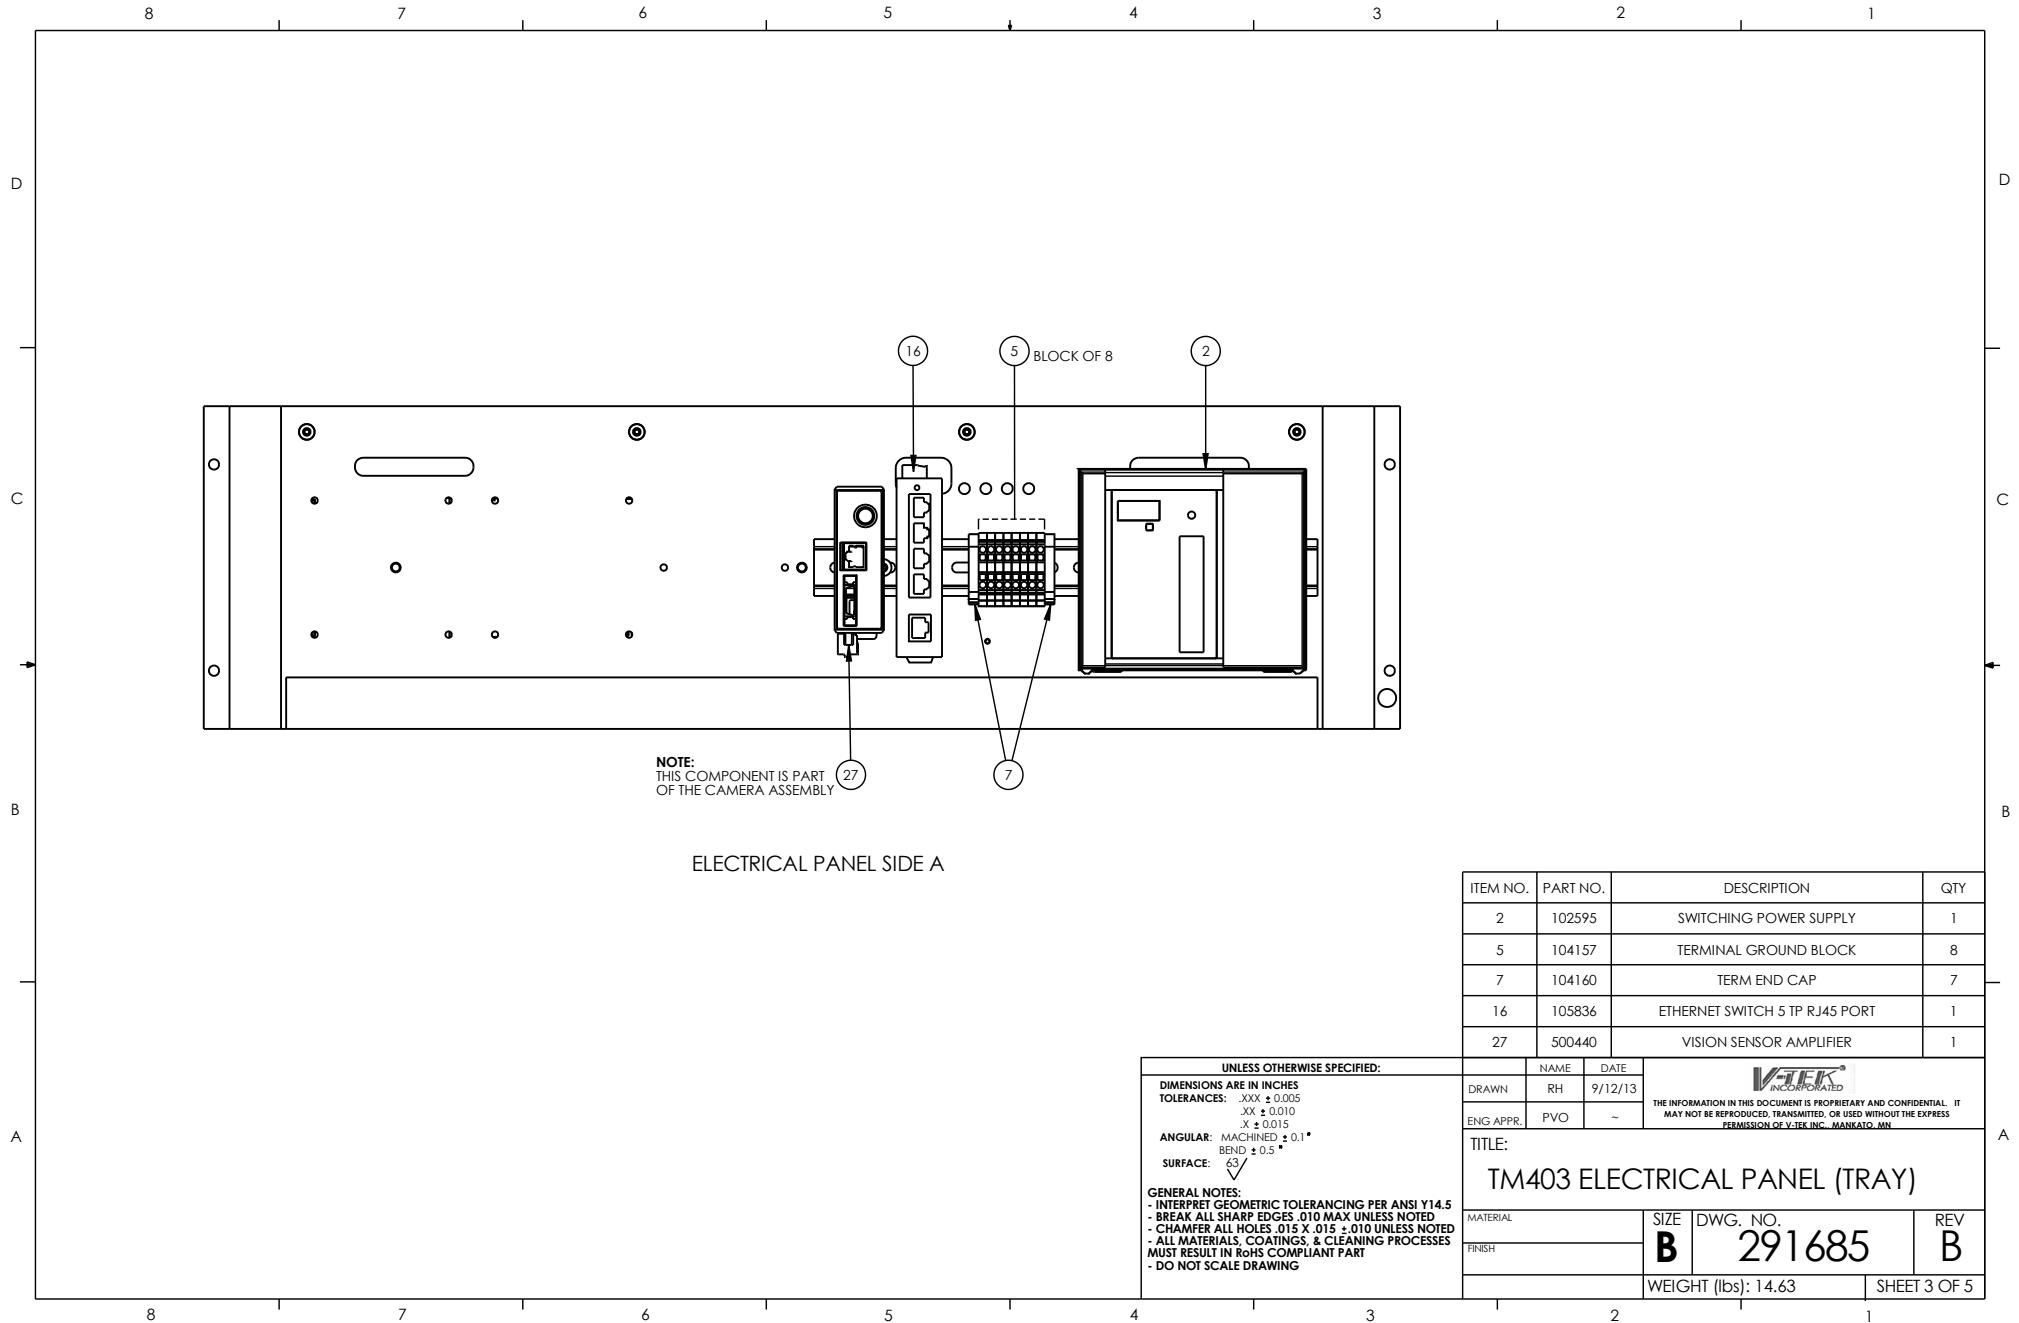


NOTE:  
THIS COMPONENT IS PART  
OF THE CAMERA ASSEMBLY


ELECTRICAL PANEL SIDE A

ITEM NO.	PART NO.	DESCRIPTION	QTY
2	102595	SWITCHING POWER SUPPLY	1
5	104157	TERMINAL GROUND BLOCK	8
7	104160	TERM END CAP	7
16	105836	ETHERNET SWITCH 5 TP RJ45 PORT	1
27	500440	VISION SENSOR AMPLIFIER	1


UNLESS OTHERWISE SPECIFIED:			NAME		DATE		
DIMENSIONS ARE IN INCHES			DRAWN	RH	9/12/13	THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MANKATO, MN.	
TOLERANCES: .XXX ± 0.005 .XX ± 0.010 .X ± 0.015			ENG APPR.	PVO	~		
ANGULAR: MACHINED ± 0.1° BEND ± 0.5°			TITLE:  TM403 ELECTRICAL PANEL (TRAY)				
SURFACE: 							
GENERAL NOTES: - INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5 - BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED - CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED - ALL MATERIALS, COATINGS, & CLEANING PROCESSES MUST RESULT IN ROHS COMPLIANT PART - DO NOT SCALE DRAWING			MATERIAL	SIZE	DWG. NO.	REV	
			FINISH	B	291685	B	
			WEIGHT (lbs): 14.63			SHEET 3 OF 5	

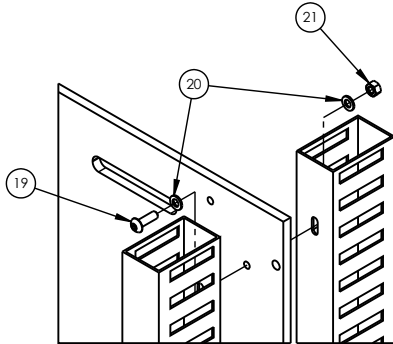

DETAIL A  
WIRE CHASE ATTACHMENT  
SCALE 1:3

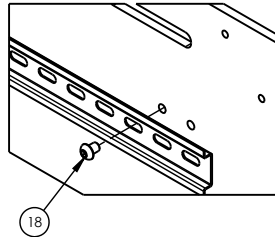

DETAIL B  
DIN RAIL ATTACHMENT  
SCALE 1:3

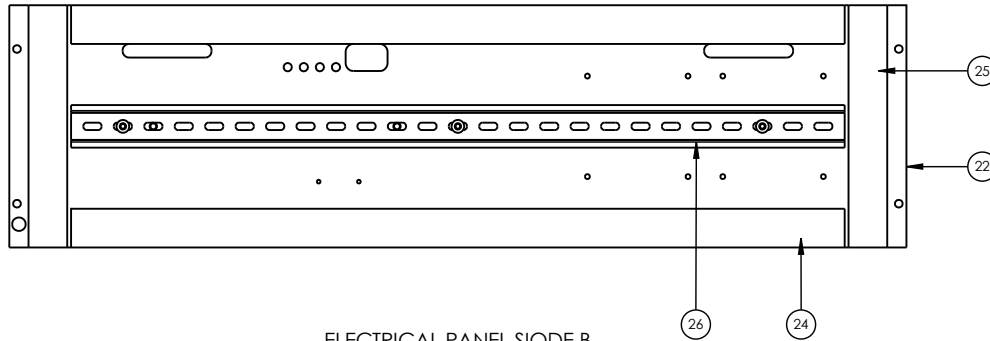

ELECTRICAL PANEL SIDE B

ITEM NO.	PART NO.	DESCRIPTION	QTY
18	223749	BHCS SS M6X8	5
19	223750	SHBS SS M5 X 16	12
20	238044	M5 SS FLAT WASHER	24
21	239105	M5 SS HEX NUT	12
22	267029	TM-400 ELECTRICAL PANEL	1
24	267031	TM-400 WIRE CHASE #1	3
25	267032	TM-400 WIRE CHASE #2	4
26	267033	TM-400 DIN RAIL - LONG	1

**UNLESS OTHERWISE SPECIFIED:**

**DIMENSIONS ARE IN INCHES**

**TOLERANCES:** .XXX ± 0.005  
 .XX ± 0.010  
 .X ± 0.015

**ANGULAR:** MACHINED ± 0.1°  
 BEND ± 0.5°

**SURFACE:** 63


**GENERAL NOTES:**


- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES MUST RESULT IN ROHS COMPLIANT PART
- DO NOT SCALE DRAWING

DRAWN	RH	DATE	9/12/13
ENG APPR.	PVO		
<b>TITLE:</b> <b>TM403 ELECTRICAL PANEL (TRAY)</b>			
MATERIAL	SIZE	DWG. NO.	REV
FINISH	<b>B</b>	<b>291685</b>	<b>B</b>
WEIGHT (lbs): 14.63		SHEET 4 OF 5	





 
THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MANKATO, MN.

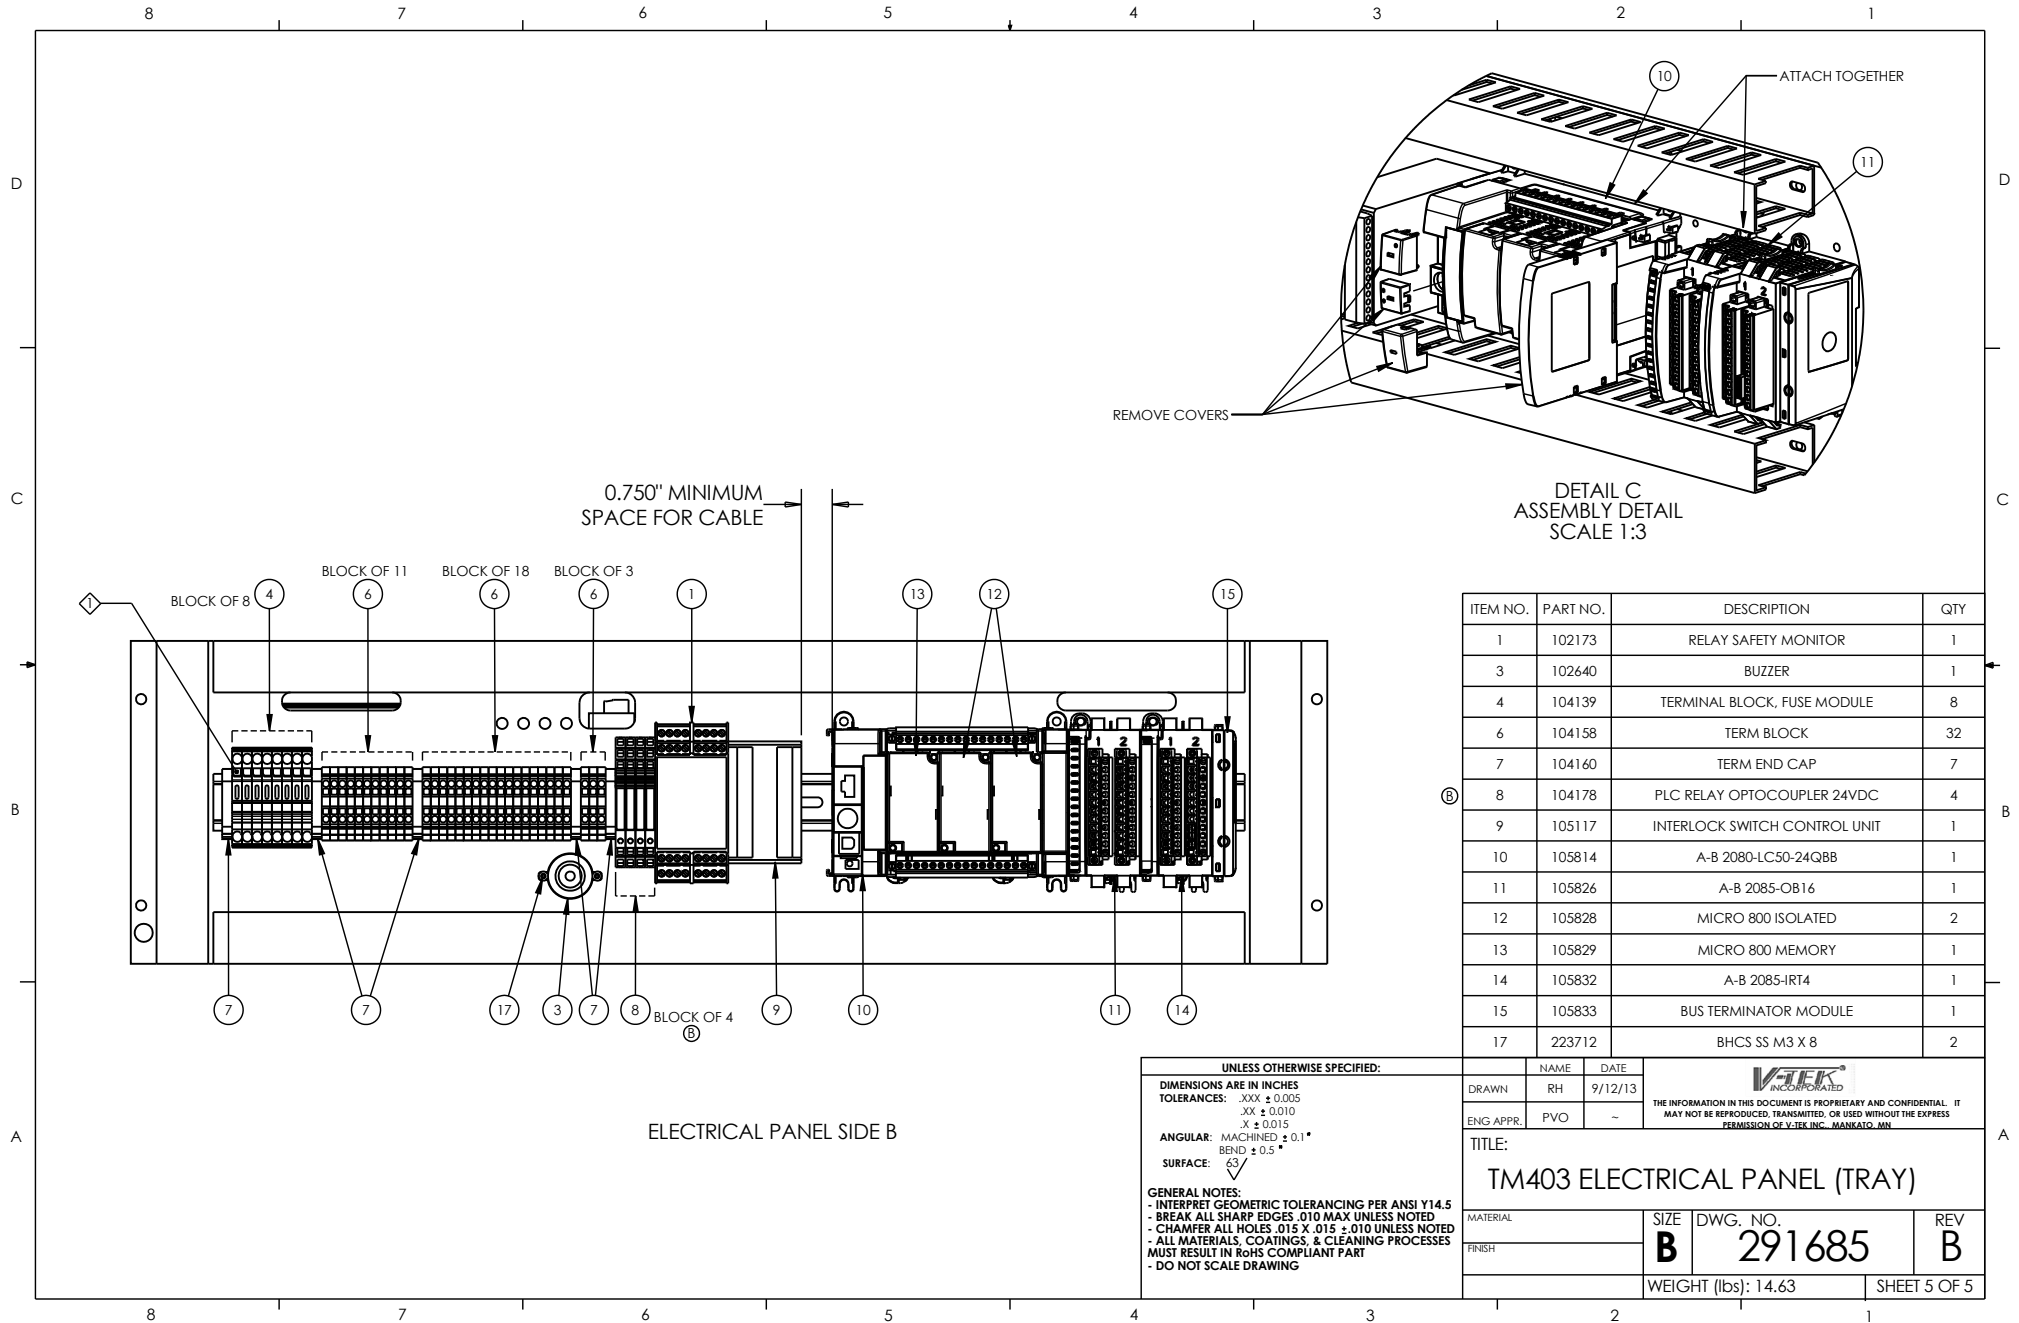


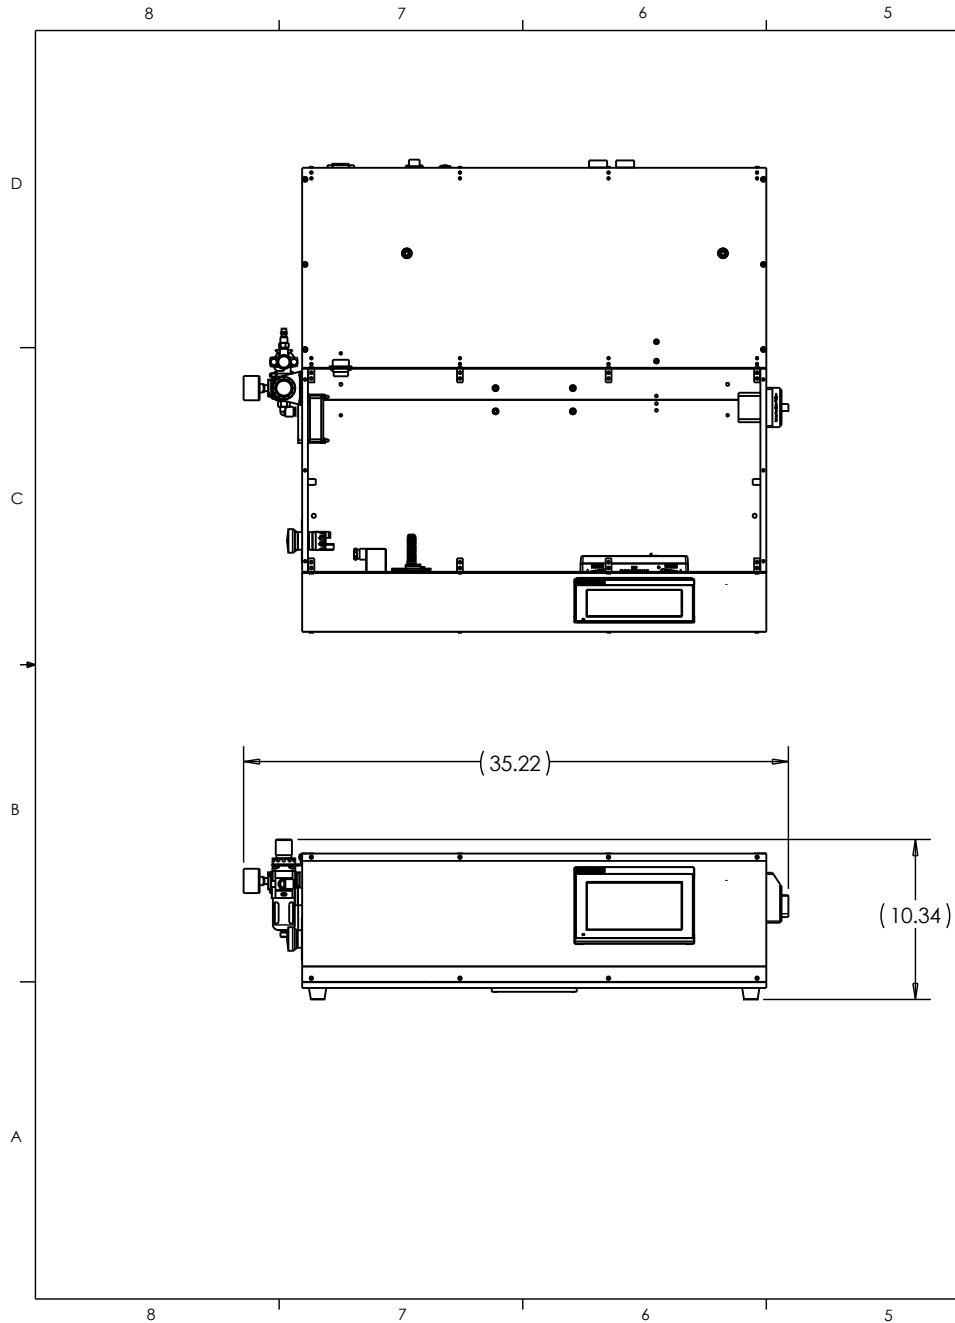


REVISION				
ECO #	REV.	DESCRIPTION	DATE	APPROVED
	A	RELEASE	9/12/2013	PVO
2799	B	REMOVE PART #111161	6/18/2014	RH
2895	C	ADD PART #103058	6/30/2016	PVO
2920	D	REPLACE 105830 WITH 105926	1/12/2017	PVO
2954	E	REPLACE 111163 WITH 111178	7/17/2017	PVO

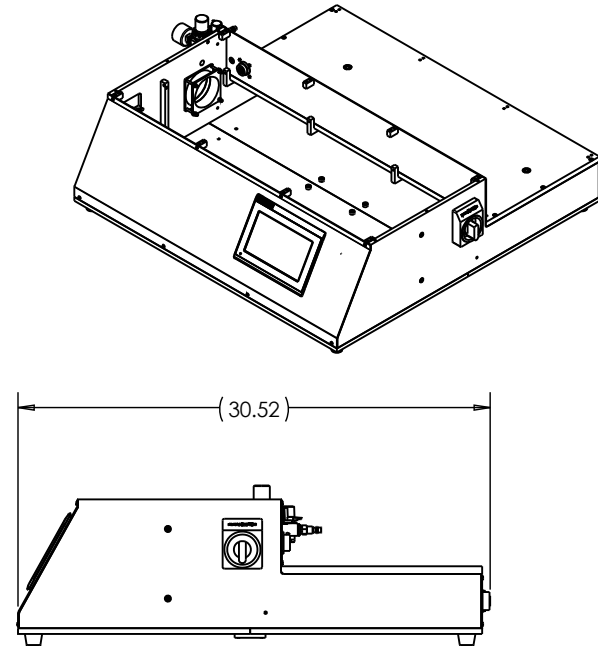


UNLESS OTHERWISE SPECIFIED:		NAME		DATE			
<p>DIMENSIONS ARE IN INCHES</p> <p>TOLERANCES: .XXX ± 0.005                   .XX ± 0.010                   .X ± 0.015</p> <p>ANGULAR: MACHINED ± 0.1°                   BEND ± 0.5°</p> <p>SURFACE: </p>		DRAWN	RH	9/12/13		<p>THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MANKATO, MN.</p>	
		ENG APPR.	PVO	~			
<p>GENERAL NOTES:</p> <p>INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5</p> <p>- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED</p> <p>- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED</p> <p>- ALL MATERIALS, COATINGS, &amp; CLEANING PROCESSES MUST RESULT IN RoHS COMPLIANT PART</p> <p>- DO NOT SCALE DRAWING</p>		TITLE:					
		TM-403 BASE (TRAY)					
		MATERIAL		SIZE	DWG. NO.		REV
FINISH		B	291681		E		
		WEIGHT (lbs): 80.19				SHEET 1 OF 8	

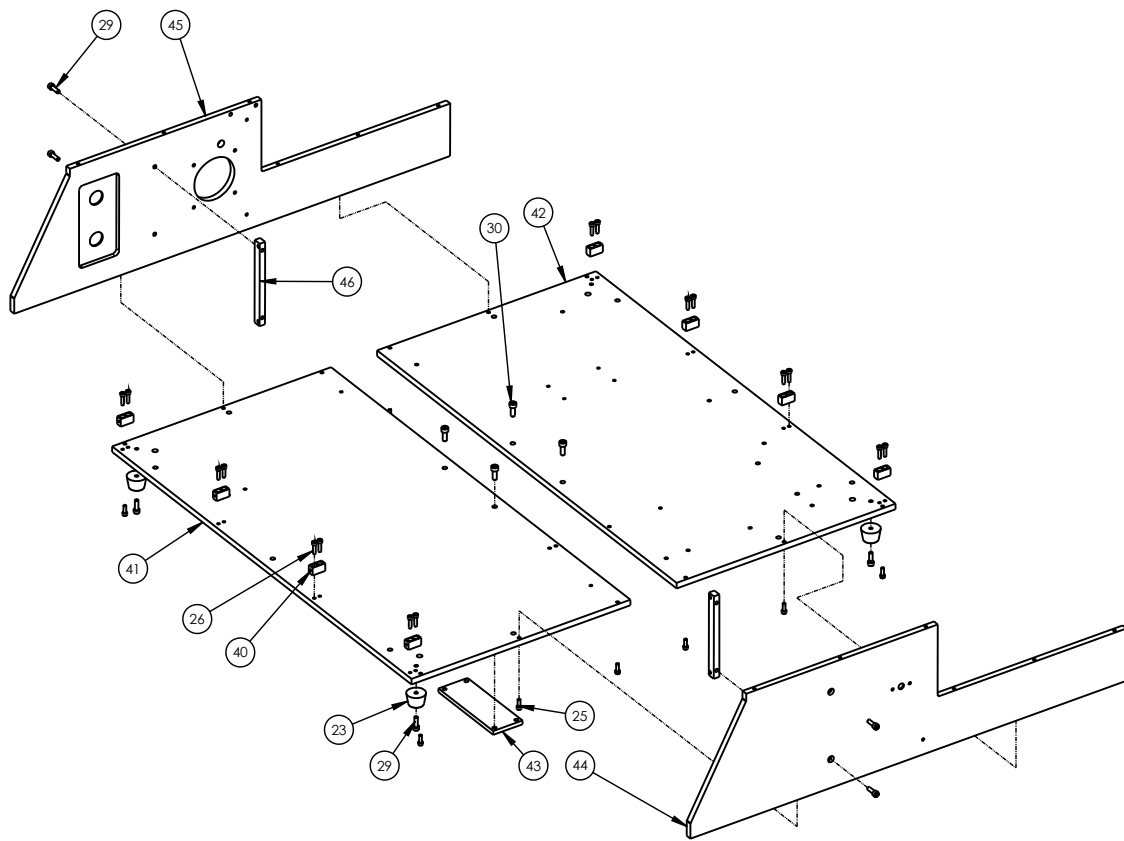


ITEM NO.	PART NUMBER	DESCRIPTION	QTY
23	217211	FEET POLY	4
25	221731	SHCS SS M4 X 12	12
26	221733	SS SHCS M4X16	22
29	221745	SHCS SS M5 X 16	8
30	221755	SHCS SS M6 X 16	4
40	267021	BUMPER MOUNT	20
41	267050	TM400 LOWER BASEPLATE (FRONT)	1
42	267051	TM400 LOWER BASEPLATE (REAR)	1
43	267052	JOINING PLATE	1
44	267053	TM400 BASE SIDE (RIGHT)	1
45	267054	TM400 BASE SIDE (LEFT)	1
46	267055	ELECTRICAL PANEL MOUNT	2

UNLESS OTHERWISE SPECIFIED:			NAME	DATE
DIMENSIONS ARE IN INCHES			DRAWN	RH
TOLERANCES: .XXX ± 0.005			ENG APPR.	PVO
.XX ± 0.010				
.X ± 0.015				
ANGULAR: MACHINED ± 0.1°				
BEND ± 0.5°				
SURFACE: 				
GENERAL NOTES:			THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MANKATO, MN.	
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5			TITLE:	
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED			TM-403 BASE (TRAY)	
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED			MATERIAL	SIZE
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES MUST RESULT IN RoHS COMPLIANT PART			FINISH	DWG. NO.
- DO NOT SCALE DRAWING				<b>B</b> 291681
				REV
				E
			WEIGHT (lbs): 80.19	
			SHEET 2 OF 8	

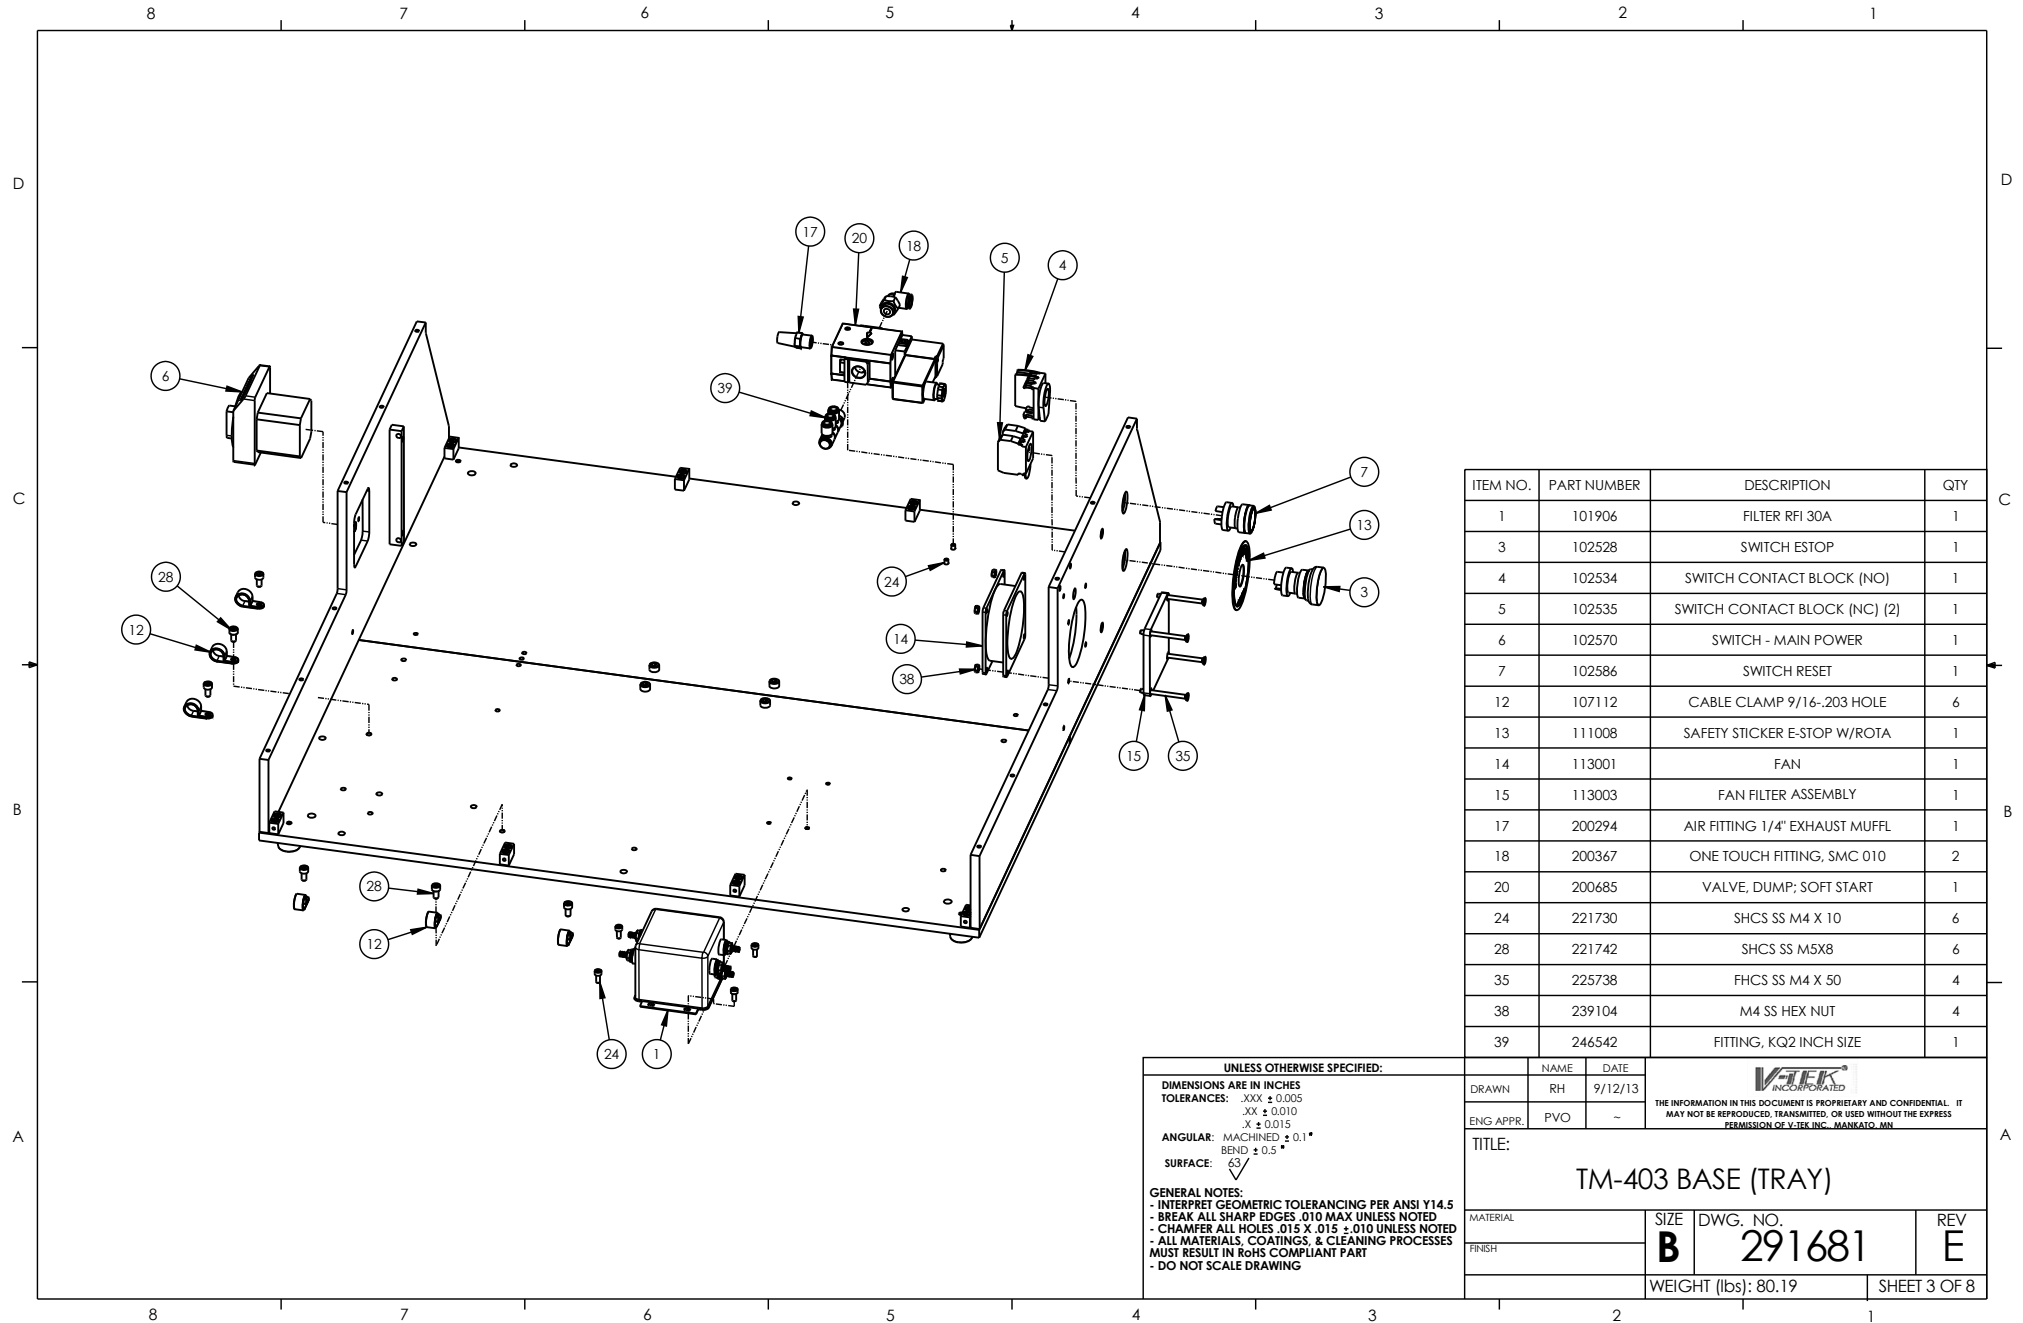



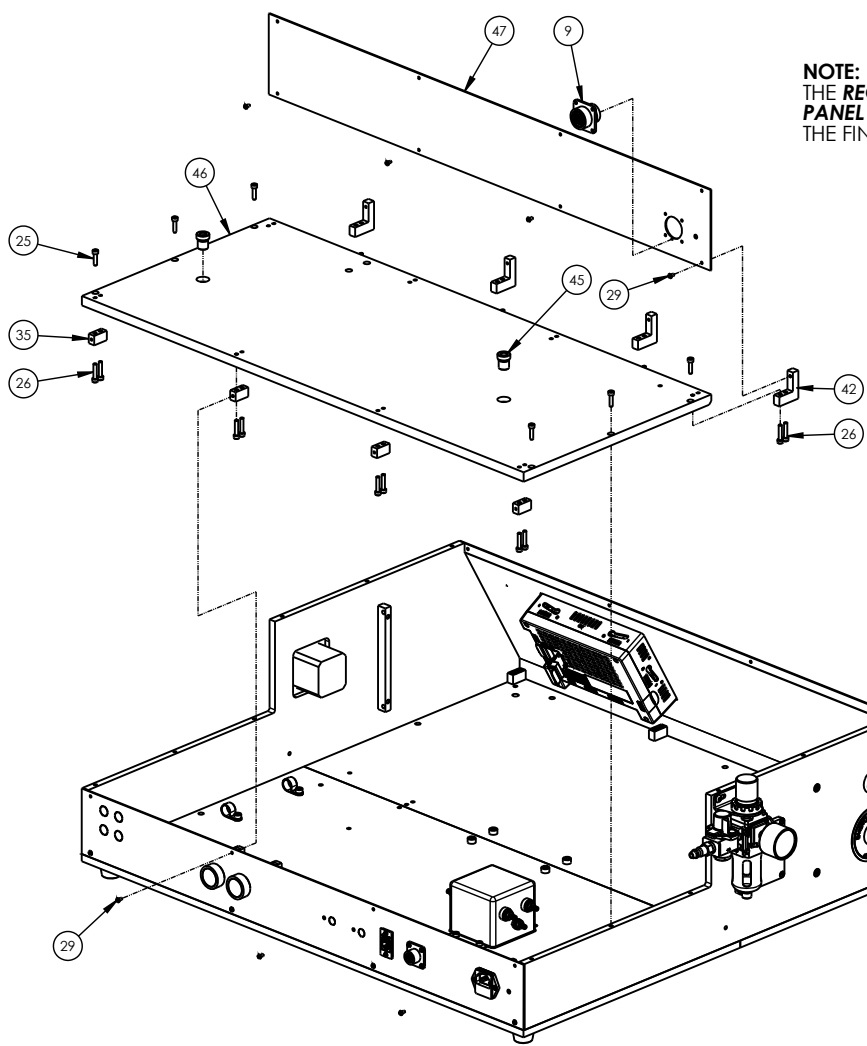


**NOTE:**  
THE **RECEPTAL** (157030) AND THE **TM-400 MID PANEL** (267058) SHOULD NOT BE PLACED UNTIL THE FINAL ASSEMBLY OF THE **TM-403** (291687).


ITEM NO.	PART NUMBER	DESCRIPTION	QTY
9	103034	RECEPT AMP 14 PIN	1
25	221733	SS SHCS M4X16	22
26	221736	SHCS SS M4 X 20	16
29	223711	BHCS SS M3 X 6	24
35	267021	BUMPER MOUNT	20
42	267056	PANEL MOUNT	4
45	267060	SHOULDER BOLT RECEIVER (1/2" PLATE)	2
46	267079	TM400 INPUT PLATE (TRAY)	1
47	267089	TM400 MID PANEL	1
50	267244	TM-400 CRATE STAND-OFF	4
51	223712	BHCS SS M3 X 8	2
52	238082	M3 ZINC SPLIT LOCK WASHER	2
53	239103	SS M3 NUT	2


UNLESS OTHERWISE SPECIFIED:  
DIMENSIONS ARE IN INCHES  
TOLERANCES: .XXX ± 0.005  
                  .XX ± 0.010  
                  .X ± 0.015  
ANGULAR: MACHINED ± 0.1°  
              BEND ± 0.5°  
SURFACE: 63  
GENERAL NOTES:  
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5  
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED  
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED  
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES MUST RESULT IN RoHS COMPLIANT PART  
- DO NOT SCALE DRAWING





NAME		DATE	
DRAWN	RH	9/12/13	
ENG APPR.		PVO	~
TITLE: <b>TM-403 BASE (TRAY)</b>			
MATERIAL	SIZE	DWG. NO.	REV
FINISH	<b>B</b>	<b>291681</b>	<b>E</b>
WEIGHT (lbs): 80.19			SHEET 5 OF 8

**VITEK**  
INCORPORATED  
THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT  
MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS  
PERMISSION OF V-TEK INC., MANKATO, MN

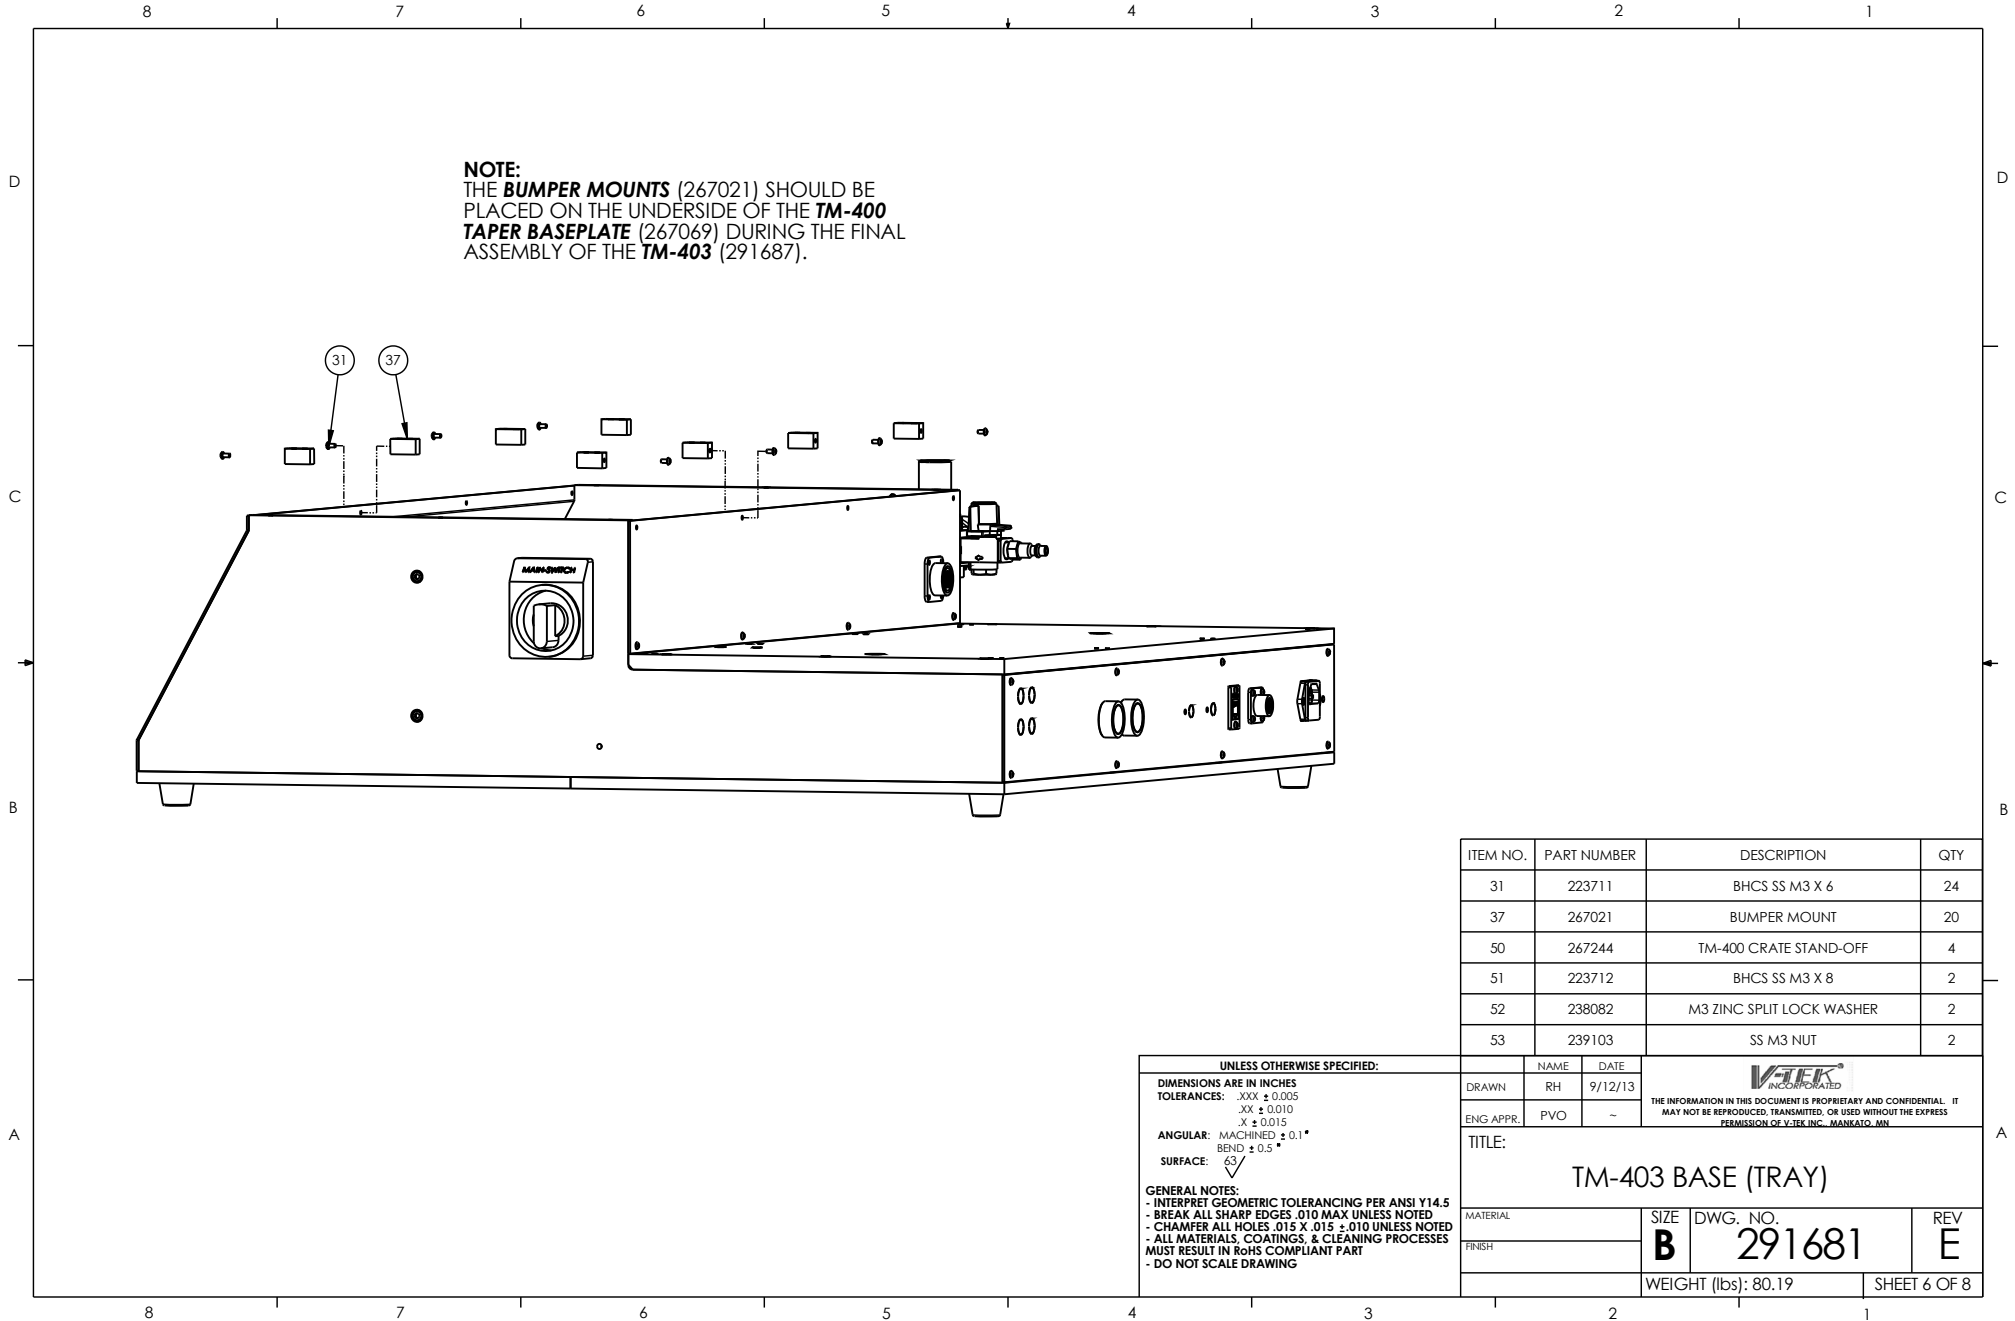

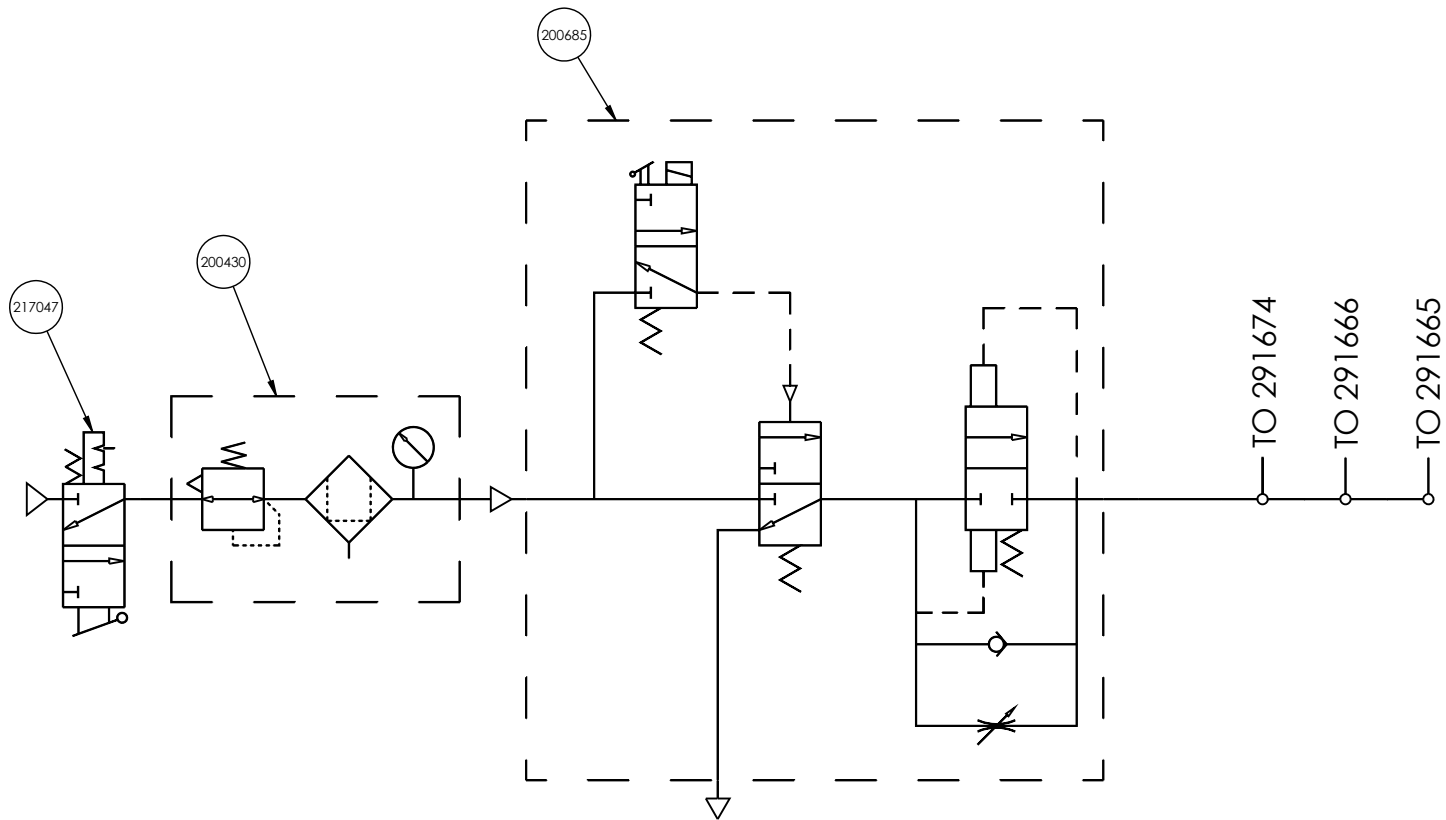
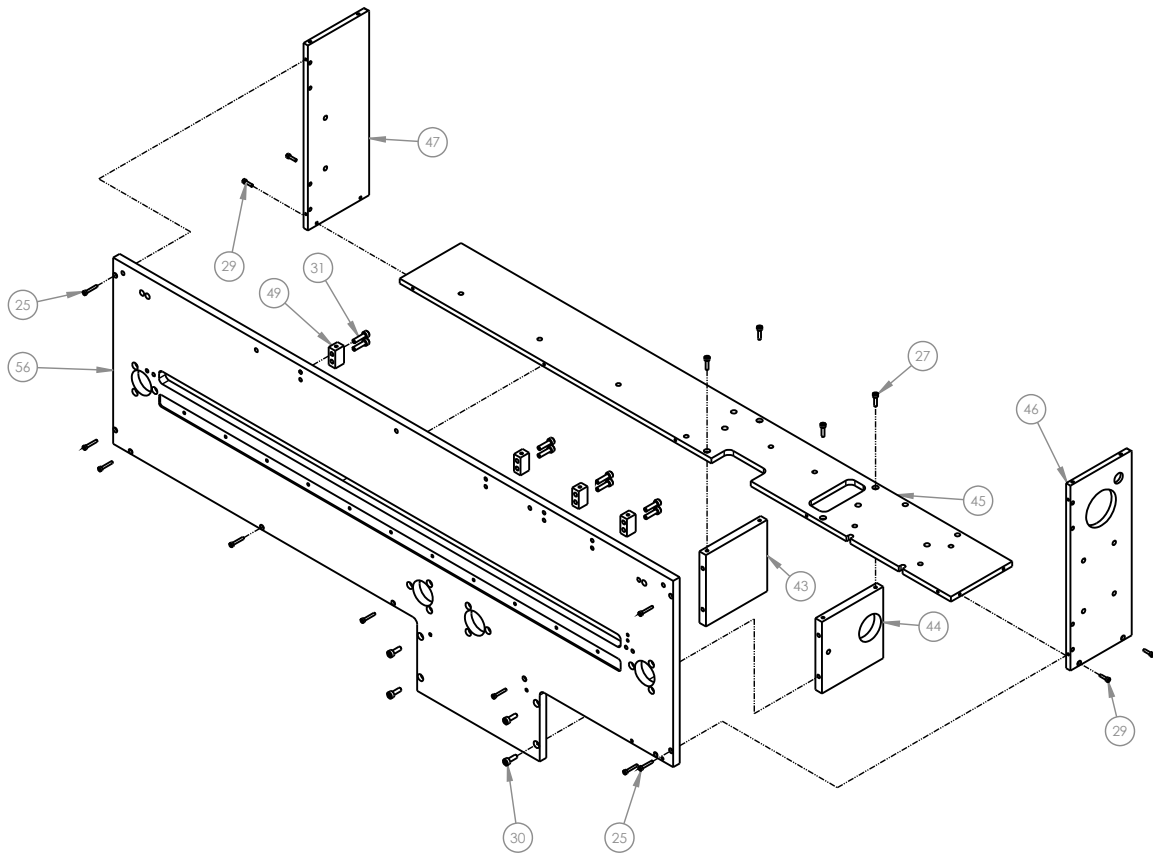


UNLESS OTHERWISE SPECIFIED:		NAME	DATE	 <small>THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MANKATO, MN.</small>	
DIMENSIONS ARE IN INCHES		DRAWN	PVO		9/4/2013
TOLERANCES: .XXX ± 0.005 .XX ± 0.010 .X ± 0.015		ENG APPR.	PVO		~
ANGULAR: MACHINED ± 0.1° BEND ± 0.5°		TITLE:  TM400 BASE PNEUMATICS DRAWING			
SURFACE: 63 ✓					
GENERAL NOTES: - INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5 - BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED - CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED - ALL MATERIALS, COATINGS, & CLEANING PROCESSES MUST RESULT IN RoHS COMPLIANT PART - DO NOT SCALE DRAWING					
MATERIAL		SIZE	DWG. NO.	REV	
FINISH		B	291681	E	
WEIGHT (lbs): 0.00			SHEET 7 OF 8		

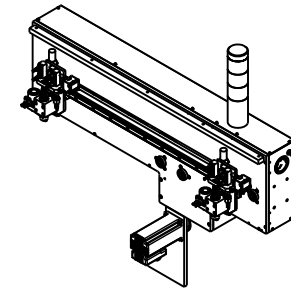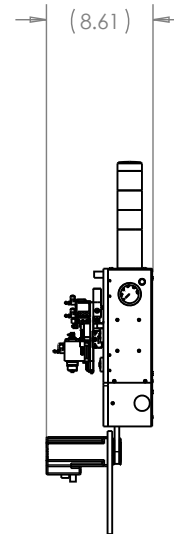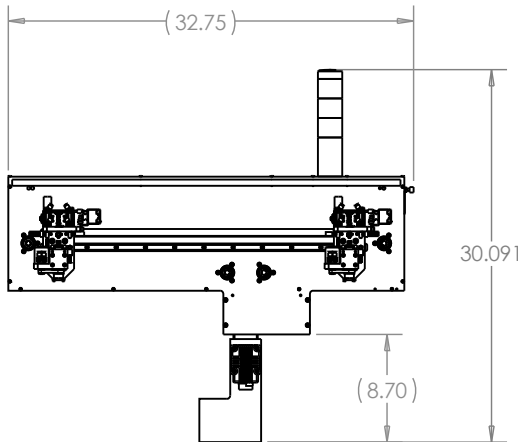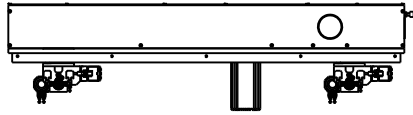

REVISION				
ECO #	REV.	DESCRIPTION	DATE	APPROVED
	A	RELEASE	6/27/14	PVO
2909	B	REPLACE 110012 WITH 268942	7/22/2016	PVO
2945	C	REPLACE 110011, 268942 WITH 110013, 110014, 110015, 110016	5/15/2017	PVO
	D	UPDATED REVISION TO MATCH GSS	12/10/2018	PVO
3099	E	REPLACE P&P HEAD 291665 WITH 292752	3/5/2019	PVO
3134	F	REPLACE 267433 WITH 270113 & REPLACE 110013, 110014, 110015, 110016 WITH 110018	4/24/2019	pvo


UNLESS OTHERWISE SPECIFIED:		NAME		DATE		<div></div> <div>THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MANKATO, MN.</div>			
DIMENSIONS ARE IN INCHES		DRAWN		RH					
TOLERANCES: .XXX ± 0.005		ENG APPR.		PVO					
XX ± 0.010		TITLE:		TM-400 PICK & PLACE ASSEMBLY					
X ± 0.015									
ANGULAR: MACHINED ± 0.1°		MATERIAL		SIZE		DWG. NO.		REV	
BEND ± 0.5°		FINISH		B		291822		F	
SURFACE: 63						WEIGHT (lbs): 38.75		SHEET 1 OF 10	
GENERAL NOTES:									
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5									
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED									
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED									
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES MUST RESULT IN ROHS COMPLIANT PART									
- DO NOT SCALE DRAWING									



ITEM NO.	PART NUMBER	DESCRIPTION	QTY
25	221706	SHCS SS M2.5 X 16	9
27	221713	SHCS SS M3 X 12	4
29	221721	SHCS SS M2.5 X 10	4
30	221731	SHCS SS M4 X 12	21
31	221733	SS SHCS M4X16	16
43	267015	P&P ENCLOSURE LOWER (REAR)	1
44	267016	P&P ENCLOSURE LOWER (FRONT)	1
45	267017	E-CHAIN MOUNT	1
46	267018	HEAD ENCLOSURE, FRONT	1
47	267019	HEAD ENCLOSURE, REAR	1
49	267021	BUMPER MOUNT	6
56	267414	P&P BRIDGE PLATE	1
59	292752	P&P HEAD ASSEMBLY	1

UNLESS OTHERWISE SPECIFIED:		
DIMENSIONS ARE IN INCHES		
TOLERANCES: .XXX ± 0.005		
.XX ± 0.010		
.X ± 0.015		
ANGULAR: MACHINED ± 0.1°		
BEND ± 0.5°		
SURFACE: 63		
GENERAL NOTES:		
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5		
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED		
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED		
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES		
MUST RESULT IN RoHS COMPLIANT PART		
- DO NOT SCALE DRAWING		

NAME		DATE
DRAWN	RH	6/5/2014
ENG APPR.	PVO	~
THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MANKATO, MN.		
TITLE:		
TM-400 PICK & PLACE ASSEMBLY		
MATERIAL	SIZE	DWG. NO.
FINISH	B	291822
WEIGHT (lbs): 38.75		REV F
		SHEET 2 OF 10

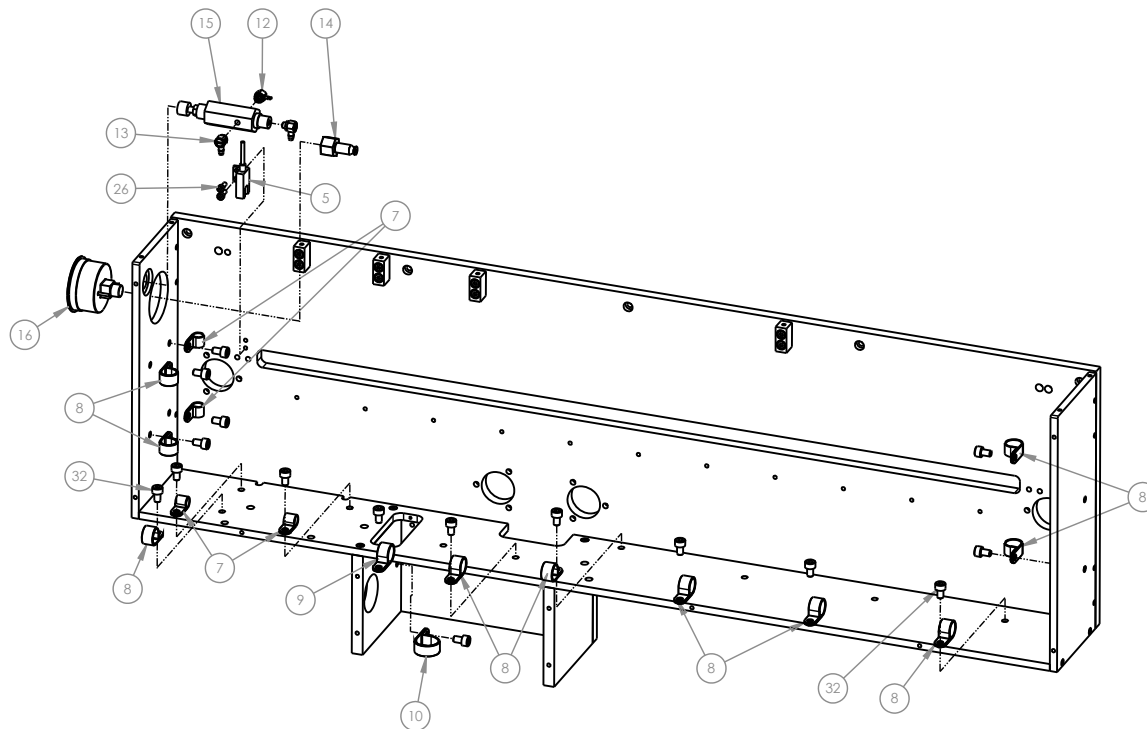


ITEM NO.	PART NUMBER	DESCRIPTION	QTY
5	104994	SUNX PM-R45P	1
7	107108	CABLE CLAMP 5/16-.203	4
8	107111	CABLE CLAMP 1/2-.203 HOLE	10
9	107112	CABLE CLAMP 9/16-.203 HOLE	1
10	107113	CABLE CLAMP 3/4-.203 HOLE	1
12	200259	AIR FITTING 10-32 X 1/16 TB ELBOW	1
13	200260	AIR FIT 90 DEG 10-32 X 1/8 TB	2
14	200267	AIR FIT 1/8NPT FEMALE X 1/8TB	1
15	200401	AIR REGULATOR SMC ARJ210-M5	1
16	200801	GUAGE PRESSURE GP-100	1
26	221711	SHCS SS M3 X 8	2
32	221741	SHCS SS M5 X 8	16
59	292752	P&P HEAD ASSEMBLY	1

UNLESS OTHERWISE SPECIFIED:

DIMENSIONS ARE IN INCHES  
TOLERANCES: .XXX ± 0.005  
XX ± 0.010  
X ± 0.015  
ANGULAR: MACHINED ± 0.1°  
BEND ± 0.5°  
SURFACE: 63

GENERAL NOTES:  
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5  
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED  
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED  
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES MUST RESULT IN ROHS COMPLIANT PART  
- DO NOT SCALE DRAWING

DRAWN	RH	NAME	DATE
ENG APPR.	PVO		6/5/2014
<p><b>V-TEK</b> INCORPORATED</p> <p>THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MANKATO, MN.</p>			
TITLE:			
TM-400 PICK & PLACE ASSEMBLY			
MATERIAL	SIZE	DWG. NO.	REV
FINISH	<b>B</b>	<b>291822</b>	<b>F</b>
WEIGHT (lbs): 38.75		SHEET 3 OF 10	

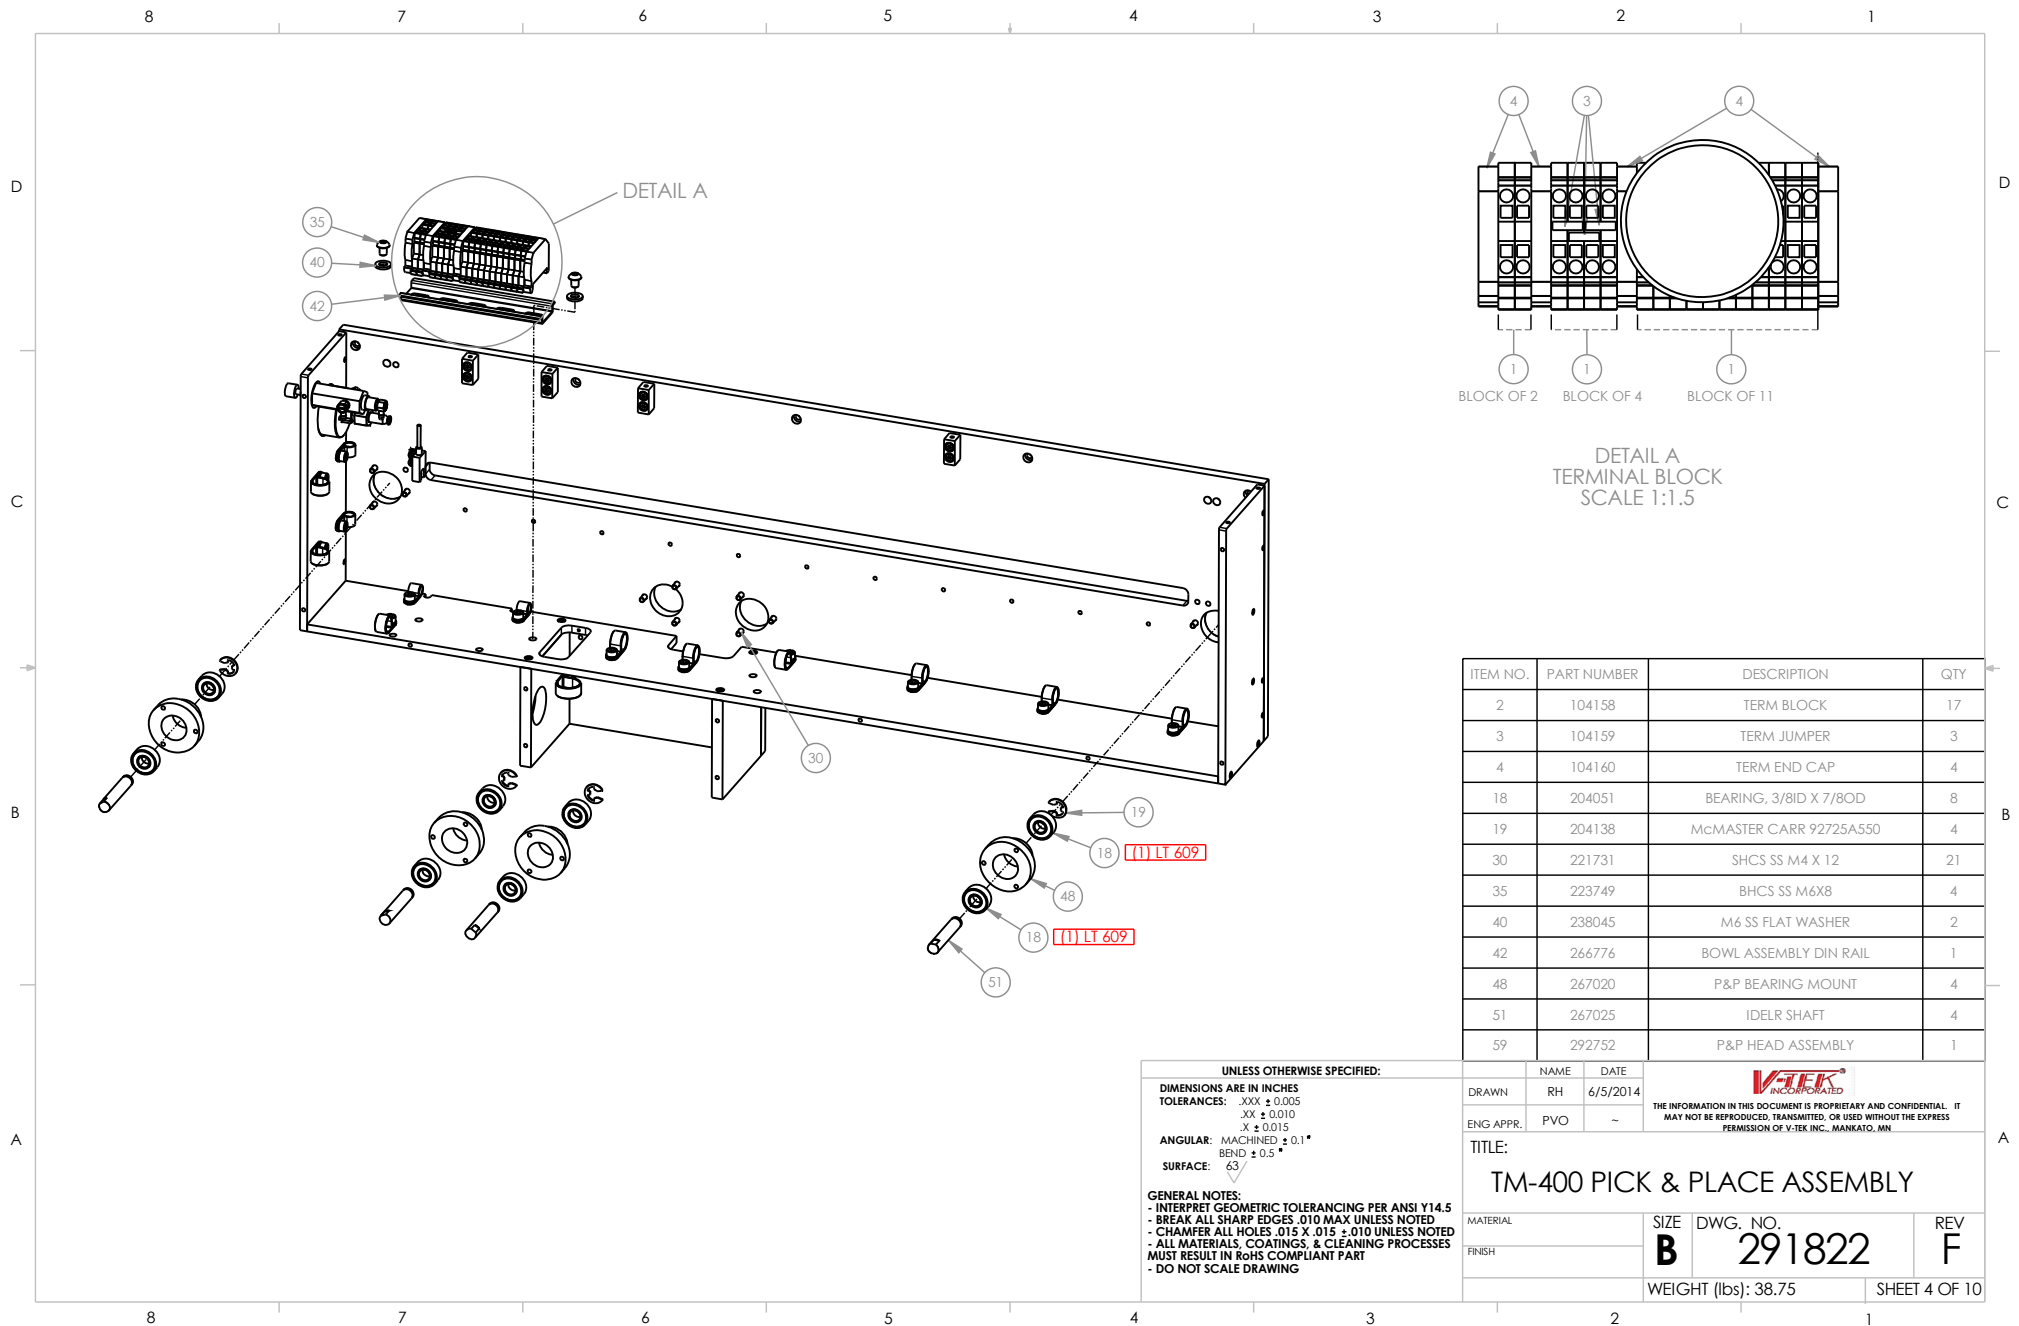


PACK THE LINEAR BEARING BLOCK  
WITH SUPER LUBE MULTI-PURPOSE  
GREASE.


ITEM NO.	PART NUMBER	DESCRIPTION	QTY
17	202090	RAIL, HIWIN 622 MM	1
24	217210	RUBBER FOOT	2
28	221714	SHCS SS M3 X 16	11
31	221733	SS SHCS M4X16	16
33	223711	BHCS SS M3 X 6	6
49	267021	BUMPER MOUNT	6
59	292752	P&P HEAD ASSEMBLY	1

UNLESS OTHERWISE SPECIFIED:  
DIMENSIONS ARE IN INCHES  
TOLERANCES: .XXX  $\pm$  0.005  
                  XX  $\pm$  0.010  
                  X  $\pm$  0.015  
ANGULAR: MACHINED  $\pm$  0.1°  
              BEND  $\pm$  0.5°  
SURFACE: 63  
GENERAL NOTES:  
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5  
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED  
- CHAMFER ALL HOLES .015 X .015  $\pm$  .010 UNLESS NOTED  
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES  
MUST RESULT IN RoHS COMPLIANT PART  
- DO NOT SCALE DRAWING

NAME	DATE
DRAWN RH	6/5/2014
ENG APPR. PVO	~
THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MANKATO, MN.	
TITLE: TM-400 PICK & PLACE ASSEMBLY	
MATERIAL	SIZE DWG. NO. REV
FINISH	B 291822 F
WEIGHT (lbs): 38.75	
SHEET 5 OF 10	

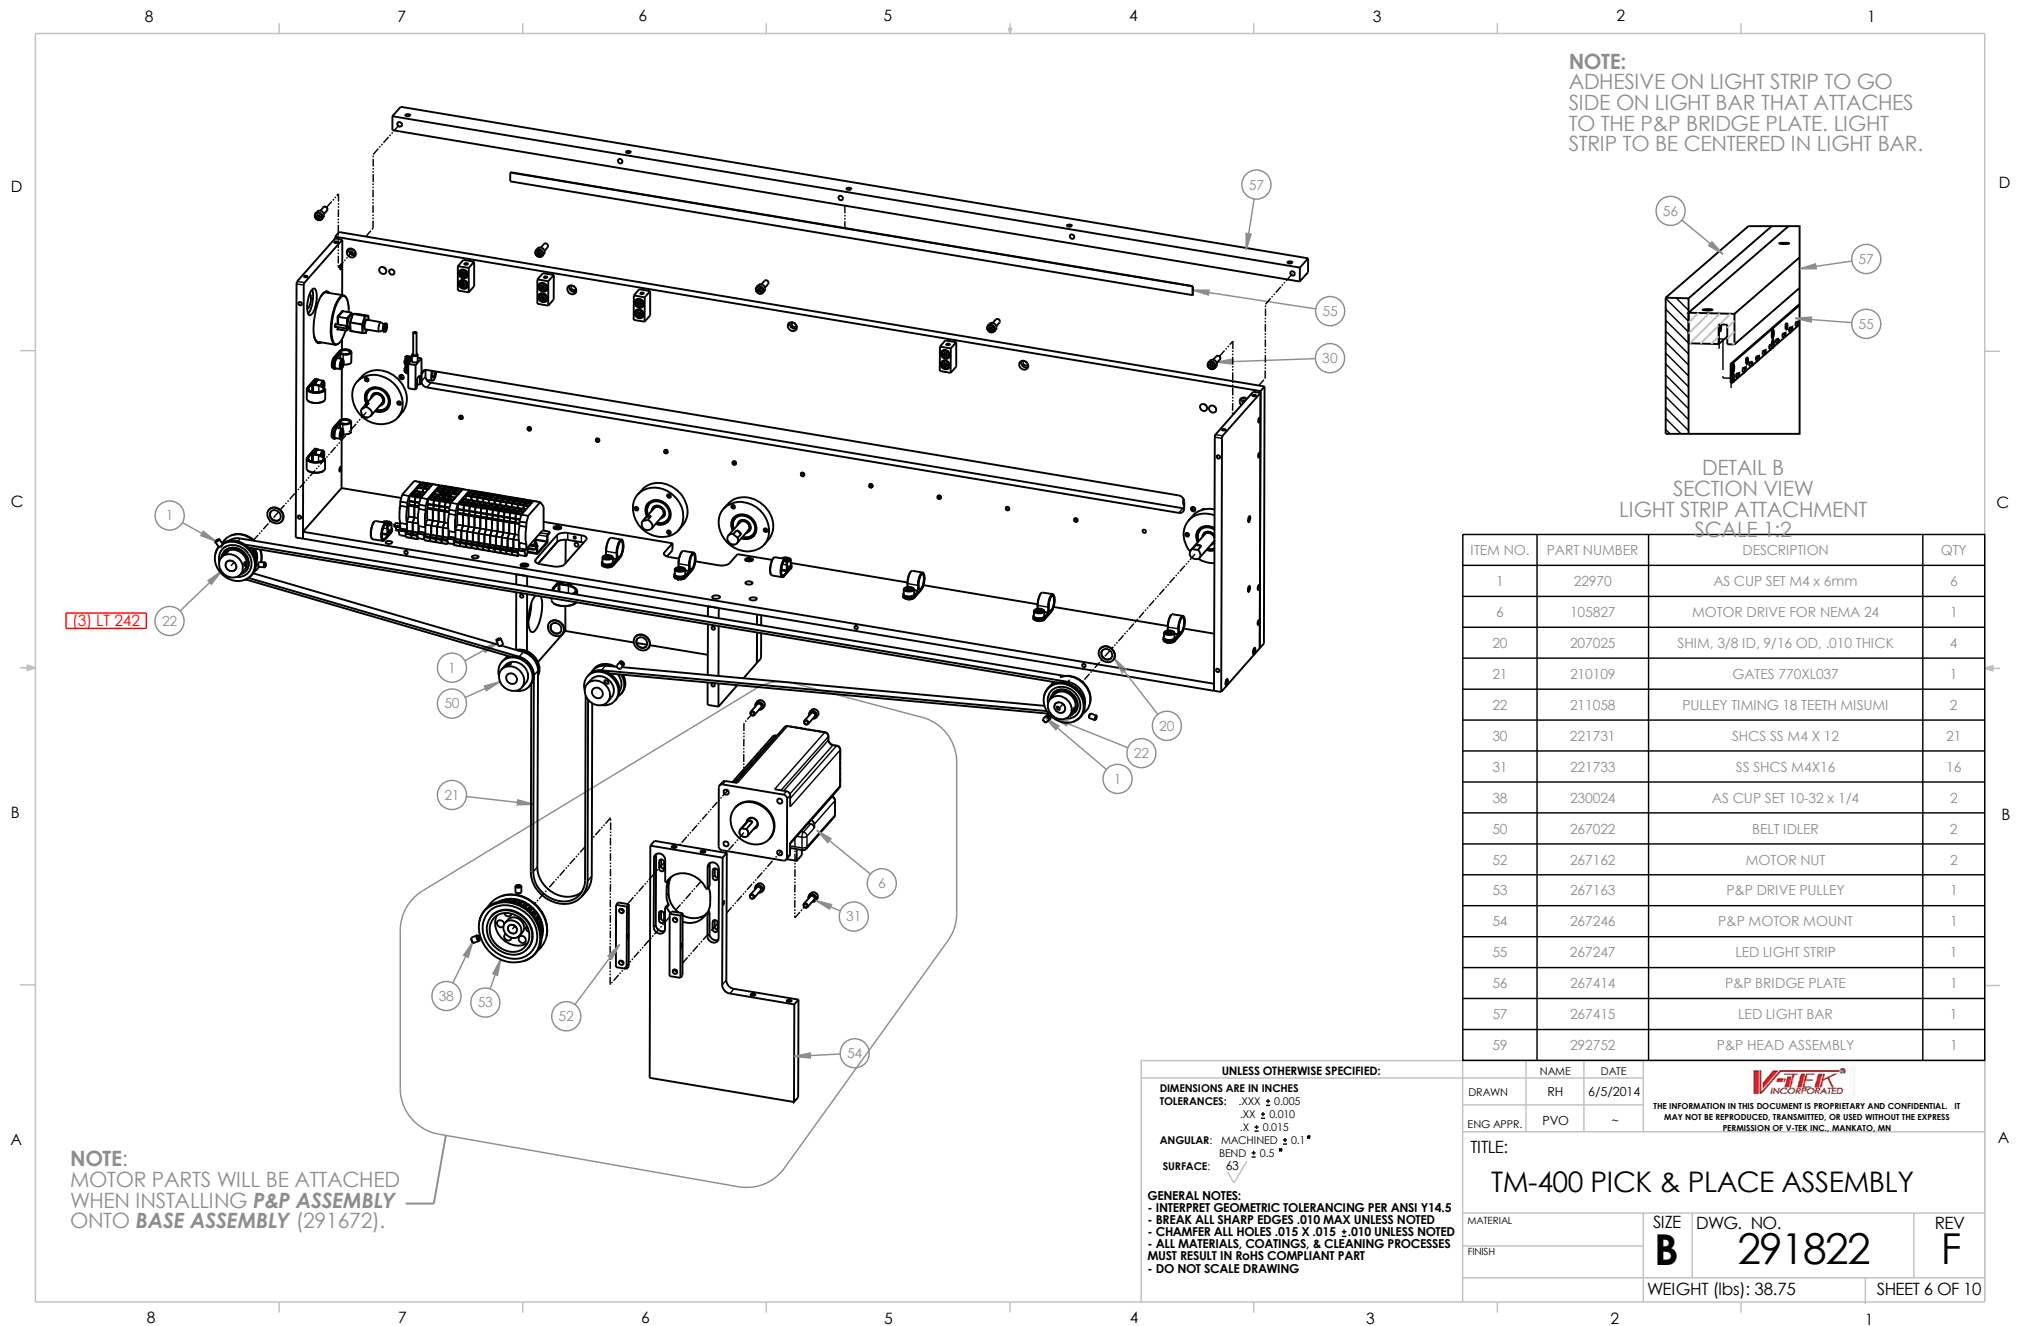

**NOTE:**  
ADHESIVE ON LIGHT STRIP TO GO  
SIDE ON LIGHT BAR THAT ATTACHES  
TO THE P&P BRIDGE PLATE. LIGHT  
STRIP TO BE CENTERED IN LIGHT BAR.

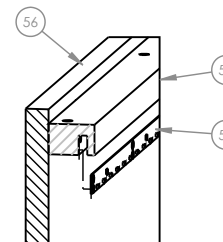

DETAIL B  
SECTION VIEW  
LIGHT STRIP ATTACHMENT  
SCALE 1:2

ITEM NO.	PART NUMBER	DESCRIPTION	QTY
1	22970	AS CUP SET M4 x 6mm	6
6	105827	MOTOR DRIVE FOR NEMA 24	1
20	207025	SHIM, 3/8 ID, 9/16 OD, .010 THICK	4
21	210109	GATES 770XL037	1
22	211058	PULLEY TIMING 18 TEETH MISUMI	2
30	221731	SHCS SS M4 X 12	21
31	221733	SS SHCS M4X16	16
38	230024	AS CUP SET 10-32 x 1/4	2
50	267022	BELT IDLER	2
52	267162	MOTOR NUT	2
53	267163	P&P DRIVE PULLEY	1
54	267246	P&P MOTOR MOUNT	1
55	267247	LED LIGHT STRIP	1
56	267414	P&P BRIDGE PLATE	1
57	267415	LED LIGHT BAR	1
59	292752	P&P HEAD ASSEMBLY	1

UNLESS OTHERWISE SPECIFIED:

DIMENSIONS ARE IN INCHES

TOLERANCES: .XX ± 0.005  
                  .XX ± 0.010  
                  .X ± 0.015

ANGULAR: MACHINED ± 0.1°  
                  BEND ± 0.5°

SURFACE: 63

GENERAL NOTES:  
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5  
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED  
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED  
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES  
MUST RESULT IN ROHS COMPLIANT PART  
- DO NOT SCALE DRAWING

NAME	DATE
DRAWN RH	6/5/2014
ENG APPR. PVO	~



TITLE:  
**TM-400 PICK & PLACE ASSEMBLY**

MATERIAL	SIZE	DWG. NO.	REV
FINISH	<b>B</b>	<b>291822</b>	<b>F</b>
WEIGHT (lbs): 38.75		SHEET 6 OF 10	

THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT  
MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS  
PERMISSION OF V-TEK INC., MANKATO, MN.

**V-TEK**  
INCORPORATED


**NOTE:**  
THIS IS THE FINAL ASSEMBLY OF THE **PICK & PLACE HEAD (291665)** AS NOTED ON THE ASSEMBLY DRAWING.

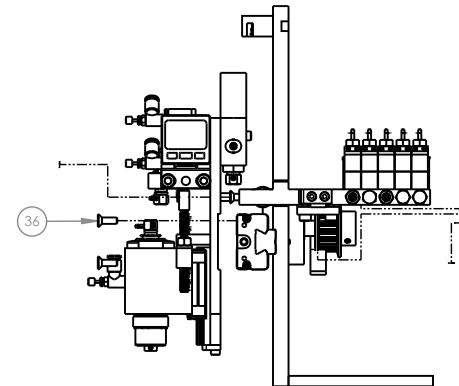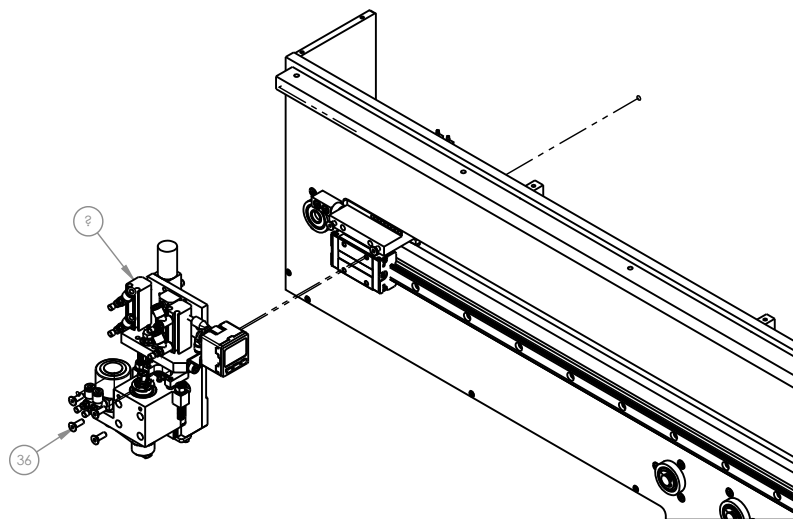

SECTION VIEW  
SCALE 1:3

ITEM NO.	PART NUMBER	DESCRIPTION	QTY
36	225731	FHCS SS M4 X 12	4
59	292752	P&P HEAD ASSEMBLY	1

UNLESS OTHERWISE SPECIFIED:			
DIMENSIONS ARE IN INCHES			
TOLERANCES: .XXX ± 0.005			
.XX ± 0.010			
.X ± 0.015			
ANGULAR: MACHINED ± 0.1°			
BEND ± 0.5°			
SURFACE: 63			
GENERAL NOTES:			
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5			
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED			
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED			
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES MUST RESULT IN ROHS COMPLIANT PART			
- DO NOT SCALE DRAWING			
DRAWN	RH	DATE	6/5/2014
ENG APPR.	PVO	~	
THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MANKATO, MN.			
TITLE:			
TM-400 PICK & PLACE ASSEMBLY			
MATERIAL	SIZE	DWG. NO.	REV
FINISH	B	291822	F
WEIGHT (lbs): 38.75			SHEET 7 OF 10

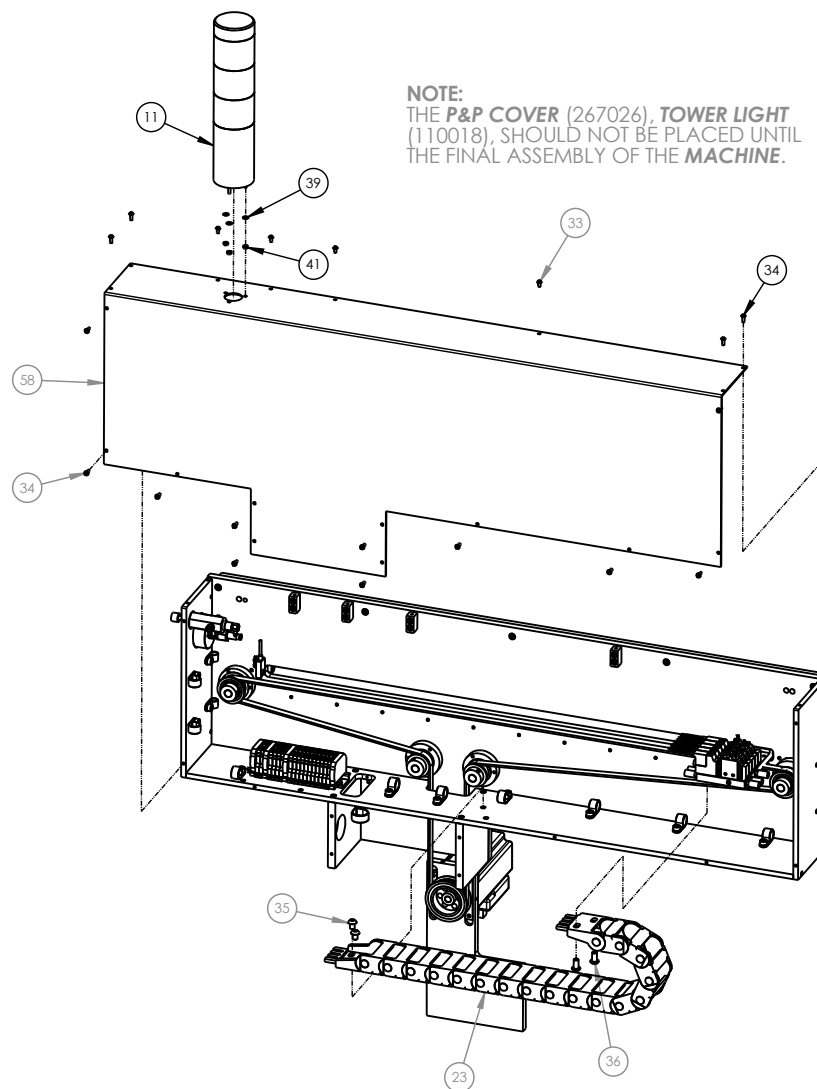

NOTE:  
THE P&P COVER (267026), TOWER LIGHT  
(110018), SHOULD NOT BE PLACED UNTIL  
THE FINAL ASSEMBLY OF THE MACHINE.


ITEM NO.	PART NUMBER	DESCRIPTION	QTY
11	110018	TOWER LIGHT	1
23	211535	E-CHAIN 400	1
33	223711	BHCS SS M3 X 6	6
34	223712	BHCS SS M3 X 8	15
35	223749	BHCS SS M6X8	4
36	223753	BHCS SS M6 X 12	2
39	238042	M3 STAINLESS WASHER	3
41	239103	SS M3 NUT	3
58	270113	P&P COVER	1
59	292752	P&P HEAD ASSEMBLY	1


UNLESS OTHERWISE SPECIFIED:  
DIMENSIONS ARE IN INCHES  
TOLERANCES: .XX ± 0.005  
.XX ± 0.010  
.X ± 0.015  
ANGULAR: MACHINED ± 0.1°  
BEND ± 0.5°  
SURFACE: 63  
GENERAL NOTES:  
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5  
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED  
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED  
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES  
MUST RESULT IN ROHS COMPLIANT PART  
- DO NOT SCALE DRAWING

DRAWN	RH	DATE	6/5/2014
ENG APPR.	PVO	~	~
TITLE:			
TM-400 PICK & PLACE ASSEMBLY			
MATERIAL	SIZE	DWG. NO.	REV
FINISH	B	291822	F
WEIGHT (lbs): 38.75		SHEET 8 OF 10	






THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT  
MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS  
PERMISSION OF V-TEK INC., MANKATO, MN

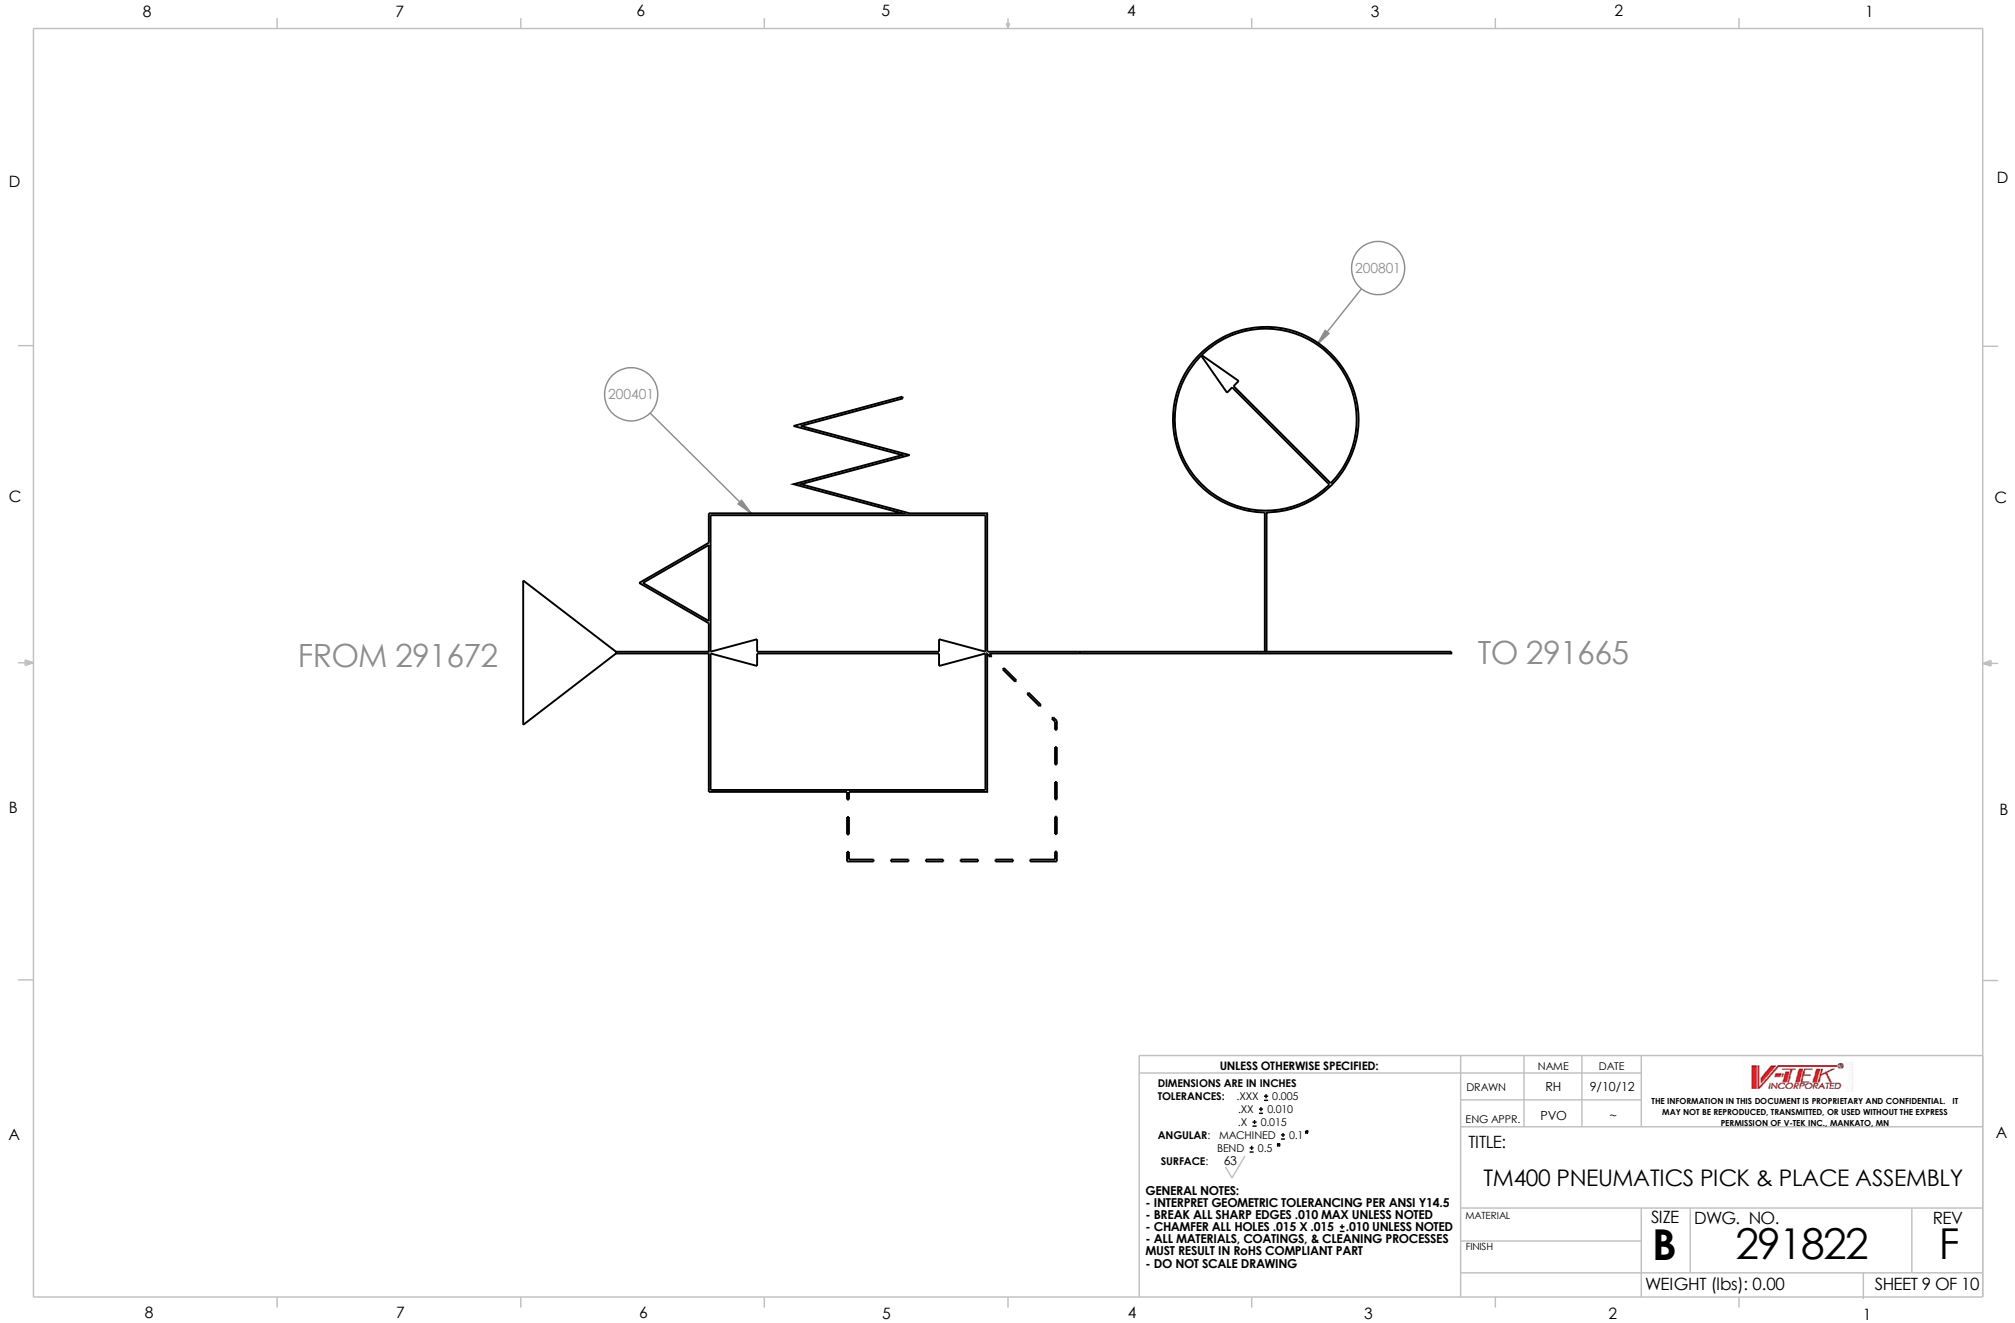

UNLESS OTHERWISE SPECIFIED:				NAME		DATE			
DIMENSIONS ARE IN INCHES				DRAWN		RH		9/10/12	
TOLERANCES: .XXX ± 0.005 .XX ± 0.010 .X ± 0.015				ENG APPR.		PVO		~	
ANGULAR: MACHINED ± 0.1° BEND ± 0.5°				TITLE:					
SURFACE: 63									
GENERAL NOTES: - INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5 - BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED - CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED - ALL MATERIALS, COATINGS, & CLEANING PROCESSES MUST RESULT IN ROHS COMPLIANT PART - DO NOT SCALE DRAWING				TM400 PNEUMATICS PICK & PLACE ASSEMBLY					
MATERIAL				SIZE		DWG. NO.		REV	
FINISH				B		291822		F	
				WEIGHT (lbs): 0.00				SHEET 9 OF 10	




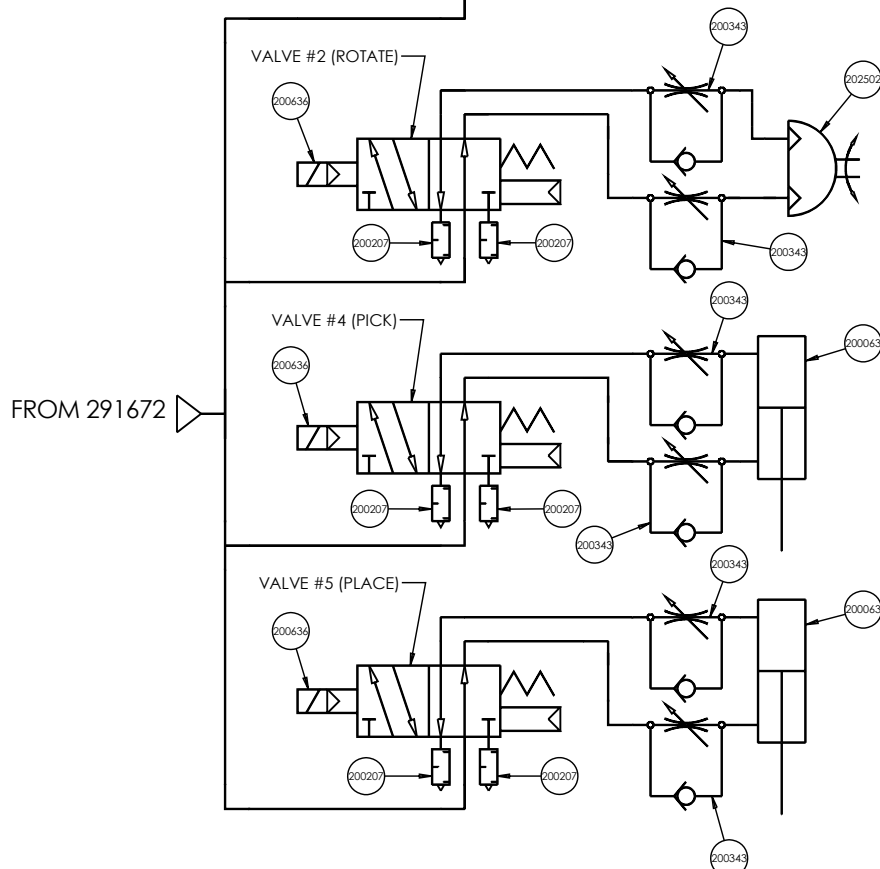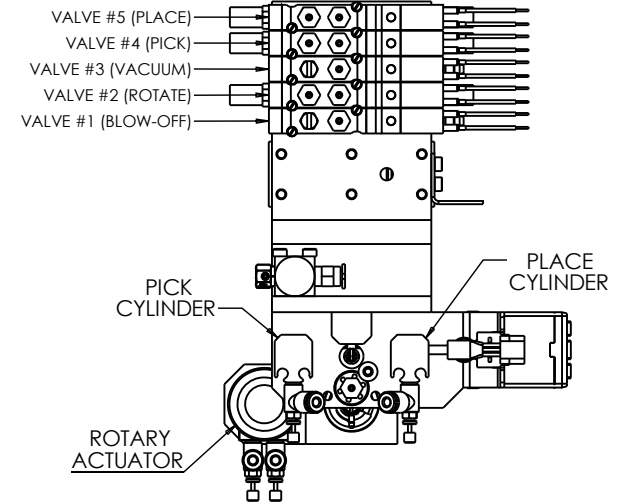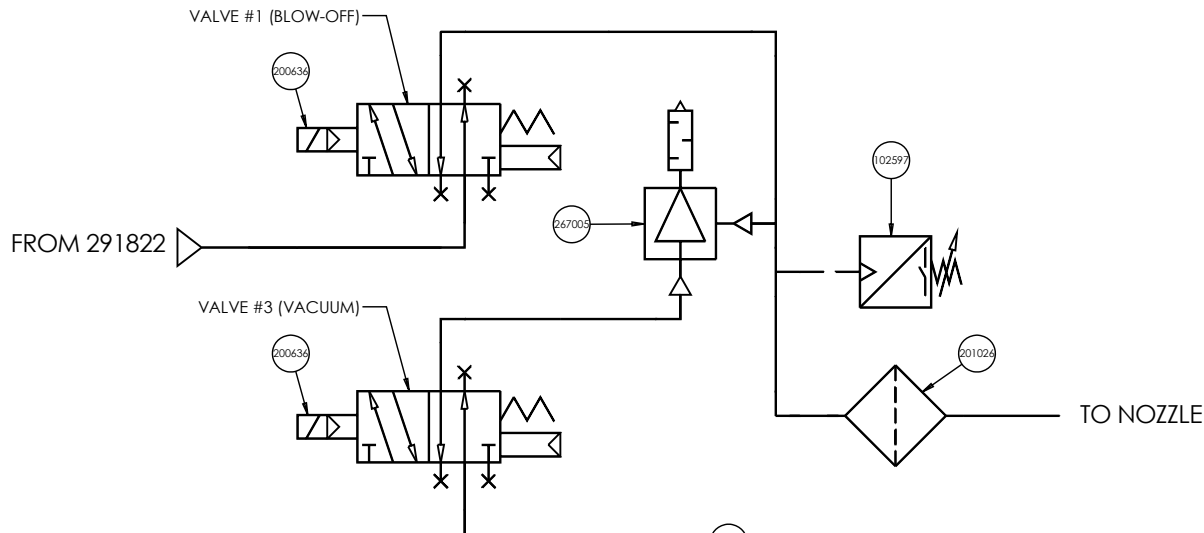



PLUMB ACTUATOR SO IT TURNS  
CLOCK-WISE FROM THE TOP  
VIEW WHEN THE VALVE IS IN  
THE NORMAL POSITION.

PLUMB THE AIR CYLINDER SO IT  
IS IN THE RETRACTED POSITION  
WHEN THE VALE IS IN THE  
NORMAL POSITION.


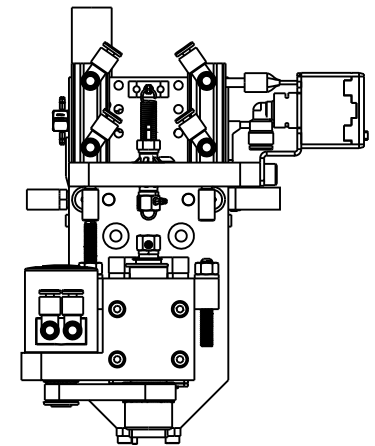
PLUMB THE AIR CYLINDER SO IT  
IS IN THE RETRACTED POSITION  
WHEN THE VALE IS IN THE  
NORMAL POSITION.





UNLESS OTHERWISE SPECIFIED:		NAME	DATE
DIMENSIONS ARE IN INCHES		DRAWN	RH 9/4/2013
TOLERANCES:		ENG APPR	PVO -
.XXX ± 0.005		<div></div> <div>THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., HAWAII, HI OR ROYCE INSTRUMENTS LLC, NAPA, CA.</div>	
.XX ± 0.010			
.X ± 0.015			
ANGULAR: MACHINED ± 0.1°			
BEND ± 0.5°		<div></div> <div>THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., HAWAII, HI OR ROYCE INSTRUMENTS LLC, NAPA, CA.</div>	
SURFACE: 32			
✓		TITLE:	
GENERAL NOTES:		TM400 P&P HEAD PNEUMATIC	
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5		DRAWING	
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED		C 292752	
- CHAMFER ALL HOLES .015 X .015 ± 0.010 UNLESS NOTED		REV A	
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES MUST RESULT IN BOTH COMPLIANT PART		WEIGHT (lbs): 0.00	
- DO NOT SCALE DRAWING		SHEET 2 OF 2	

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	200259	AIR FITTING 10-32 X 1/16 TB ELBOW	1
2	200343	AS 1 2 0 1F-M3-01 (SMC)	2
3	202523	SMC CRB2BWU10-180SZ	1
4	204174	BALL BEARING	2
5	206007	.005" SHIM	2
6	209101	SPRING ANCHOR	1
7	210063	TIMING BELT	1
8	211068	19 TOOTH TIMING PULLEY	1
9	216227	COMPRESSION SPRING	1
10	220202	SS SHCS M3 x 35mm	4
11	221712	SS SHCS M3 x 10mm	3
12	230008	AS CUP SET M3 x 4mm	1
13	230083	McMASTER CARR 91390A232	2
14	231037	AS CUP SET M2.5 x 4mm	1
15	239105	M5 SS HEX NUT	2
16	249006	RETAINING RING	1
17	249017	RETAINING RING	1
18	249974	HIWINN MGN-15 BLOCK	1
19	266483	HEAVY WASHER	2
20	270060	OUTER BUSHING	1
21	270061	NOZZLE SHAFT	1
22	270072	NOZZLE HOUSING	1
23	270073	NOZZLE SPACER	1
24	218907	5/64 X 3/4" DOWEL PIN	1


PACK THE LINEAR BEARING BLOCK WITH SUPER LUBE MULTI-PURPOSE GREASE. INSTALL THE BLOCK SO THE GREASE FITTING IS POINTED DOWN.

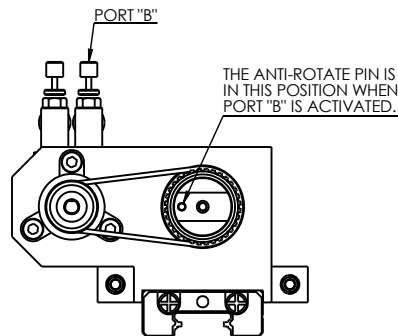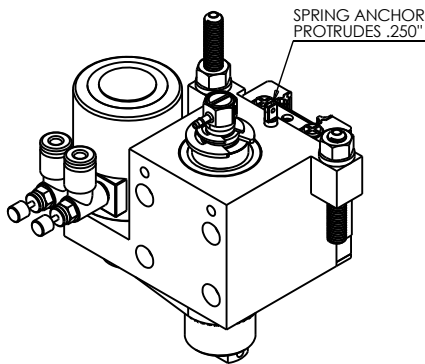

BOTTOM VIEW

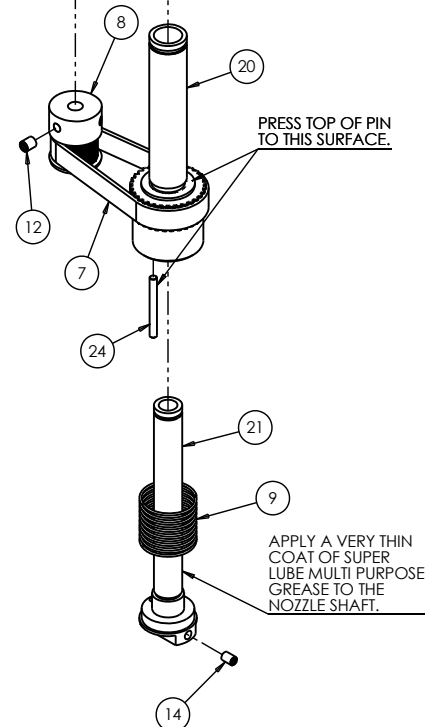
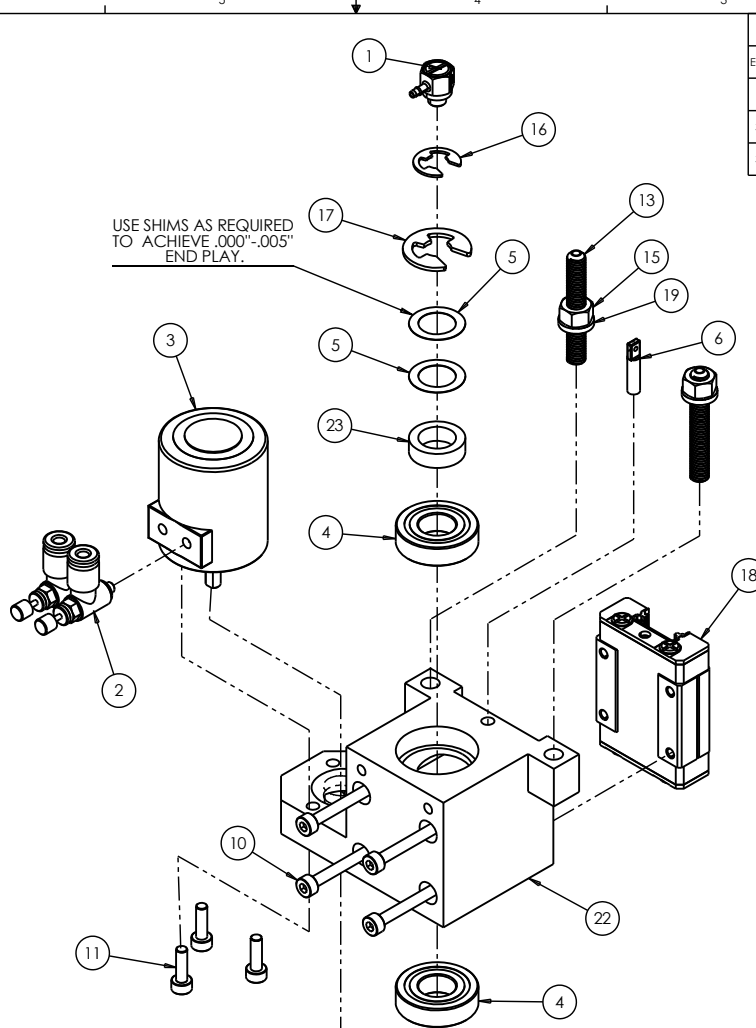


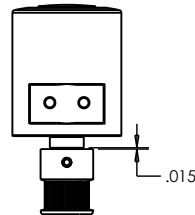

.015" GAP BETWEEN ACTUATOR AND PULLEY.





UNLESS OTHERWISE SPECIFIED:			
DIMENSIONS ARE IN INCHES	NAME	DATE	
TOLERANCES:	DRAWN	PVO	
.XXX ± 0.005	ENG APPR	PVO	
.XX ± 0.010			
± 0.015			
ANGULAR: MACHINED ± 0.1°			
BEND ± 0.5°			
SURFACE: 32			
GENERAL NOTES: - INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5 - BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED - CHAMFER ALL HOLES .015 X .015 ± 0.010 UNLESS NOTED - ALL MATERIALS, COATINGS, & CLEANING PROCESSES MUST RESULT IN BOTH COMPLIANT PART - DO NOT SCALE DRAWING			
TITLE: NOZZLE OVERTRAVEL ASSEMBLY			
MATERIAL	SIZE	DWG. NO.	REV
WETSP	C	292749	C
WEIGHT (lbs): 0.61		SHEET 1 OF 1	

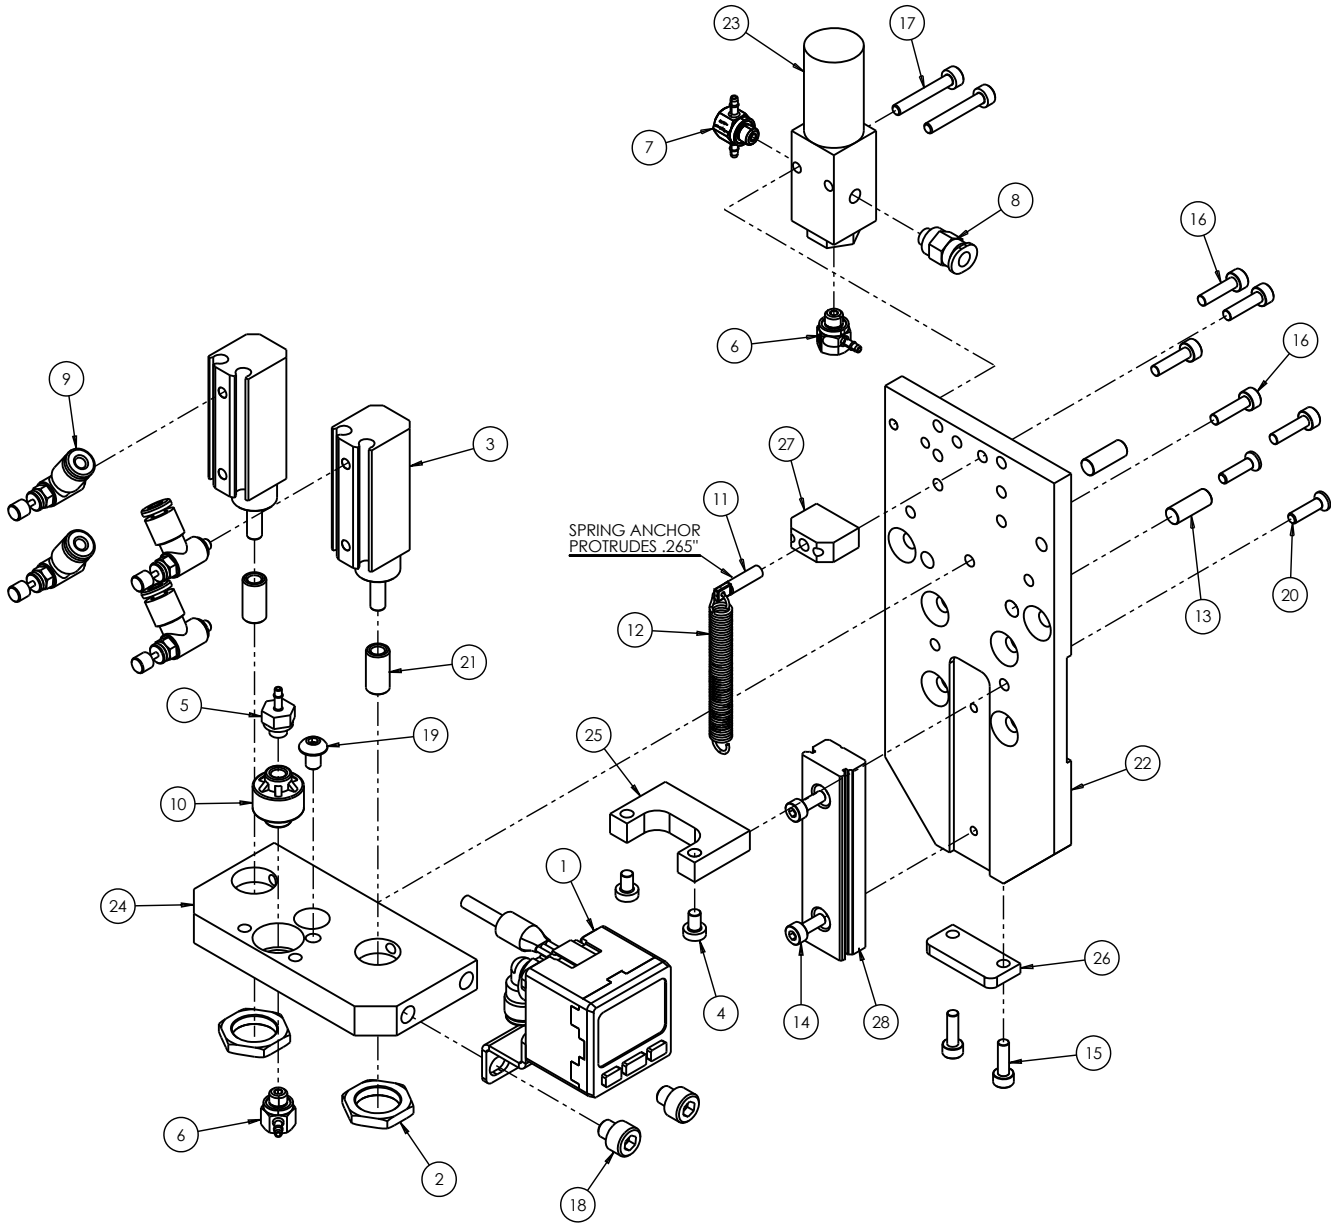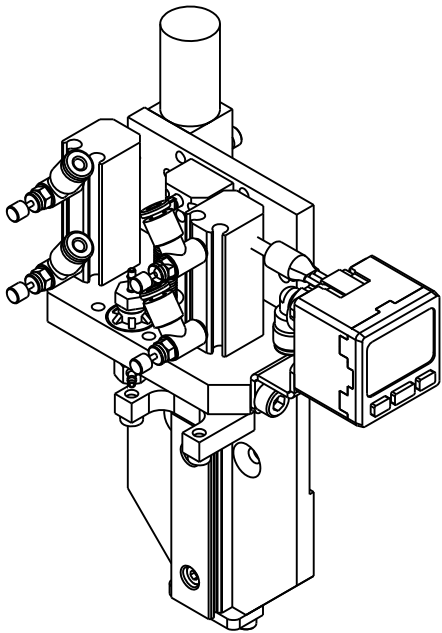ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	102597	SMC VACUUM SENSOR (ZSE30A-C4L-P-LA2)	1
2	200063 NUT	CYLINDER NUT	2
3	200063	AIR CYLINDER 15mm STROKE	2
4	200153	BUMPER	2
5	200253	10-32 x 1/16 HOSE BARB	1
6	200259	AIR FITTING 10-32 X 1/16 TB ELBOW	2
7	200261	AIR FIR 10-32 TEE TO 1/16" TB	1
8	200273	AIR FIT 5/32 TB 10-32 MALE	1
9	200343	AS 1 2 0 1F-M3-01 (SMC)	4
10	201026	FILTER	1
11	209101	SPRING ANCHOR	1
12	209250	LeeSpring-MS24586-1054	1
13	219041	3/16 X 1/2 LG. SS DOWEL PIN	2
14	221711	SHCS SS M3 X 8	2
15	221712	SHCS SS M3 X 10	2
16	221713	SHCS SS M3 X 12	5
17	221716	SHCS SS M3 X 20	2
18	221766	SHCS SS M5 X 5	2
19	223728	BHCS SS M4 X 6	1
20	225714	FHCS SS M3 X 12	2
21	266482	CYLINDER BUMPER	2
22	267004	P&P BACKPLATE	1
23	267005	VACUUM GENERATOR MODIFICATION	1
24	267006	CYLINDER MOUNT	1
25	267009	UPPER STOP	1
26	267010	LOWER STOP	1
27	267012	SPRING ANCHOR MOUNT	1
28	249974 RAIL	LINEAR RAIL	1




UNLESS OTHERWISE SPECIFIED:		NAME		DATE			
DIMENSIONS ARE IN INCHES		DRAWN	PVO	12/70	THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., HAWAII, HI OR ROYCE INSTRUMENTS LLC, NAPA, CA.		
TOLERANCES: .0008 ± 0.005		ENG APPR.	PVO	-			
.001 ± 0.010		TITLE:					
ANGULAR: MACHINED ± 0.1°		<h1>P&amp;P HEAD FRAME</h1>					
BEND ± 0.5°							
SURFACE: 							
GENERAL NOTES: - INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5 - BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED - CHAMFER ALL HOLES .015 X .015 ± 0.010 UNLESS NOTED - ALL MATERIALS, COATINGS, & CLEANING PROCESSES MUST RESULT IN BOTH COMPLIANT PART - DO NOT SCALE DRAWING		MATERIAL		SIZE			
		TYPH		C	292750	A	
				WEIGHT (lbs): 1.03		SHEET 1 OF 1	

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	200201	FITTING	2
2	200207	AIR FIT 10-32 M SS MUFFLER	6
3	200253	10-32 x 1/16 HOSE BARB	8
4	200254	AIR FIT 1/8 BARB X 10-32MALE	2
5	200636	AIR VALVE	5
6	210072	BELT COUPLER Misumi-TBCS-XL037	1
7	212001	ORING 5/16	15
8	221711	SHCS SS M3 X 8	2
9	221731	SHCS SS M4 X 12	6
10	225731	FHCS SS M4 X 12	2
11	231038	M5 X 5 ALLOY SET SCREW	1
12	236062	M2 X 25 SS SLOTTED CHEESE HEAD SCREW	10
13	267011	HOME SENSOR FLAG	1
14	267013	P&P MANIFOLD	1



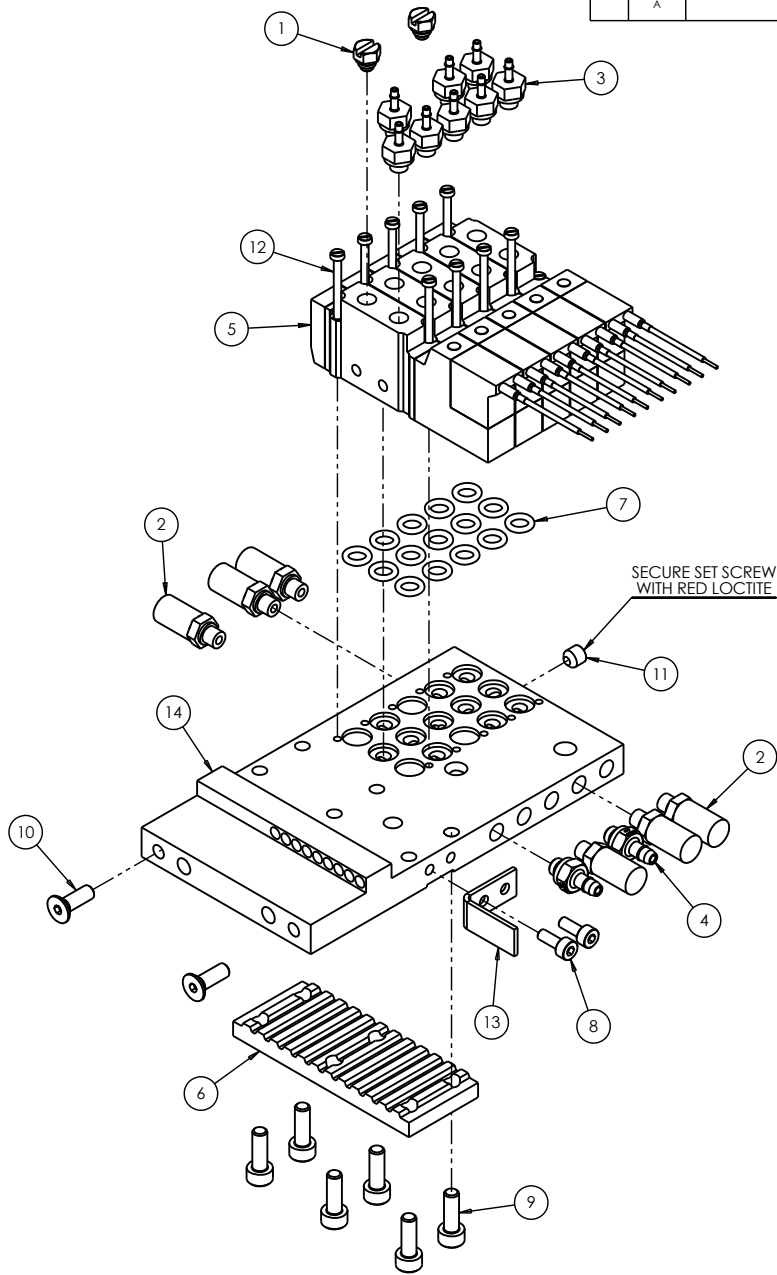
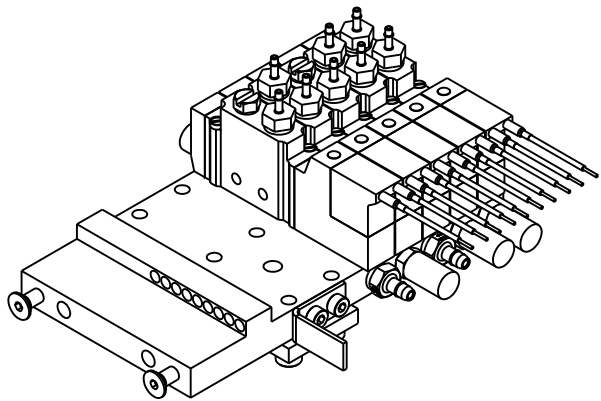


REVISIONS				
ECO #	REV.	DESCRIPTION	DATE	APPROVED
	A	RELEASED	12/7/2018	PVO


UNLESS OTHERWISE SPECIFIED:		NAME	DATE	 THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MANASSA, WA OR ROYCE INSTRUMENTS LLC, NAPA, CA.	
DIMENSIONS ARE IN INCHES		DRAWN	PVO		
TOLERANCES: .0008 ± 0.0005 .0010 ± 0.0010 1 ± 0.015		ENG APPR.	PVO		
ANGULAR: MACHINED ± 0.1° BEND ± 0.5° SURFACE: 32		TITLE:		P&P HEAD FRAME	
GENERAL NOTES: - INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5 - BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED - CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED - ALL MATERIALS, COATINGS, & CLEANING PROCESSES MUST RESULT IN BOTH COMPLIANT PART - DO NOT SCALE DRAWING		MATERIAL			
		FINISH			
		SIZE DWG. NO.		REV	
		C 292751		A	
		WEIGHT (lbs): 1.10		SHEET 1 OF 1	

8 7 6 5 4 3 2 1

REVISI				
ECO #	REV.	DESCRIPTION	DATE	APPROVED
	A	RELEASE	6/30/14	PVO

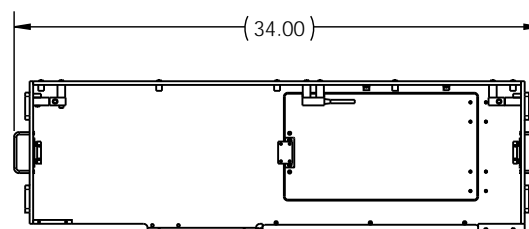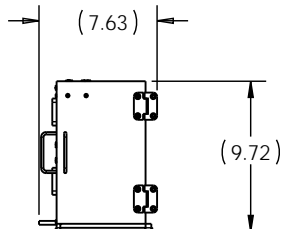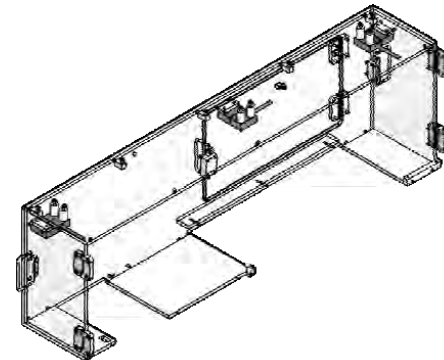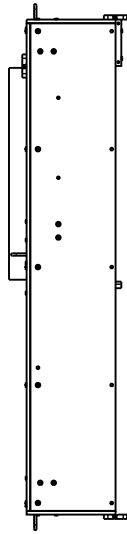

**NOTE:**  
BUILD AS YOU GO  
NOT AS OWN ASSEMBLY

UNLESS OTHERWISE SPECIFIED:		NAME	DATE	 THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MINNETONKA, MN.
DIMENSIONS ARE IN INCHES		DRAWN	RH	
TOLERANCES: .XXX ± 0.005 XX ± 0.010 X ± 0.015 ANGULAR: MACHINED ± 0.1° BEND ± 0.5° SURFACE: 32		ENG APPR	PVO	
TITLE: TM-403 GUARD ASSEMBLY (TRAY)				
GENERAL NOTES: - INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5 - BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED - CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED - ALL MATERIALS, COATINGS, & CLEANING PROCESSES MUST RESULT IN ROHS COMPLIANT PART - DO NOT SCALE DRAWING		MATERIAL	SIZE	DWG. NO.
		FINISH	B	291824
				REV A
		WEIGHT (lbs): 9.83		SHEET 1 OF 4

8 7 6 5 4 3 2 1


8 7 6 5 4 3 2 1

D

C


B

A

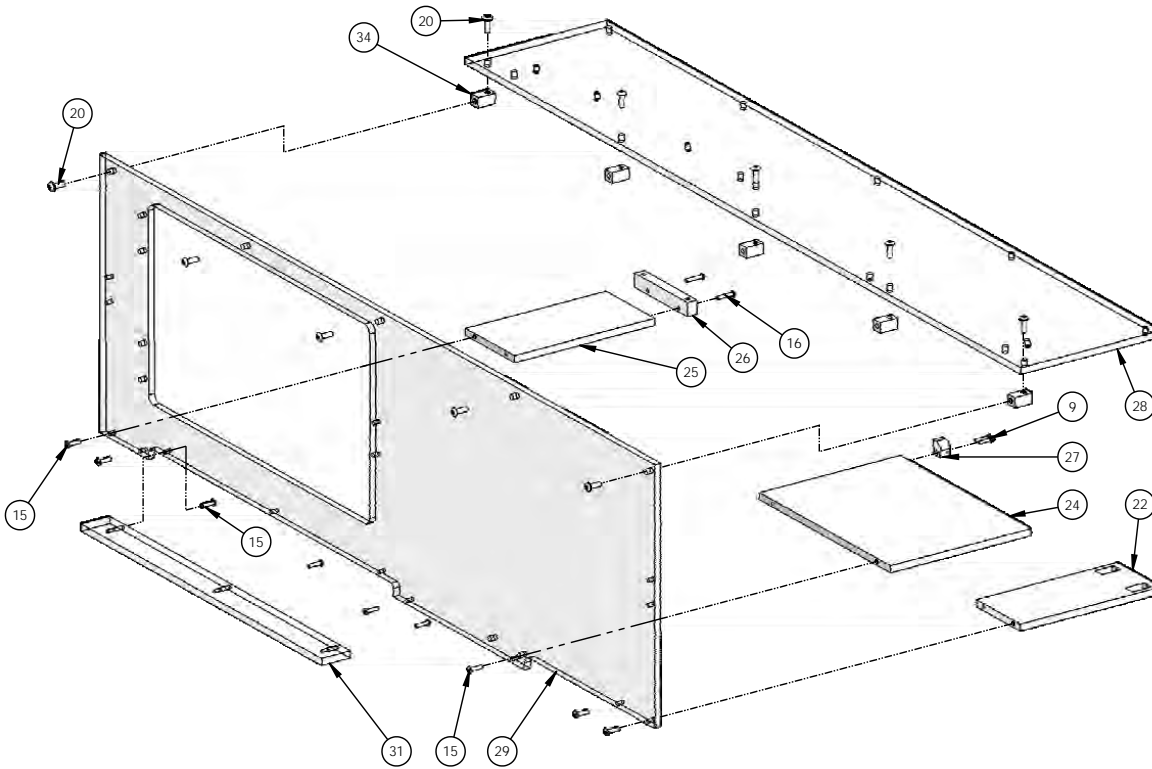


**NOTE:**  
BUILD AS YOU GO  
NOT AS OWN ASSEMBLY

ITEM NO.	PART NUMBER	DESCRIPTION	QTY
9	221719	SHCS SS M2.5 X 12	2
15	223713	BHCS SS M3 X 12	21
16	223714	BHCS SS M3 X 16	2
20	223736	BHCS SS M4 X 12	10
22	267041	P&P GUARD, FILLER, FRONT	1
24	267092	P&P ENCLOSURE, FLOOR (TRAY)	1
25	267094	P&P ENCLOSURE FLOOR, REAR (TRAY)	1
26	267095	GUARD MOUNT, TRAY	1
27	267096	TRAY GUARD FILLER	1
28	267416	P&P ENCLOSURE TOP, TRAY	1
29	267417	P&P ENCLOSURE SIDE, TRAY	1
31	267419	TRAY ENCLOSURE FILLER	1
34	267422	GUARD BRACKET	5


UNLESS OTHERWISE SPECIFIED:		NAME		DATE	
DIMENSIONS ARE IN INCHES		DRAWN		RH 6/5/2014	
TOLERANCES: .XXK ± 0.005		ENG APPR		P/V O -	
.XX ± 0.010		<div></div> <div>THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MINNETONKA, MN.</div>			
ANGULAR: MACHINED ± 0.1°					
BEND ± 0.5°					
SURFACE: 63 ✓		TITLE:			
GENERAL NOTES:		TM-403 GUARD ASSEMBLY (TRAY)			
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5		MATERIAL		SIZE	DWG. NO.
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED		FINISH		B	291824
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED					
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES MUST RESULT IN ROHS COMPLIANT PART				REV	
- DO NOT SCALE DRAWING				A	
				WEIGHT (lbs): 9.83	
				SHEET 2 OF 4	


8 7 6 5 4 3 2 1

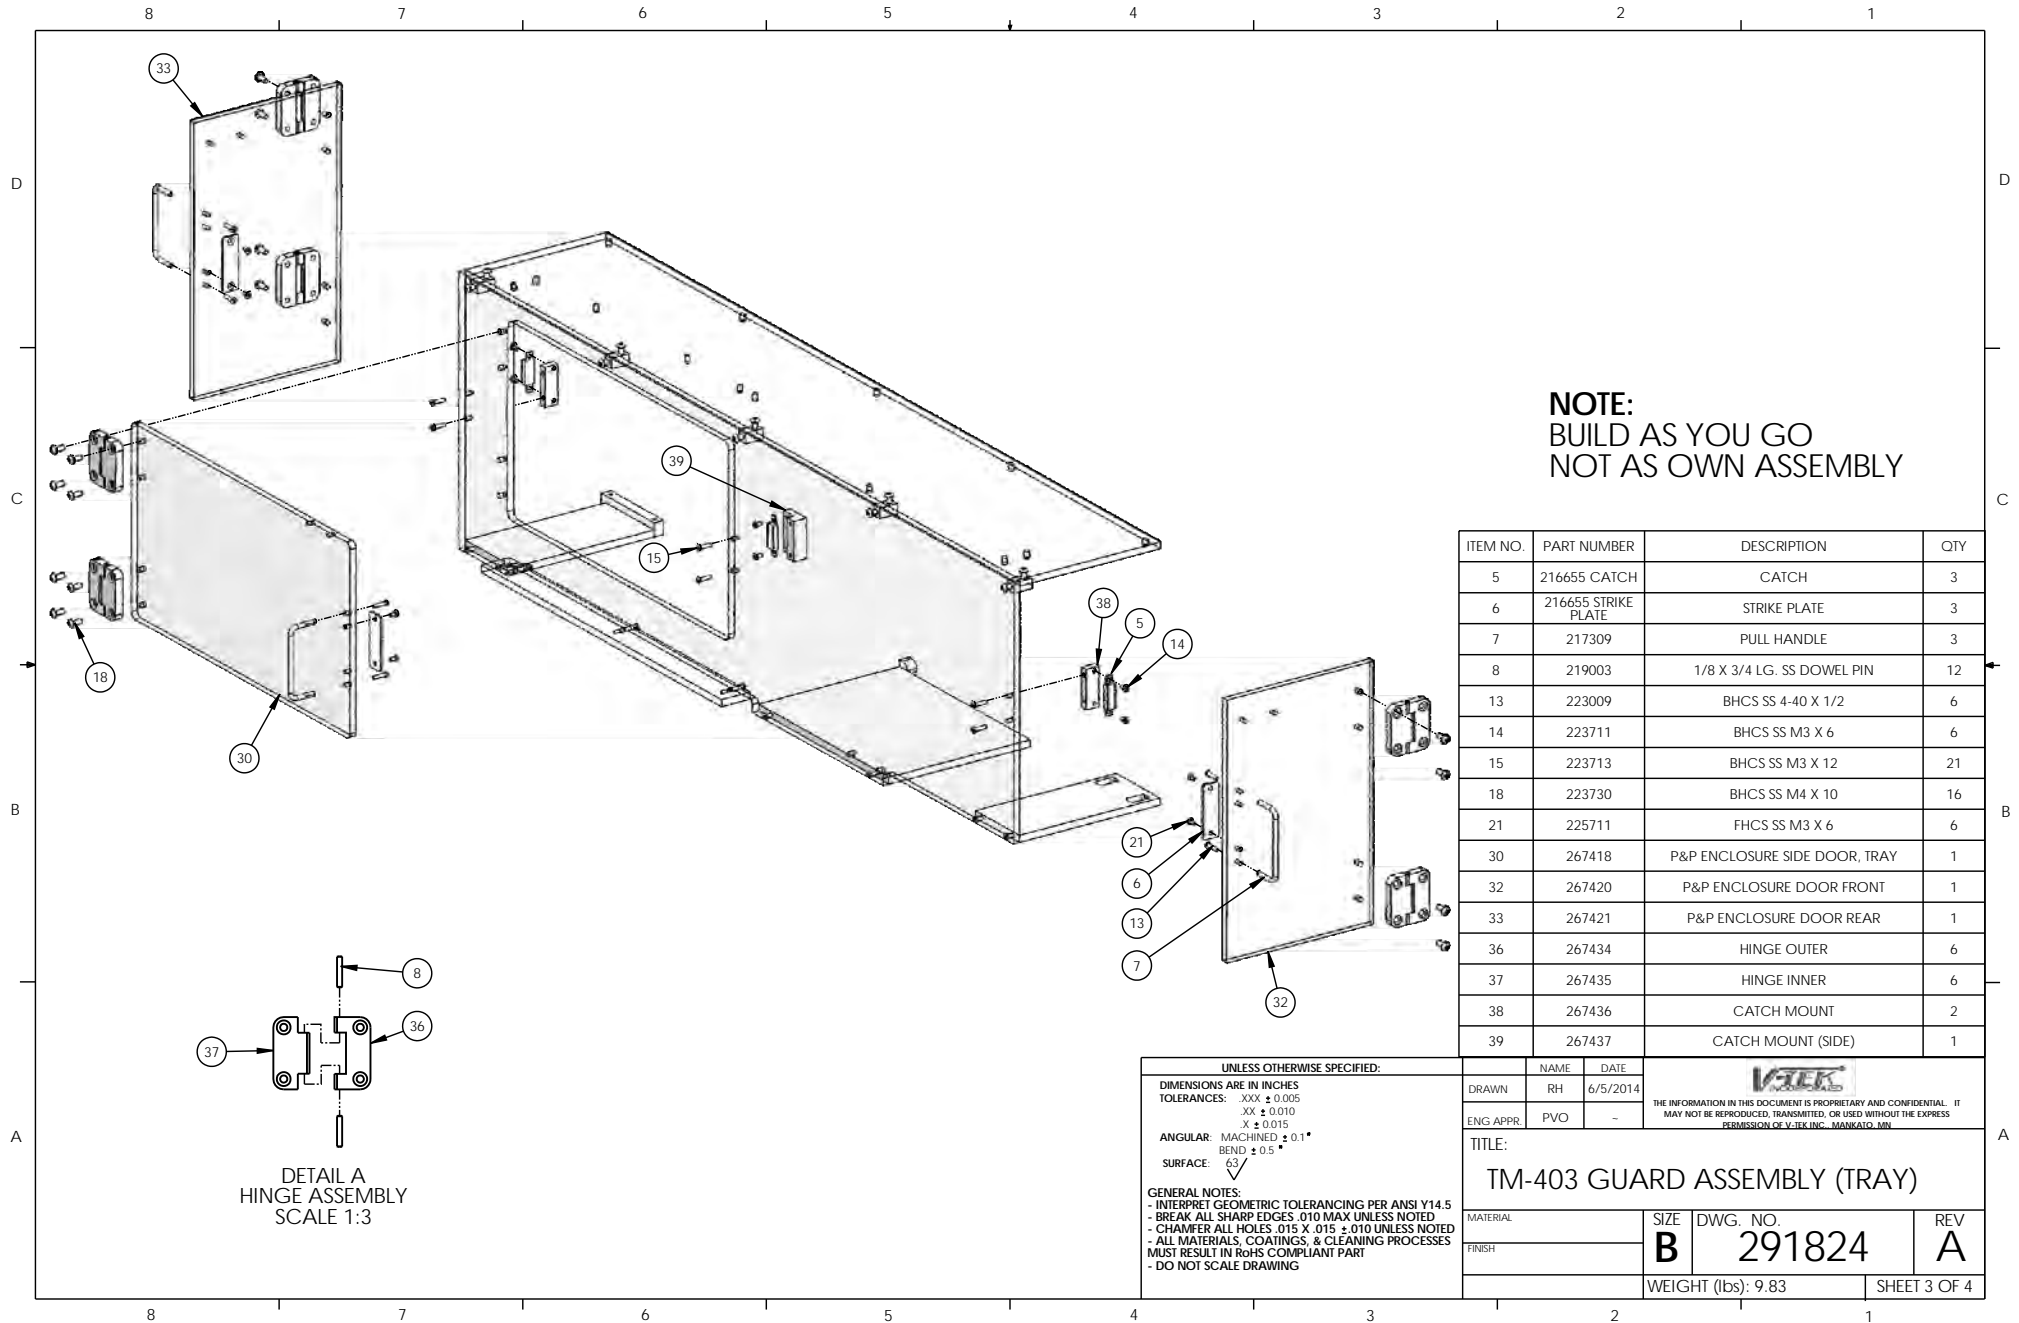

**NOTE:**  
BUILD AS YOU GO  
NOT AS OWN ASSEMBLY

ITEM NO.	PART NUMBER	DESCRIPTION	QTY
5	216655	CATCH	3
6	216655	STRIKE PLATE	3
7	217309	PULL HANDLE	3
8	219003	1/8 X 3/4 LG. SS DOWEL PIN	12
13	223009	BHCS SS 4-40 X 1/2	6
14	223711	BHCS SS M3 X 6	6
15	223713	BHCS SS M3 X 12	21
18	223730	BHCS SS M4 X 10	16
21	225711	FHCS SS M3 X 6	6
30	267418	P&P ENCLOSURE SIDE DOOR, TRAY	1
32	267420	P&P ENCLOSURE DOOR FRONT	1
33	267421	P&P ENCLOSURE DOOR REAR	1
36	267434	HINGE OUTER	6
37	267435	HINGE INNER	6
38	267436	CATCH MOUNT	2
39	267437	CATCH MOUNT (SIDE)	1


UNLESS OTHERWISE SPECIFIED:				NAME		DATE			
DIMENSIONS ARE IN INCHES		DRAWN		RH		6/5/2014		THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MANIKATO, MN.	
TOLERANCES: .XXX ± 0.005		ENG APPR		PVO		-			
.XX ± 0.010									
X ± 0.015									
ANGULAR: MACHINED ± 0.1°		TITLE:							
BEND ± 0.5°									
SURFACE: 63		TM-403 GUARD ASSEMBLY (TRAY)							
GENERAL NOTES:		MATERIAL		SIZE		DWG. NO.		REV	
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5		FINISH		B		291824		A	
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED									
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED									
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES MUST RESULT IN ROHS COMPLIANT PART									
- DO NOT SCALE DRAWING									
						WEIGHT (lbs): 9.83		SHEET 3 OF 4	

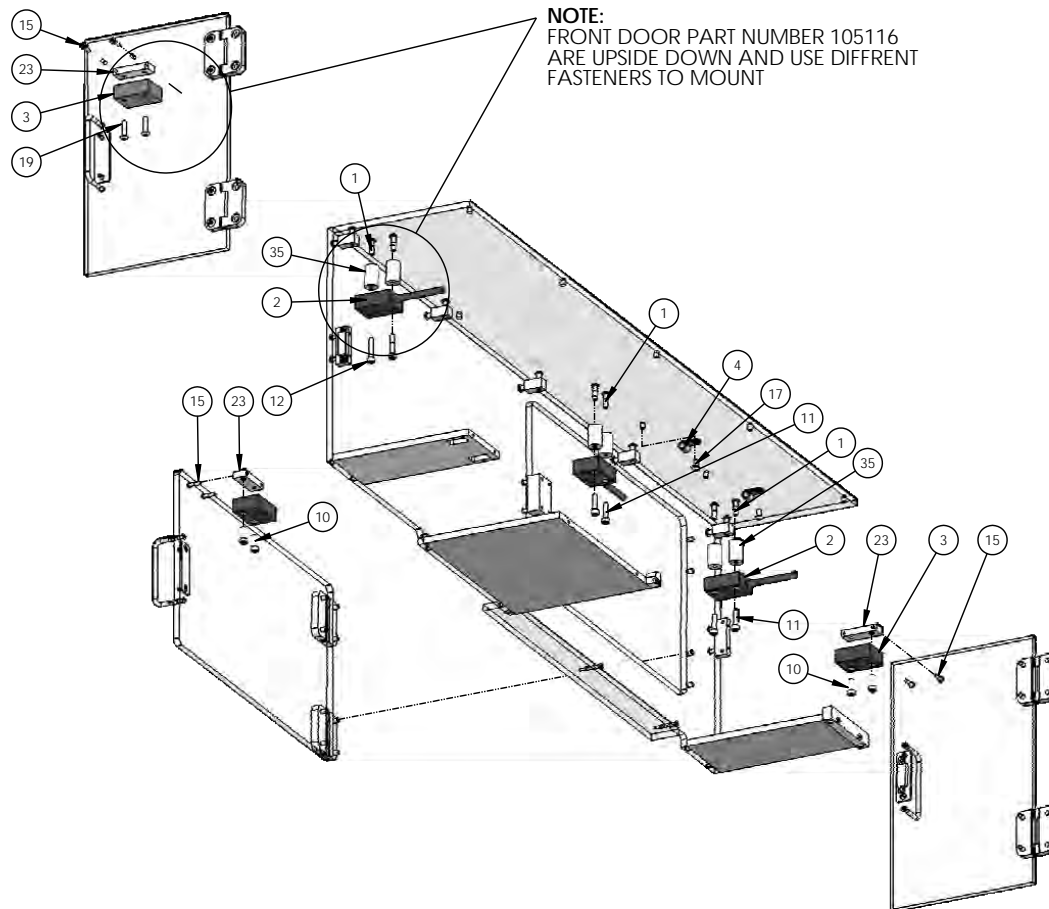

**NOTE:**  
FRONT DOOR PART NUMBER 105116  
ARE UPSIDE DOWN AND USE DIFFRENT  
FASTENERS TO MOUNT





**NOTE:**  
BUILD AS YOU GO  
NOT AS OWN ASSEMBLY


ITEM NO.	PART NUMBER	DESCRIPTION	QTY
1	24190	BHCS SS M4 X 14	6
2	105116	READ HEAD FOR CM-S4; 3 METER	3
4	107106	CABLE CLAMP 1/4 - .203 HOLE	2
10	221731	SHCS SS M4 X 12	4
11	221733	SS SHCS M4X16	4
12	221735	SHCS SS M4 X 20	2
15	223713	BHCS SS M3 X 12	21
17	223729	BHCS SS M4 X 8	2
19	223733	BHCS SS M4 X 16	2
20	223736	BHCS SS M4 X 12	10
23	267049	SWITCH MOUNT, METRIC	3
35	267423	SWITCH STAND-OFF	6


UNLESS OTHERWISE SPECIFIED:		NAME		DATE	 <small>THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MINNETONKA, MN.</small>
DIMENSIONS ARE IN INCHES		DRAWN	RH	6/5/2014	
TOLERANCES: .XX ± 0.005		ENG APPR.	PVO	-	
XX ± 0.010					
X ± 0.015					
ANGULAR: MACHINED ± 0.1°					
BEND ± 0.5°					
SURFACE: 63					
TITLE:					
TM-403 GUARD ASSEMBLY (TRAY)					
GENERAL NOTES:		MATERIAL	SIZE	DWG. NO.	REV
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5			B	291824	A
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED					
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED					
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES MUST RESULT IN ROHS COMPLIANT PART					
- DO NOT SCALE DRAWING					
			WEIGHT (lbs): 9.83		SHEET 4 OF 4



REVISION				
ECO #	REV.	DESCRIPTION	DATE	APPROVED
	A	RELEASE	9/6/2013	PVO
2873	B	REPLACE TAKE UP ARM (291677) WITH TAKE UP ARM WITH DANCER (292049)	8/6/2015	RH

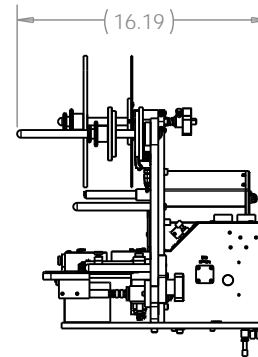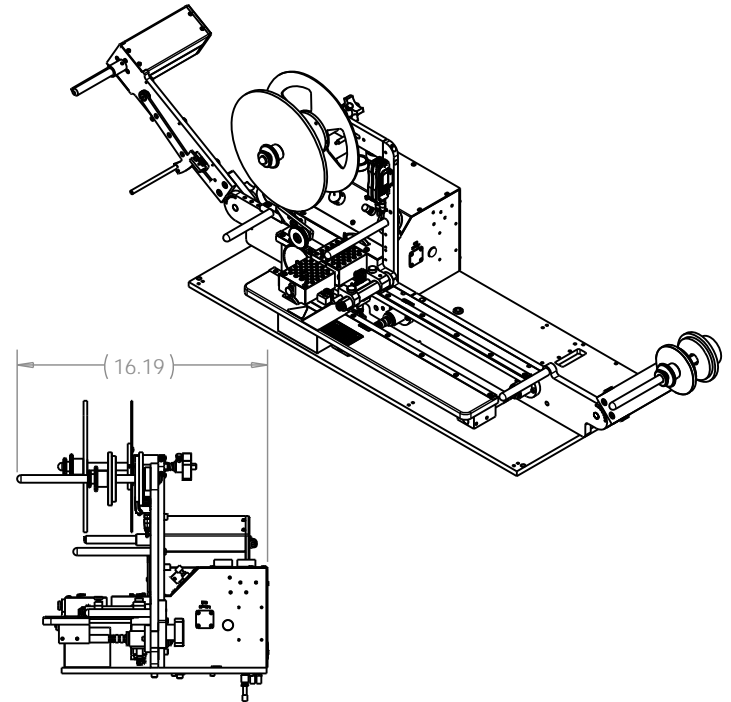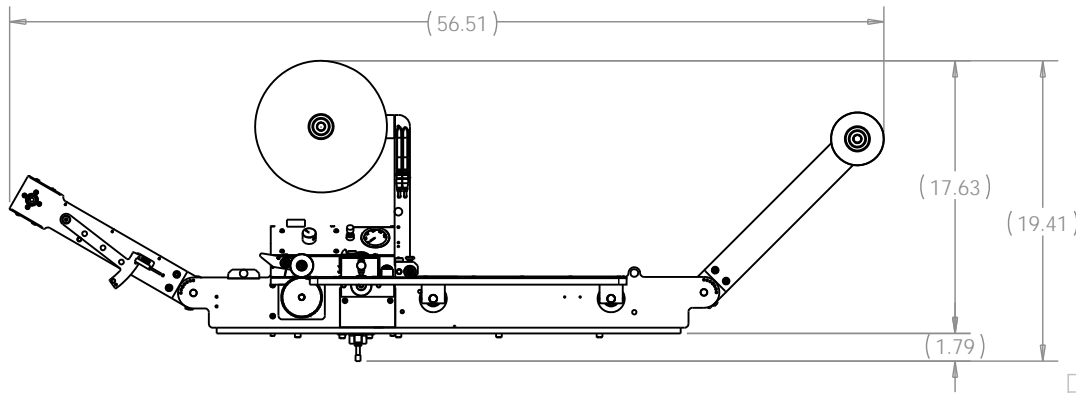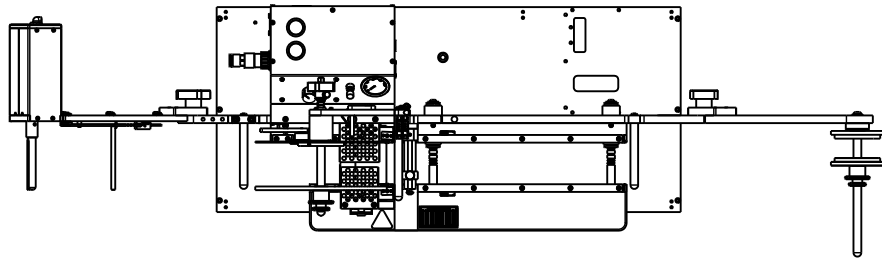


UNLESS OTHERWISE SPECIFIED:		NAME		DATE		<div></div> <div>THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MANIKATO, MN.</div>			
DIMENSIONS ARE IN INCHES		DRAWN		RH				9/6/13	
TOLERANCES: .XXX ± 0.005		ENG APPR		PVO				-	
XX ± 0.010									
X ± 0.015									
ANGULAR: MACHINED ± 0.1°									
BEND ± 0.5°									
SURFACE: 32									
GENERAL NOTES:									
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5									
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED									
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED									
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES MUST RESULT IN ROHS COMPLIANT PART									
- DO NOT SCALE DRAWING									
				</					

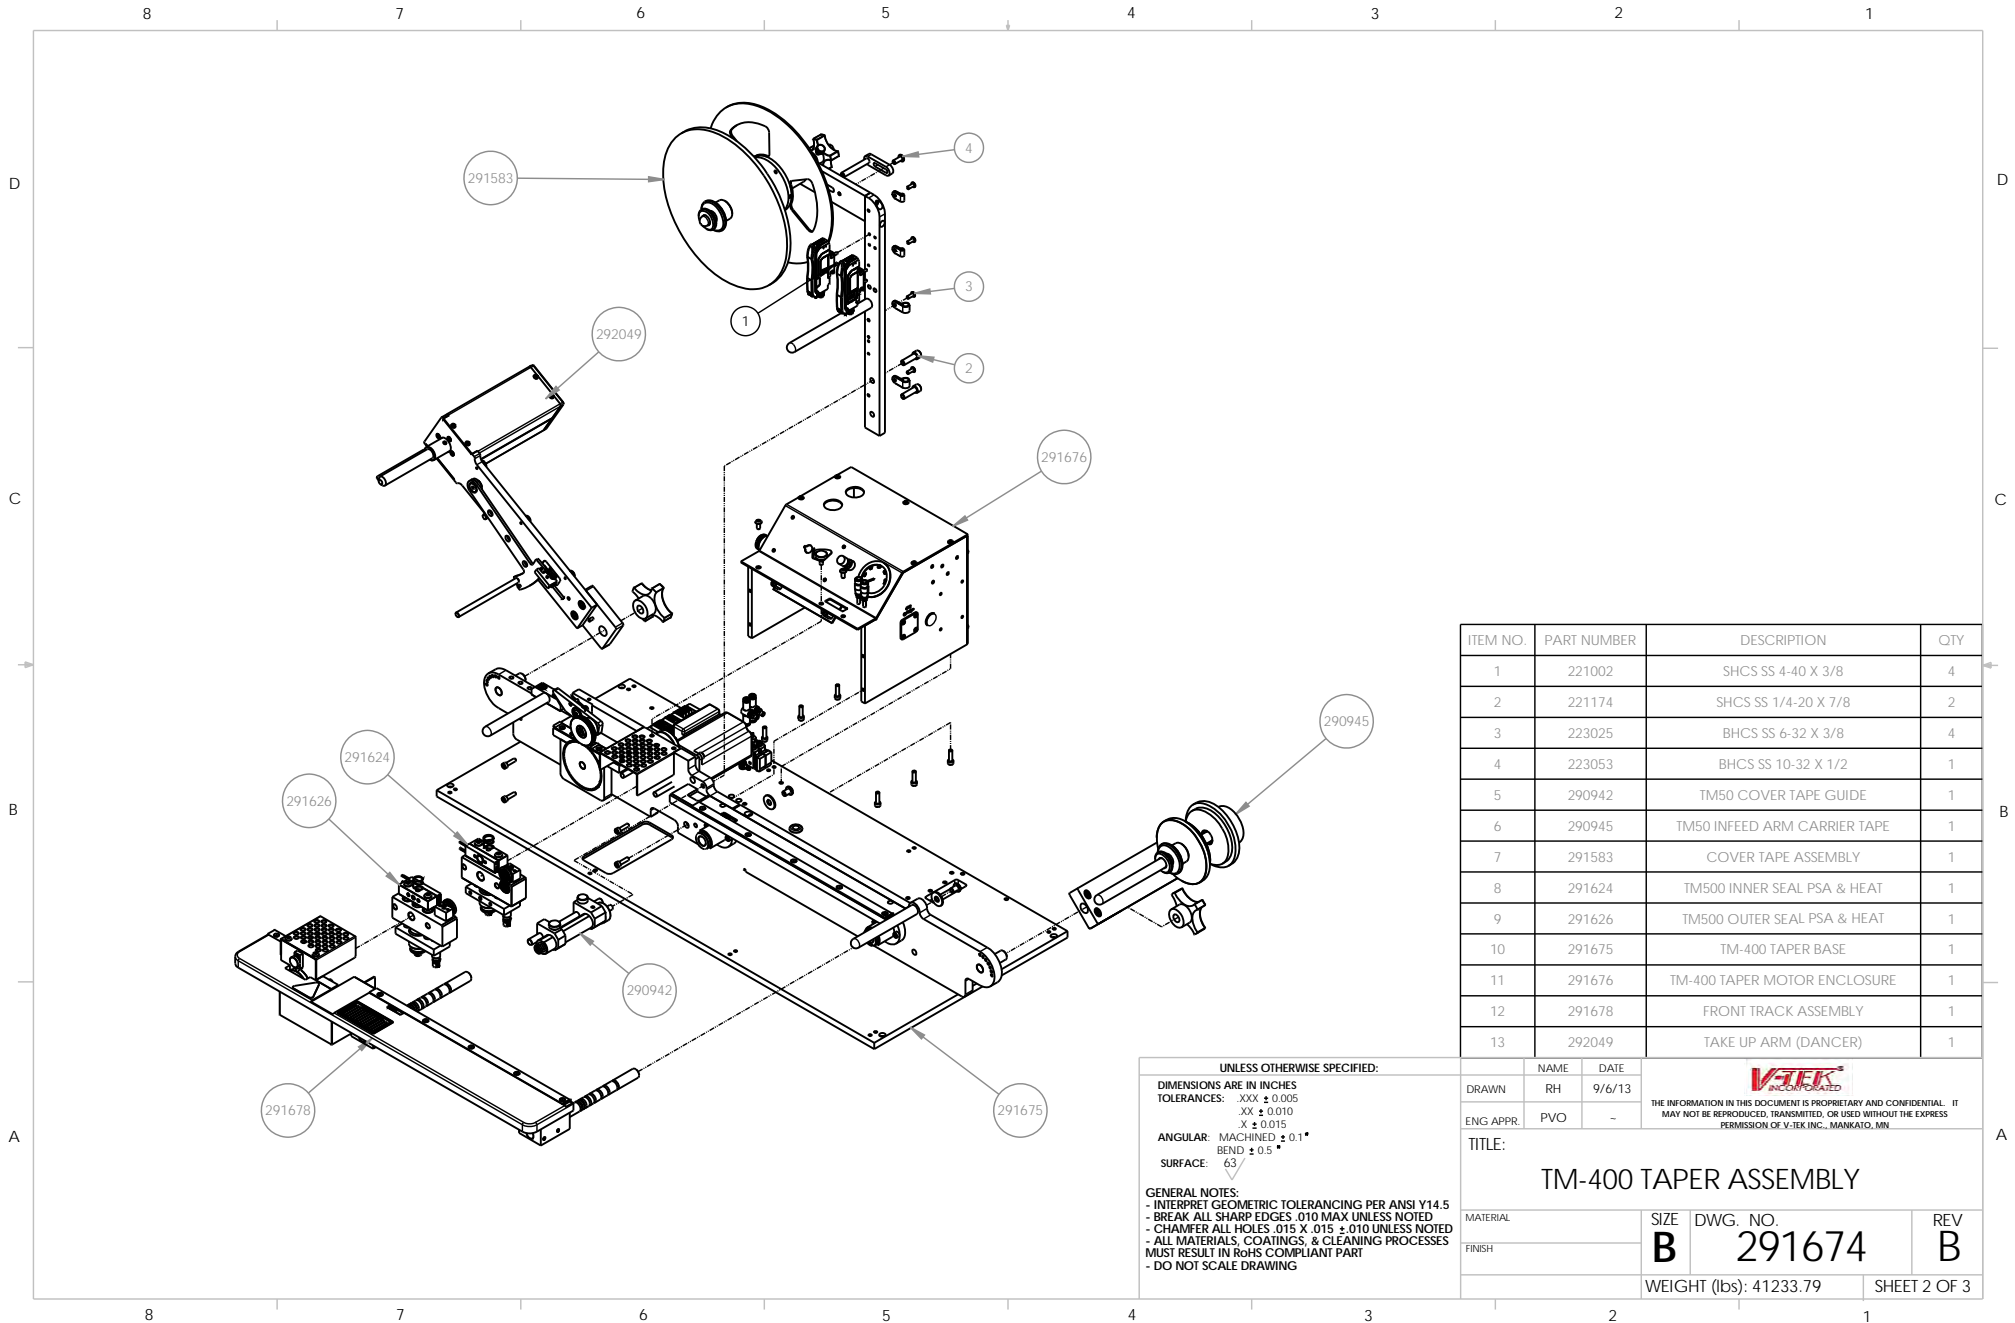

ITEM NO.	PART NUMBER	DESCRIPTION	QTY
1	221002	SHCS SS 4-40 X 3/8	4
2	221174	SHCS SS 1/4-20 X 7/8	2
3	223025	BHCS SS 6-32 X 3/8	4
4	223053	BHCS SS 10-32 X 1/2	1
5	290942	TM50 COVER TAPE GUIDE	1
6	290945	TM50 INFEEED ARM CARRIER TAPE	1
7	291583	COVER TAPE ASSEMBLY	1
8	291624	TM500 INNER SEAL PSA & HEAT	1
9	291626	TM500 OUTER SEAL PSA & HEAT	1
10	291675	TM-400 TAPER BASE	1
11	291676	TM-400 TAPER MOTOR ENCLOSURE	1
12	291678	FRONT TRACK ASSEMBLY	1
13	292049	TAKE UP ARM (DANCER)	1

UNLESS OTHERWISE SPECIFIED:  
DIMENSIONS ARE IN INCHES  
TOLERANCES: XX ± 0.005  
                  X ± 0.010  
                  X ± 0.015  
ANGULAR: MACHINED ± 0.1°  
              BEND ± 0.5°  
SURFACE: 63  
GENERAL NOTES:  
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5  
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED  
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED  
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES  
  MUST RESULT IN ROHS COMPLIANT PART  
- DO NOT SCALE DRAWING

	NAME	DATE	 THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MANKATO, MN.	
DRAWN	RH	9/6/13		
ENG APPR.	PVO	-		
TITLE:				
TM-400 TAPER ASSEMBLY				
MATERIAL	SIZE	DWG. NO.		REV
FINISH	B	291674		B
		WEIGHT (lbs): 41233.79		SHEET 2 OF 3

8 7 6 5 4 3 2 1

D

D

C


C

B


B


A

A

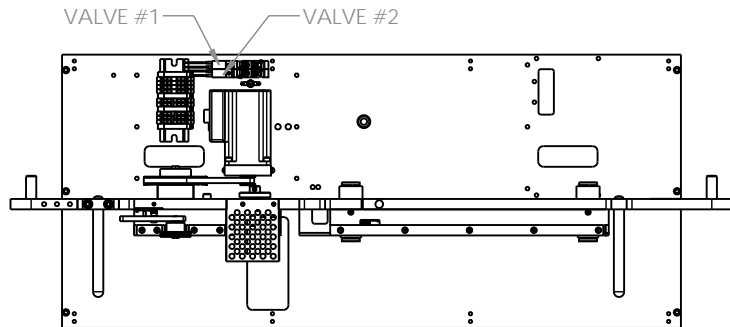



FROM 291672

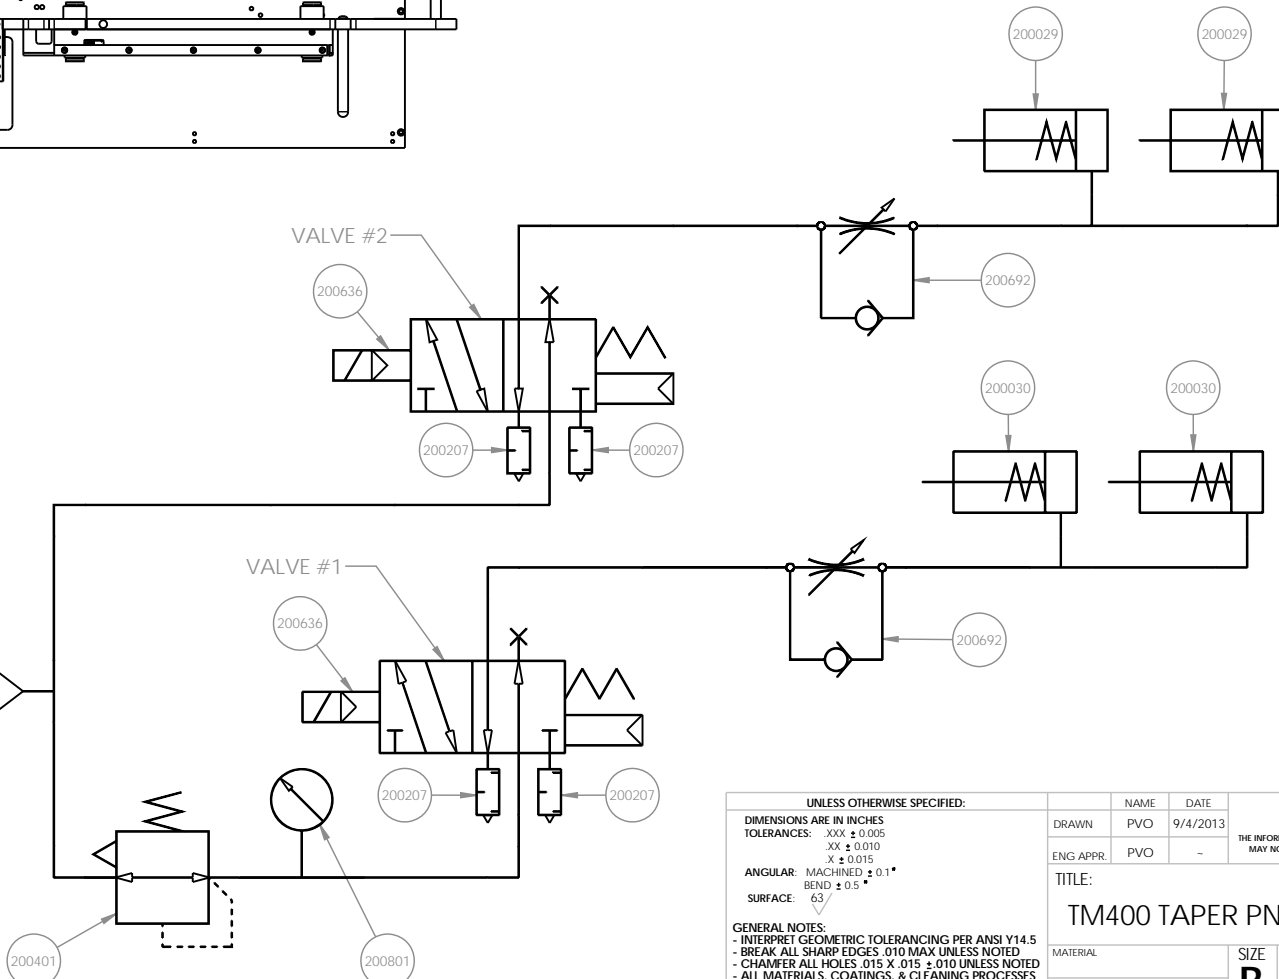


UNLESS OTHERWISE SPECIFIED:				NAME	DATE
DIMENSIONS ARE IN INCHES		DRAWN	PVO	9/4/2013	 THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MINNETONKA, MN.
TOLERANCES: .XX ± 0.005		ENG APPR	PVO	-	
XX ± 0.010					
X ± 0.015					
ANGULAR: MACHINED ± 0.1°					
BEND ± 0.5°					
SURFACE: 63		TITLE:			
		TM400 TAPER PNEUMATICS DRAWING			
GENERAL NOTES:		MATERIAL	SIZE	DWG. NO.	REV
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5		FINISH	B	291674	B
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED					
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED					
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES					
MUST RESULT IN ROHS COMPLIANT PART					
- DO NOT SCALE DRAWING		WEIGHT (lbs): 0.00			SHEET 3 OF 3


8 7 6 5 4 3 2 1

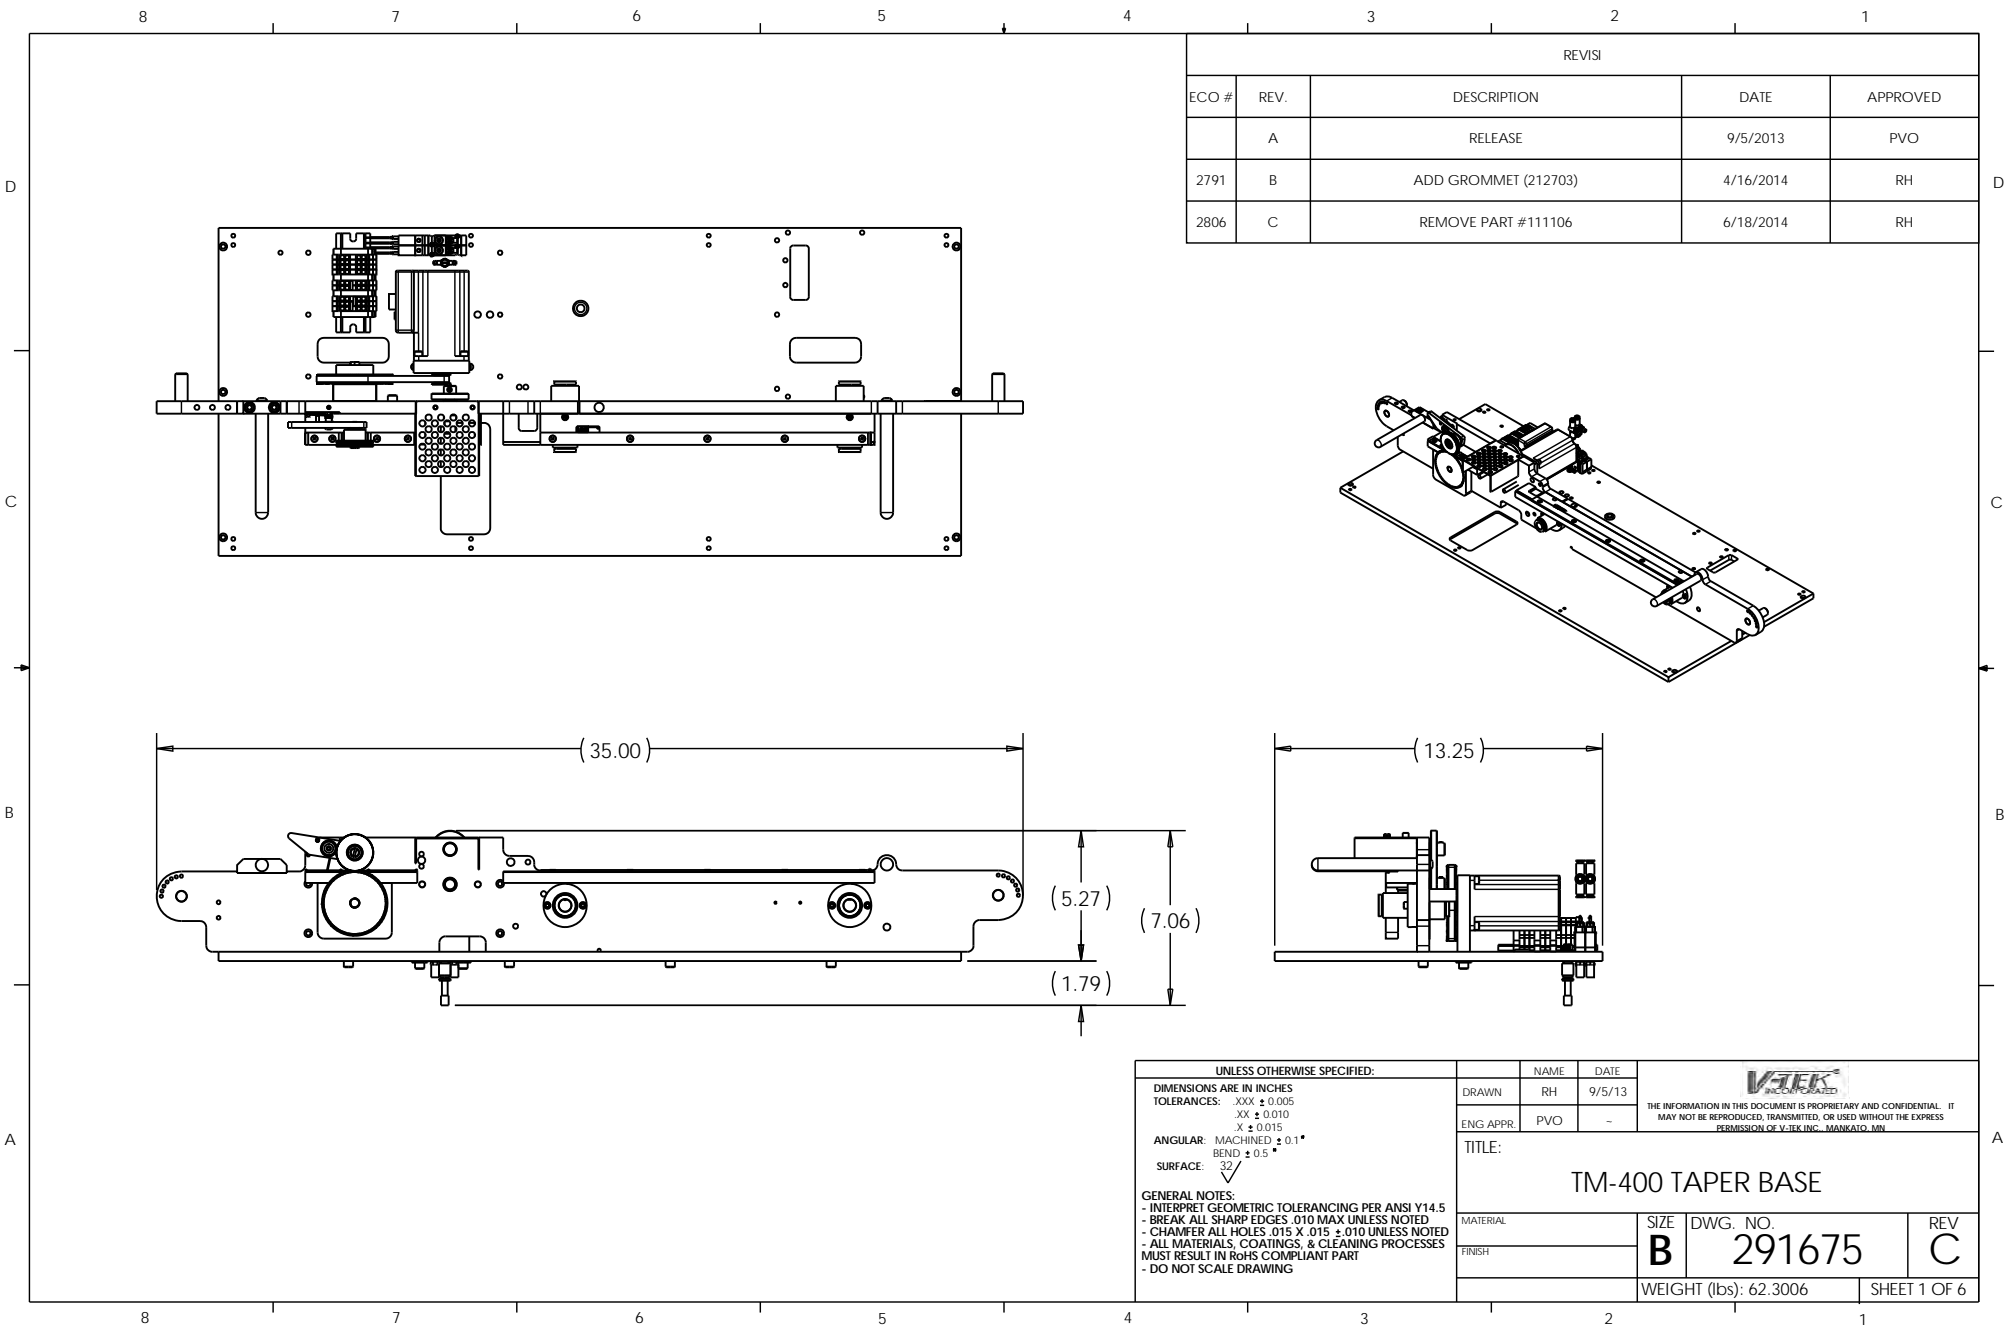

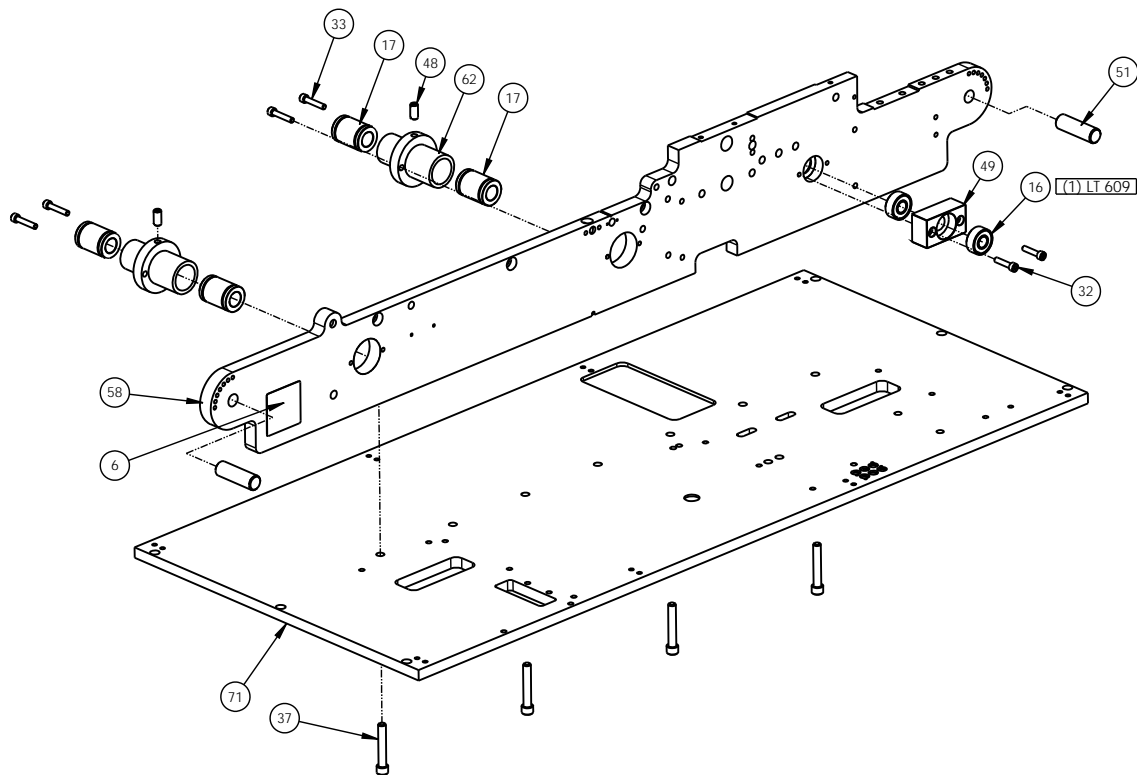

ITEM NO.	PART NUMBER	DESCRIPTION	QTY
6	111006	SAFETY STICKER	1
16	204051	BEARING, 3/8ID X 7/8OD	2
17	204053	BEARING, SIMPLICITY FLO8	4
32	221029	SHCS SS 8-32 X 3/4	2
33	221030	SHCS SS 8-32 X 3/4	4
37	221065	SHCS SS 1/4-20 X 1-1/4	4
48	241003	BALL PLUNGER 1/4-20	2
49	250015	BEARING MOUNT	1
51	250075	THREADED ROD, 1/2-13 X 1 5/8"	2
58	261043	TRACK SUPPORT BRACKET	1
62	261093	TRACK BEARING MOUNT, TM50	2
71	267069	TM-400 TAPER BASEPLATE	1

UNLESS OTHERWISE SPECIFIED:			NAME		DATE		
DIMENSIONS ARE IN INCHES			DRAWN	RH	9/5/13	THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MINNETONKA, MN.	
TOLERANCES: .XXX ± 0.005			ENG APPR	PVO	-		
XX ± 0.010							
X ± 0.015							
ANGULAR: MACHINED ± 0.1°			TITLE:  TM-400 TAPER BASE				
BEND ± 0.5°							
SURFACE: 63√							
GENERAL NOTES:			MATERIAL		SIZE	DWG. NO.	REV
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5					B	291675	C
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED			FINISH				
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED							
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES MUST RESULT IN ROHS COMPLIANT PART							
- DO NOT SCALE DRAWING			WEIGHT (lbs): 62.3006				
			SHEET 2 OF 6				

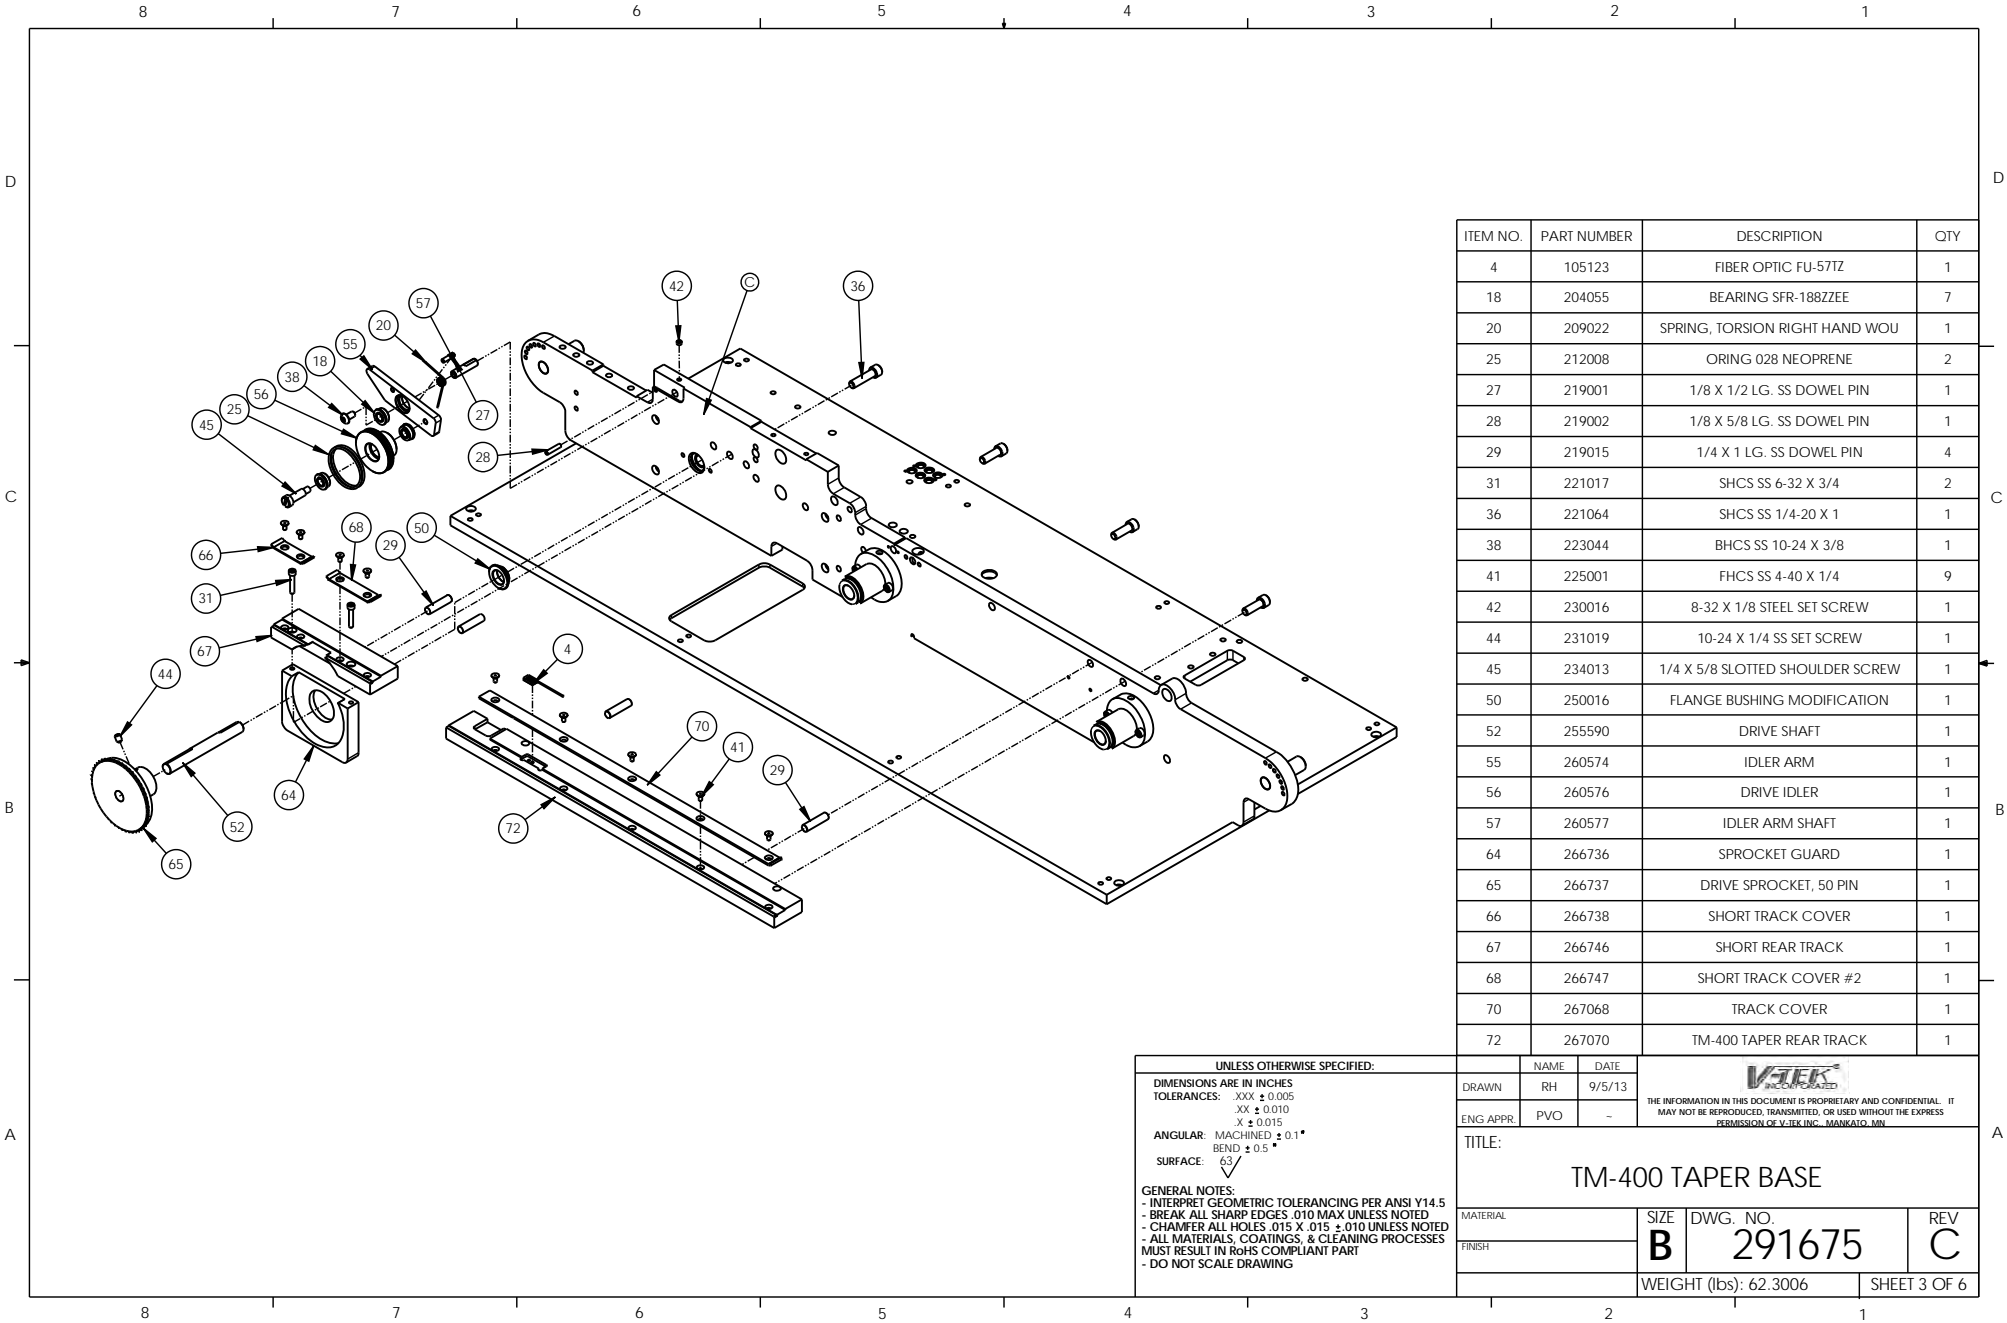


ITEM NO.	PART NUMBER	DESCRIPTION	QTY
4	105123	FIBER OPTIC FU-57TZ	1
18	204055	BEARING SFR-188ZZEE	7
20	209022	SPRING, TORSION RIGHT HAND WOU	1
25	212008	ORING 028 NEOPRENE	2
27	219001	1/8 X 1/2 LG. SS DOWEL PIN	1
28	219002	1/8 X 5/8 LG. SS DOWEL PIN	1
29	219015	1/4 X 1 LG. SS DOWEL PIN	4
31	221017	SHCS SS 6-32 X 3/4	2
36	221064	SHCS SS 1/4-20 X 1	1
38	223044	BHCS SS 10-24 X 3/8	1
41	225001	FHCS SS 4-40 X 1/4	9
42	230016	8-32 X 1/8 STEEL SET SCREW	1
44	231019	10-24 X 1/4 SS SET SCREW	1
45	234013	1/4 X 5/8 SLOTTED SHOULDER SCREW	1
50	250016	FLANGE BUSHING MODIFICATION	1
52	255590	DRIVE SHAFT	1
55	260574	IDLER ARM	1
56	260576	DRIVE IDLER	1
57	260577	IDLER ARM SHAFT	1
64	266736	SPROCKET GUARD	1
65	266737	DRIVE SPROCKET, 50 PIN	1
66	266738	SHORT TRACK COVER	1
67	266746	SHORT REAR TRACK	1
68	266747	SHORT TRACK COVER #2	1
70	267068	TRACK COVER	1
72	267070	TM-400 TAPER REAR TRACK	1


UNLESS OTHERWISE SPECIFIED:

DIMENSIONS ARE IN INCHES  
TOLERANCES: .XXK ± 0.005  
                  XX ± 0.010  
                  X ± 0.015  
ANGULAR: MACHINED ± 0.1°  
              BEND ± 0.5°  
SURFACE: 63

GENERAL NOTES:  
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5  
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED  
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED  
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES  
  MUST RESULT IN ROHS COMPLIANT PART  
- DO NOT SCALE DRAWING

	NAME	DATE	 THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MANKATO, MN.	
DRAWN	RH	9/5/13		
ENG APPR	PVO	-		
TITLE:				
TM-400 TAPER BASE				
MATERIAL	SIZE	DWG. NO.	REV	
FINISH	B	291675	C	
		WEIGHT (lbs): 62.3006	SHEET 3 OF 6	



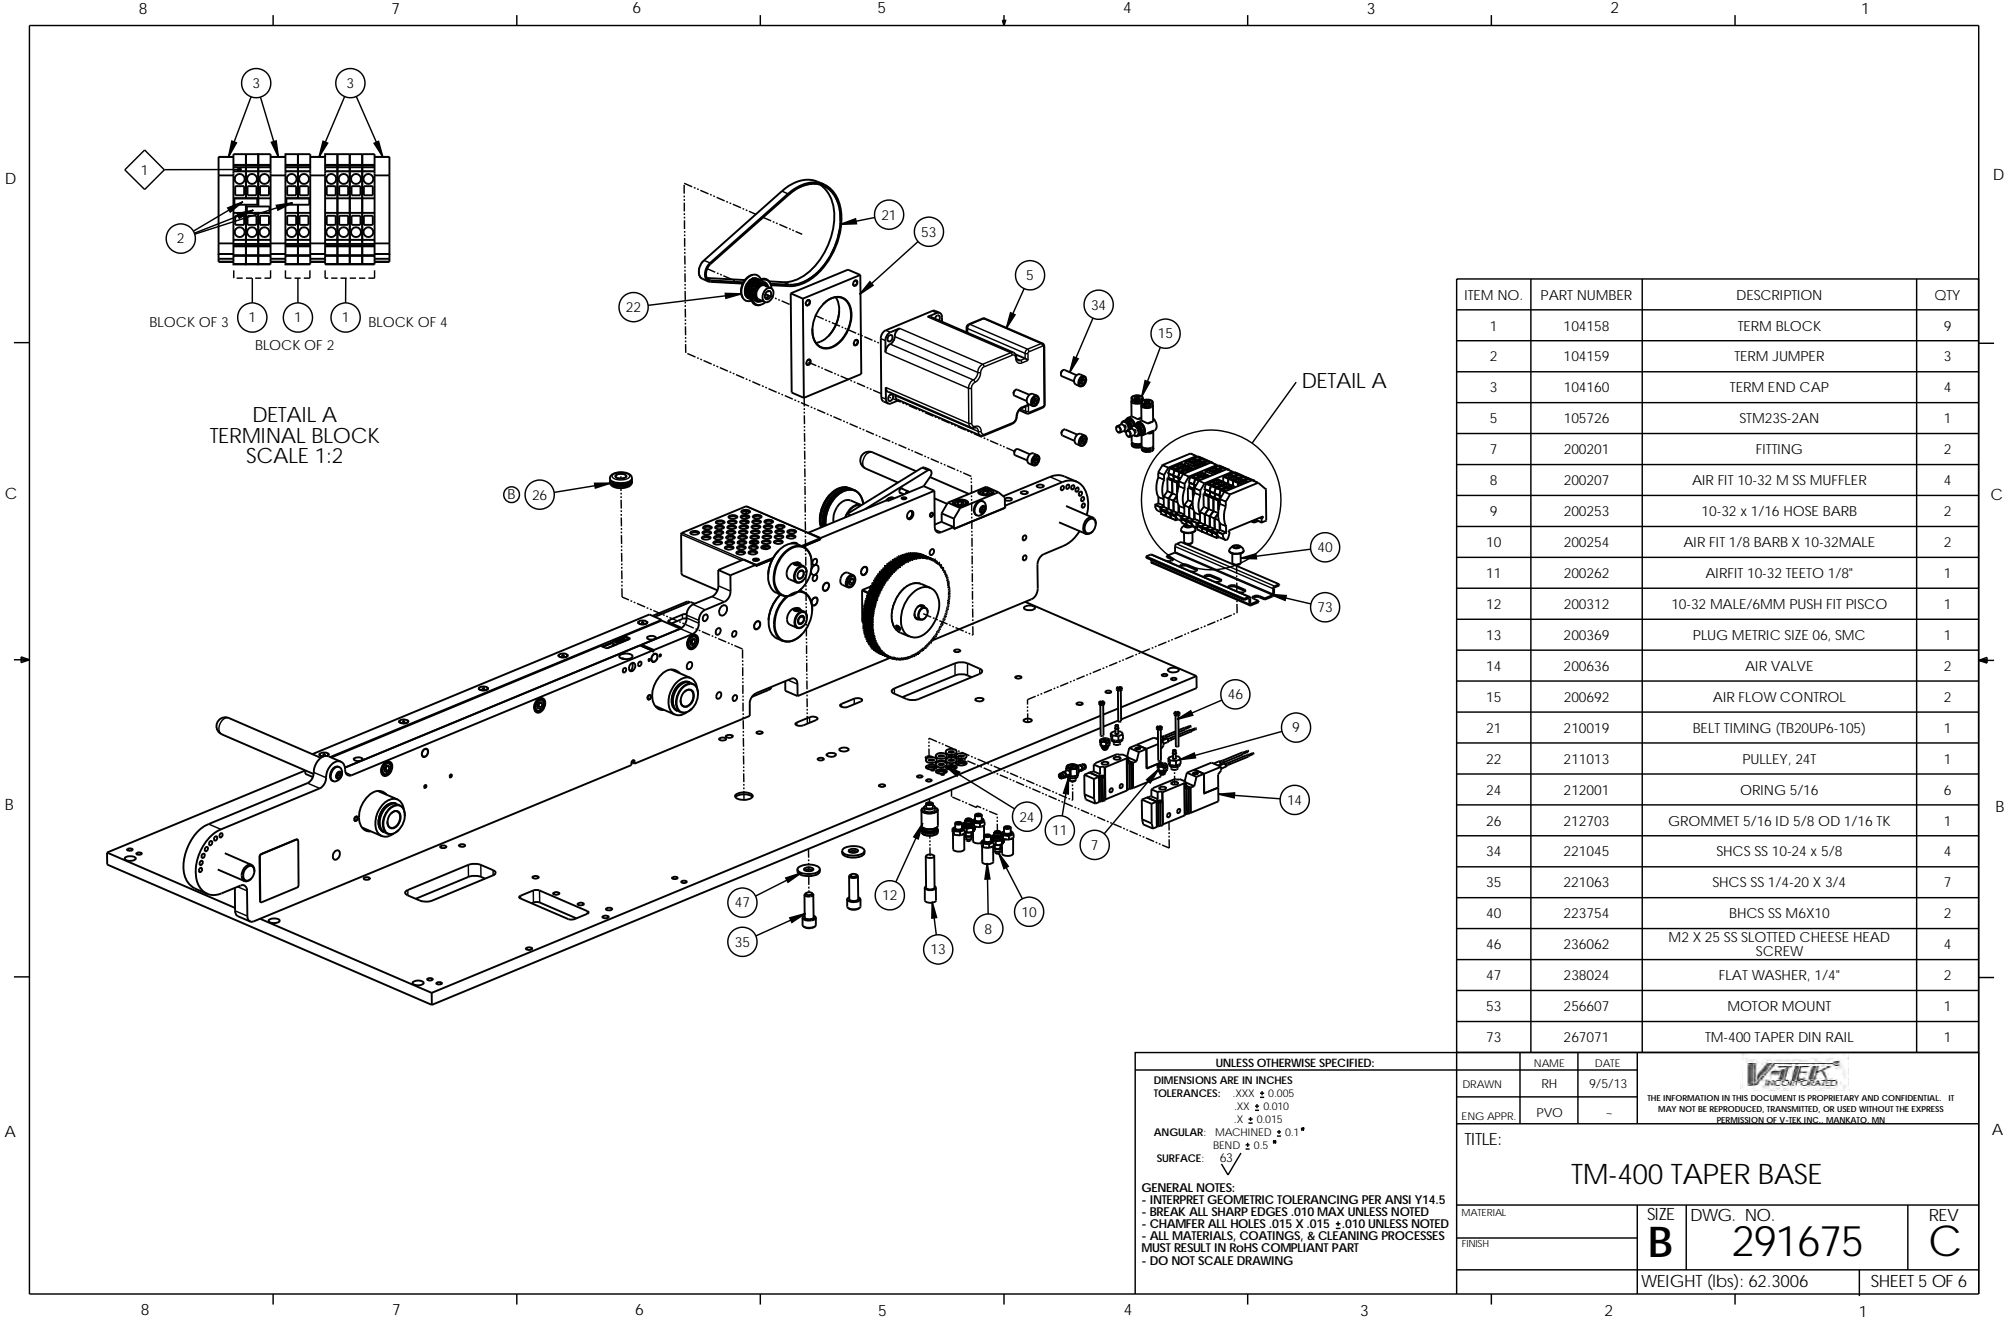

DETAIL A  
TERMINAL BLOCK  
SCALE 1:2






ITEM NO.	PART NUMBER	DESCRIPTION	QTY
1	104158	TERM BLOCK	9
2	104159	TERM JUMPER	3
3	104160	TERM END CAP	4
5	105726	STM23S-2AN	1
7	200201	FITTING	2
8	200207	AIR FIT 10-32 M SS MUFFLER	4
9	200253	10-32 x 1/16 HOSE BARB	2
10	200254	AIR FIT 1/8 BARB X 10-32MALE	2
11	200262	AIRFIT 10-32 TEETO 1/8"	1
12	200312	10-32 MALE/6MM PUSH FIT PISCO	1
13	200369	PLUG METRIC SIZE 06, SMC	1
14	200636	AIR VALVE	2
15	200692	AIR FLOW CONTROL	2
21	210019	BELT TIMING (TB20UP6-105)	1
22	211013	PULLEY, 24T	1
24	212001	ORING 5/16	6
26	212703	GROMMET 5/16 ID 5/8 OD 1/16 TK	1
34	221045	SHCS SS 10-24 x 5/8	4
35	221063	SHCS SS 1/4-20 X 3/4	7
40	223754	BHCS SS M6X10	2
46	236062	M2 X 25 SS SLOTTED CHEESE HEAD SCREW	4
47	238024	FLAT WASHER, 1/4"	2
53	256607	MOTOR MOUNT	1
73	267071	TM-400 TAPER DIN RAIL	1

UNLESS OTHERWISE SPECIFIED:  
DIMENSIONS ARE IN INCHES  
TOLERANCES: XX ± 0.005  
                  X ± 0.010  
                  X ± 0.015  
ANGULAR: MACHINED ± 0.1°  
                  BEND ± 0.5°  
SURFACE: 63  
GENERAL NOTES:  
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5  
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED  
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED  
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES  
MUST RESULT IN ROHS COMPLIANT PART  
- DO NOT SCALE DRAWING


NAME	DATE
DRAWN RH	9/5/13
ENG APPR PVO	-
VITEK INCORPORATED THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MINNETONKA, MN.	
TITLE: <b>TM-400 TAPER BASE</b>	
MATERIAL	SIZE DWG. NO.
FINISH	<b>B 291675</b>
REV <b>C</b>	
WEIGHT (lbs): 62.3006	
SHEET 5 OF 6	

8 7 6 5 4 3 2 1

REVISI				
ECO #	REV.	DESCRIPTION	DATE	APPROVED
	A	RELEASE	9/6/2013	PVO

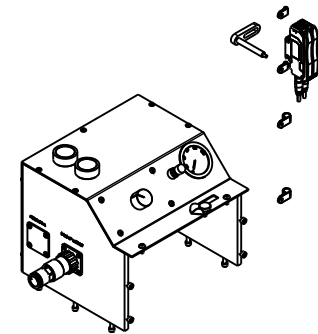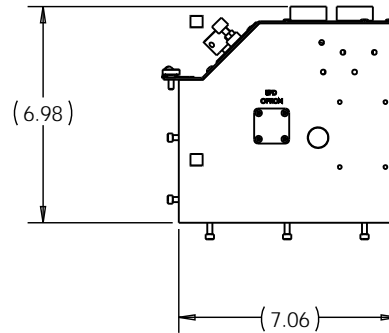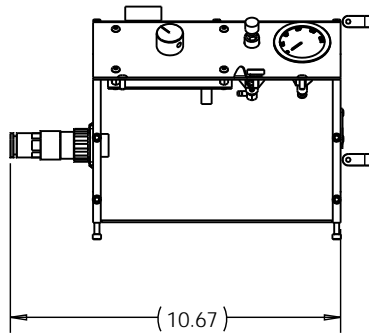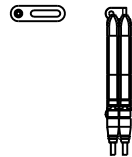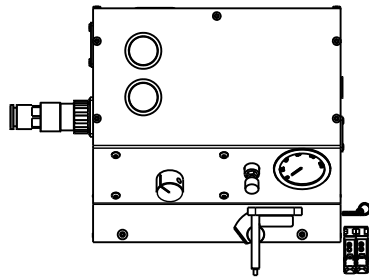

**NOTE:**  
BUILD AS YOU GO  
NOT AS OWN ASSEMBLY

UNLESS OTHERWISE SPECIFIED:		NAME	DATE	 THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MANIKATO, MN.
DIMENSIONS ARE IN INCHES		DRAWN	RH	
TOLERANCES: .XXX ± 0.005 XX ± 0.010 X ± 0.015 ANGULAR: MACHINED ± 0.1° BEND ± 0.5° SURFACE: 32 /		ENG APPR	PVO	
TITLE:				TM-400 TAPER MOTOR ENCLOSURE
GENERAL NOTES: - INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5 - BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED - CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED - ALL MATERIALS, COATINGS, & CLEANING PROCESSES MUST RESULT IN ROHS COMPLIANT PART - DO NOT SCALE DRAWING		MATERIAL	SIZE	
		FINISH	DWG. NO.	
			<b>B</b>	291676
			REV	<b>A</b>
		WEIGHT (lbs): 3.63		SHEET 1 OF 3

8 7 6 5 4 3 2 1

D

C

B


A

D

C

B


A

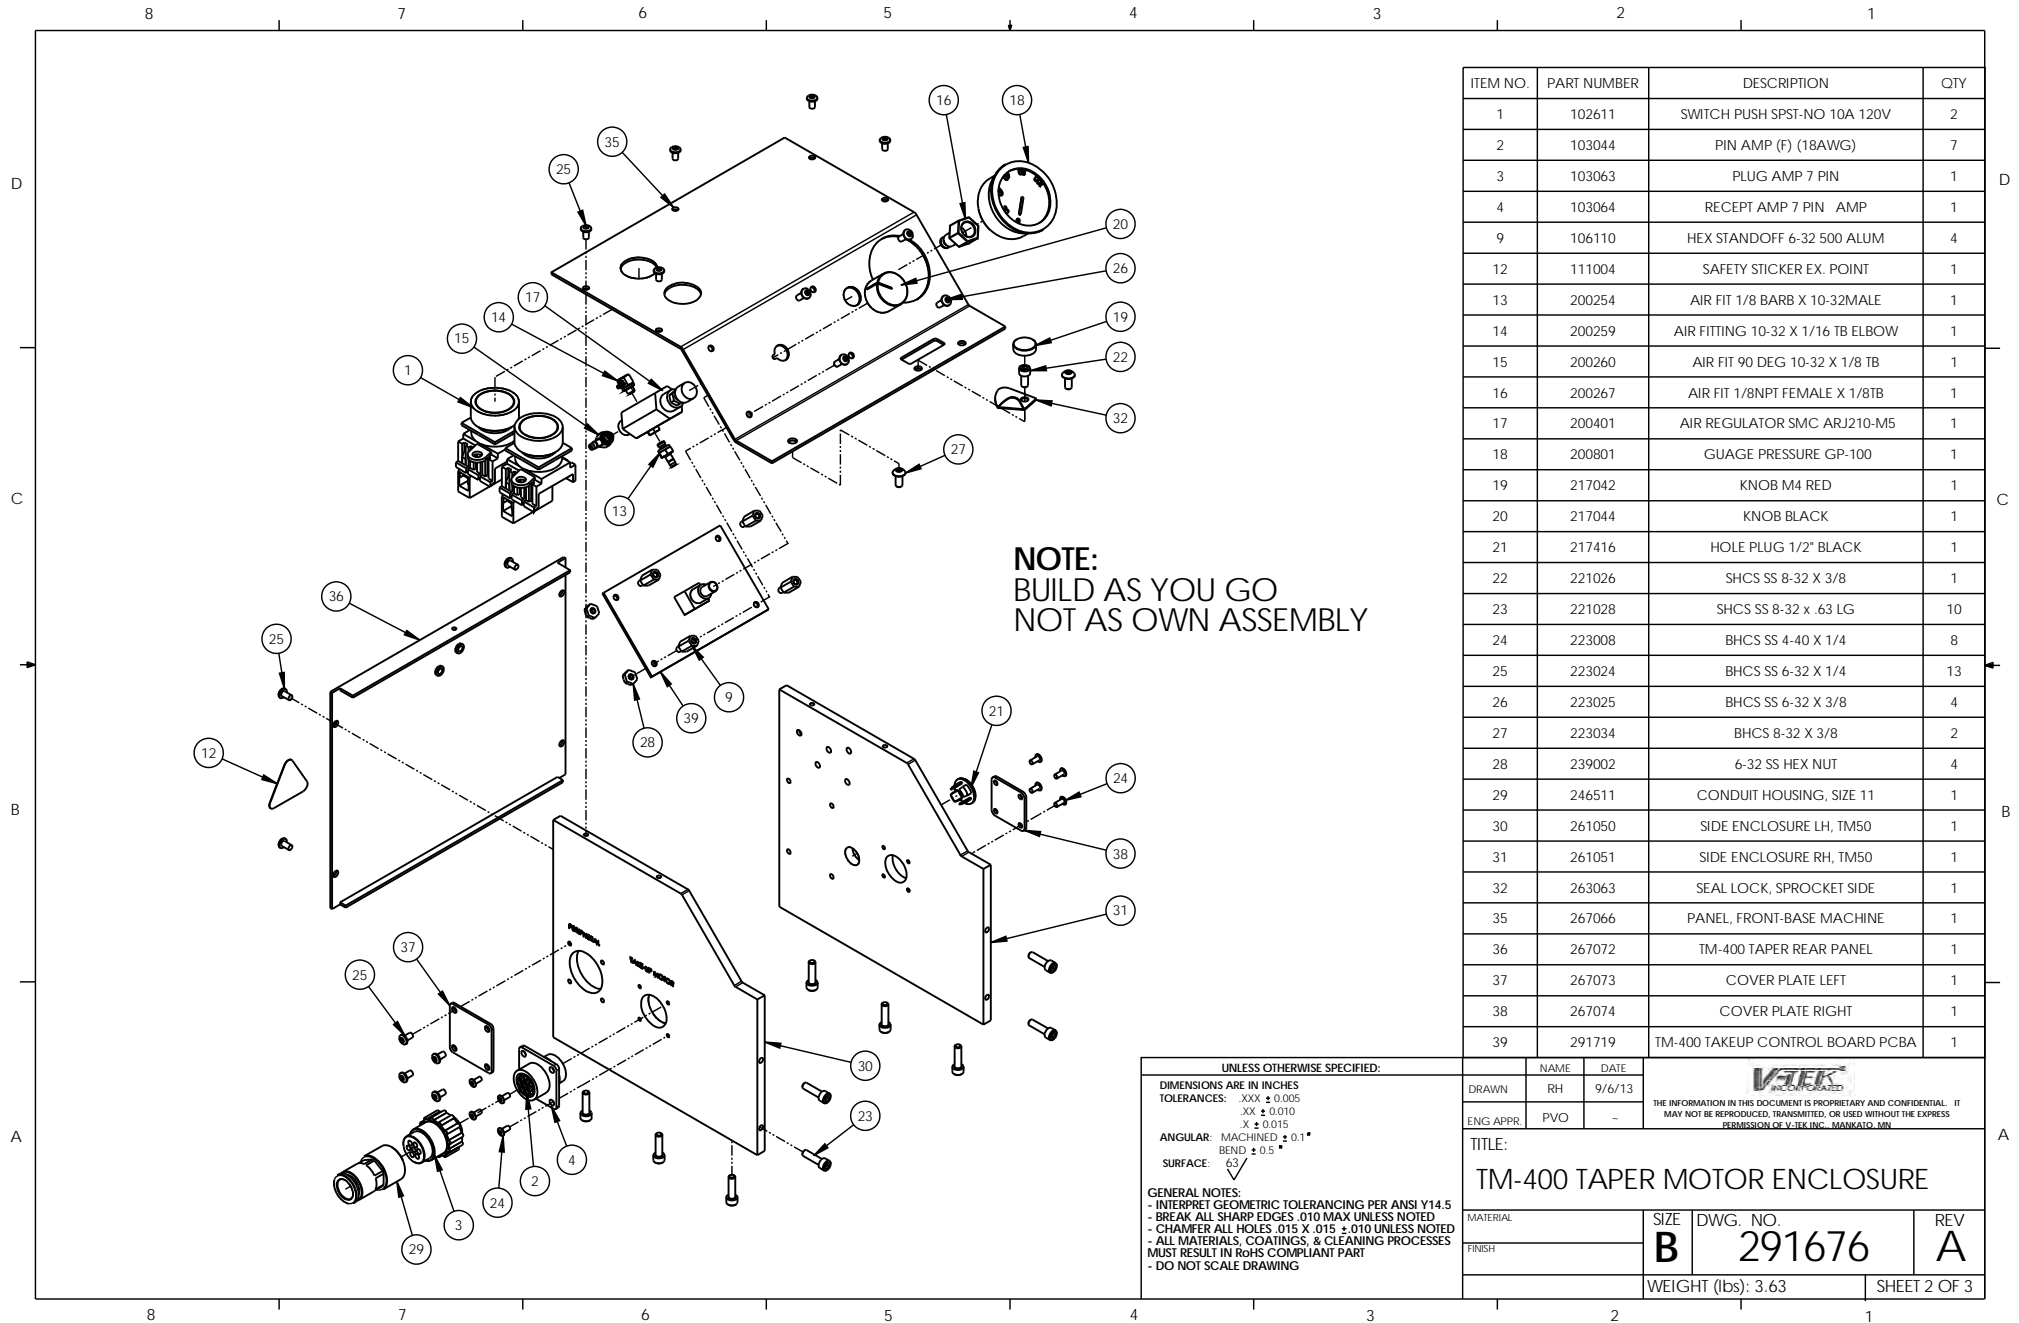

NOTE:  
BUILD AS YOU GO  
NOT AS OWN ASSEMBLY


ITEM NO.	PART NUMBER	DESCRIPTION	QTY
1	102611	SWITCH PUSH SPST-NO 10A 120V	2
2	103044	PIN AMP (F) (18AWG)	7
3	103063	PLUG AMP 7 PIN	1
4	103064	RECEPT AMP 7 PIN AMP	1
9	106110	HEX STANDOFF 6-32 500 ALUM	4
12	111004	SAFETY STICKER EX. POINT	1
13	200254	AIR FIT 1/8 BARB X 10-32MALE	1
14	200259	AIR FITTING 10-32 X 1/16 TB ELBOW	1
15	200260	AIR FIT 90 DEG 10-32 X 1/8 TB	1
16	200267	AIR FIT 1/8NPT FEMALE X 1/8TB	1
17	200401	AIR REGULATOR SMC ARJ210-M5	1
18	200801	GUAGE PRESSURE GP-100	1
19	217042	KNOB M4 RED	1
20	217044	KNOB BLACK	1
21	217416	HOLE PLUG 1/2" BLACK	1
22	221026	SHCS SS 8-32 X 3/8	1
23	221028	SHCS SS 8-32 x .63 LG	10
24	223008	BHCS SS 4-40 X 1/4	8
25	223024	BHCS SS 6-32 X 1/4	13
26	223025	BHCS SS 6-32 X 3/8	4
27	223034	BHCS 8-32 X 3/8	2
28	239002	6-32 SS HEX NUT	4
29	246511	CONDUIT HOUSING, SIZE 11	1
30	261050	SIDE ENCLOSURE LH, TM50	1
31	261051	SIDE ENCLOSURE RH, TM50	1
32	263063	SEAL LOCK, SPROCKET SIDE	1
35	267066	PANEL, FRONT-BASE MACHINE	1
36	267072	TM-400 TAPER REAR PANEL	1
37	267073	COVER PLATE LEFT	1
38	267074	COVER PLATE RIGHT	1
39	291719	TM-400 TAKEUP CONTROL BOARD PCBA	1

UNLESS OTHERWISE SPECIFIED:			NAME	DATE
DIMENSIONS ARE IN INCHES			DRAWN	RH
TOLERANCES: .XX ± 0.005			ENG APPR	PVO
XX ± 0.010				
X ± 0.015				
ANGULAR: MACHINED ± 0.1°				
BEND ± 0.5°				
SURFACE: 63				
GENERAL NOTES:			VITEK INCORPORATED	
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5			THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT	
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED			MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS	
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED			PERMISSION OF V-TEK INC., MINNETONKA, MN	
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES			TITLE:	
MUST RESULT IN ROHS COMPLIANT PART			TM-400 TAPER MOTOR ENCLOSURE	
- DO NOT SCALE DRAWING			MATERIAL	SIZE
			FINISH	DWG. NO.
				291676
				REV
				A
			WEIGHT (lbs): 3.63	
			SHEET 2 OF 3	

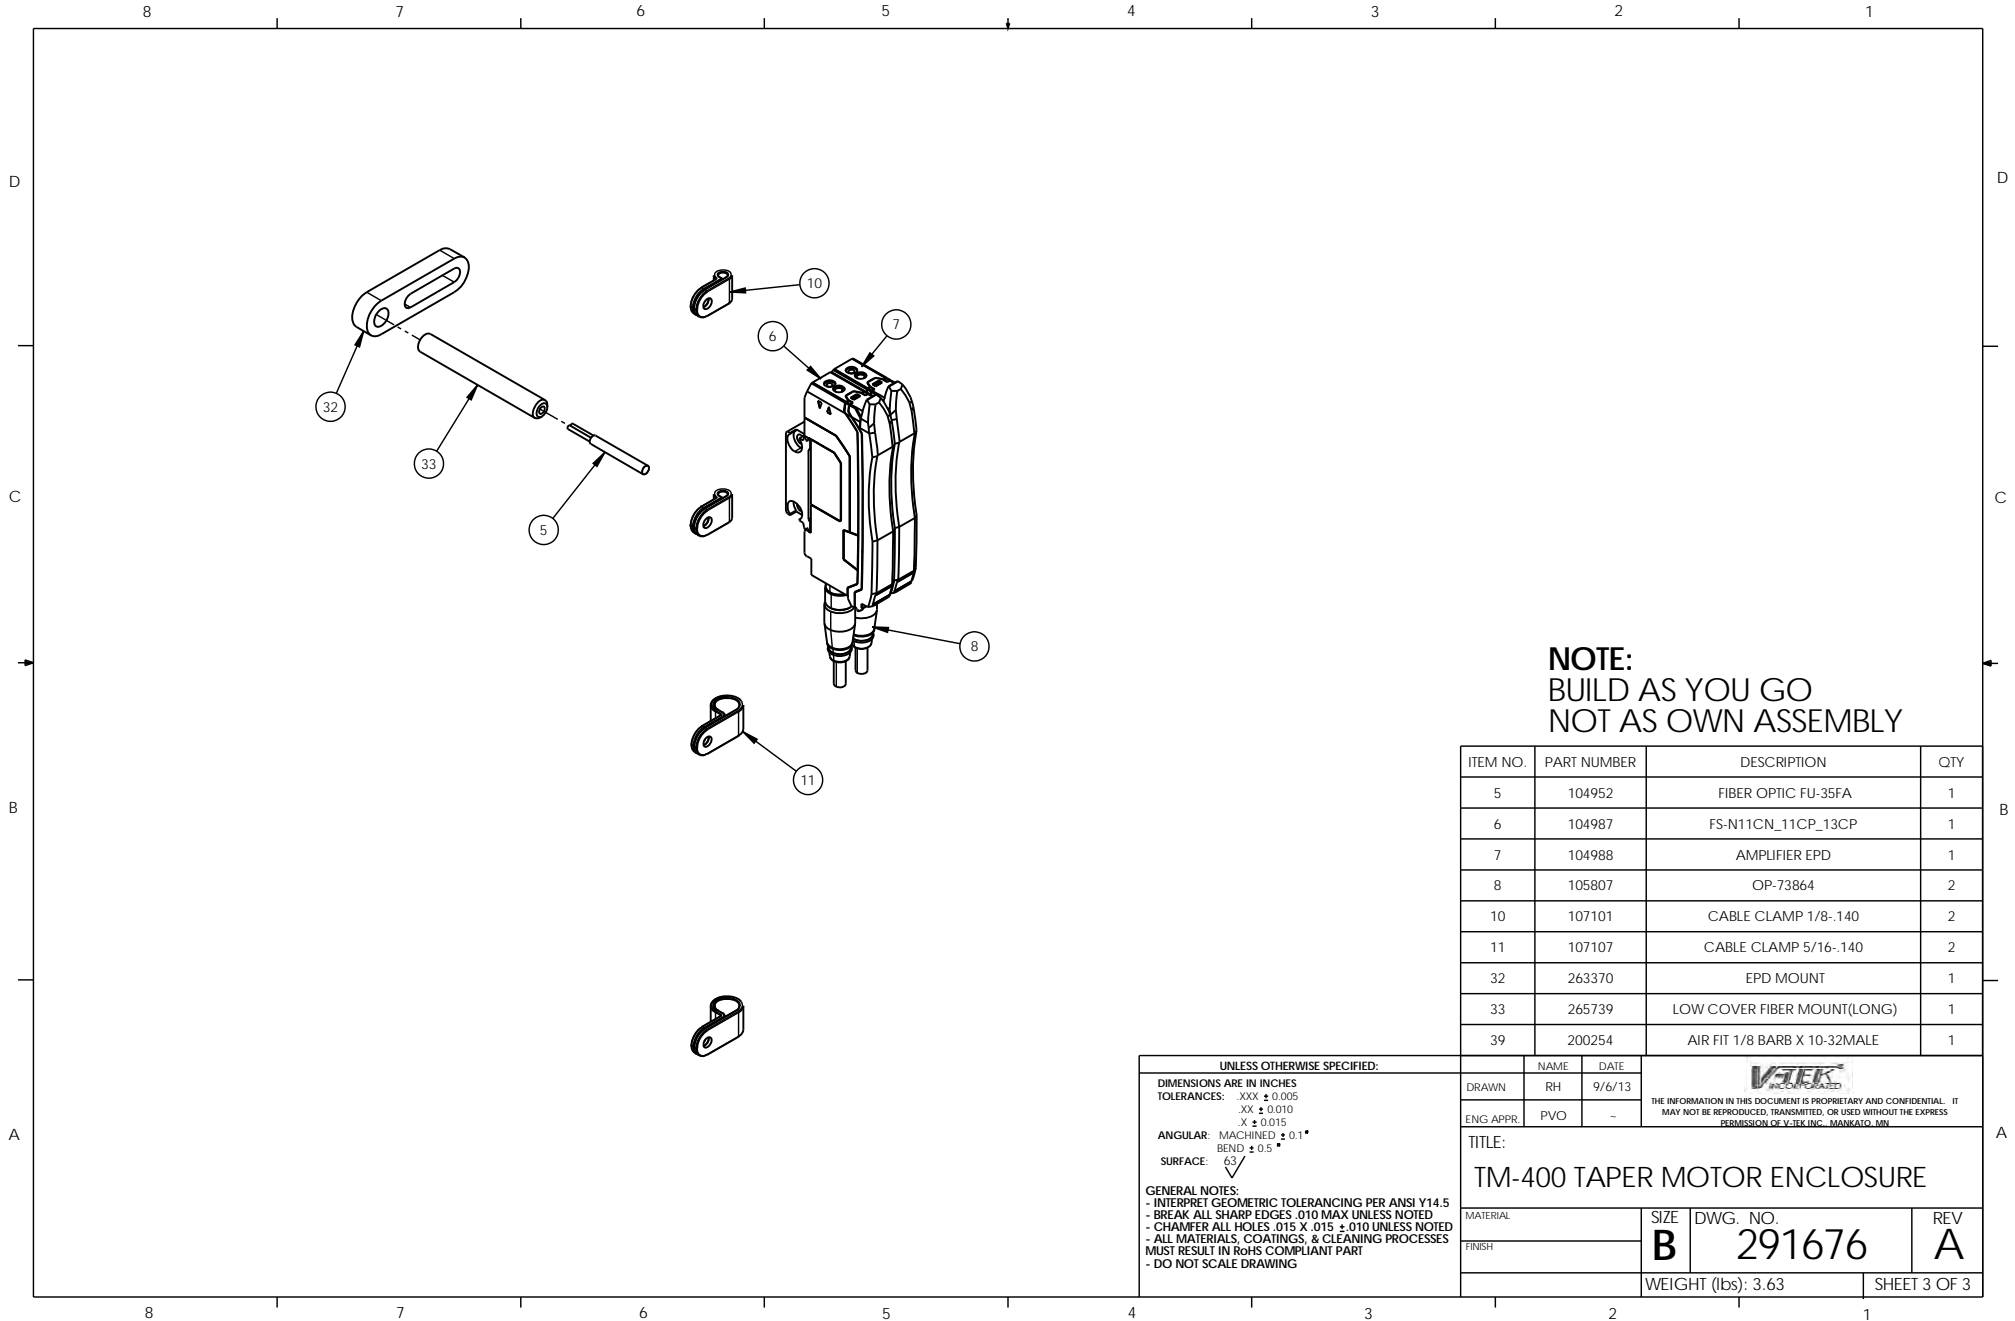


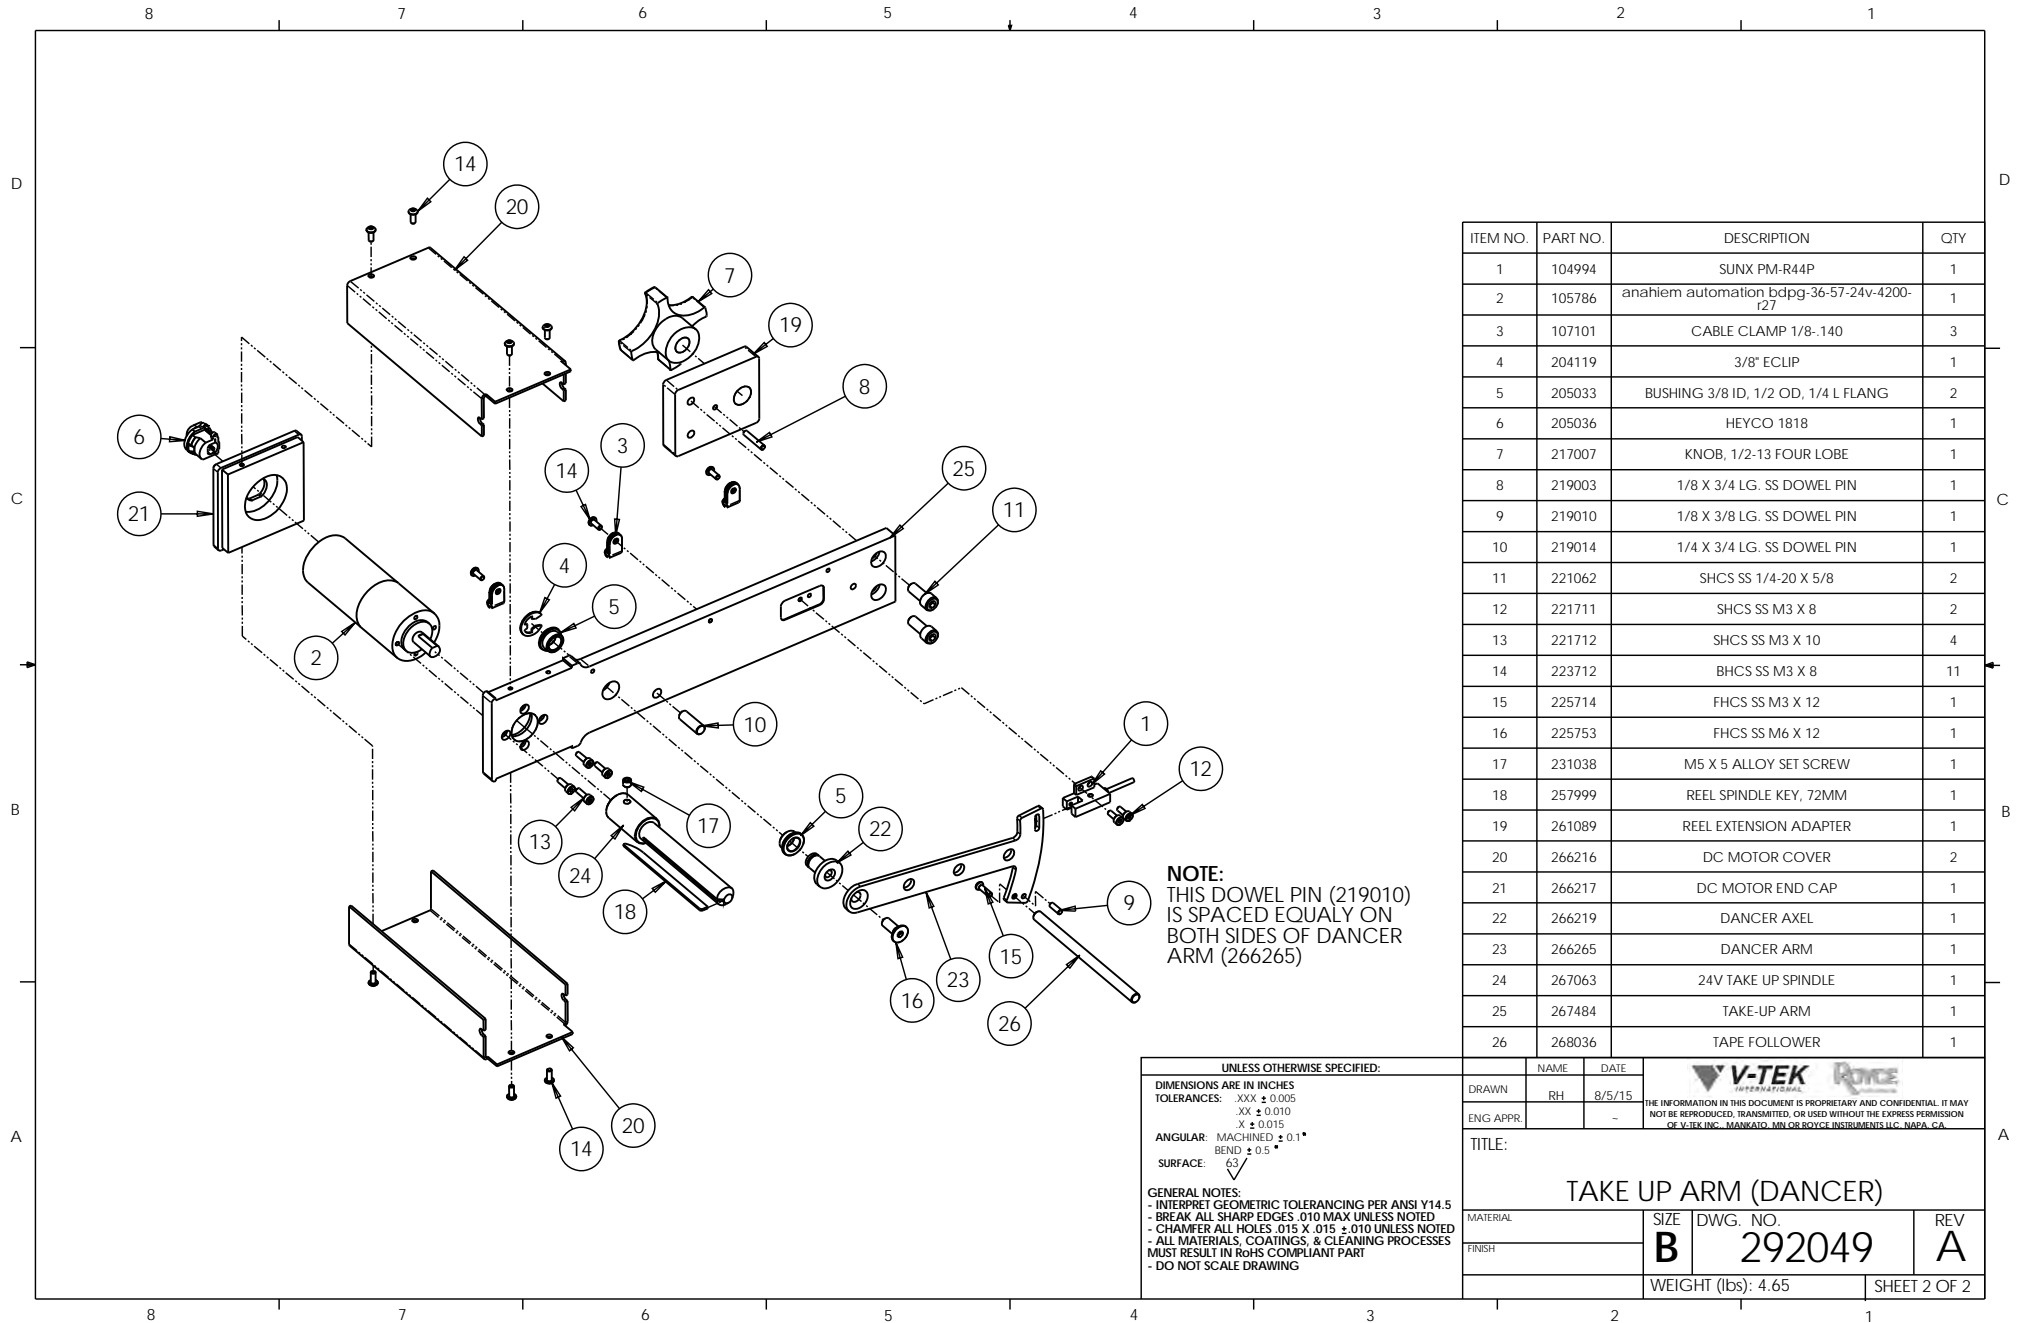
ITEM NO.	PART NUMBER	DESCRIPTION	QTY
5	104952	FIBER OPTIC FU-35FA	1
6	104987	FS-N11CN_11CP_13CP	1
7	104988	AMPLIFIER EPD	1
8	105807	OP-73864	2
10	107101	CABLE CLAMP 1/8-140	2
11	107107	CABLE CLAMP 5/16-140	2
32	263370	EPD MOUNT	1
33	265739	LOW COVER FIBER MOUNT(LONG)	1
39	200254	AIR FIT 1/8 BARB X 10-32MALE	1

UNLESS OTHERWISE SPECIFIED:			NAME	DATE
DIMENSIONS ARE IN INCHES			DRAWN	RH
TOLERANCES: .XXX ± 0.005			ENG APPR	PVO
XX ± 0.010				
X ± 0.015				
ANGULAR: MACHINED ± 0.1°				
BEND ± 0.5°				
SURFACE: 63				
GENERAL NOTES:			TITLE:	
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5			TM-400 TAPER MOTOR ENCLOSURE	
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED			MATERIAL	
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED			FINISH	
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES			SIZE	
MUST RESULT IN ROHS COMPLIANT PART			DWG. NO.	
- DO NOT SCALE DRAWING			REV	
			WEIGHT (lbs): 3.63	
			SHEET 3 OF 3	

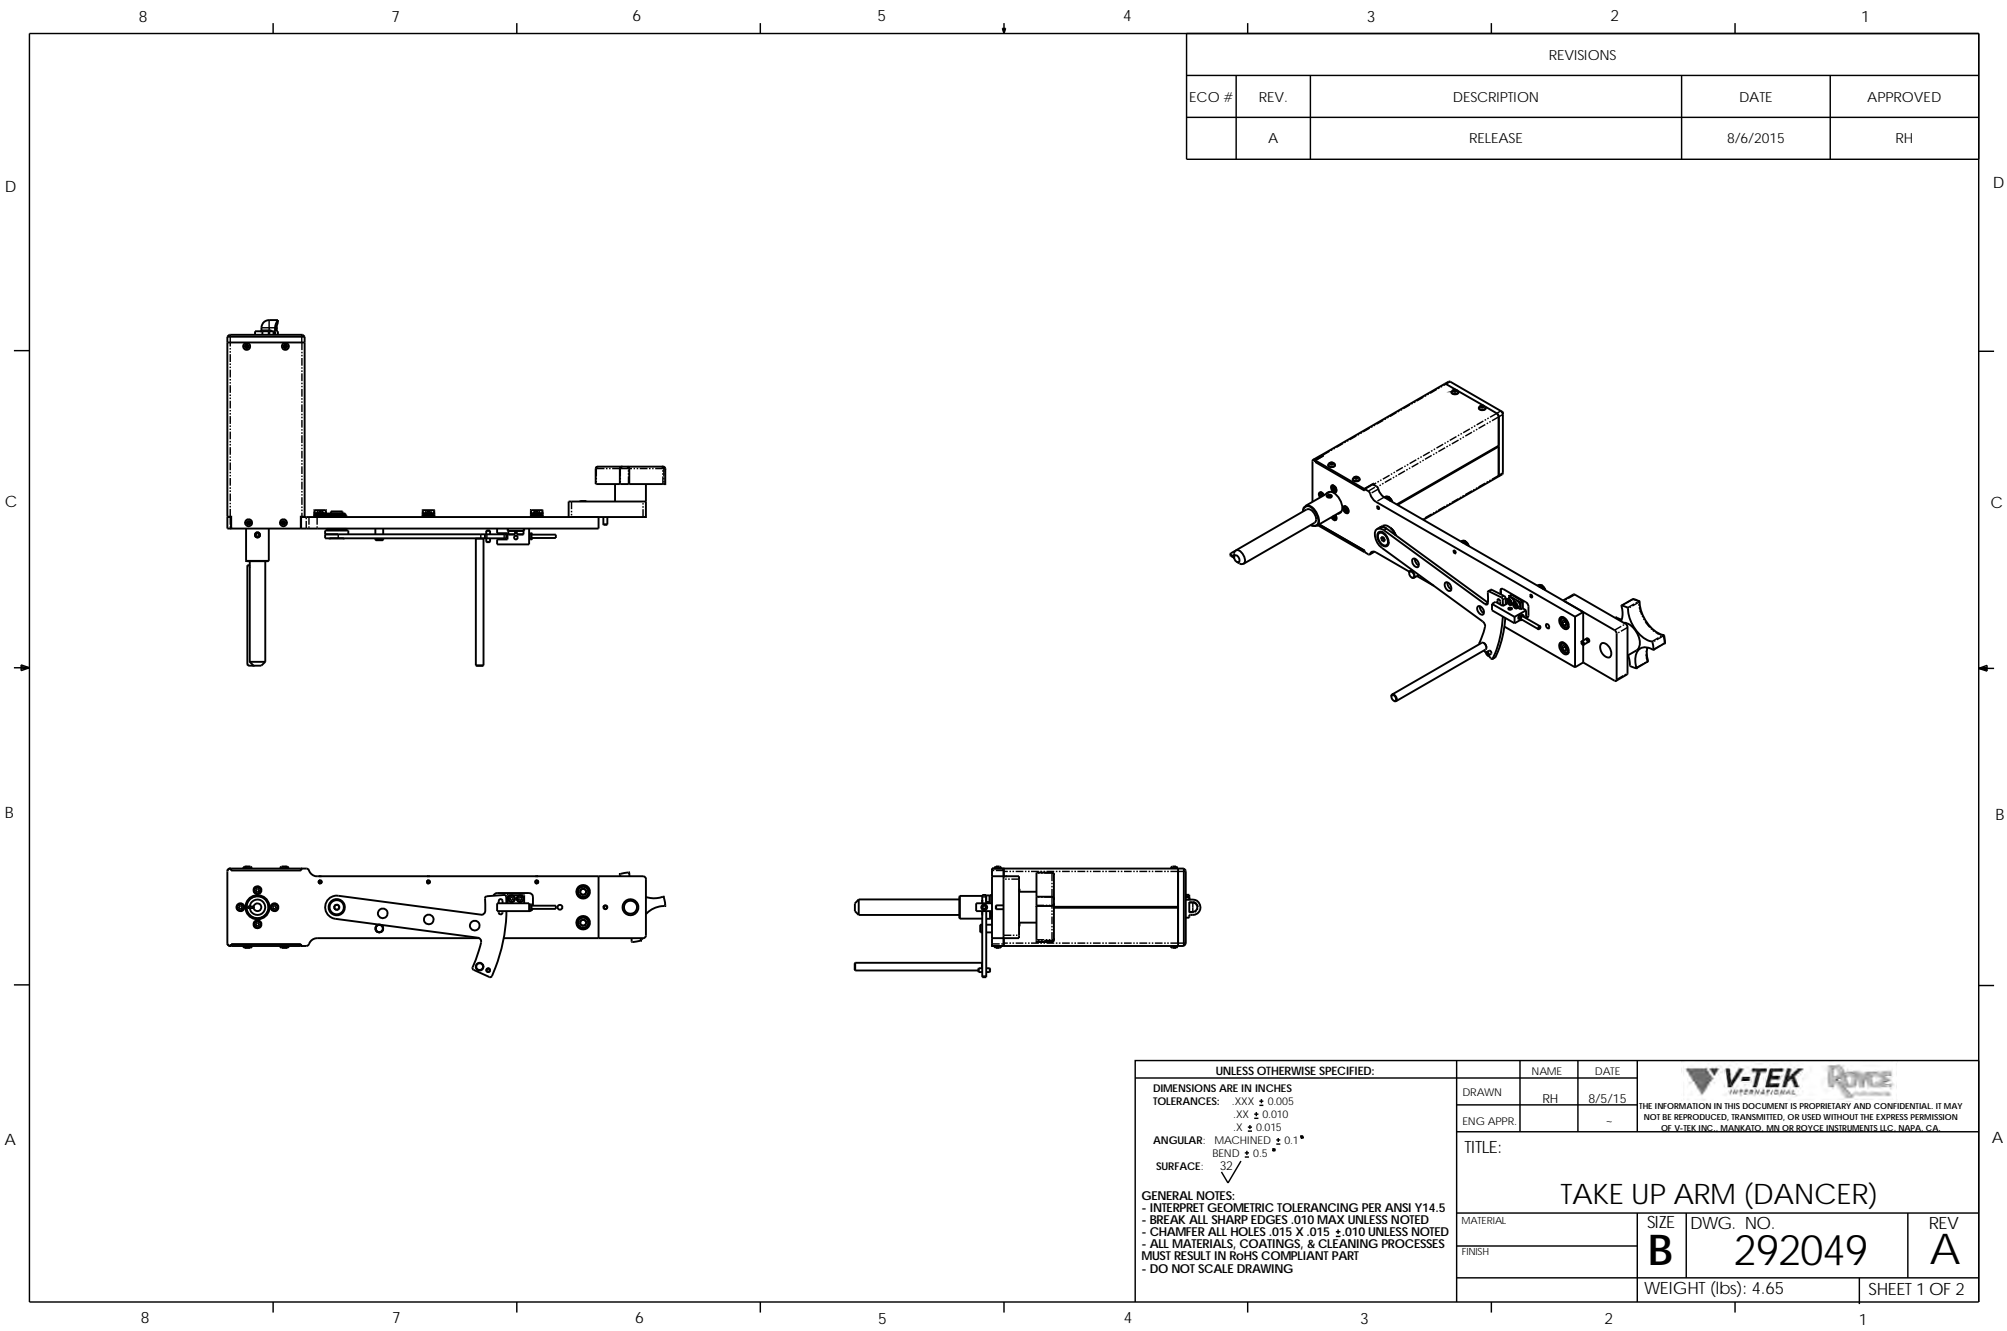




REVISIONS				
ECO #	REV.	DESCRIPTION	DATE	APPROVED
	A	RELEASE	8/6/2015	RH

UNLESS OTHERWISE SPECIFIED:				NAME	DATE	 THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MANKATO, MN OR ROYCE INSTRUMENTS LLC, NAPA, CA.
DIMENSIONS ARE IN INCHES			DRAWN	RH	8/5/15	
TOLERANCES: .XXX ± 0.005 XX ± 0.010 X ± 0.015 ANGULAR: MACHINED ± 0.1° BEND ± 0.5° SURFACE: 32 /			ENG APPR.		-	
GENERAL NOTES: - INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5 - BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED - CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED - ALL MATERIALS, COATINGS, & CLEANING PROCESSES MUST RESULT IN ROHS COMPLIANT PART - DO NOT SCALE DRAWING			TITLE:  TAKE UP ARM (DANCER)			
MATERIAL			SIZE		DWG. NO.	REV
FINISH			B		292049	A
			WEIGHT (lbs): 4.65			SHEET 1 OF 2



ITEM NO.	PART NO.	DESCRIPTION	QTY
1	104994	SUNX PM-R44P	1
2	105786	anahiem automation bdpj-36-57-24v-4200-r27	1
3	107101	CABLE CLAMP 1/8-140	3
4	204119	3/8" ECLIP	1
5	205033	BUSHING 3/8 ID, 1/2 OD, 1/4 L FLANG	2
6	205036	HEYCO 1818	1
7	217007	KNOB, 1/2-13 FOUR LOBE	1
8	219003	1/8 X 3/4 LG. SS DOWEL PIN	1
9	219010	1/8 X 3/8 LG. SS DOWEL PIN	1
10	219014	1/4 X 3/4 LG. SS DOWEL PIN	1
11	221062	SHCS SS 1/4-20 X 5/8	2
12	221711	SHCS SS M3 X 8	2
13	221712	SHCS SS M3 X 10	4
14	223712	BHCS SS M3 X 8	11
15	225714	FHCS SS M3 X 12	1
16	225753	FHCS SS M6 X 12	1
17	231038	M5 X 5 ALLOY SET SCREW	1
18	257999	REEL SPINDLE KEY, 72MM	1
19	261089	REEL EXTENSION ADAPTER	1
20	266216	DC MOTOR COVER	2
21	266217	DC MOTOR END CAP	1
22	266219	DANCER AXEL	1
23	266265	DANCER ARM	1
24	267063	24V TAKE UP SPINDLE	1
25	267484	TAKE-UP ARM	1
26	268036	TAPE FOLLOWER	1

UNLESS OTHERWISE SPECIFIED:		NAME	DATE	 
DIMENSIONS ARE IN INCHES		DRAWN	RH	
TOLERANCES: .XXX ± 0.005 .XX ± 0.010 .X ± 0.015		ENG APPR.		THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MANKATO, MN OR ROYCE INSTRUMENTS LLC, NAPA, CA.
ANGULAR: MACHINED ± 0.1° BEND ± 0.5°				
SURFACE 		TITLE:		
GENERAL NOTES: - INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5 - BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED - CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED - ALL MATERIALS, COATINGS, & CLEANING PROCESSES MUST RESULT IN ROHS COMPLIANT PART - DO NOT SCALE DRAWING		TAKE UP ARM (DANCER)		
MATERIAL		SIZE	DWG. NO.	REV
FINISH		B	292049	A
		WEIGHT (lbs): 4.65		SHEET 2 OF 2



8 7 6 5 4 3 2 1

D

C

B

A

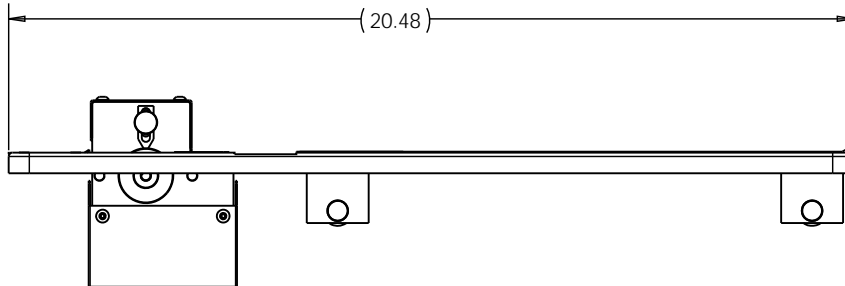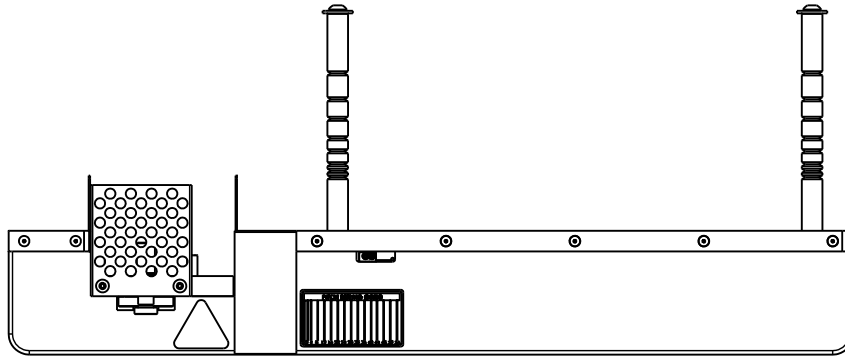



REVISI				
ECO #	REV.	DESCRIPTION	DATE	APPROVED
	A	RELEASE	9/5/2013	PVO
	B		5/15/2014	
2797	C	REMOVE FIBER OPTIC (105123) FROM BOM	5/15/2014	RH


D


C

B





A

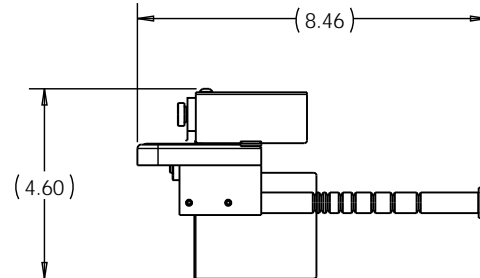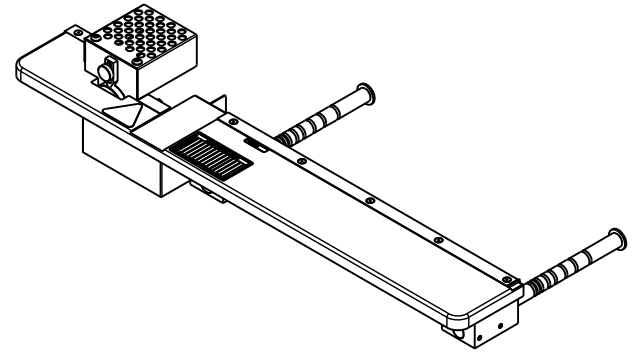


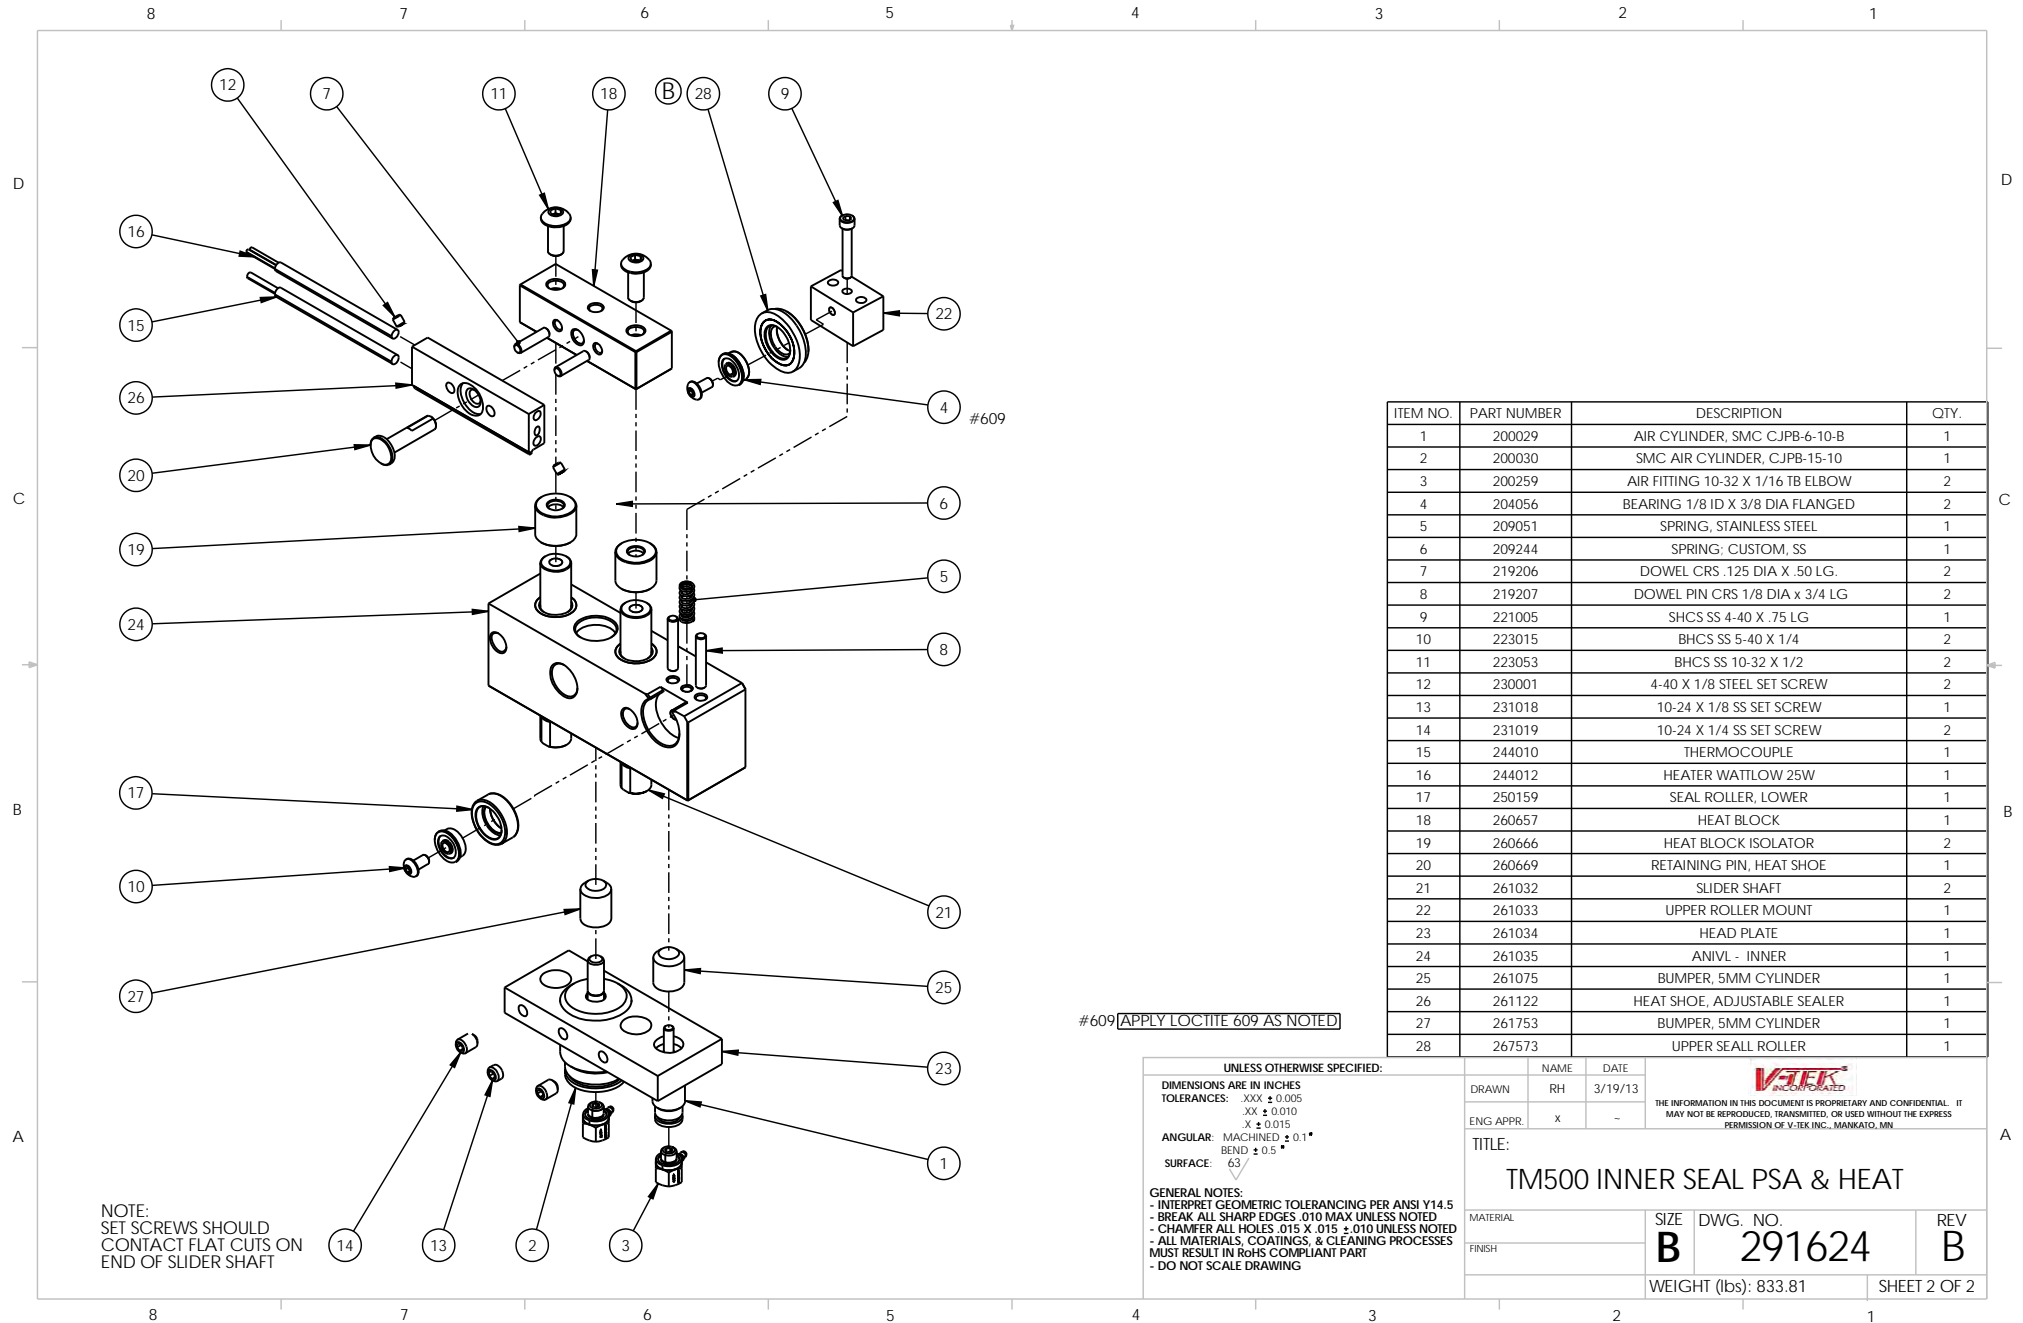
UNLESS OTHERWISE SPECIFIED:		NAME	DATE	 THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MANIKATO, MN.	
DIMENSIONS ARE IN INCHES		DRAWN	RH		
TOLERANCES: .XX ± 0.005 XX ± 0.010 X ± 0.015		ENG APPR	PVO		
ANGULAR: MACHINED ± 0.1° BEND ± 0.5°		TITLE:			
SURFACE: 32		FRONT TRACK ASSEMBLY			
GENERAL NOTES: - INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5 - BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED - CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED - ALL MATERIALS, COATINGS, & CLEANING PROCESSES MUST RESULT IN ROHS COMPLIANT PART - DO NOT SCALE DRAWING		MATERIAL	SIZE	DWG. NO.	REV
		FINISH	B	291678	C
		WEIGHT (lbs): 9.38		SHEET 1 OF 2	

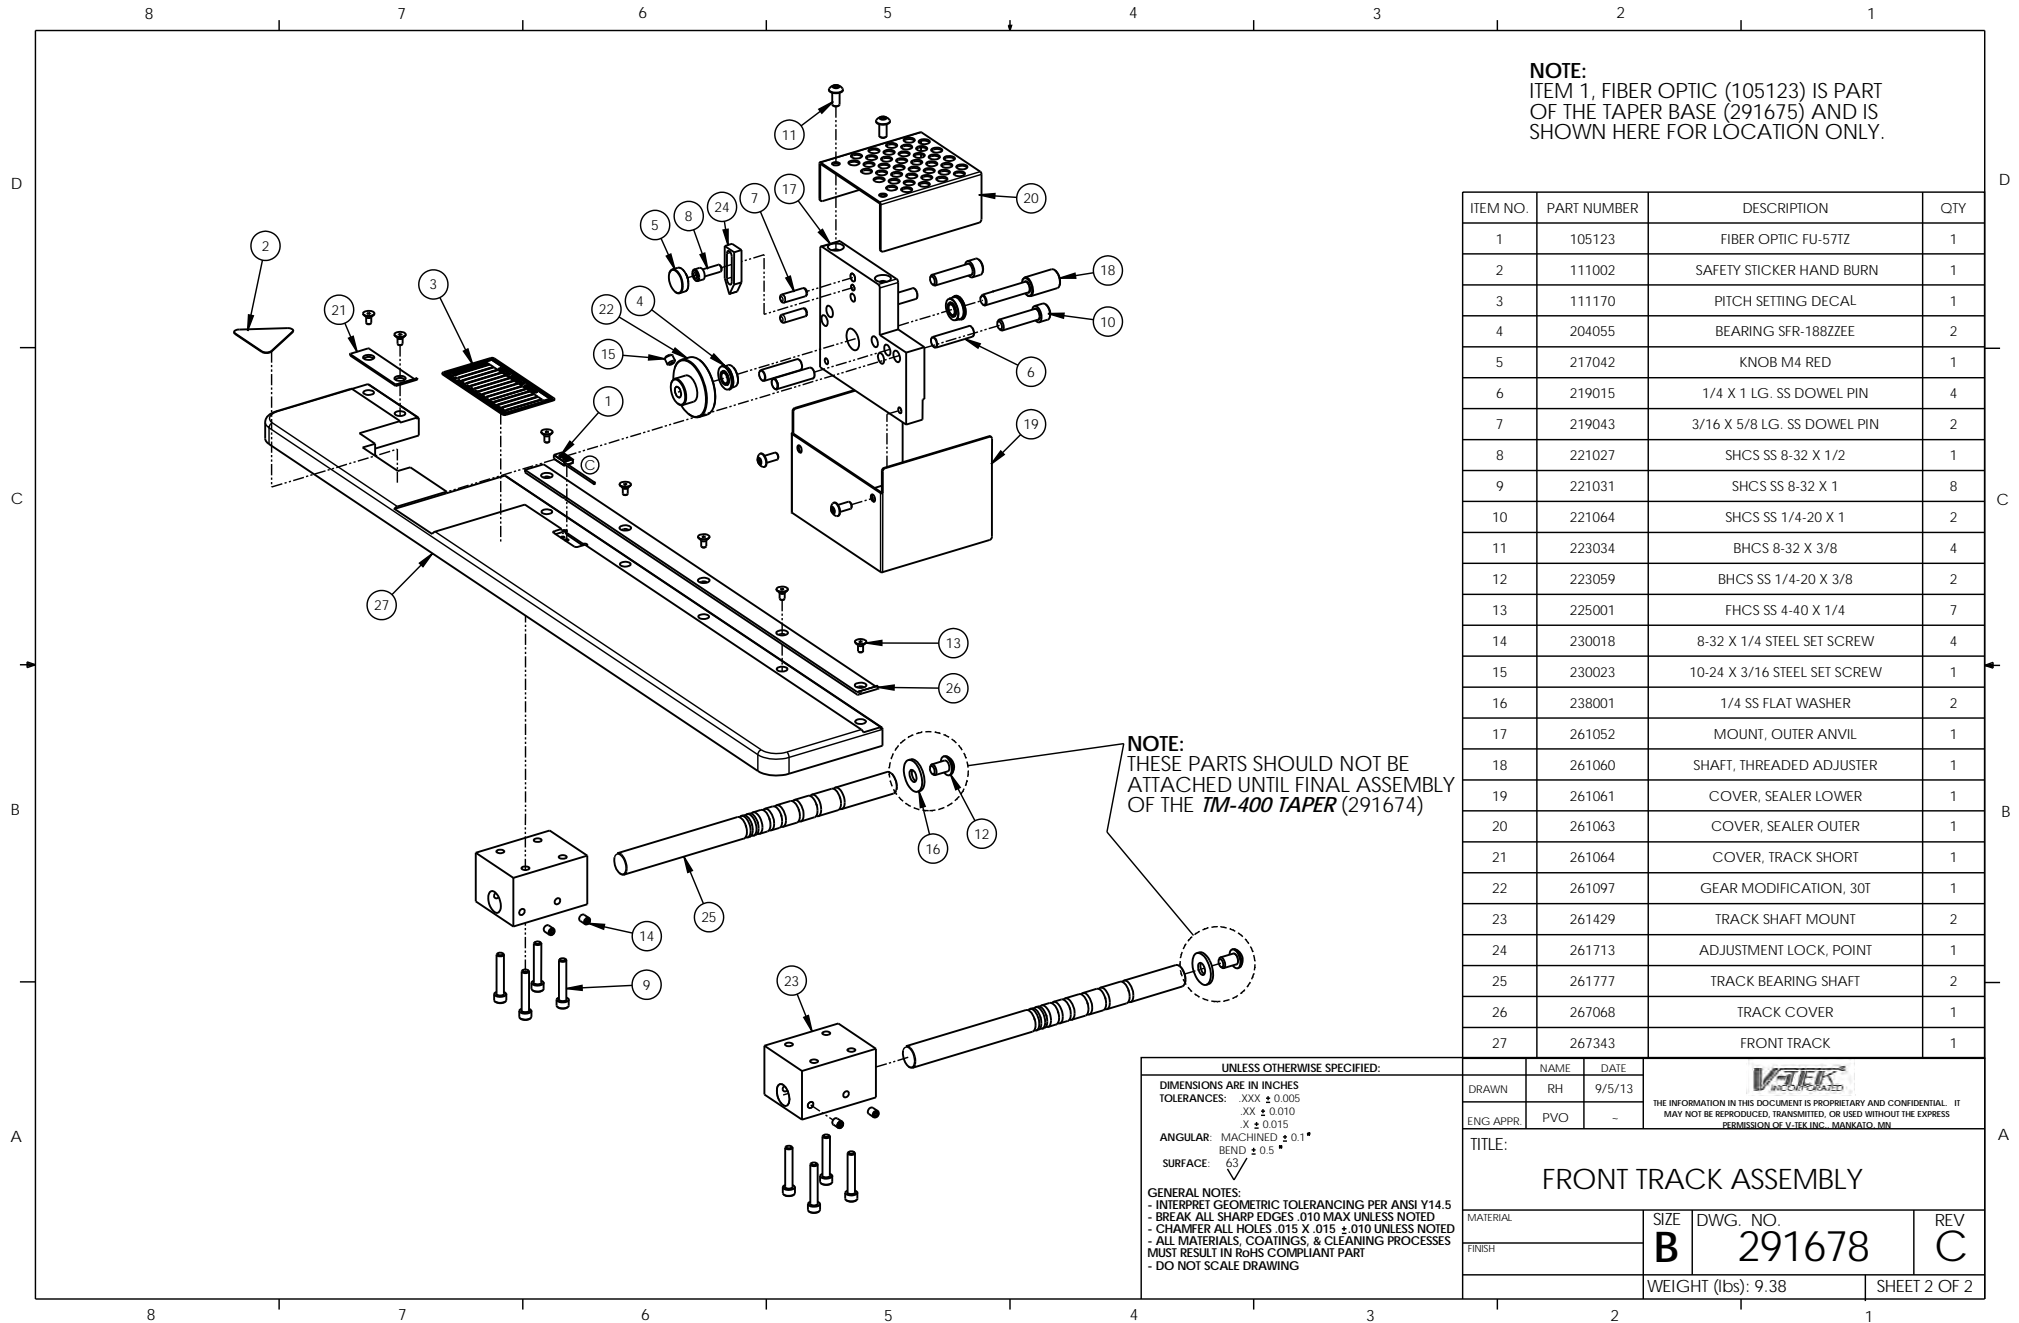

REVISIONS				
ECO #	REV.	DESCRIPTION	DATE	APPROVED
	A	RELEASE		
2836	B	REPLACE PART NUMBER 250309 WITH PART NUMBER 267573	11/14/2014	RH

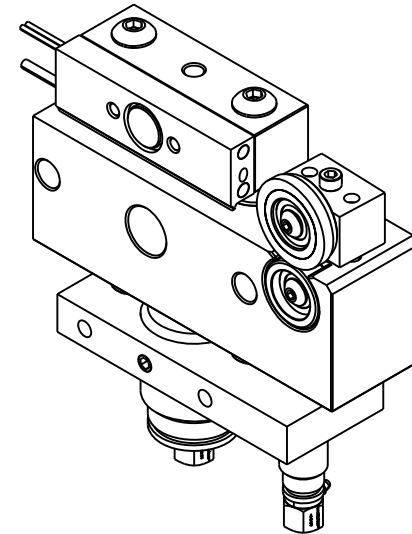
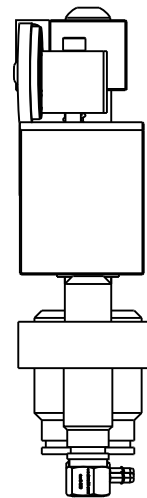
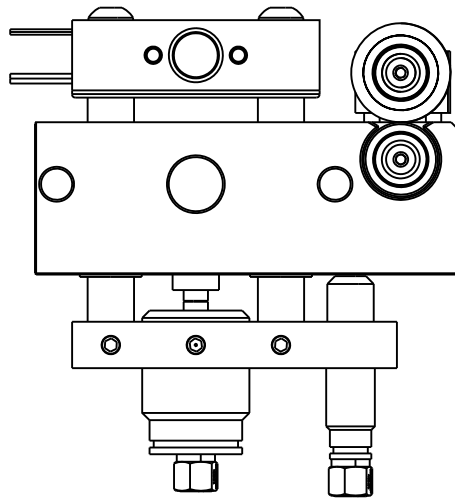
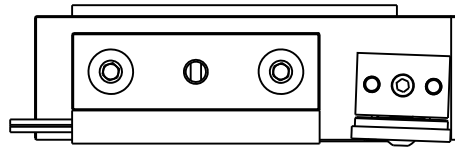



UNLESS OTHERWISE SPECIFIED:		NAME		DATE			
DIMENSIONS ARE IN INCHES		DRAWN	RH	3/19/13		THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MANIKATO, MN.	
TOLERANCES: .XXX ± 0.005 .XX ± 0.010 .X ± 0.015		ENG APPR.	X	-			
ANGULAR: MACHINED ± 0.1° BEND ± 0.5°		TITLE:					
SURFACE: 63		TM500 INNER SEAL PSA & HEAT					
GENERAL NOTES:							
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5							
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED							
- CHAMFER ALL HOLES .015 X .015 ± 0.010 UNLESS NOTED							
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES MUST RESULT IN ROHS COMPLIANT PART							
- DO NOT SCALE DRAWING							
MATERIAL		SIZE		DWG. NO.		REV	
FINISH		B		291624		B	
WEIGHT (lbs): 833.81				SHEET 1 OF 2			




8 7 6 5 4 3 2 1

REVISIONS				
ECO #	REV.	DESCRIPTION	DATE	APPROVED
	A	RELEASE		
2836	B	REPLACE PART NUMBER 250309 WITH PART NUMBER 267573	11/17/2014	RH

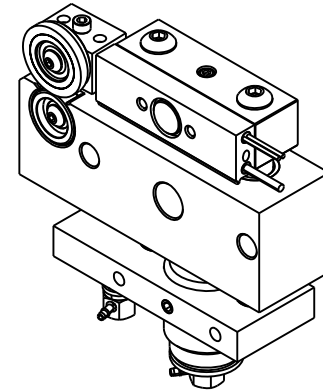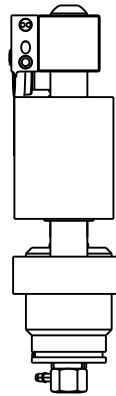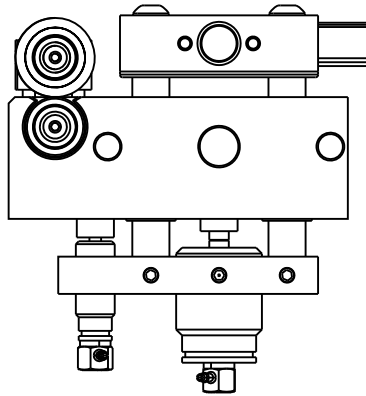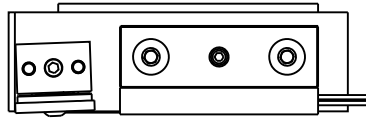


UNLESS OTHERWISE SPECIFIED:		NAME		DATE			
DIMENSIONS ARE IN INCHES		DRAWN	RH	3/20/13		THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MANKATO, MN.	
TOLERANCES: .XXX ± 0.005 .XX ± 0.010 X ± 0.015		ENG APPR.	X	-			
ANGULAR: MACHINED ± 0.1° BEND ± 0.5°		TITLE:  TM500 OUTER SEAL PSA & HEAT					
SURFACE: 63 ✓							
GENERAL NOTES:							
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5							
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED							
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED							
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES MUST RESULT IN ROHS COMPLIANT PART							
- DO NOT SCALE DRAWING							
MATERIAL		SIZE		DWG. NO.		REV	
FINISH		B		291626		B	
				WEIGHT (lbs): 837.21		SHEET 1 OF 4	


8 7 6 5 4 3 2 1

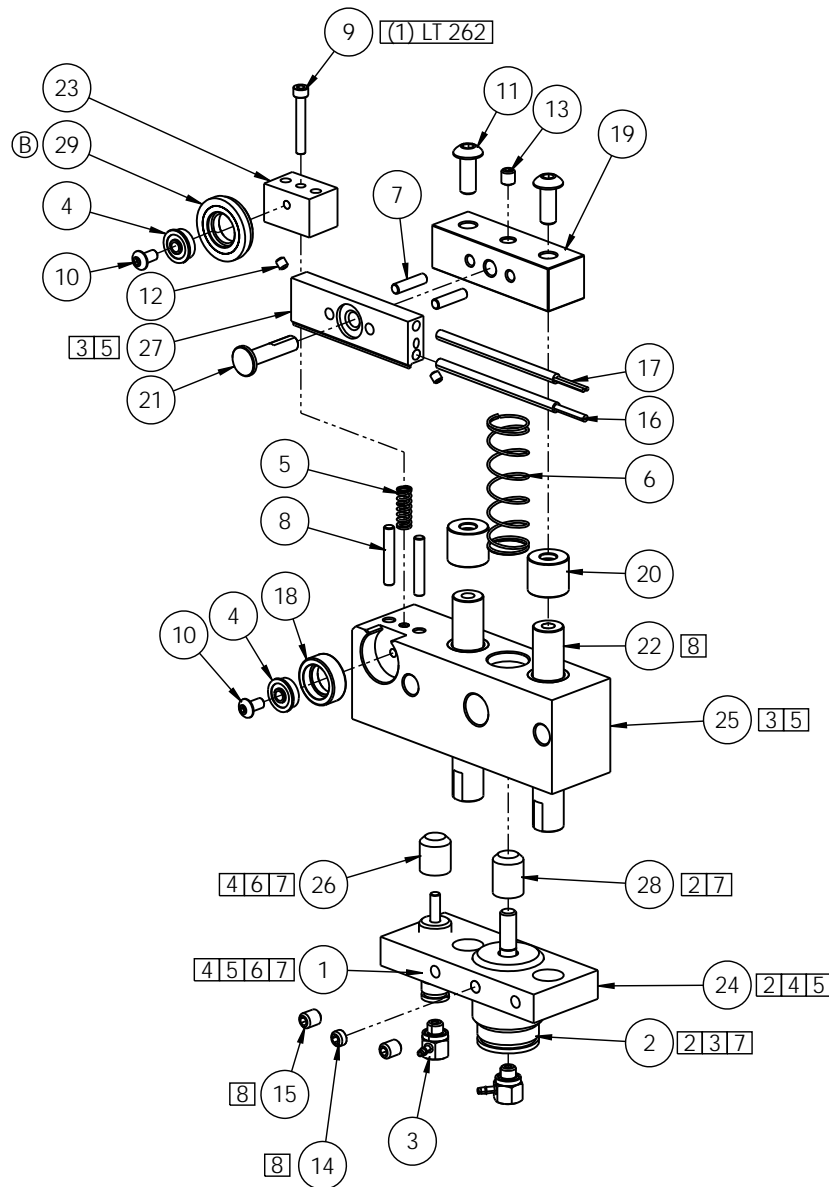


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	200029	AIR CYLINDER, SMC CJPB-6-10-B	1
2	200030	SMC AIR CYLINDER, CJPB-15-10	1
3	200259	AIR FITTING 10-32 X 1/16 TB ELBOW	2
4	204056	BEARING 1/8 ID X 3/8 DIA FLANGED	2
5	209051	SPRING, STAINLESS STEEL	1
6	209244	SPRING; CUSTOM, SS	1
7	219206	DOWEL CRS .125 DIA X .50 LG.	2
8	219207	DOWEL PIN CRS 1/8 DIA x 3/4 LG	2
9	221005	SHCS SS 4-40 X .75 LG	1
10	223015	BHCS SS 5-40 X 1/4	2
11	223053	BHCS SS 10-32 X 1/2	2
12	230001	4-40 X 1/8 STEEL SET SCREW	2
13	230017	AS CUP SET 8-32 x 3/16	1
14	231018	10-24 X 1/8 SS SET SCREW	1
15	231019	10-24 X 1/4 SS SET SCREW	2
16	244010	THERMOCOUPLE	1
17	244012	HEATER WATTLOW 25W	1
18	250159	SEAL ROLLER, LOWER	1
19	260657	HEAT BLOCK	1
20	260666	HEAT BLOCK ISOLATOR	2
21	260669	RETAINING PIN, HEAT SHOE	1
22	261032	SLIDER SHAFT	2
23	261033	UPPER ROLLER MOUNT	1
24	261034	HEAD PLATE	1
25	261036	ANVIL, OUTER	1
26	261075	BUMPER, 5MM CYLINDER	1
27	261122	HEAT SHOE, ADJUSTABLE SEALER	1
28	261753	BUMPER, 5MM CYLINDER	1
29	267573	UPPER SEAL ROLLER	1

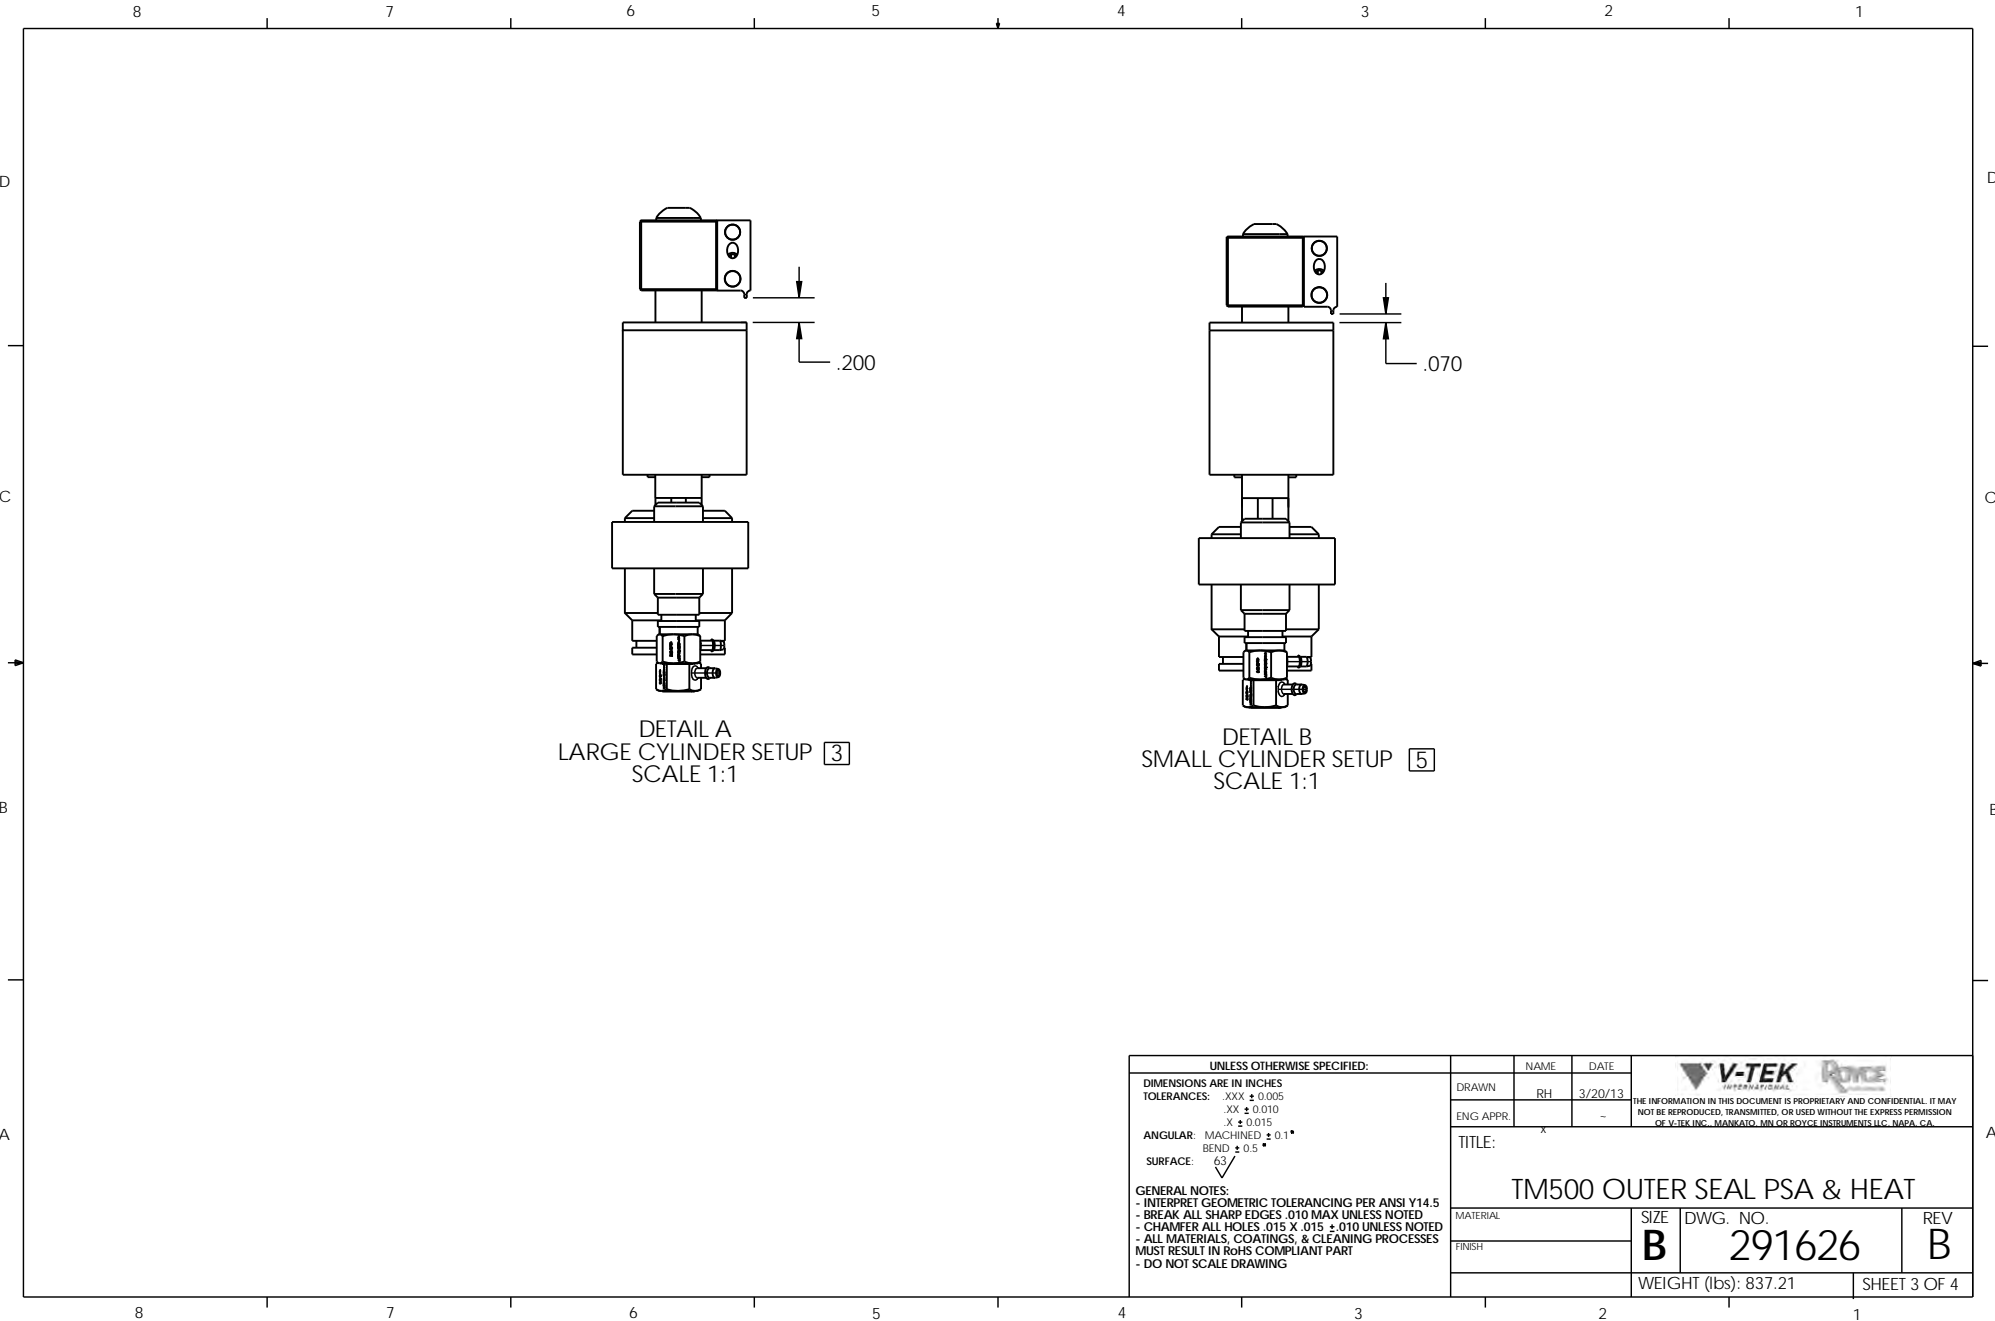

UNLESS OTHERWISE SPECIFIED:		NAME		DATE	
DIMENSIONS ARE IN INCHES		DRAWN		RH	
TOLERANCES: .0005		ENG APPR		X	
XX ± .0010					
X ± .0015					
ANGULAR: MACHINED ± .01°					
BEND ± .05°					
SURFACE: 32					
GENERAL NOTES:					
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5					
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED					
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED					
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES					
MUST RESULT IN ROHS COMPLIANT PART					
- DO NOT SCALE DRAWING					
		VITEK INCORPORATED		THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MINNETONKA, MN.	
		TITLE:			
		TM500 OUTER SEAL PSA & HEAT			
		MATERIAL		SIZE	DWG. NO.
		FINISH		B	291626
				REV	B
				WEIGHT (lbs): 837.21	
				SHEET 2 OF 4	

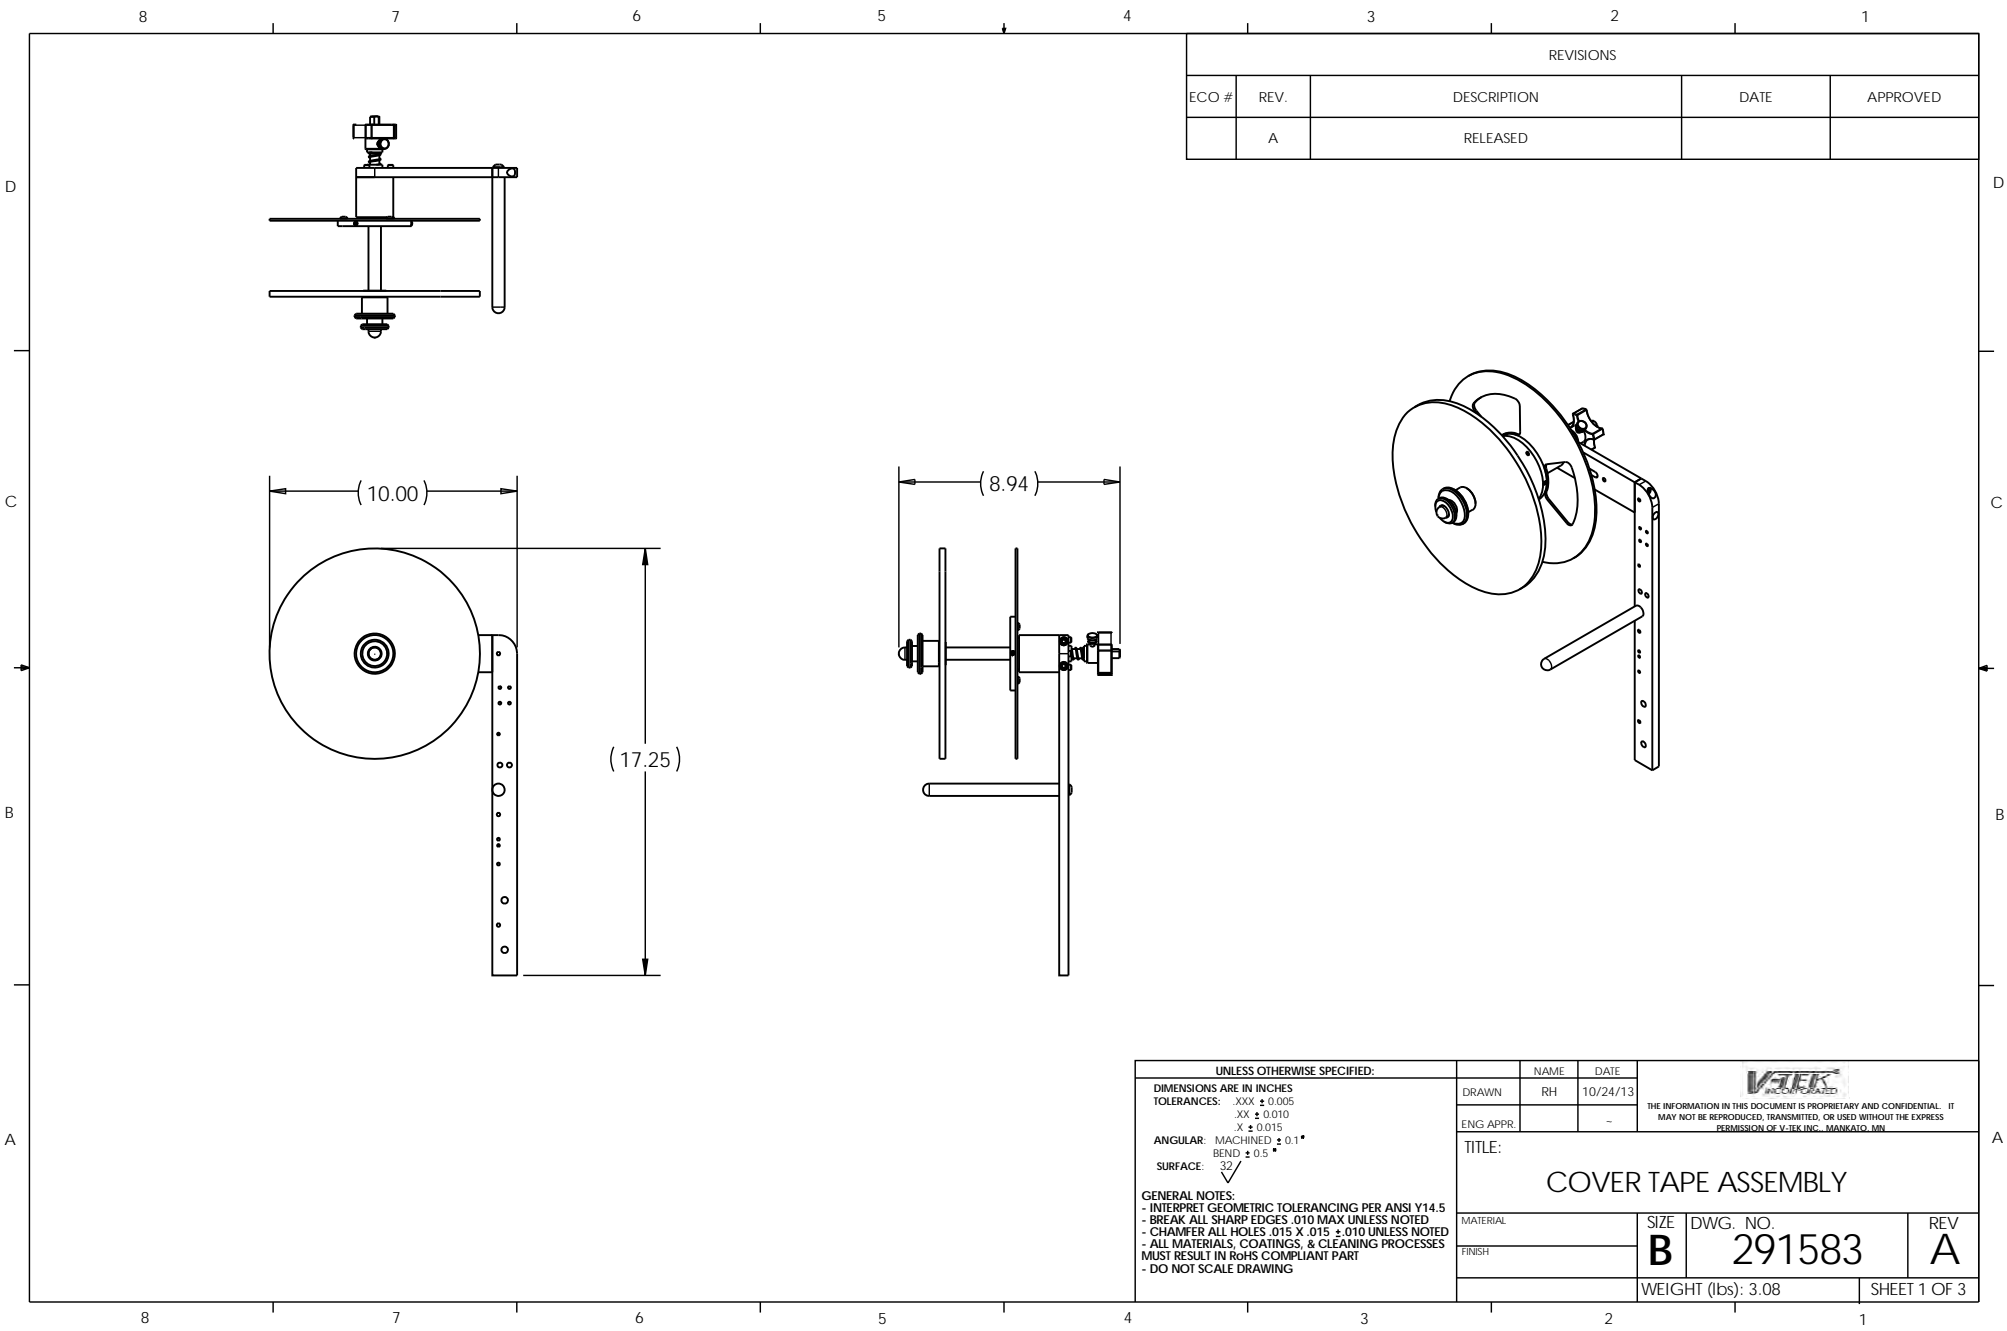


UNLESS OTHERWISE SPECIFIED:				NAME		DATE	 <small>THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MANKATO, MN OR ROYCE INSTRUMENTS LLC, NAPA, CA.</small>
DIMENSIONS ARE IN INCHES				DRAWN	RH	3/20/13	
TOLERANCES: .XXX ± 0.005 XX ± 0.010 X ± 0.015				ENG APPR.		-	
ANGULAR: MACHINED ± 0.1° BEND ± 0.5°				TITLE:			TM500 OUTER SEAL PSA & HEAT
SURFACE: 63				MATERIAL	SIZE	DWG. NO.	
GENERAL NOTES: - INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5 - BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED - CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED - ALL MATERIALS, COATINGS, & CLEANING PROCESSES MUST RESULT IN ROHS COMPLIANT PART - DO NOT SCALE DRAWING				FINISH	<b>B</b>	291626	REV <b>B</b>
						WEIGHT (lbs): 837.21	SHEET 3 OF 4



REVISIONS				
ECO #	REV.	DESCRIPTION	DATE	APPROVED
	A	RELEASED		

UNLESS OTHERWISE SPECIFIED:		NAME	DATE	 THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MINNETONKA, MN.	
DIMENSIONS ARE IN INCHES		DRAWN	RH		
TOLERANCES: .XXX ± 0.005		ENG APPR.		TITLE:  COVER TAPE ASSEMBLY	
.XX ± 0.010					
X ± 0.015					
ANGULAR: MACHINED ± 0.1°				MATERIAL	SIZE DWG. NO.
BEND ± 0.5°				FINISH	<b>B</b> 291583
SURFACE: 32 				REV <b>A</b>	
GENERAL NOTES:				WEIGHT (lbs): 3.08	
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5				SHEET 1 OF 3	
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED					
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED					
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES MUST RESULT IN ROHS COMPLIANT PART					
- DO NOT SCALE DRAWING					




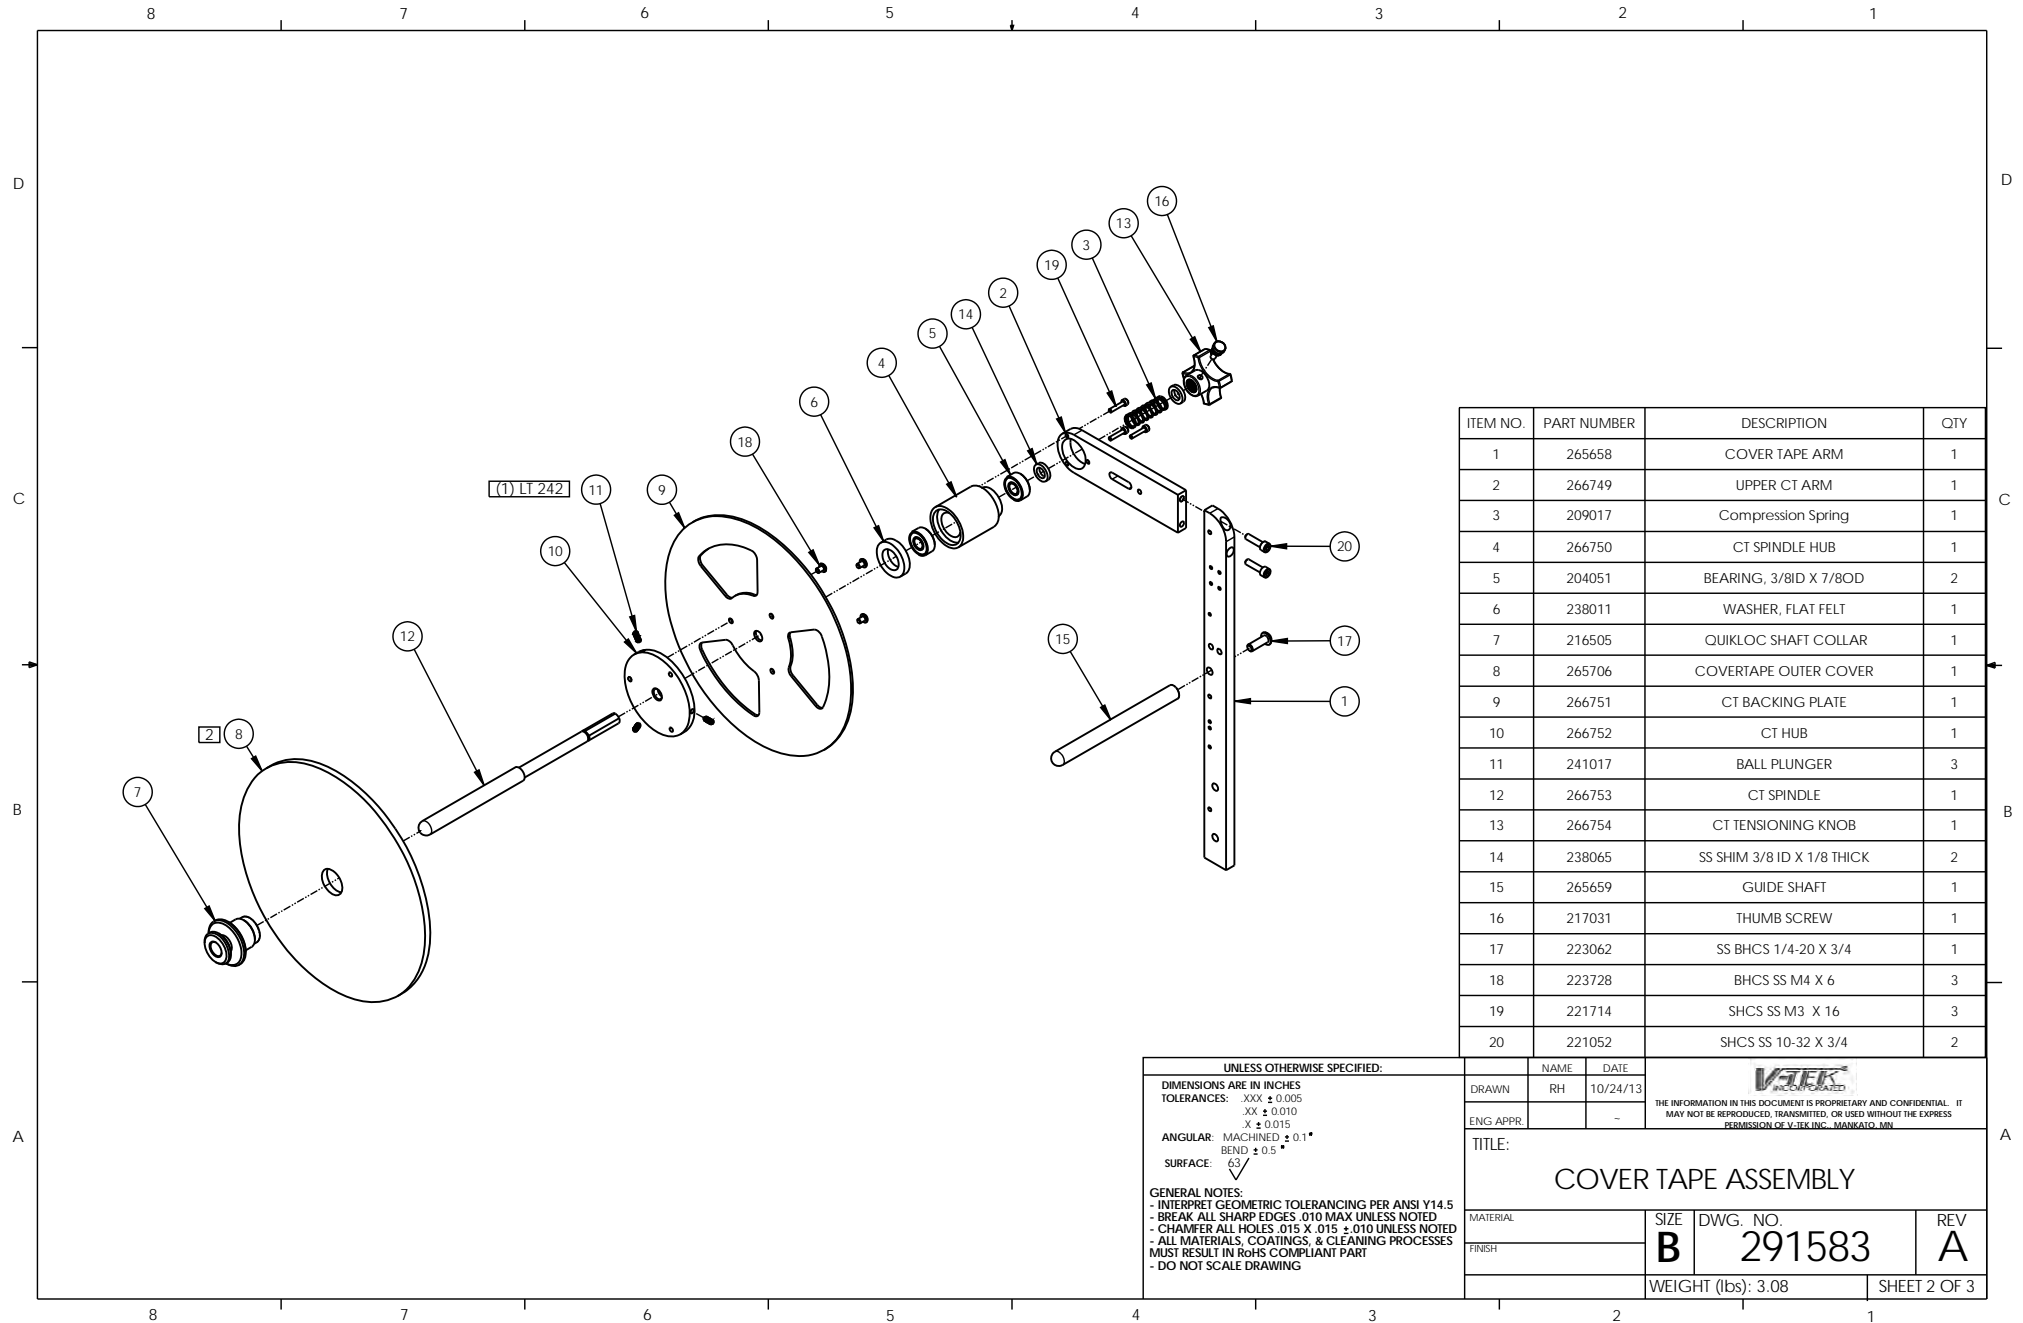


ITEM NO.	PART NUMBER	DESCRIPTION	QTY
1	265658	COVER TAPE ARM	1
2	266749	UPPER CT ARM	1
3	209017	Compression Spring	1
4	266750	CT SPINDLE HUB	1
5	204051	BEARING, 3/8ID X 7/8OD	2
6	238011	WASHER, FLAT FELT	1
7	216505	QUIKLOC SHAFT COLLAR	1
8	265706	COVERTAPE OUTER COVER	1
9	266751	CT BACKING PLATE	1
10	266752	CT HUB	1
11	241017	BALL PLUNGER	3
12	266753	CT SPINDLE	1
13	266754	CT TENSIONING KNOB	1
14	238065	SS SHIM 3/8 ID X 1/8 THICK	2
15	265659	GUIDE SHAFT	1
16	217031	THUMB SCREW	1
17	223062	SS BHCS 1/4-20 X 3/4	1
18	223728	BHCS SS M4 X 6	3
19	221714	SHCS SS M3 X 16	3
20	221052	SHCS SS 10-32 X 3/4	2

UNLESS OTHERWISE SPECIFIED:		NAME	DATE
DIMENSIONS ARE IN INCHES		DRAWN	RH
TOLERANCES: .XXX ± 0.005			10/24/13
XX ± 0.010		ENG APPR.	-
X ± 0.015			
ANGULAR: MACHINED ± 0.1°			
BEND ± 0.5°			
SURFACE: 63			
GENERAL NOTES:			
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5			
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED			
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED			
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES			
MUST RESULT IN ROHS COMPLIANT PART			
- DO NOT SCALE DRAWING			
		VITEK INCORPORATED	
		THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MINNETONKA, MN.	
TITLE:			
COVER TAPE ASSEMBLY			
MATERIAL	SIZE	DWG. NO.	REV
FINISH	B	291583	A
WEIGHT (lbs): 3.08		SHEET 2 OF 3	

8 7 6 5 4 3 2 1


REVISIONS				
ECO #	REV.	DESCRIPTION	DATE	APPROVED
	A	RELEASED	8/27/2008	

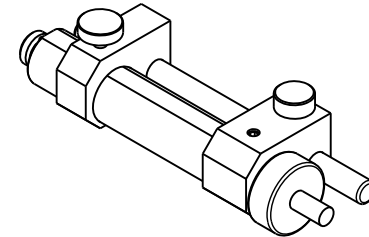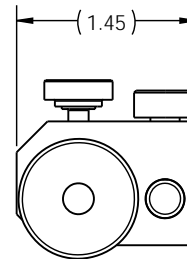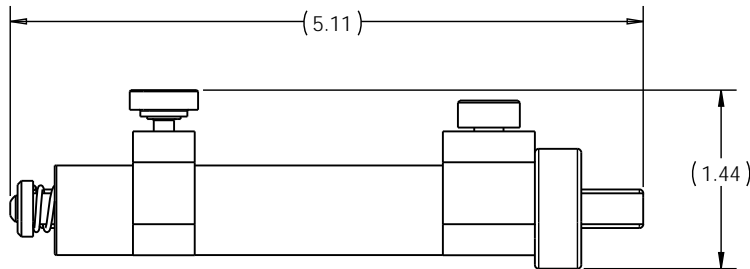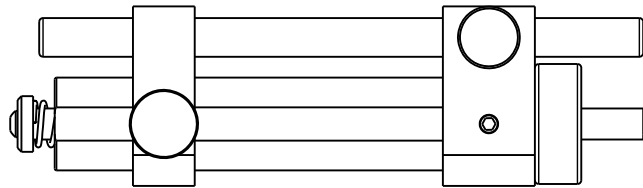

**NOTE:**  
DUE TO NATURE THE *ASSEMBLY OF THE TM-50 BASE* (290939), *TM-50 COVER TAPE GUIDE* (290942), AND THE *TM-50 MOTOR ENCLOSURE* (290943) WILL NEED TO BE BUILT AS YOU GO DURING THE ASSEMBLY OF THE *TM-50 INSPECTION MACHINE BASE* (290960).


UNLESS OTHERWISE SPECIFIED:		NAME	DATE	 THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MINNETONKA, MN.
DIMENSIONS ARE IN INCHES		DRAWN	RH	
TOLERANCES: .XXX ± 0.005 XX ± 0.010 X ± 0.015		ENG APPR	-	
ANGULAR: MACHINED ± 0.1° BEND ± 0.5°		TITLE:		
SURFACE: 32		TM50 COVER TAPE GUIDE		
GENERAL NOTES: - INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5 - BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED - CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED - ALL MATERIALS, COATINGS, & CLEANING PROCESSES MUST RESULT IN ROHS COMPLIANT PART - DO NOT SCALE DRAWING		MATERIAL	SIZE	DWG. NO.
		FINISH	B	290942
				REV A
				WEIGHT (lbs): 0.7936
				SHEET 1 OF 3

8 7 6 5 4 3 2 1

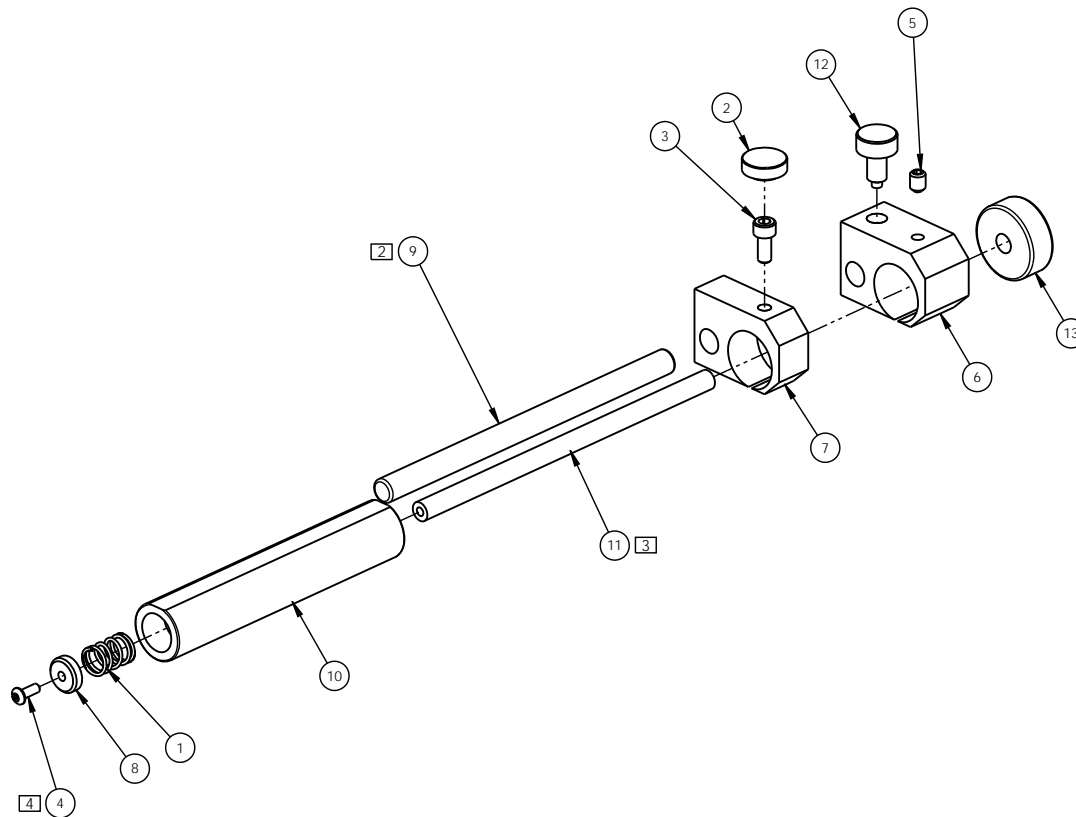


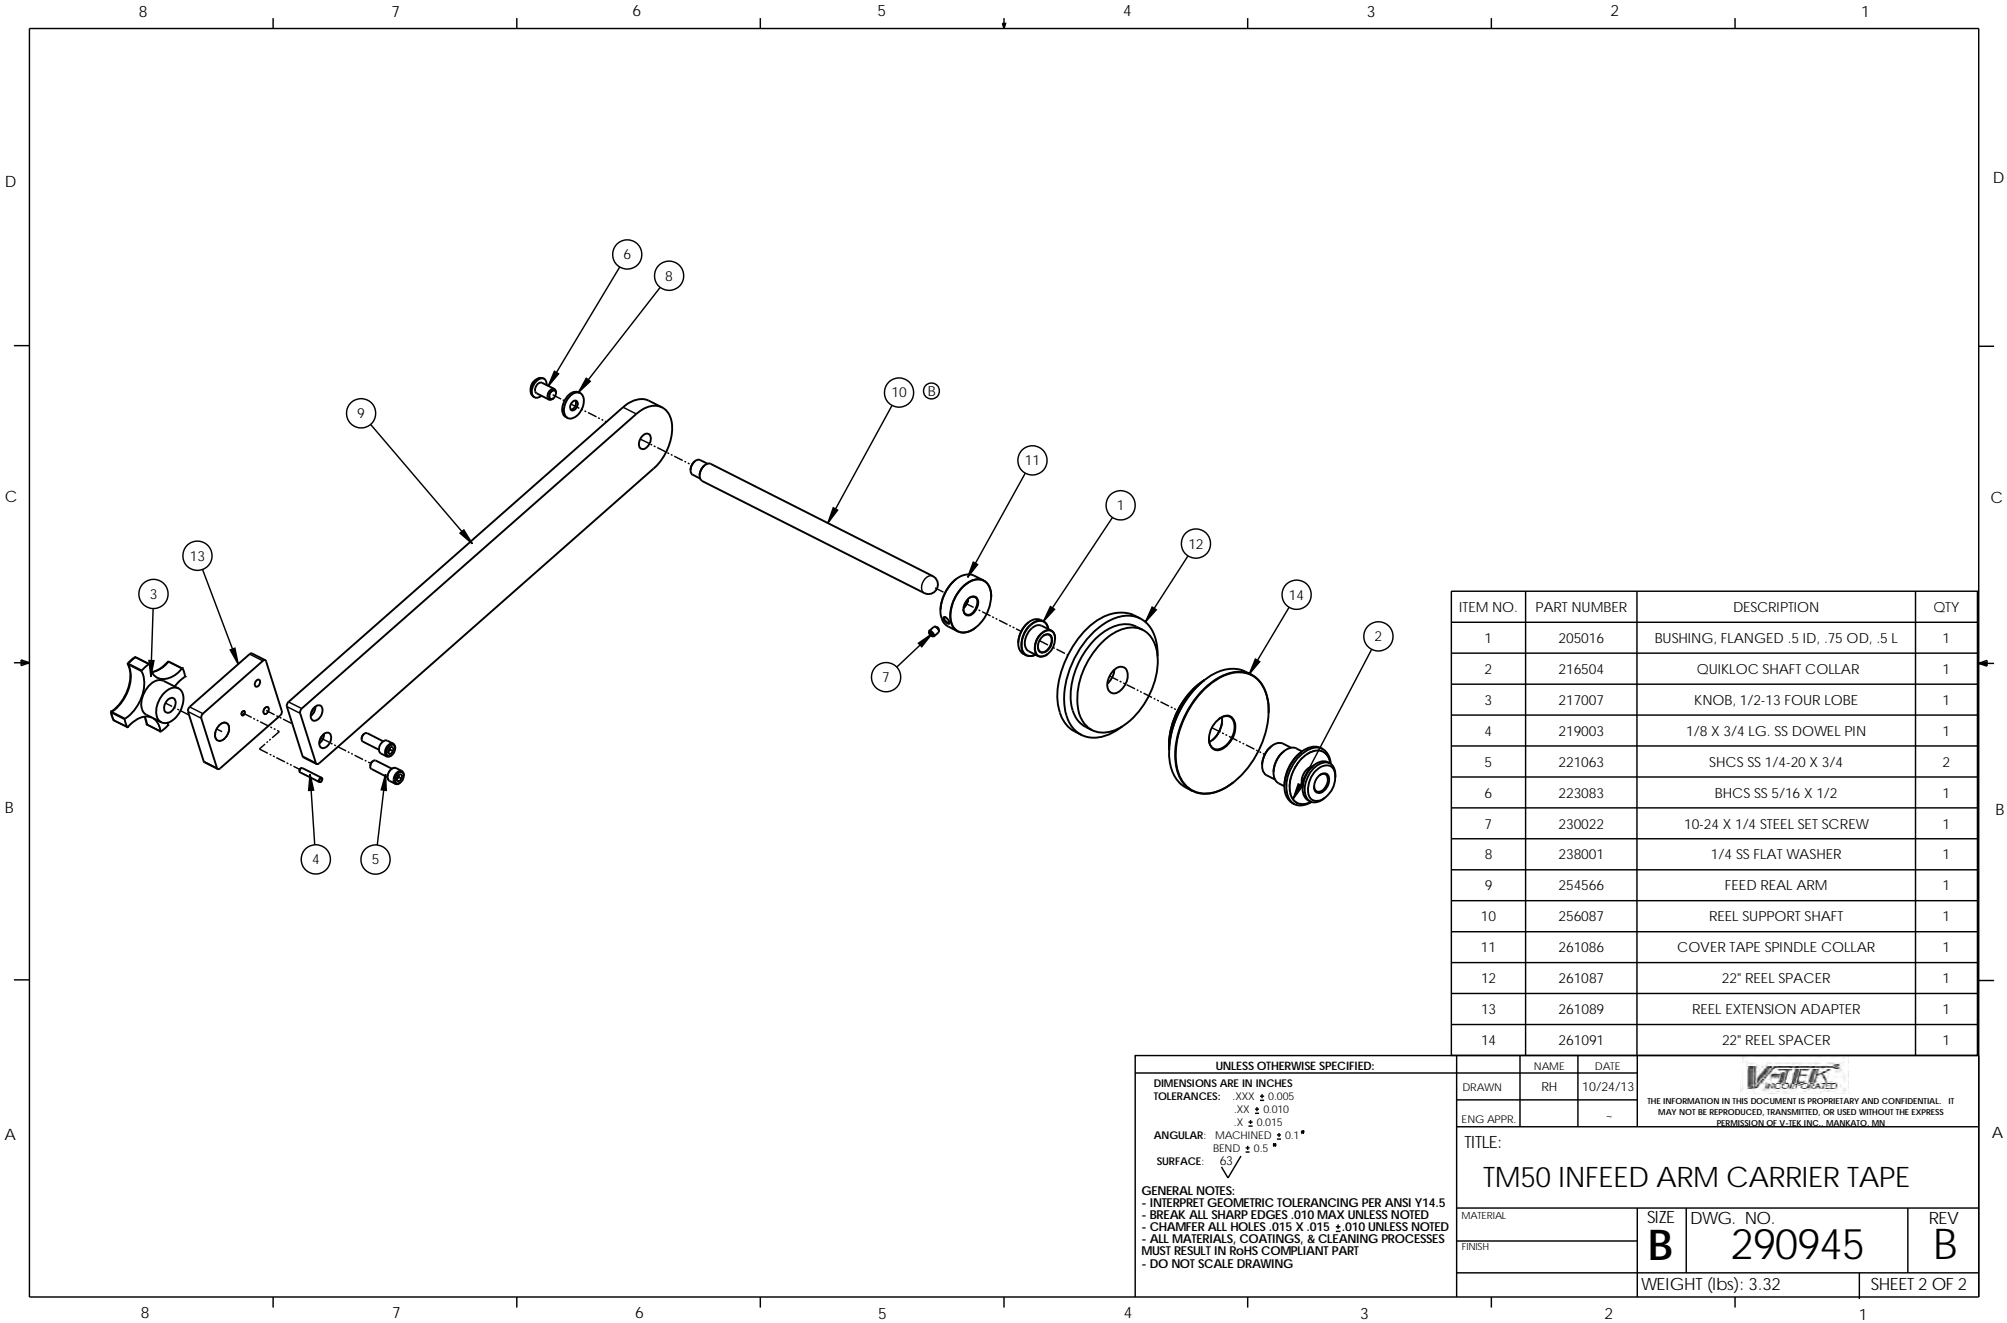
ITEM NO.	PART NUMBER	DESCRIPTION	QTY
1	209246	SPRING, .360 DIA	1
2	217042	KNOB M4 RED	1
3	221026	SHCS SS 8-32 X 3/8	1
4	223010	BHCS SS 4-40 X 5/16	1
5	230022	10-24 X 1/4 STEEL SET SCREW	1
6	261057	GUIDE, C.T. INNER	1
7	261058	GUIDE, C.T. OUTER	1
8	261071	WASHER, C.T. GUIDE ASSEMBLY	1
9	261430	SHAFT, C.T. GUIDE ASSEM	1
10	261431	SHAFT, C.T. GUIDE	1
11	261432	ROD, THREADED, C.T. GUIDE	1
12	262795	ADJUSTMENT KNOB - .500"	1
13	263588	C.T. GUIDE ADJUSTER	1

UNLESS OTHERWISE SPECIFIED:			NAME		DATE
DIMENSIONS ARE IN INCHES			DRAWN	RH	10/23/13
TOLERANCES: .XXK ± 0.005			ENG APPR.		
XX ± 0.010			-		
X ± 0.015					
ANGULAR: MACHINED ± 0.1°					
BEND ± 0.5°					
SURFACE: 63					
GENERAL NOTES:					
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5					
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED					
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED					
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES MUST RESULT IN ROHS COMPLIANT PART					
- DO NOT SCALE DRAWING					
THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MINNETONKA, MN.					
TITLE:					
TM50 COVER TAPE GUIDE					
MATERIAL		SIZE	DWG. NO.	REV	
FINISH		B	290942	A	
WEIGHT (lbs): 0.7936			SHEET 2 OF 3		

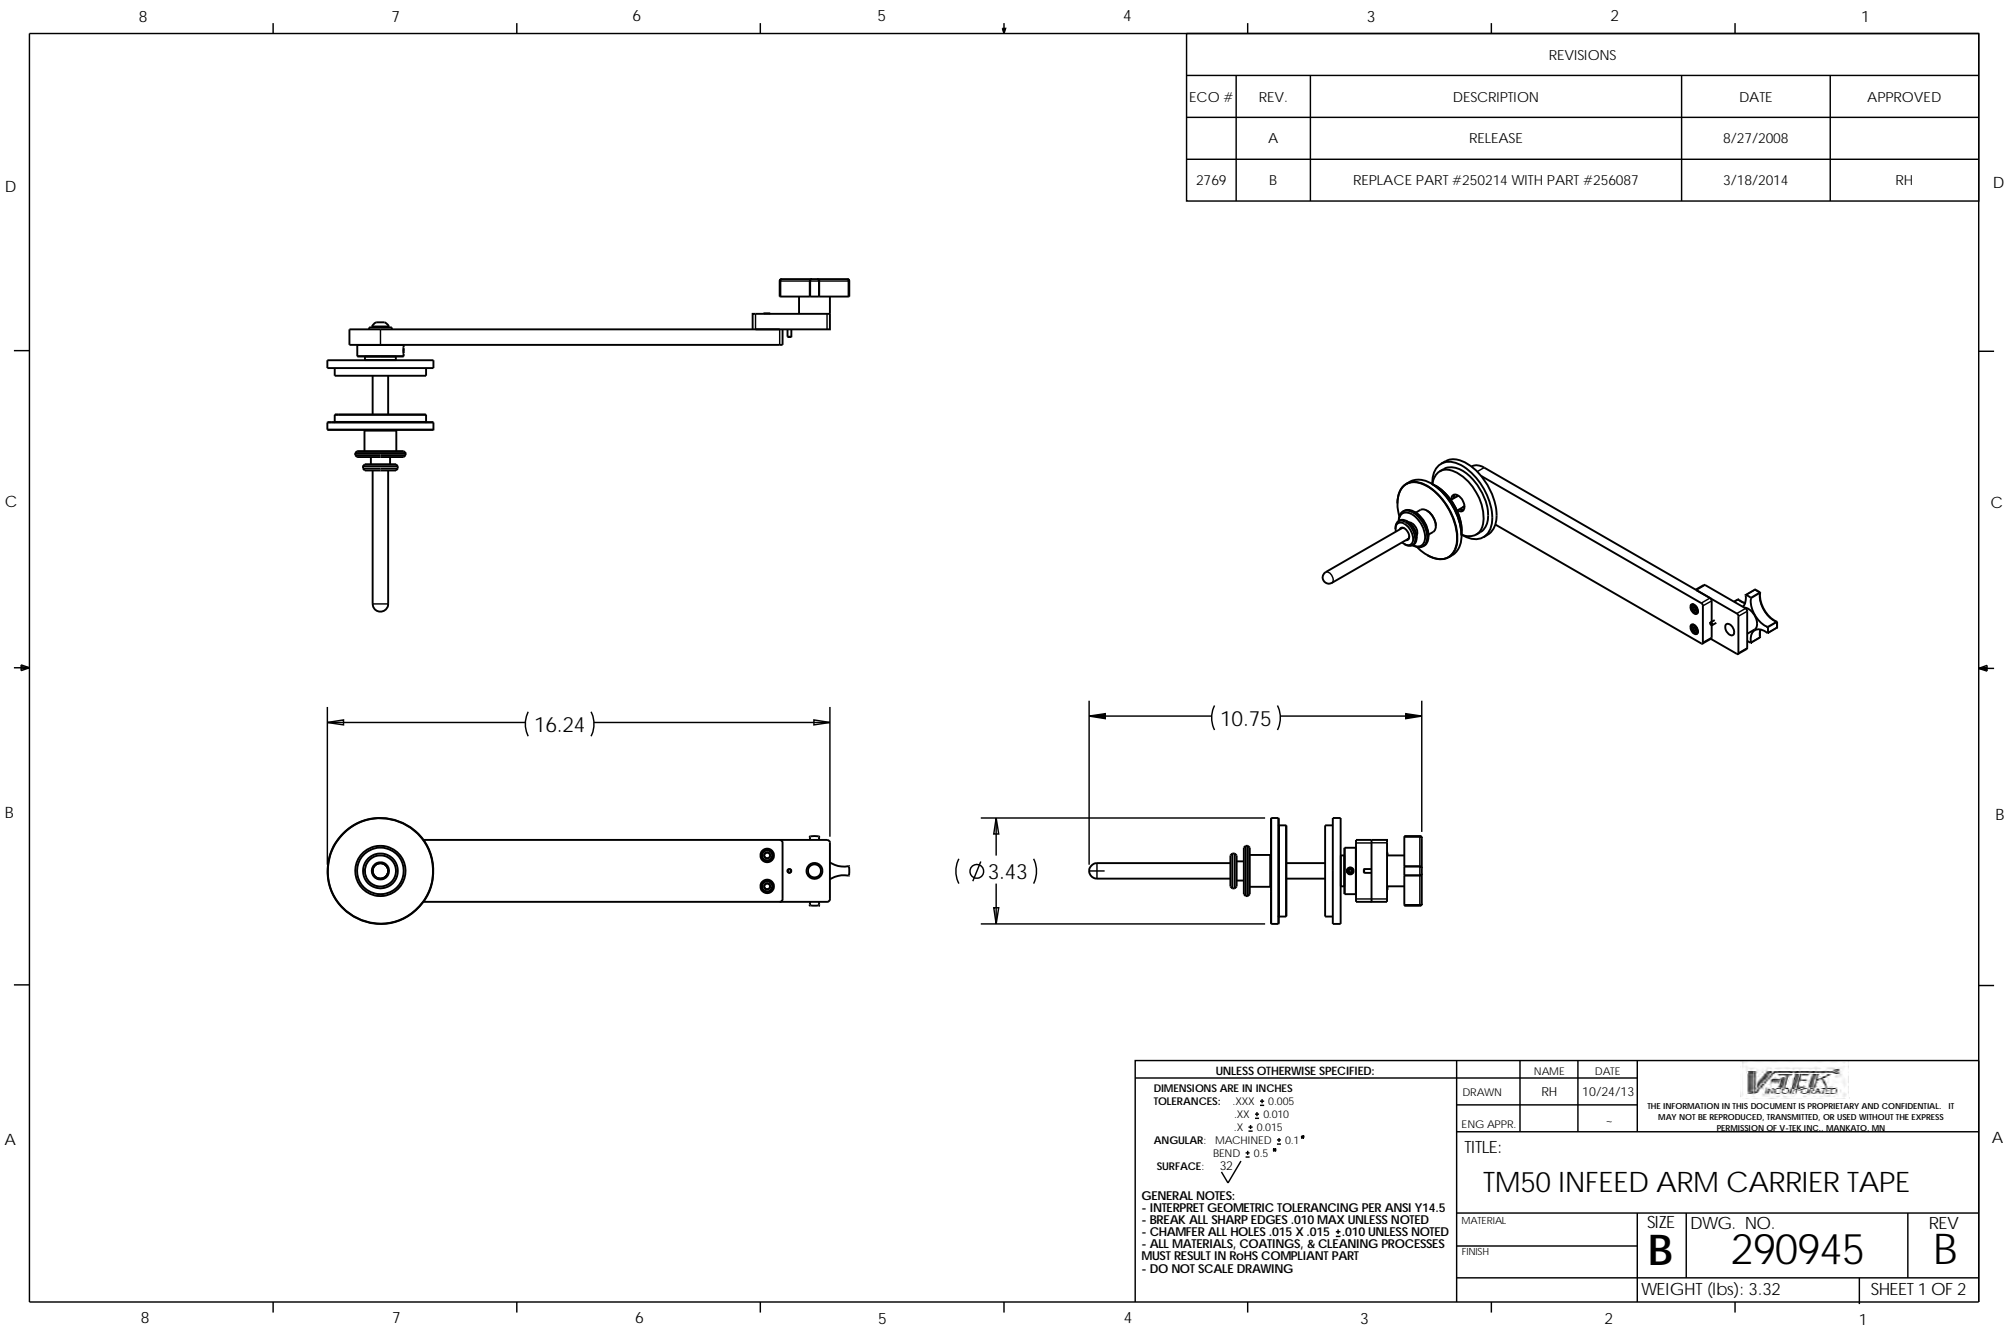

REVISIONS				
ECO #	REV.	DESCRIPTION	DATE	APPROVED
	A	RELEASE	8/27/2008	
2769	B	REPLACE PART #250214 WITH PART #256087	3/18/2014	RH

UNLESS OTHERWISE SPECIFIED:		NAME	DATE	 THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MINNETONKA, MN.	
DIMENSIONS ARE IN INCHES TOLERANCES: .XX ± 0.005 XX ± 0.010 X ± 0.015 ANGULAR: MACHINED ± 0.1° BEND ± 0.5° SURFACE: 32 ✓		DRAWN	RH		
		ENG APPR.		TITLE: TM50 INFED ARM CARRIER TAPE	
		MATERIAL		SIZE	DWG. NO.
		FINISH		<b>B</b>	290945
				REV	B
				WEIGHT (lbs): 3.32	
				SHEET 1 OF 2	



ITEM NO.	PART NUMBER	DESCRIPTION	QTY
1	205016	BUSHING, FLANGED .5 ID, .75 OD, .5 L	1
2	216504	QUIKLOC SHAFT COLLAR	1
3	217007	KNOB, 1/2-13 FOUR LOBE	1
4	219003	1/8 X 3/4 LG. SS DOWEL PIN	1
5	221063	SHCS SS 1/4-20 X 3/4	2
6	223083	BHCS SS 5/16 X 1/2	1
7	230022	10-24 X 1/4 STEEL SET SCREW	1
8	238001	1/4 SS FLAT WASHER	1
9	254566	FEED REAL ARM	1
10	256087	REEL SUPPORT SHAFT	1
11	261086	COVER TAPE SPINDLE COLLAR	1
12	261087	22" REEL SPACER	1
13	261089	REEL EXTENSION ADAPTER	1
14	261091	22" REEL SPACER	1

UNLESS OTHERWISE SPECIFIED:

DIMENSIONS ARE IN INCHES

TOLERANCES: XX ± 0.005  
X ± 0.010  
X ± 0.015

ANGULAR: MACHINED ± 0.1°  
BEND ± 0.5°

SURFACE: 63/

GENERAL NOTES:  
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5  
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED  
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED  
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES MUST RESULT IN ROHS COMPLIANT PART  
- DO NOT SCALE DRAWING


NAME

DATE

DRAWN RH

10/24/13

ENG APPR

  
THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MINNETONKA, MN.

TITLE:  
TM50 INFEEED ARM CARRIER TAPE

MATERIAL

FINISH

SIZE

DWG. NO.

REV

B

290945





B


WEIGHT (lbs): 3.32

SHEET 2 OF 2


8 7 6 5 4 3 2 1

REVISIONS				
ECO #	REV.	DESCRIPTION	DATE	APPROVED
	A	RELEASE	8/6/2015	RH

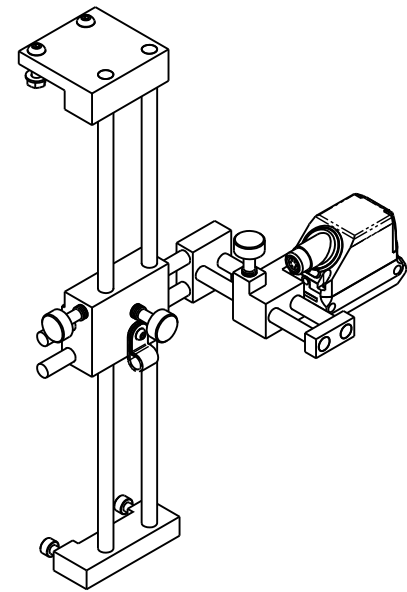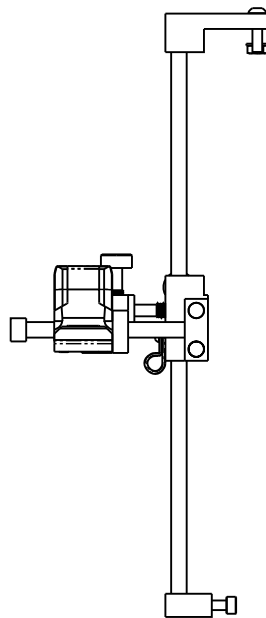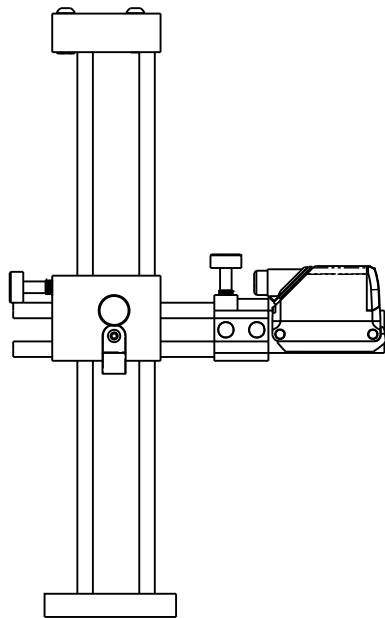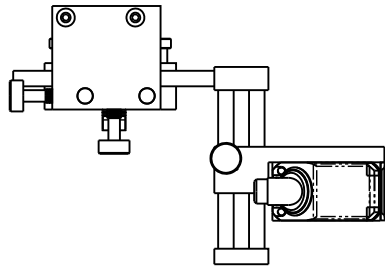

UNLESS OTHERWISE SPECIFIED:				NAME	DATE	 THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MANKATO, MN OR ROYCE INSTRUMENTS LLC, NAPA, CA.
DIMENSIONS ARE IN INCHES				DRAWN	RH	
TOLERANCES: .XXX ± 0.005				ENG APPR:	PVO	
XX ± 0.010 X ± 0.015				TITLE:		
ANGULAR: MACHINED ± 0.1° BEND ± 0.5°				OVER TAPE CAMERA ASSEMBLY		REV <b>A</b>
SURFACE: 32/				MATERIAL	SIZE	
GENERAL NOTES: - INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5 - BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED - CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED - ALL MATERIALS, COATINGS, & CLEANING PROCESSES MUST RESULT IN ROHS COMPLIANT PART - DO NOT SCALE DRAWING				FINISH	DWG. NO. <b>B 292050</b>	
				WEIGHT (lbs): 0.93		SHEET 1 OF 2

8 7 6 5 4 3 2 1

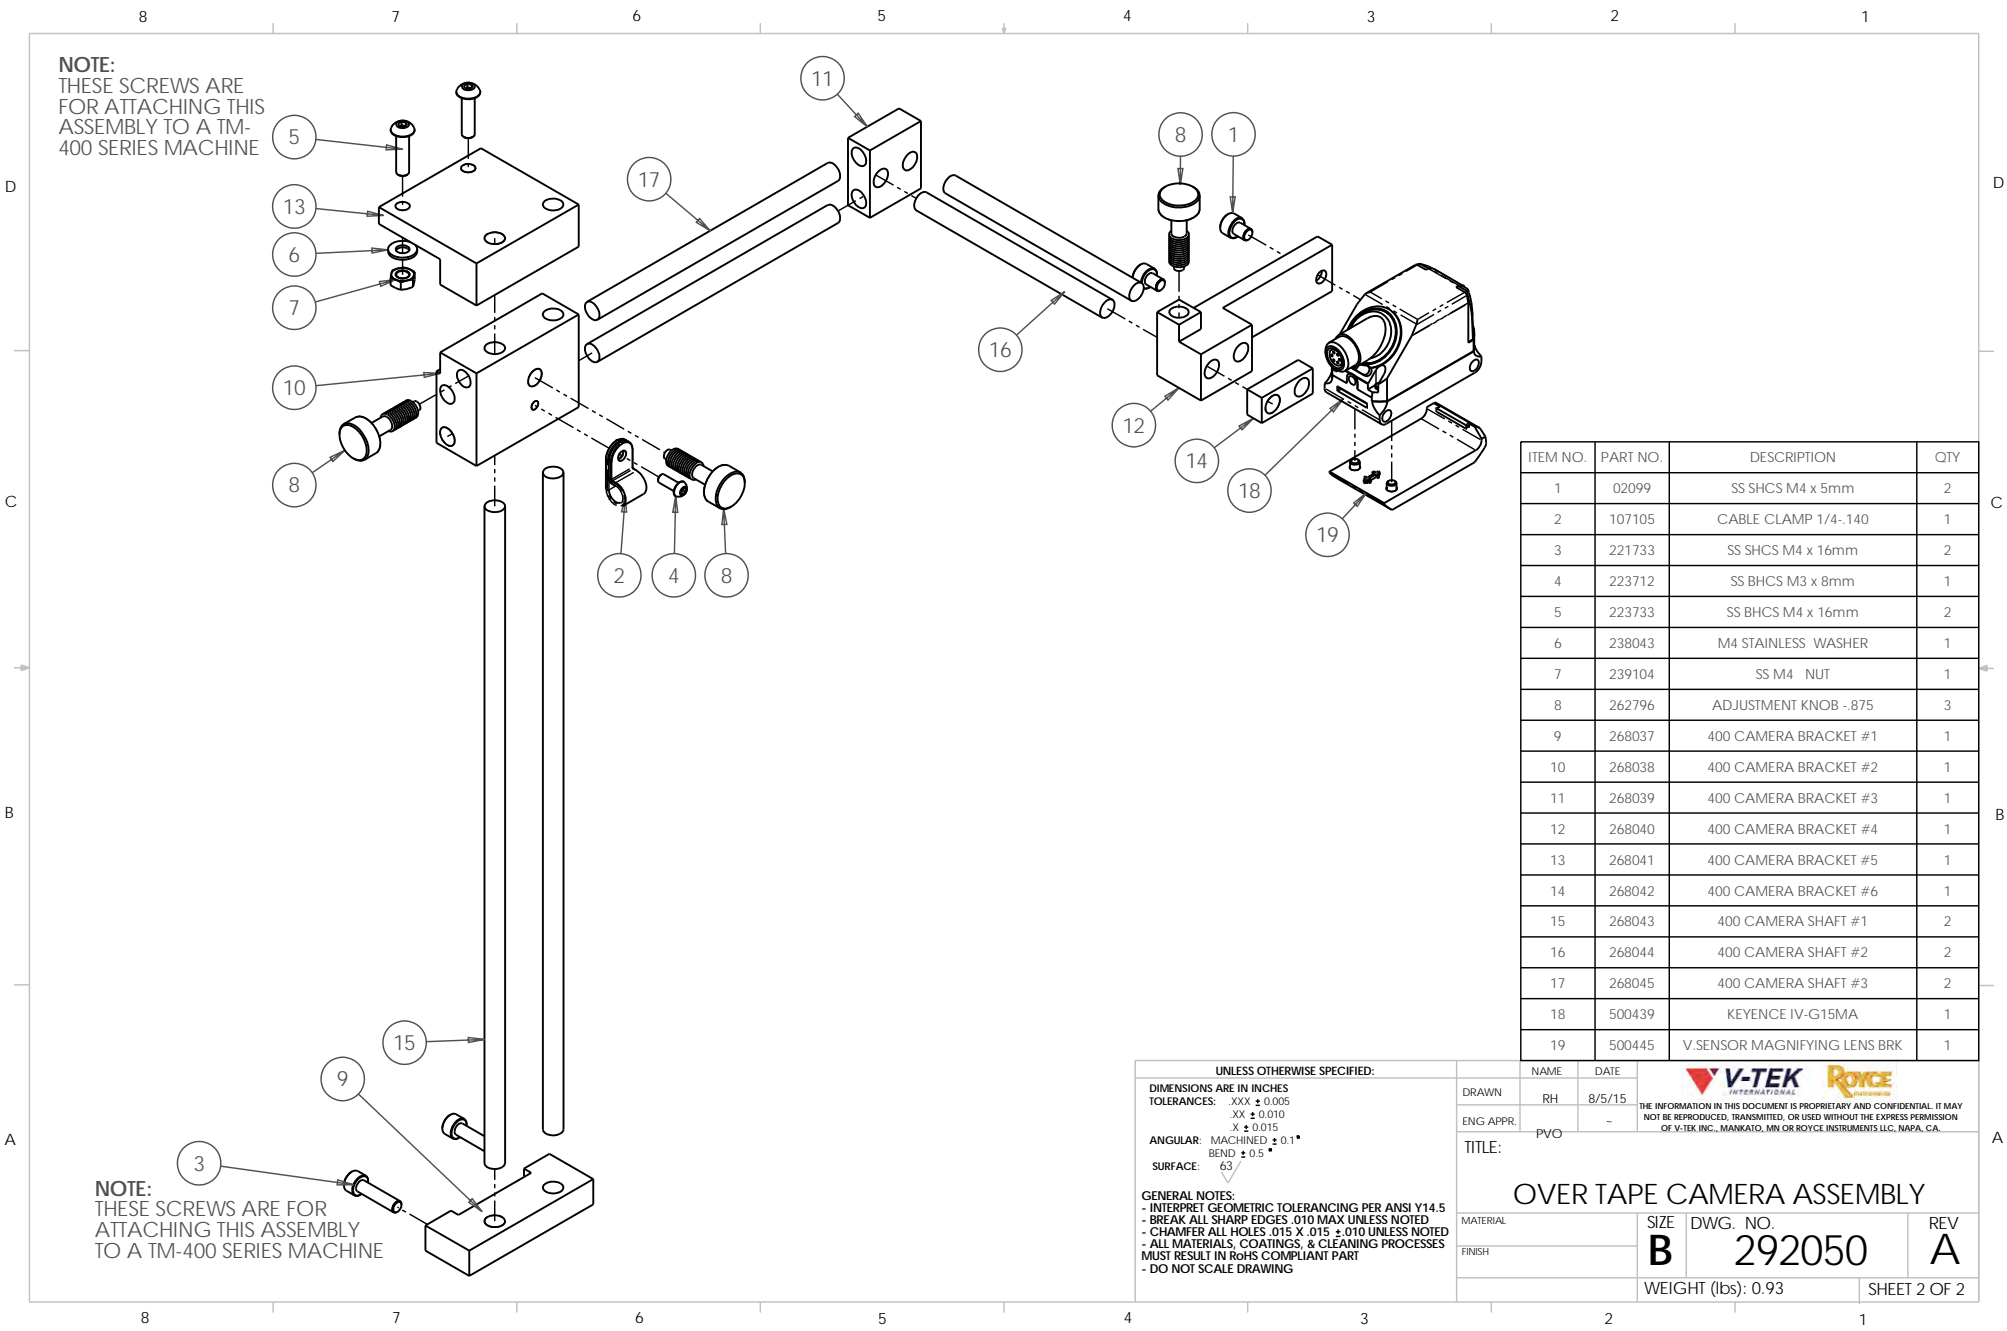

ITEM NO.	PART NO.	DESCRIPTION	QTY
1	02099	SS SHCS M4 x 5mm	2
2	107105	CABLE CLAMP 1/4-140	1
3	221733	SS SHCS M4 x 16mm	2
4	223712	SS BHCS M3 x 8mm	1
5	223733	SS BHCS M4 x 16mm	2
6	238043	M4 STAINLESS WASHER	1
7	239104	SS M4 NUT	1
8	262796	ADJUSTMENT KNOB -.875	3
9	268037	400 CAMERA BRACKET #1	1
10	268038	400 CAMERA BRACKET #2	1
11	268039	400 CAMERA BRACKET #3	1
12	268040	400 CAMERA BRACKET #4	1
13	268041	400 CAMERA BRACKET #5	1
14	268042	400 CAMERA BRACKET #6	1
15	268043	400 CAMERA SHAFT #1	2
16	268044	400 CAMERA SHAFT #2	2
17	268045	400 CAMERA SHAFT #3	2
18	500439	KEYENCE IV-G15MA	1
19	500445	V.SENSOR MAGNIFYING LENS BRK	1

UNLESS OTHERWISE SPECIFIED:

DIMENSIONS ARE IN INCHES

TOLERANCES: XXX ± 0.005  
XX ± 0.010  
X ± 0.015

ANGULAR: MACHINED ± 0.1°  
BEND ± 0.5°

SURFACE: 63

GENERAL NOTES:  
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5  
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED  
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED  
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES MUST RESULT IN ROHS COMPLIANT PART  
- DO NOT SCALE DRAWING

NAME: \_\_\_\_\_ DATE: 8/5/15

DRAWN: RH

ENG APPR: PVO

TITLE: OVER TAPE CAMERA ASSEMBLY

MATERIAL: \_\_\_\_\_

FINISH: \_\_\_\_\_

THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MANKATO, MN OR ROYCE INSTRUMENTS LLC, NAPA, CA.

DWG. NO. 292050





REV A

WEIGHT (lbs): 0.93



SHEET 2 OF 2


REVISIONS				
ECO #	REV.	DESCRIPTION	DATE	APPROVED
	A	RELEASE	12/4/2014	RH
2878	B	ADD TRAY CLAMPING SYSTEM TO ASSEMBLY, REPLACE PART 266460 WITH PART 268115		RH

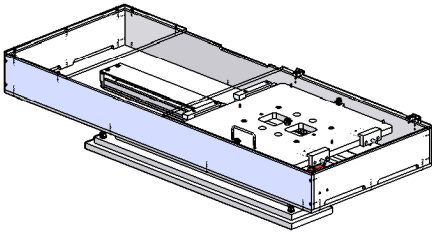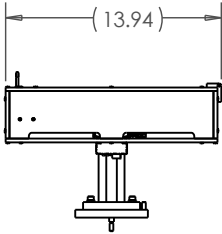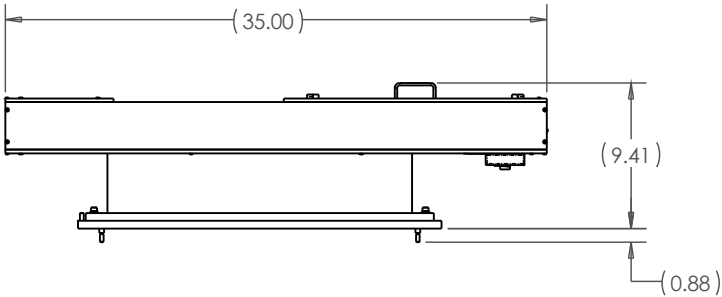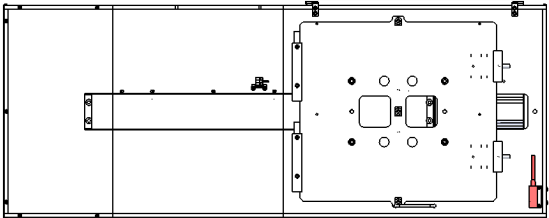NOTE: THE HOME SENSOR THAT COMES WITH THE ACTUATOR IS INCORECT. REPLACE IT WITH 104993 (INCLUDED ON THE BOM FOR 291876)



TRAY ASSEMBLY MUST BE ALIGNED WITH PICK HEAD TRAVEL AXIS - SEE FINAL ASSEMBLY DRAWINGS (291687) FOR ALIGNMENT WORK INSTRUCTIONS

UNLESS OTHERWISE SPECIFIED:		NAME	DATE	<div>   </div> <small>THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MANKATO, MN OR ROYCE INSTRUMENTS LLC, NAPA, CA.</small>	
DIMENSIONS ARE IN INCHES		DRAWN	RH		
TOLERANCES: .XXX ± 0.005		ENG APPR:	RH		
.XX ± 0.010 .X ± 0.015 ANGULAR: MACHINED ± 0.1° BEND ± 0.5° SURFACE: 32		TITLE:		TM-403 TRAY ASSEMBLY	
GENERAL NOTES: - INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5 - BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED - CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED - ALL MATERIALS, COATINGS, & CLEANING PROCESSES MUST RESULT IN ROHS COMPLIANT PART - DO NOT SCALE DRAWING		MATERIAL		SIZE	DWG. NO.
		FINISH		<b>B</b>	<b>291876</b>
				REV	<b>B</b>
				WEIGHT (lbs): 26087.07	
				SHEET 1 OF 7	

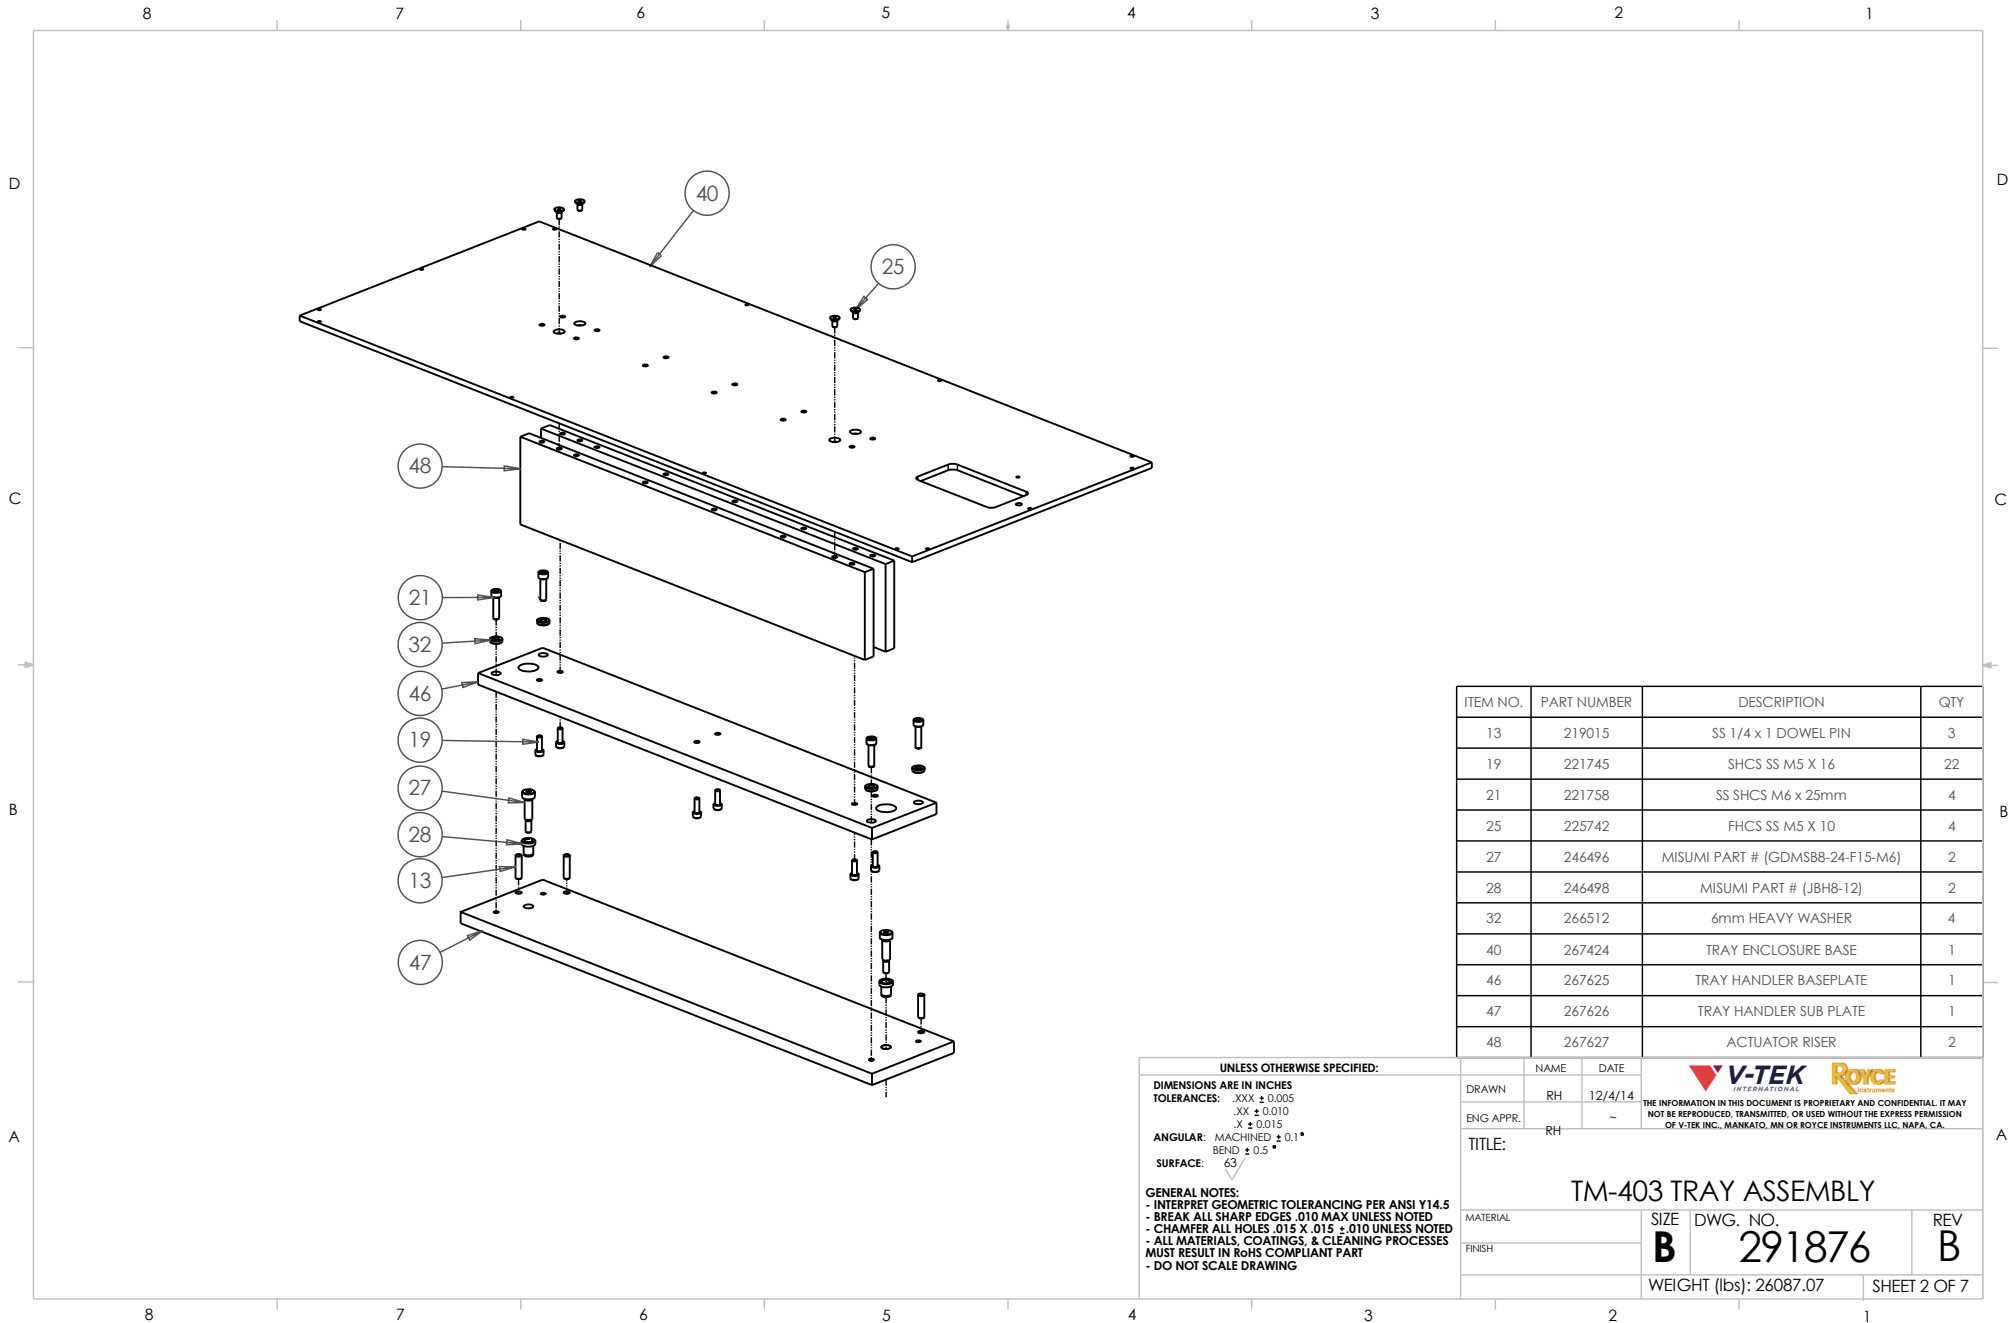

ITEM NO.	PART NUMBER	DESCRIPTION	QTY
13	219015	SS 1/4 x 1 DOWEL PIN	3
19	221745	SHCS SS M5 X 16	22
21	221758	SS SHCS M6 x 25mm	4
25	225742	FHCS SS M5 X 10	4
27	246496	MISUMI PART # (GDMSB8-24-F15-M6)	2
28	246498	MISUMI PART # (JBH8-12)	2
32	266512	6mm HEAVY WASHER	4
40	267424	TRAY ENCLOSURE BASE	1
46	267625	TRAY HANDLER BASEPLATE	1
47	267626	TRAY HANDLER SUB PLATE	1
48	267627	ACTUATOR RISER	2

UNLESS OTHERWISE SPECIFIED:

DIMENSIONS ARE IN INCHES

TOLERANCES: .XXX ± 0.005  
.XX ± 0.010  
.X ± 0.015

ANGULAR: MACHINED ± 0.1°  
BEND ± 0.5°

SURFACE: 63

GENERAL NOTES:  
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5  
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED  
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED  
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES MUST RESULT IN RoHS COMPLIANT PART  
- DO NOT SCALE DRAWING

NAME

DATE

DRAWN

RH

12/4/14

ENG APPR:

RH

TITLE:

TM-403 TRAY ASSEMBLY

MATERIAL

FINISH

SIZE


DWG. NO.

REV

WEIGHT (lbs): 26087.07

SHEET 2 OF 7

THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MANKATO, MN OR ROYCE INSTRUMENTS LLC, NAPA, CA.

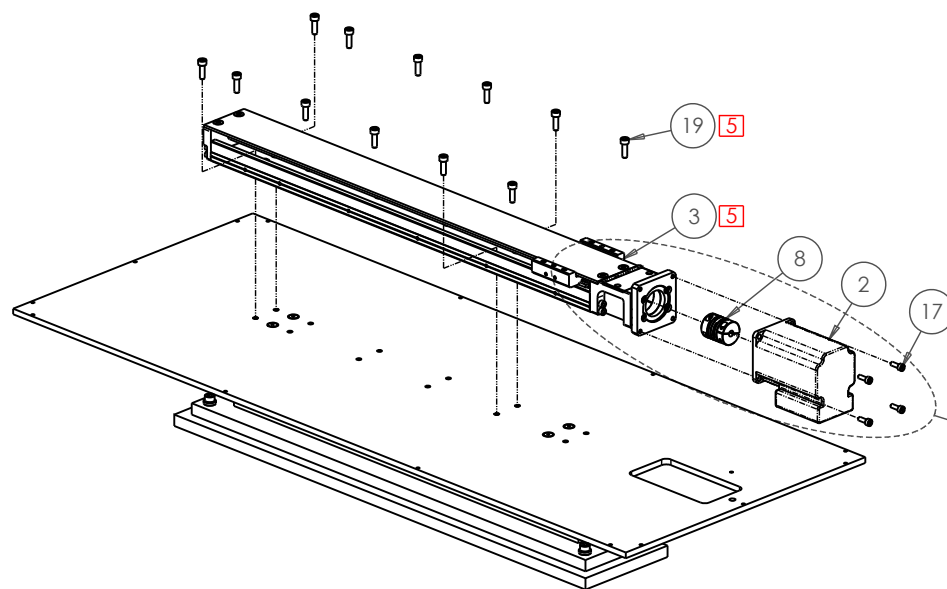


ASSEMBLE THESE PARTS FIRST


ITEM NO.	PART NUMBER	DESCRIPTION	QTY
2	105726	STM23S-2AN	1
3	202091	LINEAR ACTUATOR	1
8	216213	COUPLING SLIT CLAMPING	1
17	221731	SHCS SS M4 X 12	10
19	221745	SHCS SS M5 X 16	22

UNLESS OTHERWISE SPECIFIED:		
DIMENSIONS ARE IN INCHES		
TOLERANCES:		
XXX ± 0.005		
XX ± 0.010		
X ± 0.015		
ANGULAR: MACHINED ± 0.1°		
BEND ± 0.5°		
SURFACE: 63		
GENERAL NOTES:		
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5		
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED		
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED		
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES		
MUST RESULT IN ROHS COMPLIANT PART		
- DO NOT SCALE DRAWING		

DRAWN		NAME	DATE
RH			12/4/14
ENG APPR:			
RH			
TITLE:			
TM-403 TRAY ASSEMBLY			
MATERIAL		SIZE	DWG. NO.
FINISH		B	291876
		REV	B
		WEIGHT (lbs):	26087.07
		SHEET	3 OF 7

**V-TEK** INTERNATIONAL  
**Royce** Instruments  
THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MANKATO, MN OR ROYCE INSTRUMENTS LLC, NAPA, CA.

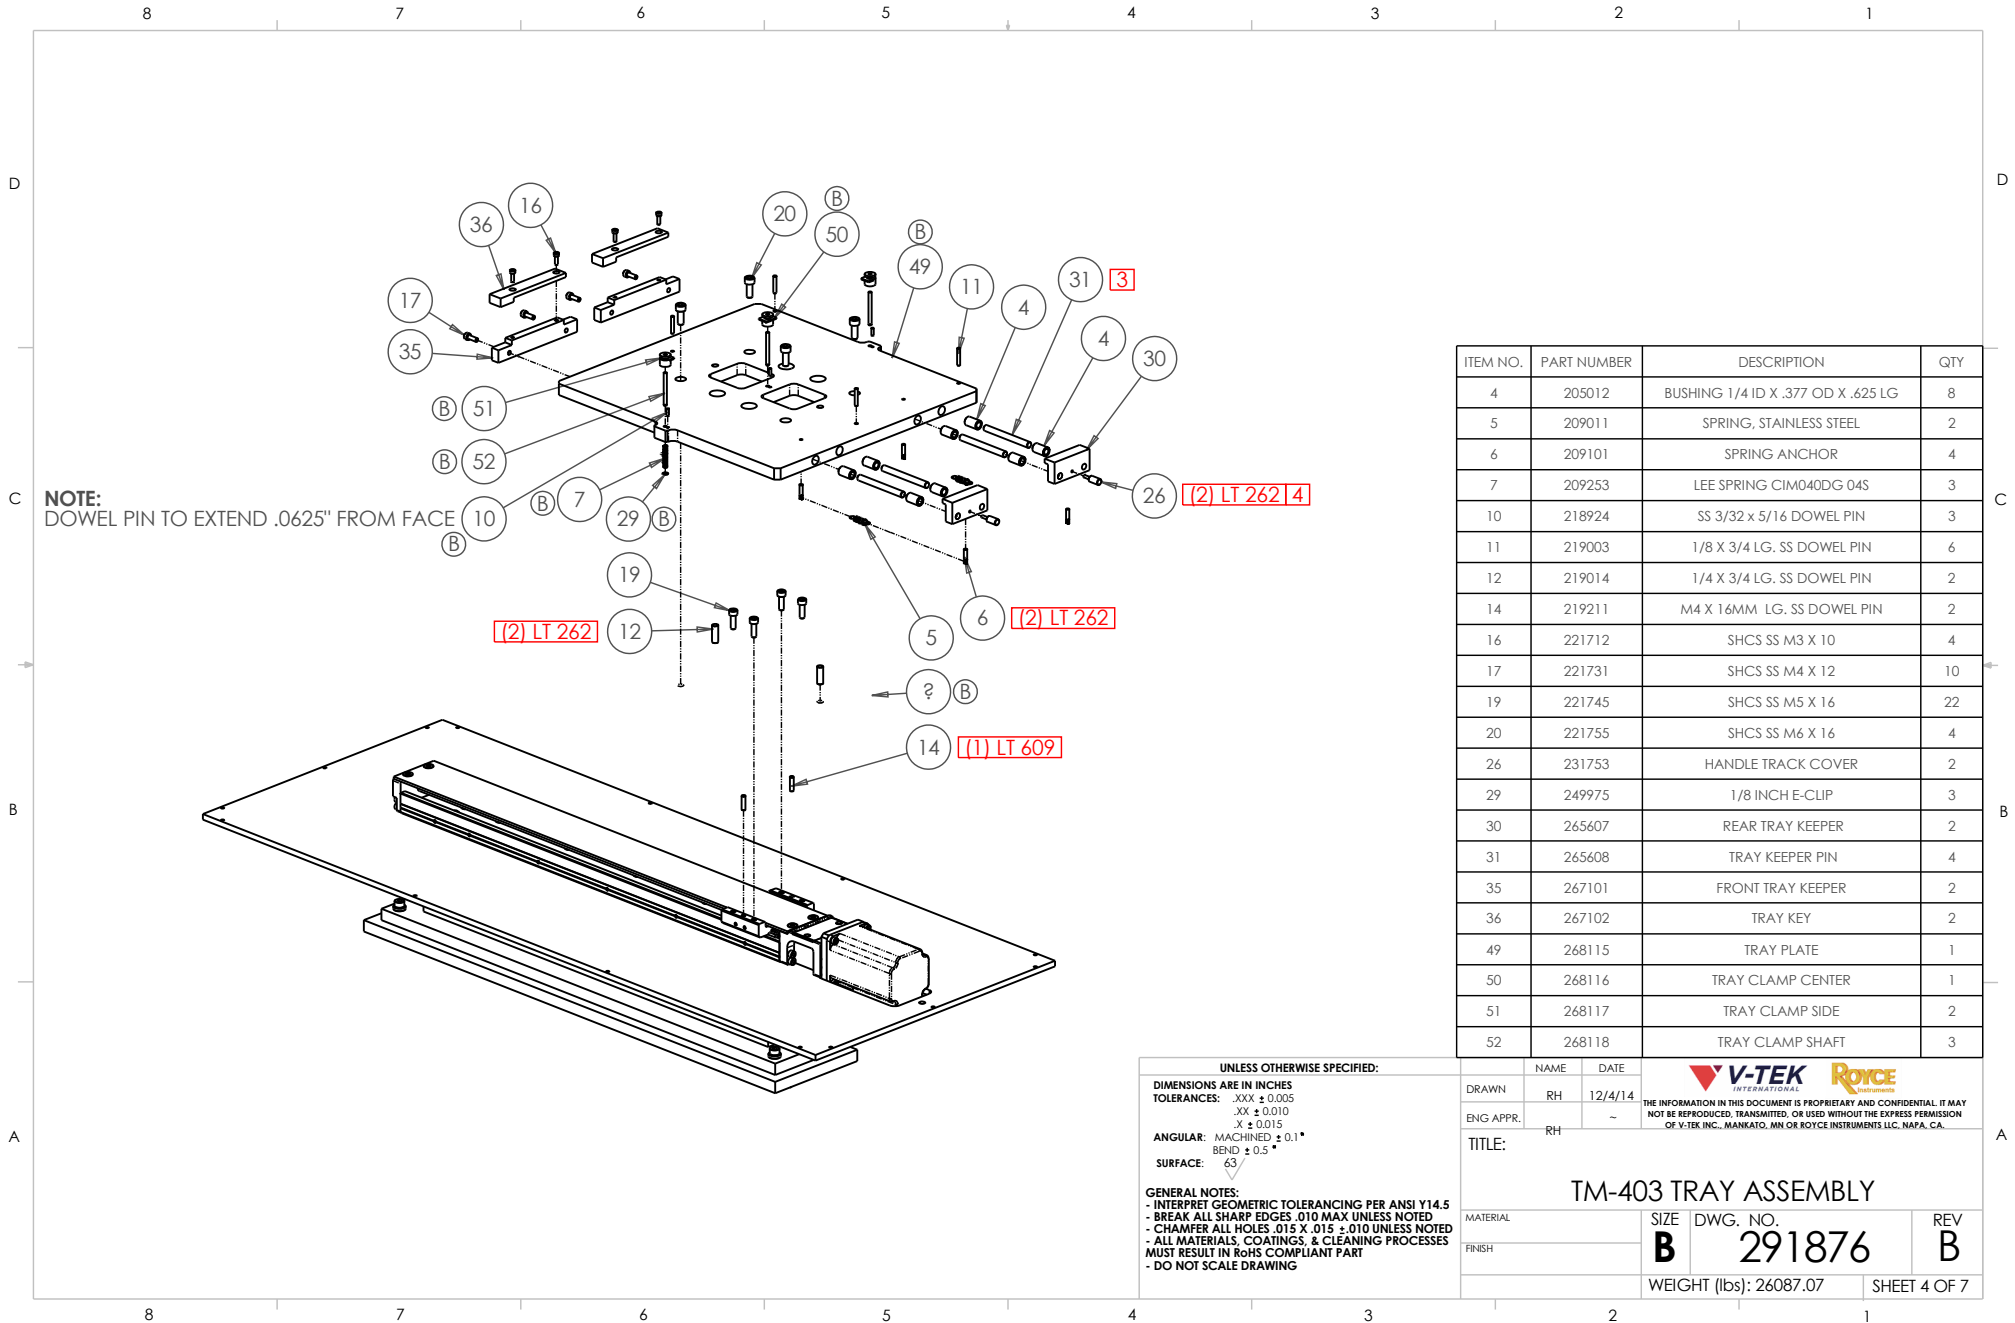

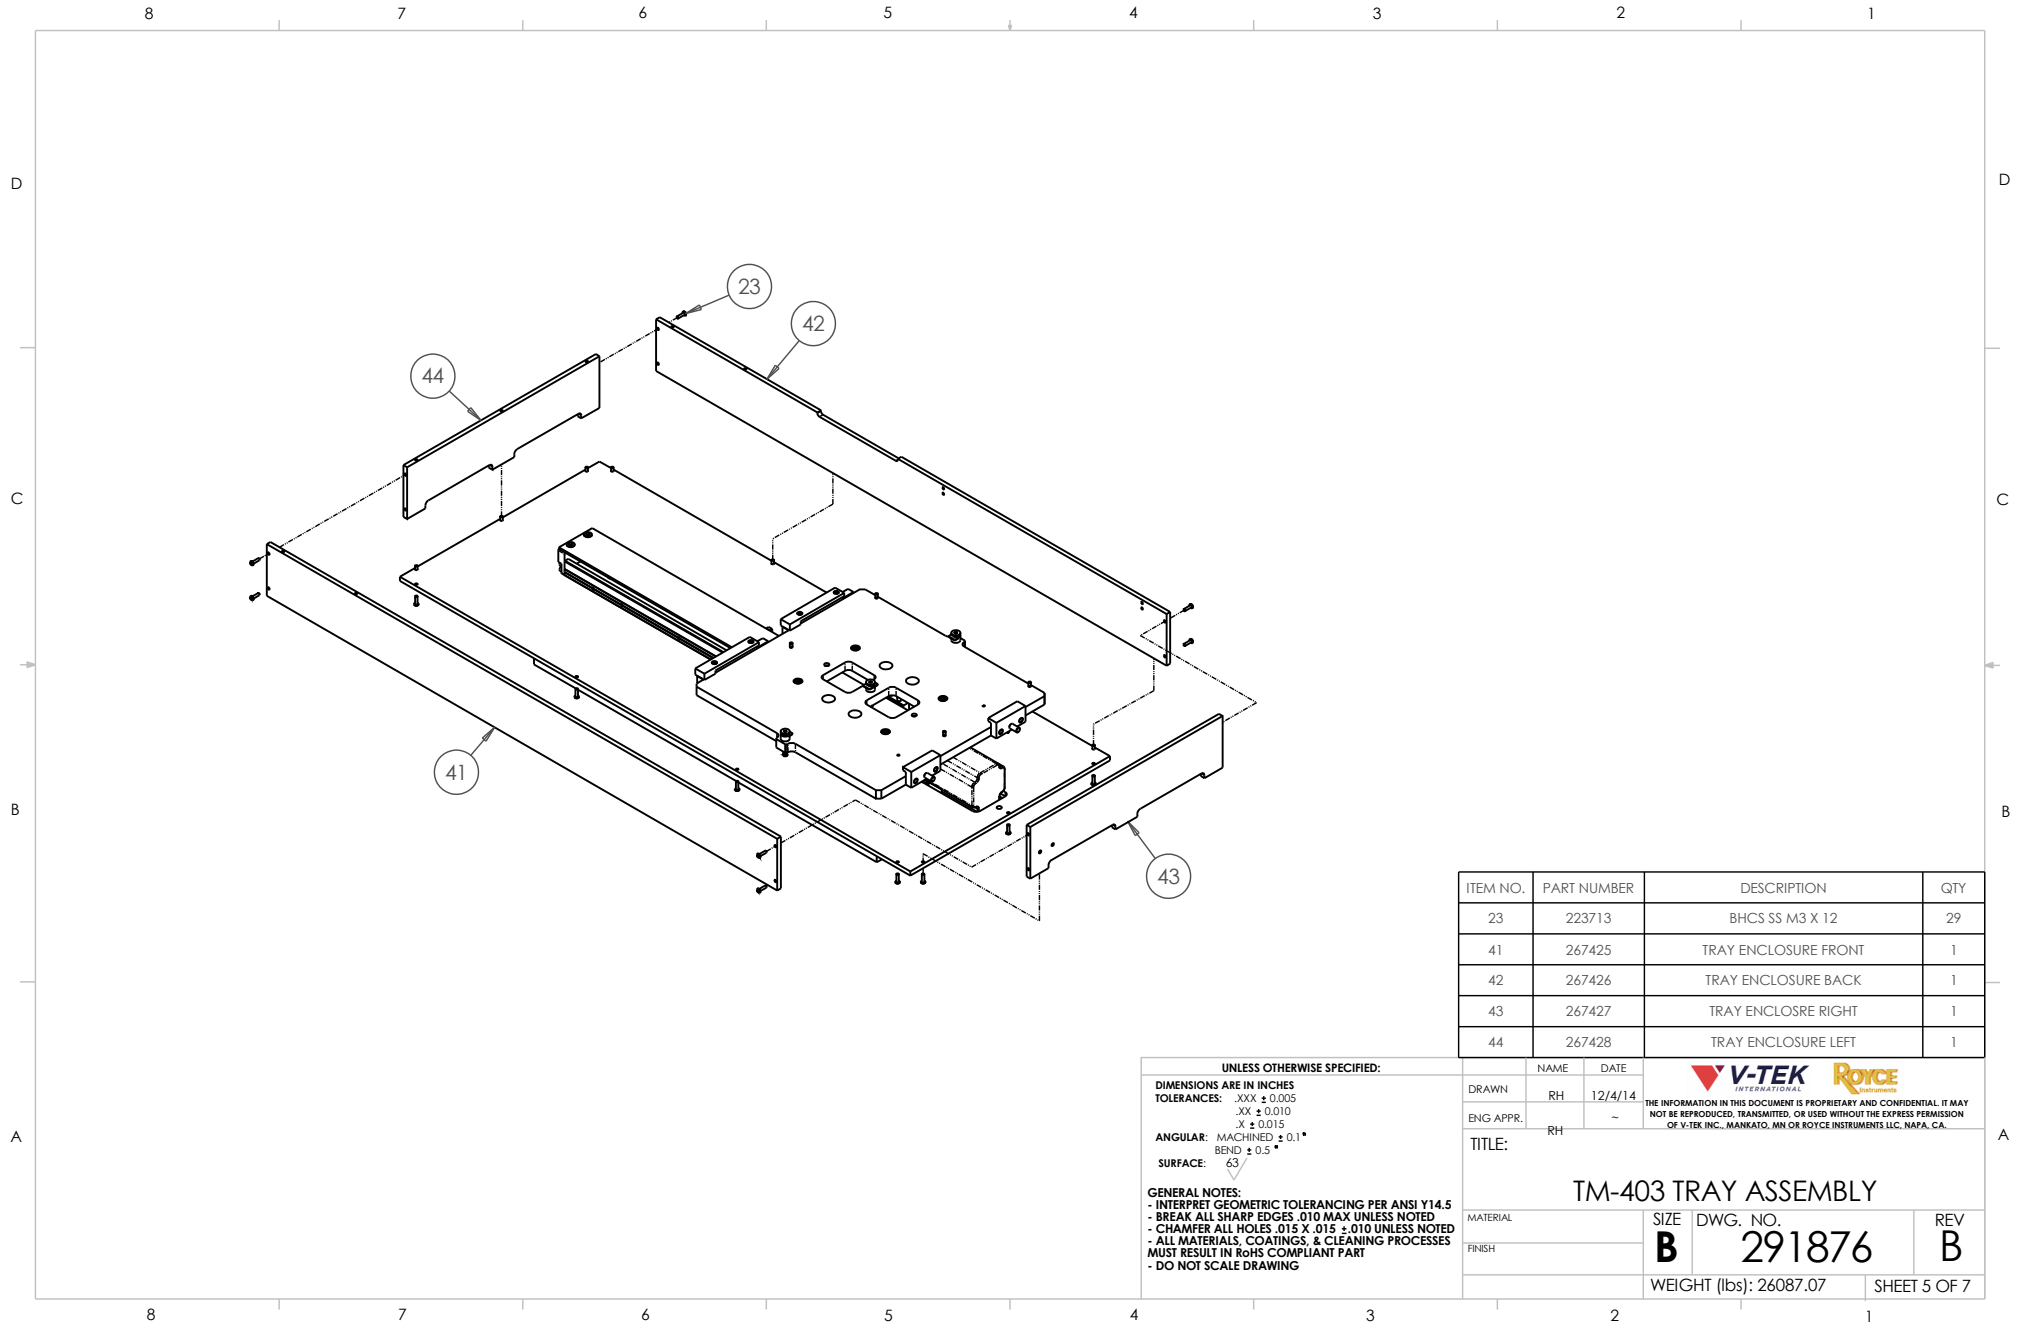

ITEM NO.	PART NUMBER	DESCRIPTION	QTY
23	223713	BHCS SS M3 X 12	29
41	267425	TRAY ENCLOSURE FRONT	1
42	267426	TRAY ENCLOSURE BACK	1
43	267427	TRAY ENCLOSURE RIGHT	1
44	267428	TRAY ENCLOSURE LEFT	1

UNLESS OTHERWISE SPECIFIED:		
DIMENSIONS ARE IN INCHES		
TOLERANCES:		
XXX ± 0.005		
XX ± 0.010		
X ± 0.015		
ANGULAR: MACHINED ± 0.1°		
BEND ± 0.5°		
SURFACE: 63		
GENERAL NOTES:		
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5		
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED		
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED		
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES		
MUST RESULT IN ROHS COMPLIANT PART		
- DO NOT SCALE DRAWING		

DRAWN		NAME	DATE
ENG APPR.		RH	12/4/14
TITLE:			
MATERIAL		SIZE	DWG. NO.
FINISH		B	291876
		REV	B
		WEIGHT (lbs):	26087.07
		SHEET	5 OF 7

**V-TEK** INTERNATIONAL  
**Royce** Instruments  
THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MANKATO, MN OR ROYCE INSTRUMENTS LLC, NAPA, CA.

## TM-403 TRAY ASSEMBLY

8 7 6 5 4 3 2 1

D

C

B


A

D


C

B

A

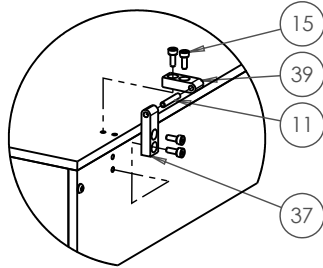

DETAIL A  
HINGE ASSEMBLY  
SCALE 1:3

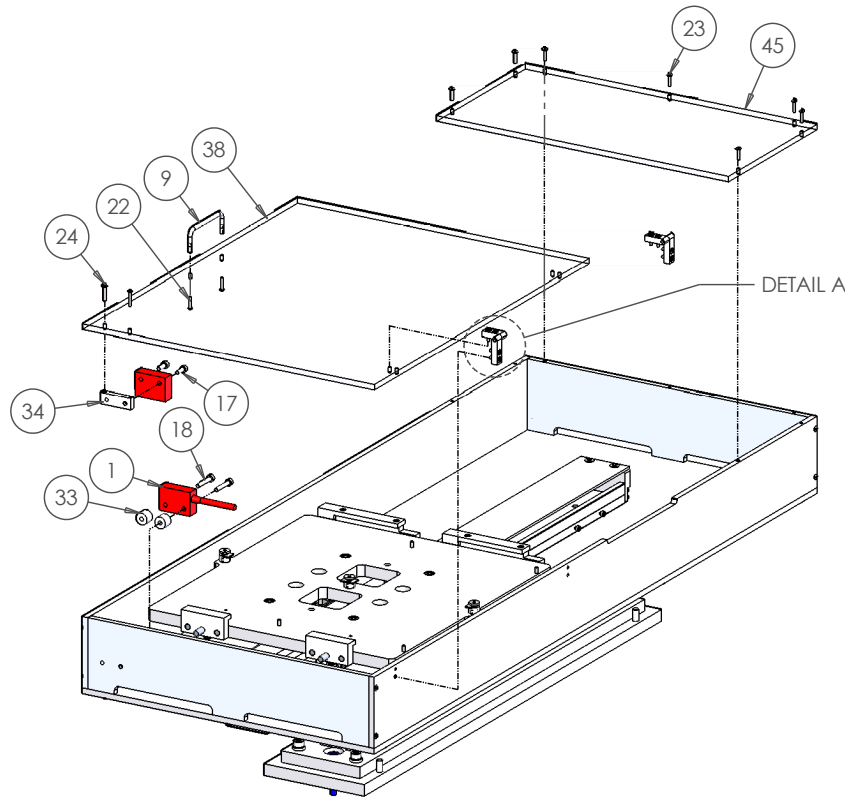



**NOTE:**  
THIS STEP MAY HAVE TO BE BUILT DURING  
FINAL ASSEMBLY OF THE **TM-403 TRAY**  
(291687) SO THAT THE **TM-403 TRAY**  
**ASSEMBLY** (291688) CAN BE INSTALLED.

ITEM NO.	PART NUMBER	DESCRIPTION	QTY
1	105116	READ HEAD FOR CM-S4; 3 METER	1
9	217309	PULL HANDLE	1
11	219003	1/8 X 3/4 LG. SS DOWEL PIN	6
15	221711	SHCS SS M3 X 8	8
17	221731	SHCS SS M4 X 12	10
18	221737	SHCS SS M4 X 25	2
22	223009	BHCS SS 4-40 X 1/2	2
23	223713	BHCS SS M3 X 12	29
24	223714	BHCS SS M3 X 16	2
33	267047	SWITCH STAND-OFF	2
34	267049	SWITCH MOUNT, METRIC	1
37	267107	HINGE, FIXED	2
38	267108	TRAY ENCLOSURE DOOR	1
39	267109	HINGE, PIVOTING	2
45	267429	TRAY ENCLOSURE TOP	1

TRAY ASSEMBLY MUST BE ALIGNED WITH PICK HEAD  
TRAVEL AXIS - SEE FINAL ASSEMBLY DRAWINGS (291687)  
FOR ALIGNMENT WORK INSTRUCTIONS



UNLESS OTHERWISE SPECIFIED:		
DIMENSIONS ARE IN INCHES		
TOLERANCES: .XXX ± 0.005		
.XX ± 0.010		
.X ± 0.015		
ANGULAR: MACHINED ± 0.1°		
BEND ± 0.5°		
SURFACE: 63		
GENERAL NOTES:		
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5		
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED		
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED		
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES		
MUST RESULT IN ROHS COMPLIANT PART		
- DO NOT SCALE DRAWING		


	NAME	DATE	 <b>V-TEK</b> INTERNATIONAL		 <b>Royce</b> Instruments
DRAWN	RH	12/4/14	THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MANKATO, MN OR ROYCE INSTRUMENTS LLC, NAPA, CA.		
ENG APPR.	RH	~			
TITLE:					
TM-403 TRAY ASSEMBLY					
MATERIAL	SIZE	DWG. NO.		REV	
FINISH	<b>B</b>	<b>291876</b>		<b>B</b>	
WEIGHT (lbs): 26087.07				SHEET 6 OF 7	

8 7 6 5 4 3 2 1


8 7 6 5 4 3 2 1

REVISION				
ECO #	REV.	DESCRIPTION	DATE	APPROVED
	A	RELEASE	9/16/2013	PVO

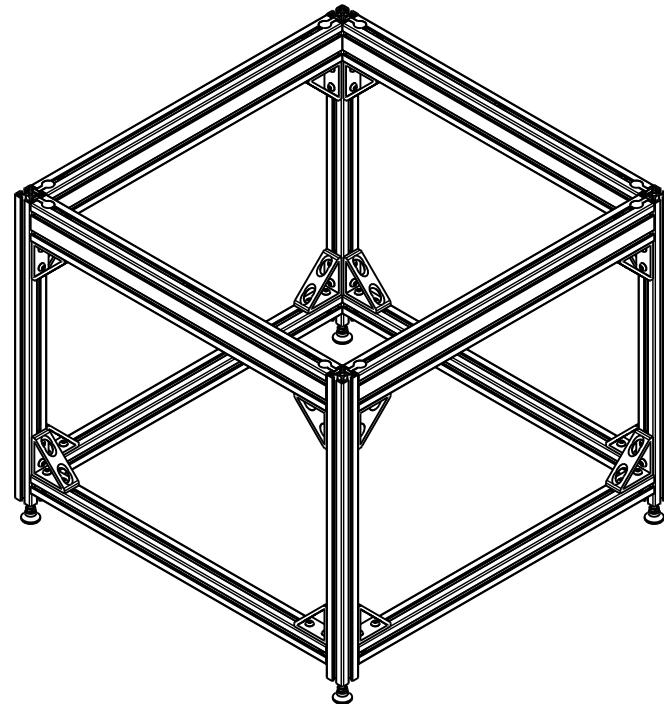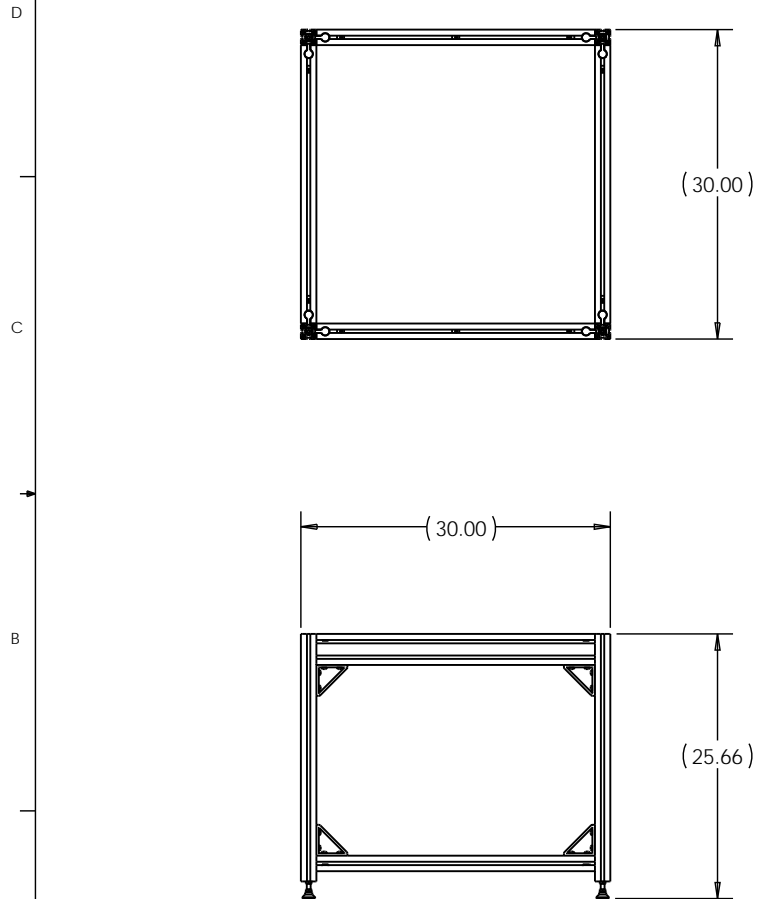


UNLESS OTHERWISE SPECIFIED:		NAME		DATE						
DIMENSIONS ARE IN INCHES TOLERANCES: .XXX ± 0.005 .XX ± 0.010 .X ± 0.015		DRAWN	RH	8/23/13		THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MINNETONKA, MN.				
ANGULAR: MACHINED ± 0.1° BEND ± 0.5° SURFACE: 32 / √		ENG APPR.	PVO	-						
<p>GENERAL NOTES:</p> <p>INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5</p> <p>- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED</p> <p>- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED</p> <p>- ALL MATERIALS, COATINGS, &amp; CLEANING PROCESSES MUST RESULT IN RoHS COMPLIANT PART</p> <p>- DO NOT SCALE DRAWING</p>		TITLE:		TM-400 FRAME ASSEMBLY						
		MATERIAL						SIZE	DWG. NO.	REV
		FINISH						B	291667	A
		NA		WEIGHT (lbs): 38.57		SHEET 1 OF 6				

8 7 6 5 4 3 2 1

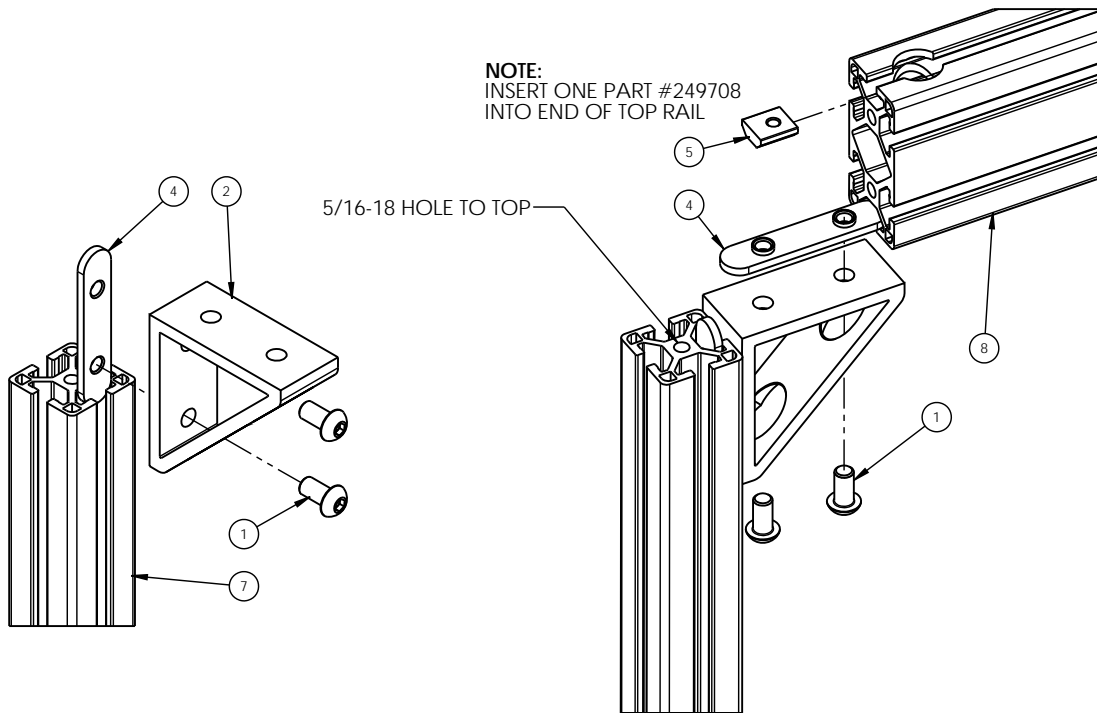

DETAIL A  
TOP RAIL BRACKET TO LEG  
SCALE 1:2


DETAIL B  
TOP RAIL TO LEG  
SCALE 1:2

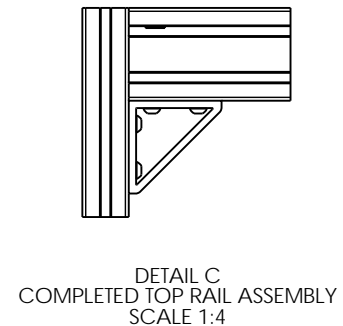



DETAIL C  
COMPLETED TOP RAIL ASSEMBLY  
SCALE 1:4

**NOTE:**  
THESE STEPS ARE REPEATED AT THE  
OTHER END OF EACH TOP RAIL


ITEM NO.	PART NUMBER	DESCRIPTION	QTY
1	223752	BHCS SS M8 X 16	64
2	249604	80/20 PART #4336	16
4	249707	80/20 PART# 3879	32
5	249708	80/20 PART# 3866	10
7	265442	HT FRAME 3	4
8	267027	TM-400 FRAME #1	4

UNLESS OTHERWISE SPECIFIED:		NAME		DATE	
DIMENSIONS ARE IN INCHES		DRAWN	RH	8/23/13	
TOLERANCES: .XXX ± 0.005		ENG APPR:	PVO	-	<div></div> <div>THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MINNETONKA, MN.</div>
.XX ± 0.010					
X ± 0.015					
ANGULAR: MACHINED ± 0.1°		TITLE:  TM-400 FRAME ASSEMBLY			
BEND ± 0.5°					
SURFACE: 63√					
GENERAL NOTES:					
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5					
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED					
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED					
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES MUST RESULT IN ROHS COMPLIANT PART					
- DO NOT SCALE DRAWING					
MATERIAL		SIZE	DWG. NO.		REV
FINISH		B	291667		A
NA					
			WEIGHT (lbs): 38.57		SHEET 2 OF 6

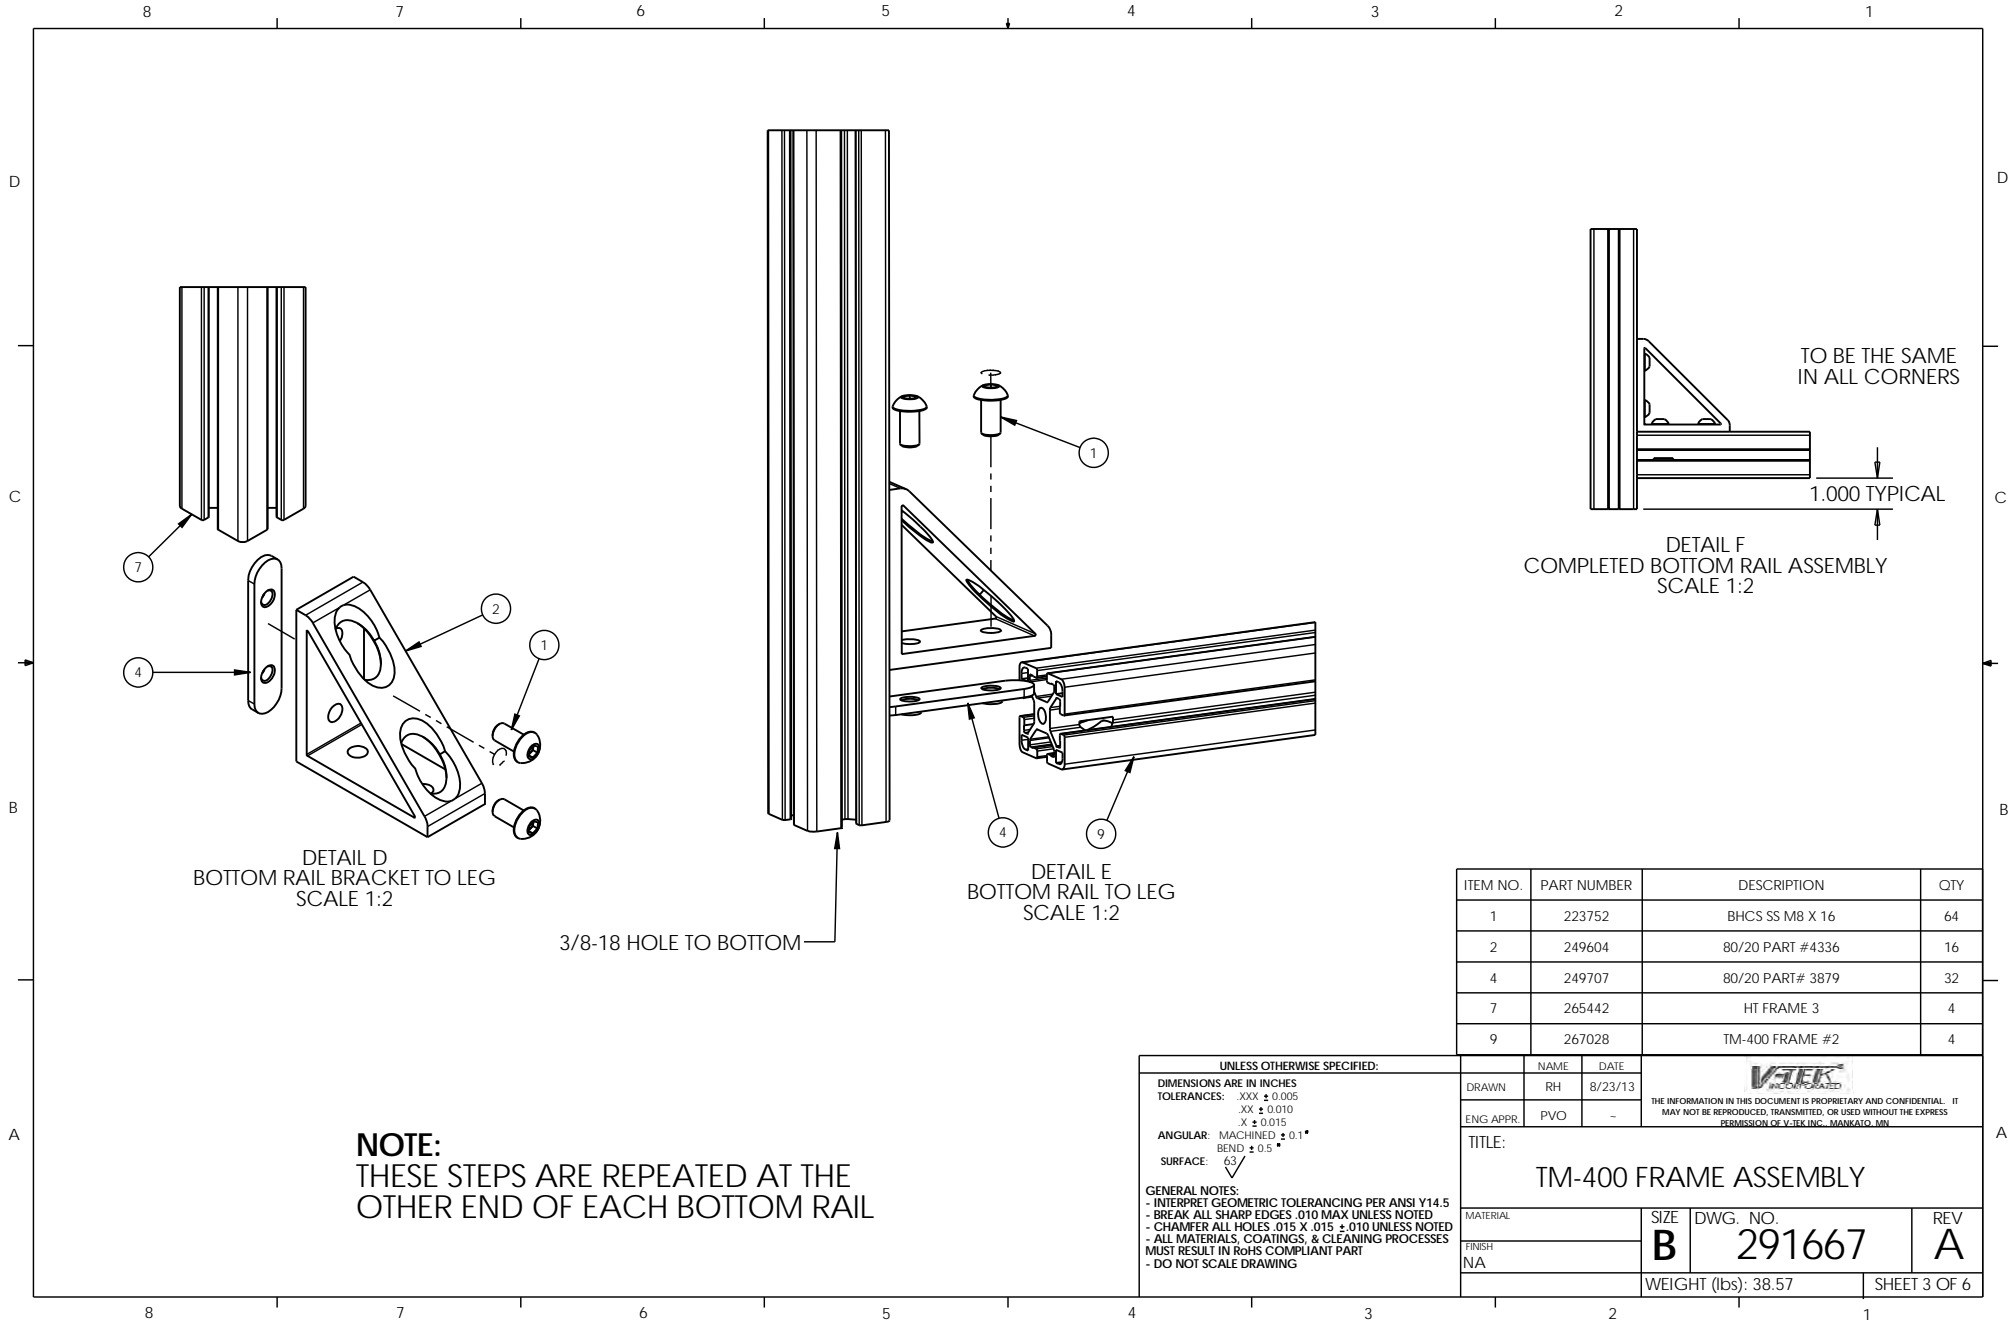

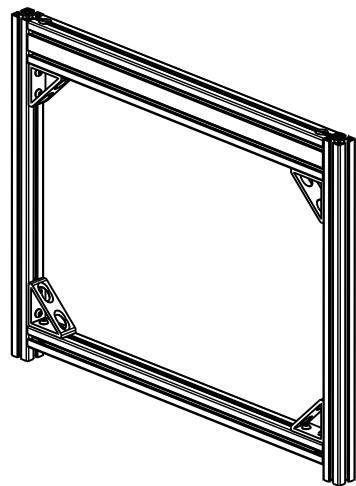


DETAIL G  
COMPLETED SIDE  
SCALE 1:8

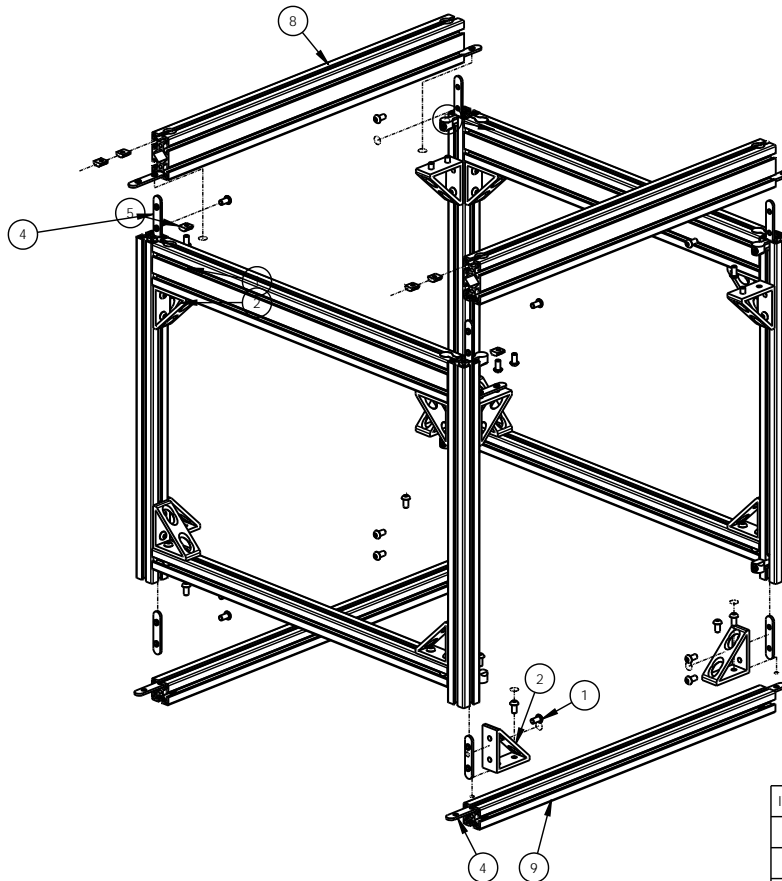

DETAIL H  
ATTACHMENT OF CROSS RAILS TO SIDES  
SCALE 1:8

ITEM NO.	PART NUMBER	DESCRIPTION	QTY
1	223752	BHCS SS M8 X 16	64
2	249604	80/20 PART #4336	16
4	249707	80/20 PART# 3879	32
5	249708	80/20 PART# 3866	10
8	267027	TM-400 FRAME #1	4
9	267028	TM-400 FRAME #2	4

UNLESS OTHERWISE SPECIFIED:			
DIMENSIONS ARE IN INCHES			
TOLERANCES: XX ± 0.005			
X ± 0.010			
ANGULAR: MACHINED ± 0.1°			
SURFACE: BEND ± 0.5°			
GENERAL NOTES:			
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5			
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED			
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED			
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES MUST RESULT IN ROHS COMPLIANT PART			
- DO NOT SCALE DRAWING			
DRAWN		NAME	DATE
ENG APPR		RH	8/23/13
PVO		—	—
 THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS PERMISSION OF V-TEK INC., MINNETONKA, MN.			
TITLE:			
TM-400 FRAME ASSEMBLY			
MATERIAL		SIZE	DWG. NO.
FINISH		NA	291667
NA		REV	A
WEIGHT (lbs): 38.57			SHEET 4 OF 6


8 7 6 5 4 3 2 1

D


C

B


A

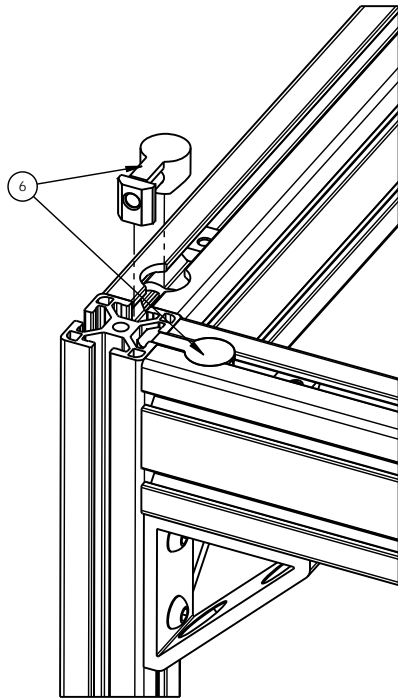


DETAIL I  
TOP ANCHOR FASTENER  
SCALE 1:2

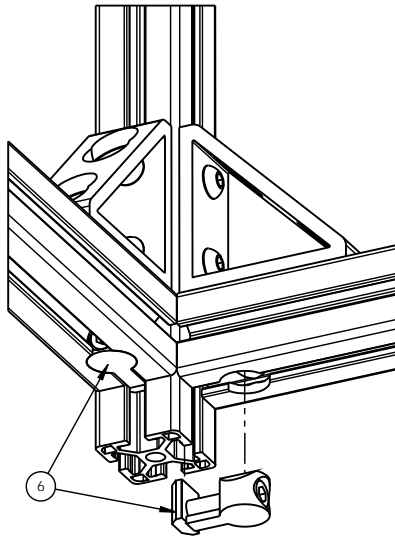

DETAIL J  
BOTTOM ANCHOR FASTENER  
SCALE 1:2

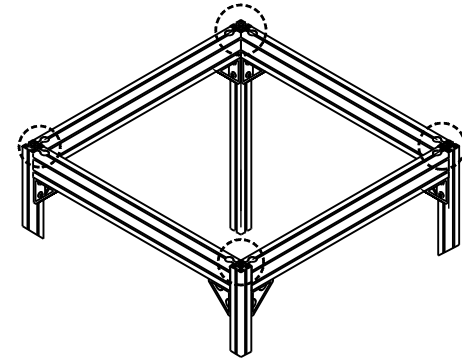

DETAIL K  
TOP ANCHOR LOCATIONS  
SCALE 1:12

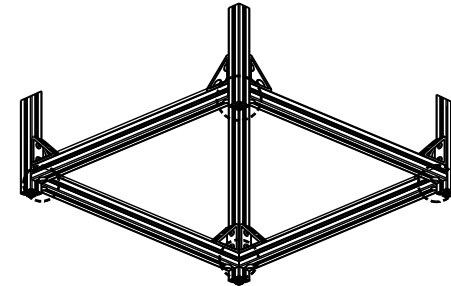


DETAIL L  
BOTTOM ANCHOR LOCATIONS  
SCALE 1:12

UNLESS OTHERWISE SPECIFIED:  
DIMENSIONS ARE IN INCHES  
TOLERANCES: .XXX ± 0.005  
                  XX ± 0.010  
                  X ± 0.015  
ANGULAR: MACHINED ± 0.1°  
              BEND ± 0.5°  
SURFACE: 63  
GENERAL NOTES:  
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5  
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED  
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED  
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES  
  MUST RESULT IN ROHS COMPLIANT PART  
- DO NOT SCALE DRAWING

ITEM NO.	PART NUMBER	DESCRIPTION	QTY
6	249709	80/20 PART# 40-3897	16
DRAWN	RH	DATE	8/23/13
ENG APPR	PVO		
TITLE: TM-400 FRAME ASSEMBLY			
MATERIAL	SIZE	DWG. NO.	REV
FINISH	B	291667	A
NA		WEIGHT (lbs): 38.57	SHEET 5 OF 6



THE INFORMATION IN THIS DOCUMENT IS PROPRIETARY AND CONFIDENTIAL. IT  
MAY NOT BE REPRODUCED, TRANSMITTED, OR USED WITHOUT THE EXPRESS  
PERMISSION OF V-TEK INC., MANIKATO, MN

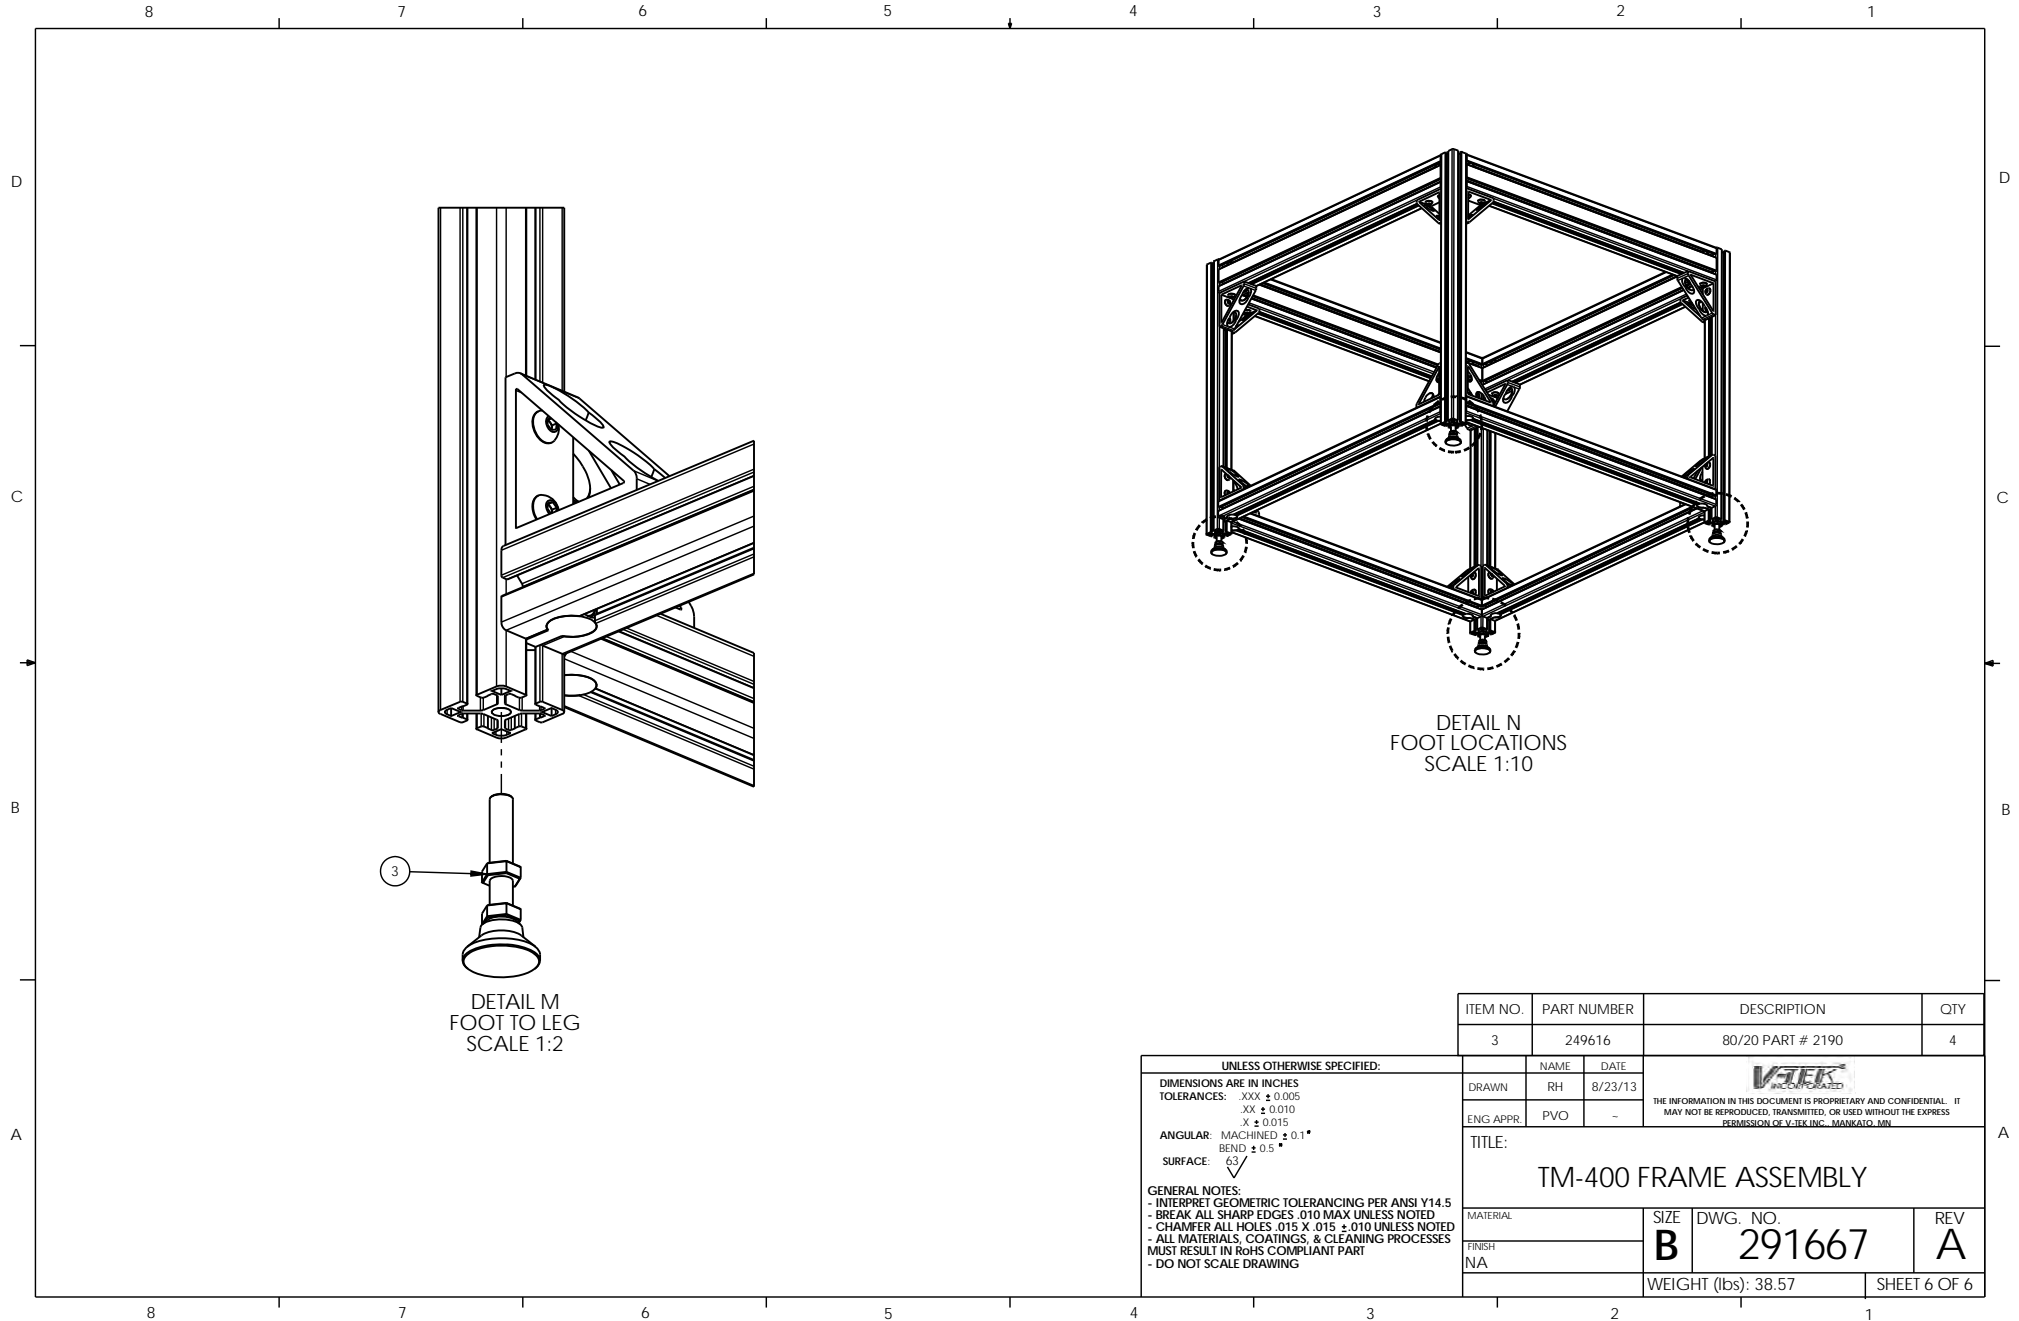

UNLESS OTHERWISE SPECIFIED:		
DIMENSIONS ARE IN INCHES		
TOLERANCES:		
XXX ± 0.005		
XX ± 0.010		
X ± 0.015		
ANGULAR: MACHINED ± 0.1°		
BEND ± 0.5°		
SURFACE: $\sqrt{63}$		
GENERAL NOTES:		
- INTERPRET GEOMETRIC TOLERANCING PER ANSI Y14.5		
- BREAK ALL SHARP EDGES .010 MAX UNLESS NOTED		
- CHAMFER ALL HOLES .015 X .015 ± .010 UNLESS NOTED		
- ALL MATERIALS, COATINGS, & CLEANING PROCESSES		
MUST RESULT IN ROHS COMPLIANT PART		
- DO NOT SCALE DRAWING		

ITEM NO.	PART NUMBER	DESCRIPTION	QTY
3	249616	80/20 PART # 2190	4
DRAWN	RH	DATE	8/23/13
ENG APPR	PVO		
TITLE:			
TM-400 FRAME ASSEMBLY			
MATERIAL	SIZE	DWG. NO.	REV
FINISH	B	291667	A
NA			
WEIGHT (lbs): 38.57			SHEET 6 OF 6

	<p>751 Summit Avenue Mankato, MN USA 56001</p> <p><b>Website:</b> <a href="http://www.vtekusa.com">www.vtekusa.com</a>  <b>Email:</b> <a href="mailto:service@vtekusa.com">service@vtekusa.com</a>  <b>Phone:</b> (507) 387-2039</p>
---	--

**For inquiries regarding spare parts, tape and reel supplies, or the service department, please call or write:**

Phone: (507) 387-2039

Email: [service@vtekusa.com](mailto:service@vtekusa.com)

Please provide the machine model and serial numbers with all inquiries.

#### NOTES

---

---

---

---

---

---

---

---

---

---

---

## TM-403 Document List

---

Section	Pages	File Name
Cover Sheet	Pages 1 - 2	D292106.1g.fm
EC Declaration of Conformity	Page 1 of 1	TM-400 DOC.pdf
Introduction	Pages i - xii	D292106.2a.fm
Table of Contents	Pages 1 - 4	D292106.3c.fm
Chapter 1: Installation & Assembly	Pages 1-1 to 1-12	D292106.4b.fm
Chapter 2: Machine Overview	Pages 2-1 to 2-12	D292106.5b.fm
Chapter 3: Human Machine Interface	Pages 3-1 to 3-42	D292106.6b.fm
Chapter 4: Machine Set-up	Pages 4-1 to 4-32	D292106.7b.fm
Chapter 5: Vision Set-up	Pages 5-1 to 5-46	D292106.16c.fm
Chapter 6: Operation	Pages 6-1 to 6-12	D292106.8b.fm
Chapter 7: Troubleshooting	Pages 7-1 to 7-28	D292106.9b.fm
Chapter 8: Maintenance	Pages 8-1 to 8-12	D292106.10a.fm
Appendix A: Sensors	Pages A-1 to A-6	D292104.11.fm
Spare Parts List	Page 1 of 1	D292106.12a.fm
Exploded Views	Pages EV-1 to EV-92	D292106.13b.fm
Customer Service Contact Sheet	Page 1 of 1	61053915.fm
Document List	This Document	D292106.15g.fm
Warranty Document	Page 1 of 1	WI201.16, Rev.5
Back Cover	Page 1 of 1	61666111.fm



---

## **EXPRESS WARRANTY, EXCLUSION AND DISCLAIMER OF UNSTATED WARRANTIES AND LIMITATION OF LIABILITY**

V-TEK Inc (V-TEK) manufactures equipment for the Royce Instruments and V-TEK International brands. The following warranty applies to both product lines.

1. V-TEK warrants for one year from date of receipt by end user that equipment manufactured by V-TEK will be free of defects in workmanship and materials.
2. All integrated products purchased by V-TEK and integrated on to V-TEK equipment shall be covered in accordance with the manufacturer's pass through warranty and limited in costs equal to the amount of the manufacturer's pass through warranty.
3. V-TEK's obligation under this warranty applies only to the original Customer and commences when V-TEK is notified of name, address of Customer, and date of receipt of equipment.
4. During the warranty period, V-TEK will replace any defective non-consumable parts returned for that purpose to the designated V-TEK Replacement Parts Center or at V-TEK's option, refund original cost of equipment.
5. Authorization to return Articles purchased from V-TEK must be obtained by Customer before return shipping commences.
6. Credit may be granted, less an appropriate restocking charge of 15 to 20% of invoice amount, depending on the reason for the return and condition of the Articles.
7. Returns should always be carefully packed in original shipping carton and sent via ground service. V-TEK does not assume any liability for damage incurred during shipment.
8. For the first 30 days that you own your V-TEK product, V-TEK will be responsible for ground shipments to and from V-TEK's facility in Mankato, MN, U.S.A. or its designate. For the remainder of your warranty V-TEK will pay freight for returning your product to you after its repair.
9. Customer shall bear all charges for customs duty fees or freight above the ground rate or for articles returned which are not defective.
10. Collect shipments will not be accepted.
11. Insurance coverage during shipping is the responsibility of the Customer. V-TEK does not assume any liability for damage incurred during shipment.
12. The warranty applies only to normal use of the equipment and shall be void if V-TEK determines that defects in or failures of the equipment were caused by the Customer's negligence including the lack of proper preventative maintenance, misuse or accident or by unauthorized repair, alteration or installation.
13. This Warranty does not extend to consumable items or mechanical parts subject to normal wear.
14. Customer's exclusive remedy for claims against V-TEK shall be the repair or replacement of defective equipment and parts.
15. Any modification to the standard configuration of this equipment as delivered will void the warranty, unless V-TEK personnel make the modification.

THIS WARRANTY IS EXPRESSLY MADE IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT WILL V-TEK BE LIABLE FOR INCIDENTAL, SPECIAL OR CONSEQUENTIAL PENALTIES OR DAMAGES, INCLUDING LOST PROFITS OR PENALTIES AND/OR DAMAGES FOR DELAY IN DELIVERY OR FAILURE TO GIVE NOTICE OF DELAY EVEN IF V-TEK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

PASS THROUGH WARRANTIES ARE AVAILABLE FROM THE RESPECTIVE MANUFACTURERS.

**SERIAL NUMBER:**

**MODEL:**

**DATE OF MANUFACTURE:**



**751 Summit Avenue  
Mankato, MN 56001**

**(507) 387-2039      FAX: (507) 387-2257**

**[www.vtekusa.com](http://www.vtekusa.com)  
Email: [info@vtekusa.com](mailto:info@vtekusa.com)**